

446900

Illustrated Parts List

Model Series

446900

TYPE NUMBERS
0385 through 0505.

TABLE OF CONTENTS

Air Cleaner	5
Alternators	7
Blower Housing/Shrouds	5
Camshaft	3
Carburetor	4
Controls	6
Crankshaft	2
Crankcase Sump	2
Cylinder	2
Cylinder Head	3
Electric Starter	6
Exhaust System	6
Flywheel	6
Ignition	7
Kit/Gasket Sets	4
Lubrication	2
Piston, Rings, Connecting Rod	2
Valves	3


BRIGGS & STRATTON



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

446900

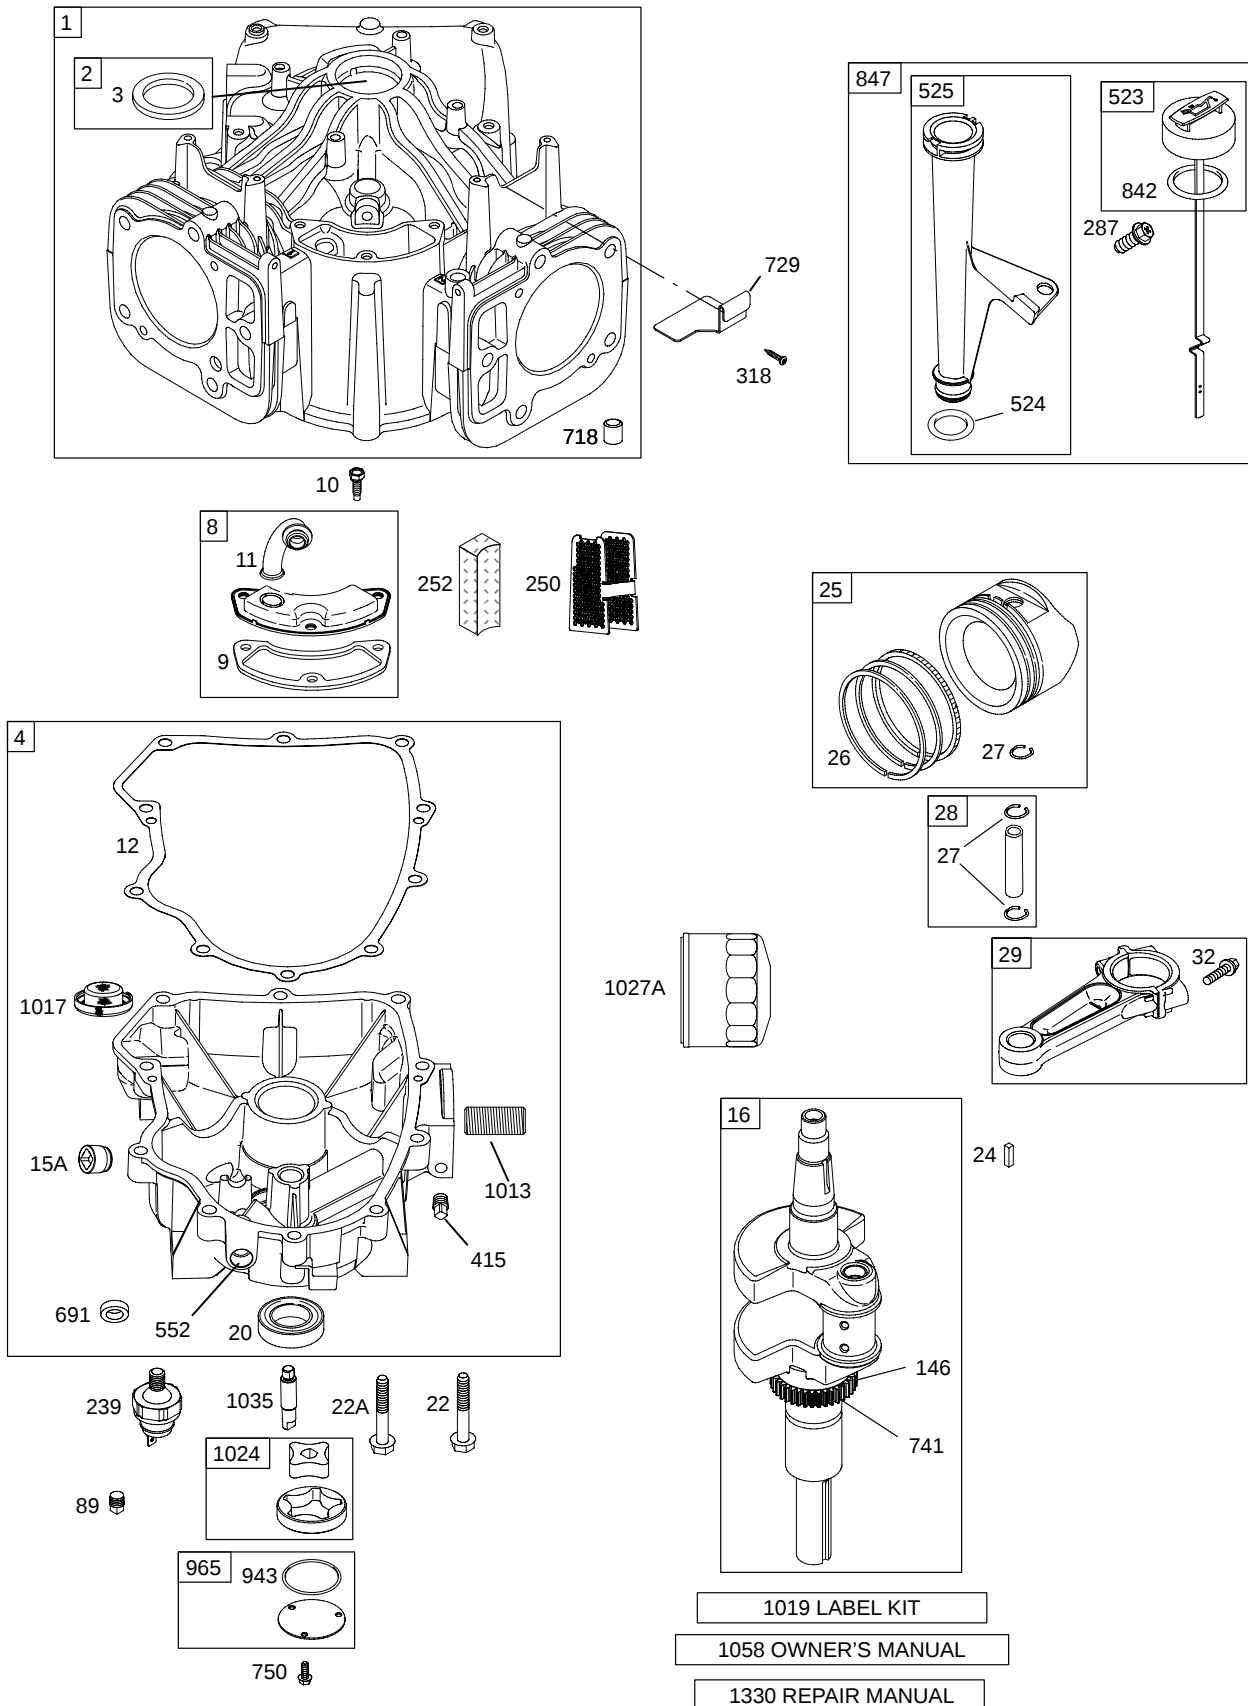







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3349-2 Assemblies include all parts shown in frames. **3/23/2005**


446900

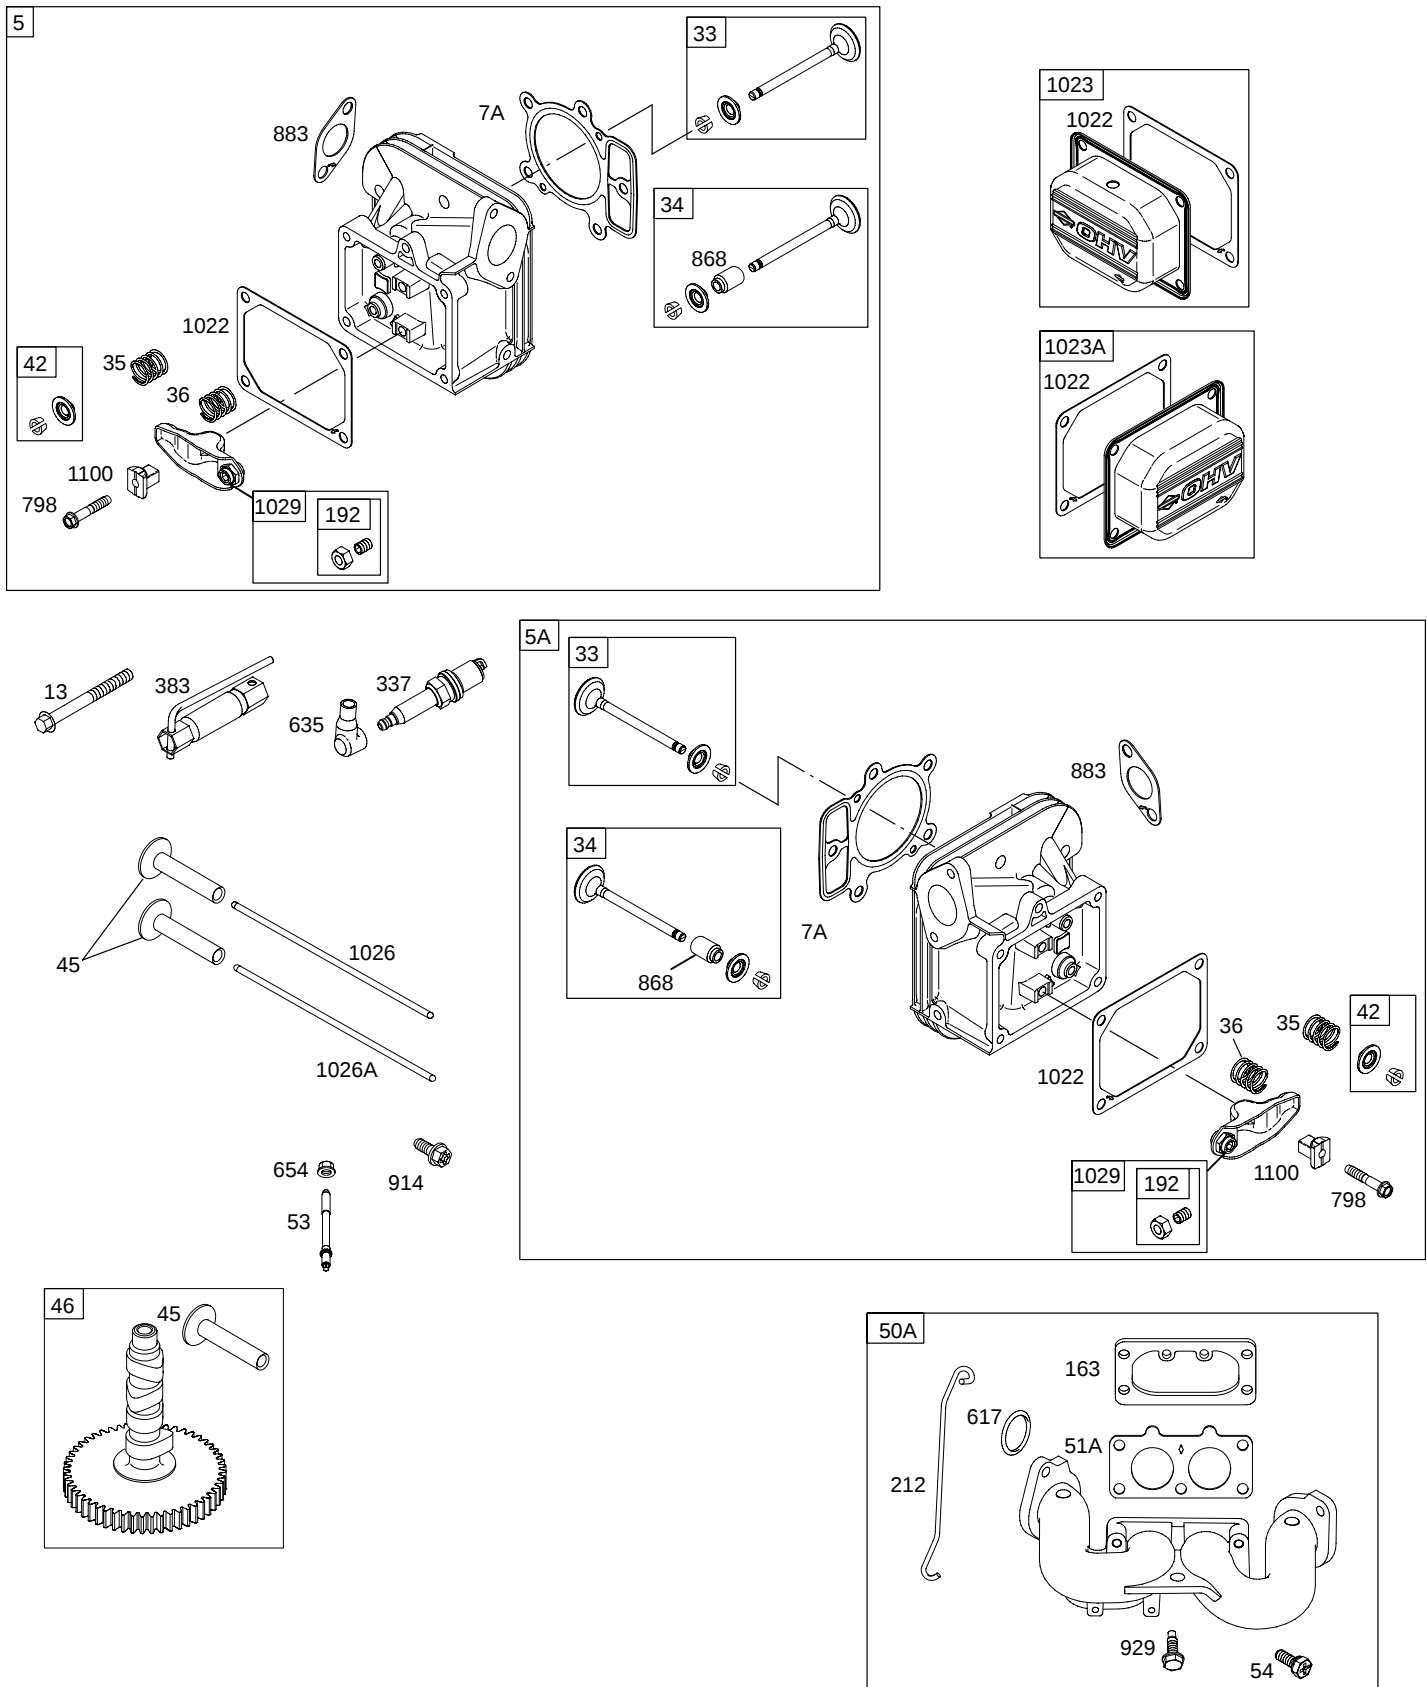


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3349-3 Assemblies include all parts shown in frames. 3/23/2005

446900

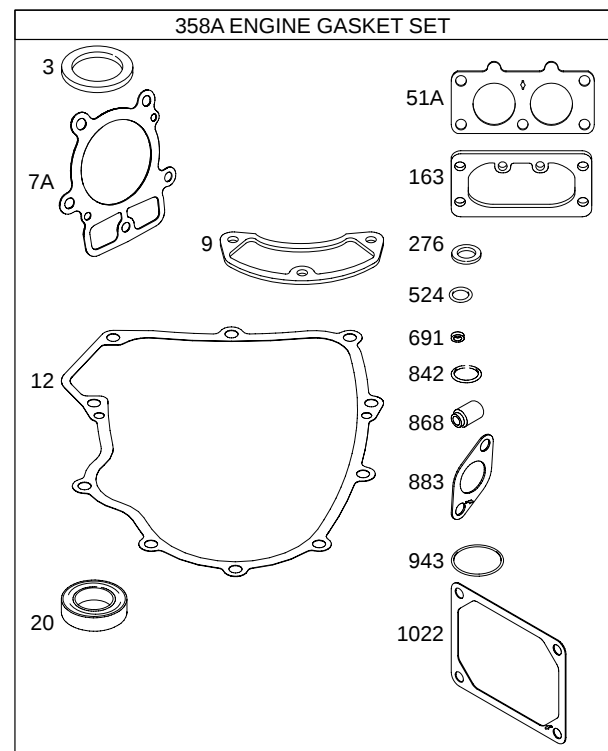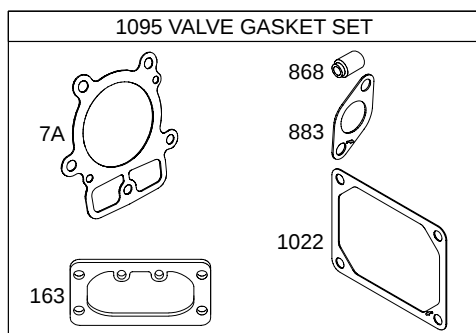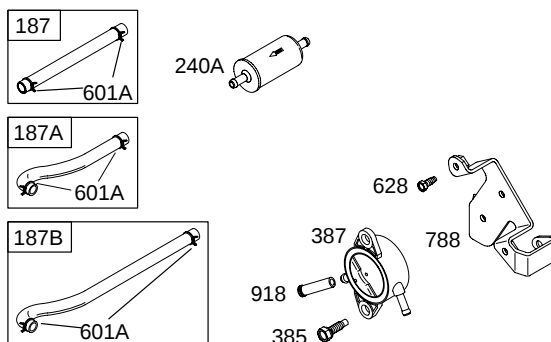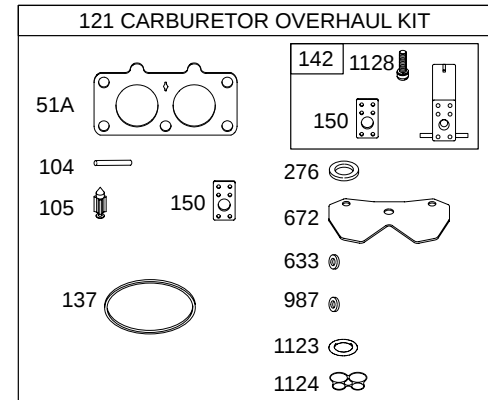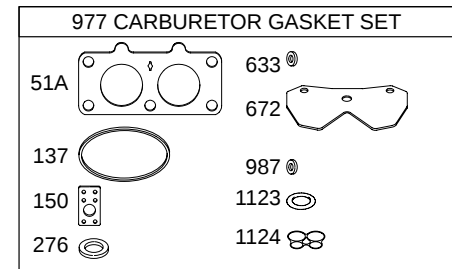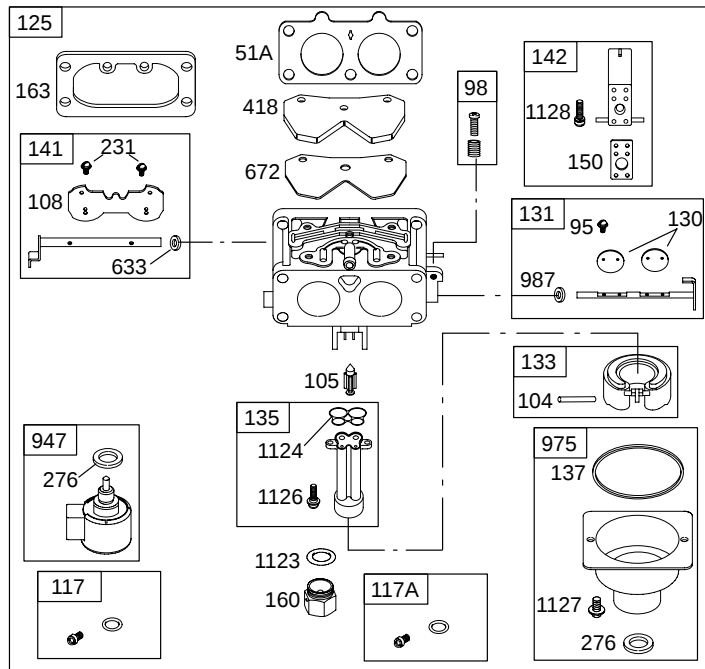


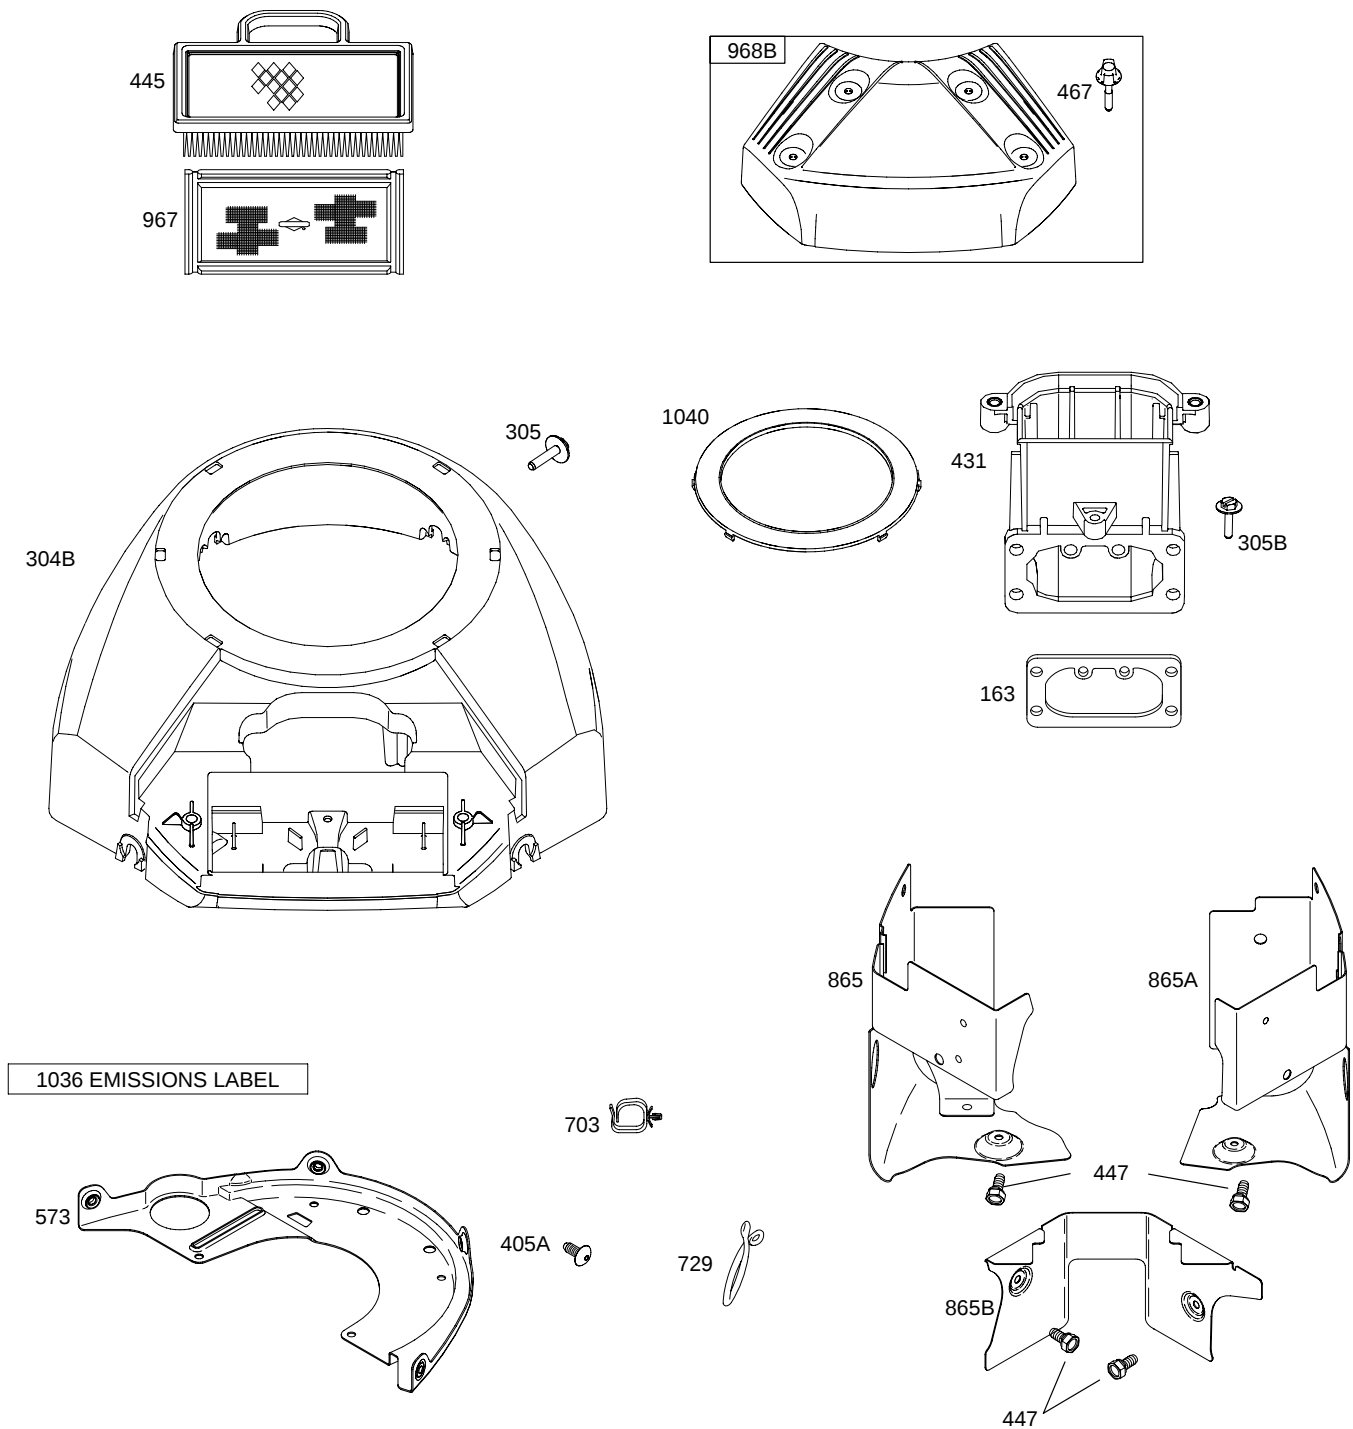

446900



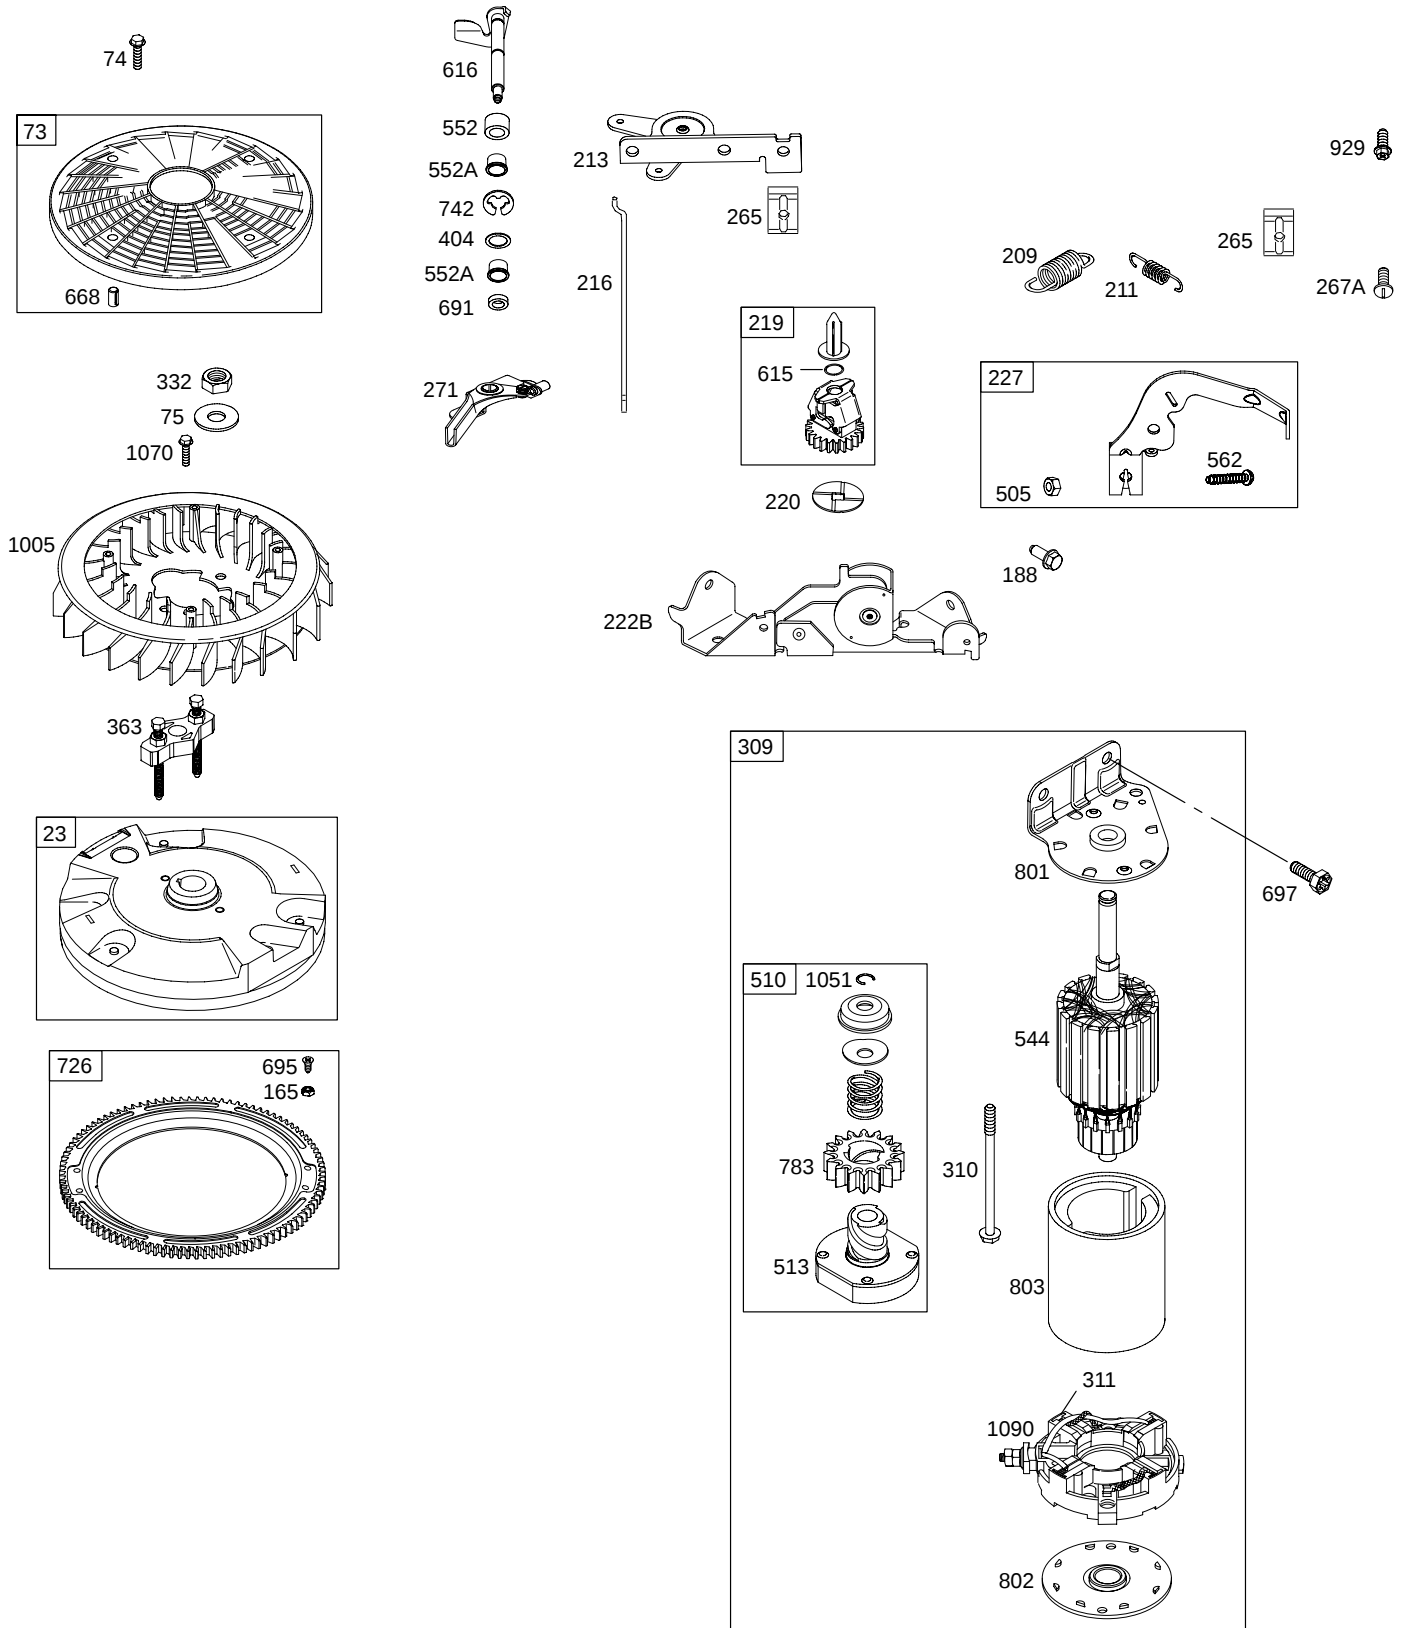


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3349-6 Assemblies include all parts shown in frames. 3/23/2005

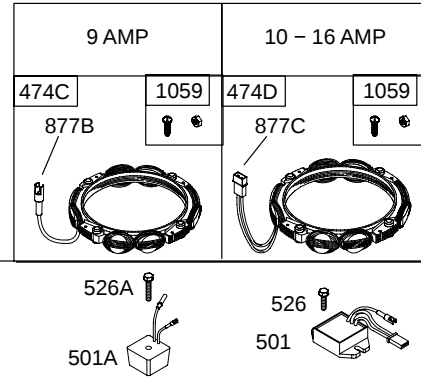

NOTE: All Stators Use a No. 1119 Mounting Screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

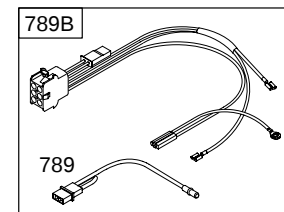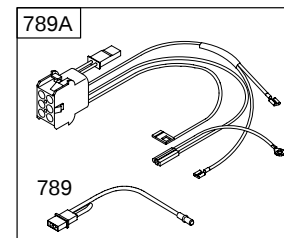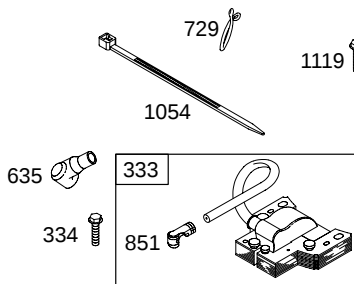

446900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699753	Cylinder Assembly	25	697679	Piston Assembly (Standard)	95	690718	Screw (Throttle Valve)
2	499585	Kit-Bushing/Seal (Magnetos Side)			----- Note -----	98	699721	Kit-Idle Speed
3	★391086	Seal-Oil (Magnetos Side)		697681	Piston Assembly (.020" Oversize)	104	●694918	Pin-Float Hinge
4	699747	Sump-Engine				105	●698537	Valve-Float Needle
5	697580	Head-Cylinder (Cylinder 1)	26	697683	Ring Set (Standard)	108	699723	Valve-Choke
5A	697581	Head-Cylinder (Cylinder 2)			----- Note -----	117	791501	Jet-Main (Standard) (Left)(Nikki)
7A	★△693997	Gasket-Cylinder Head		697685	Ring Set (.020" Oversize)	117A	791502	Jet-Main (Standard) (Right)(Nikki)
8	499601	Breather Assembly	27	690975	Lock-Piston Pin			
9	★690937	Gasket-Breather	28	690229	Pin-Piston (Standard)	121	699734	Kit-Carburetor Overhaul
10	691108	Screw (Breather Assembly)	29	699699	Rod-Connecting (Standard)	125	791230	Carburetor
11	690942	Tube-Breather	32	690976	Screw (Connecting Rod)	130	690993	Valve-Throttle
12	★697227	Gasket-Crankcase	33	697576	Valve-Exhaust	131	499805	Kit-Throttle Shaft
13	791130	Screw (Cylinder Head)	34	697464	Valve-Intake	133	699724	Float-Carburetor
15A	690946	Plug-Oil Drain	35	690963	Spring-Valve (Intake)	135	●699729	Tube-Fuel Transfer
16	790132	Crankshaft	36	690963	Spring-Valve (Exhaust)	137	●690994	Gasket-Float Bowl
		----- Note -----	42	499586	Keeper-Valve	141	699722	Kit-Choke Shaft
		699700 Crankshaft Used on Type No(s). 0472.	45	690977	Tappet-Valve	142	●699726	Nozzle-Carburetor (Standard)
		790136 Crankshaft Used on Type No(s). 0385.	46	791235	Camshaft	146	690979	Key-Timing
20	★690947	Seal-Oil (PTO Side)	50A	695241	Manifold-Intake (Plastic)	150	●690995	Gasket-Nozzle
22	694966	Screw (Crankcase Cover/Sump)	51A	★●699734	Gasket-Intake	160	699727	Retainer-Solenoid
22A	691129	Screw (Crankcase Cover/Sump) Used on Type No(s). 0385.	53	690951	Stud (Carburetor)	163	★△691001	Gasket-Air Cleaner
23	691053	Flywheel	54	695240	Screw (Intake Manifold)	165	693148	Nut (Ring Gear)
24	222698	Key-Flywheel	73	494439	Screen-Rotating	187	698742	Line-Fuel
			74	698425	Screw (Rotating Screen)	187A	691049	Line-Fuel (Molded) Used on Type No(s). 0385.
			75	691056	Washer (Flywheel)	187B	697712	Line-Fuel (Molded) Used on Type No(s). 0471, 0472, 0505.
			89	690283	Plug-Oil	188	691003	Screw (Control Bracket)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3349-8

Assemblies include all parts shown in frames.

3/23/2005

446900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
192	690083	Adjuster-Rocker Arm	305B	790690	Screw (Blower Housing to Inake Elbow)	474D	696458	Alternator (10 Amp Circuit)
209	697674	Spring-Governor (Brown)				501	691185	Regulator (10 Amp Circuit)
211	691019	Spring-Governed Idle	309	497401	Motor-Starter	501A	691188	Regulator (5 To 9 Amp Regulated)
212	695238	Link-Throttle (Used With Plastic Intake Manifold)	310	691263	Screw (Starter Motor)			Used on Type No(s). 0385.
213	691021	Bracket-Choke Control	311	497608	Brush Set	505	691029	Nut (Governor Control Lever)
216	691022	Link-Choke	318	690372	Screw (Mounting Bracket)			
219	698231	Gear-Governor	332	691059	Nut (Flywheel)	510	696541	Drive-Starter
220	690412	Washer (Governor Gear)	333	691060	Armature-Magneto	513	692024	Clutch-Drive
222B	698757	Bracket-Control Used on Type No(s). 0505.	334	691061	Screw (Magneto Armature)	523	691036	Dipstick
			337	491055	Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0505.	524	★691032	Seal-Dipstick Tube
227	691048	Lever-Governor Control				525	691037	Tube-Dipstick
231	690718	Screw (Choke Valve)	358A	699823	Gasket Set-Engine	526	691108	Screw (Regulator) (10 Amp Circuit)
239	491657	Switch-Oil Pressure Used on Type No(s). 0385.	363	19203	Puller-Flywheel	526A	691129	Screw (Regulator) (5 To 9 Amp Regulated) Used on Type No(s). 0385.
			383	19374	Wrench-Spark Plug			Armature-Starter (Service With 497401 Starter Motor)
240A	695666	Filter-Fuel	385	691108	Screw (Fuel Pump)	544		
250	690957	Retainer-Breather	387	808656	Pump-Fuel	552	690552	Bushing-Governor Crank
252	690956	Collector-Oil	404	690442	Washer (Governor Crank)	552A	690553	Bushing-Governor Crank
265	691024	Clamp-Casing Used on Type No(s). 0471, 0472, 0505.	405A	697820	Screw (Back Plate)	562	690311	Bolt (Governor Control Lever)
267A	695134	Screw (Casing Clamp) Used on Type No(s). 0471, 0472, 0505.	415	690283	Plug Used on Type No(s). 0471, 0472, 0505.	573	790444	Plate-Back
271	691048	Lever-Control	418	690999	Plate-Carburetor	601A	691038	Clamp-Hose (Black)
276	★695410	Washer-Sealing	431	790816	Elbow-Intake	615	698290	Retainer-Governor Shaft
287	691108	Screw (Dipstick Tube)	445	698754	Filter-Air Cleaner Cartridge	616	691045	Crank-Governor
304B	791243	Housing-Blower (Black)	447	691003	Screw (Air Guide Cover)			
305	691005	Screw (Blower Housing) (21/32" Long)	467	691008	Knob-Air Cleaner			
			474C	696457	Alternator (Tri Circuit) Used on Type No(s). 0385.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**3349-9**

Assemblies include all parts shown in frames.

3/23/2005

446900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
617	697891	Seal-O Ring (Intake Manifold)	802	691286	Cap-End	1019	693995	Kit-Label
628	691108	Screw (Fuel Pump Bracket)	803		Housing-Starter (Service With 497595 Starter Motor)	1022	★△690971	Gasket-Rocker Cover
633	◆690998	Seal-Choke/Throttle Shaft	842	★691031	Seal-O Ring (Dipstick/Tube)	1023	499599	Cover-Rocker (Cylinder 1)
635	66538	Boot-Spark Plug	847	499602	Dipstick/Tube Assembly	1023A	499600	Cover-Rocker (Cylinder 2)
654	690958	Nut (Carburetor)	851	493880	Terminal-Spark Plug	1024	499054	Pump-Oil
668	691215	Spacer	865	691012	Cover-Air Guide (Cylinder 1)	1026	690981	Rod-Push (Steel)
672	◆690234	Gasket-Carburetor Plate	865A	691014	Cover-Air Guide (Cylinder 2)	1026A	690982	Rod-Push (Aluminum)
691	★690657	Seal-Governor Shaft	865B	691015	Cover-Air Guide (Valley)	1027A	696854	Filter-Oil
695	693149	Screw (Ring Gear)	868	★△690968	Seal-Valve	1029	690972	Arm-Rocker
697	690372	Screw (Drive Cap)	877B	393537	Wire/Connector- Alternator (Tri Circuit) Used on Type No(s). 0385.	1035	691042	Shaft-Pump
703	691010	Clip	883	★△690970	Gasket-Exhaust	1036	790626	Label-Emissions
718	690959	Pin-Locating	914	691127	Screw (Rocker Cover)	1040	791237	Plate-Trim
726	499612	Gear-Ring	918	694000	Hose-Vacuum	1051	691265	Ring-Retaining
729	694123	Clip-Wire Used on Type No(s). 0385.	929	695239	Screw (Choke Control Bracket)	1054	280275	Tie-Cable
741	690980	Gear-Timing	943	690589	Seal-O Ring (Oil Pump Cover)	1058	275475	Operator's Manual
742	690328	Retainer-E Ring	947	841546	Solenoid-Fuel	1059	698516	Kit-Screw/Washer
750	696999	Screw (Oil Pump Cover)	965	499613	Cover-Oil Pump	1070	690372	Screw (Flywheel Fan)
783	695708	Gear-Pinion	967	273638	Filter-Pre Cleaner	1090	691293	Retainer-Brush
788	691039	Bracket-Fuel Pump	968B	791242	Cover-Air Cleaner	1095	694013	Gasket Set-Valve
789	790544	Harness-Wiring	975	791232	Bowl-Float	1100	690973	Pivot-Rocker Arm
789A	698330	Harness-Wiring (6 Pin Customer Conversion) Used on Type No(s). 0385.	977	699735	Gasket Set-Carburetor	1119	691183	Screw (Alternator)
789B	696576	Harness-Wiring Used on Type No(s). 0471, 0472, 0505.	987	◆691000	Seal-Throttle Shaft	1123	◆699725	Seal-O Ring (Solenoid Retainer)
798	697890	Screw (Rocker Arm)	1005	791236	Fan-Flywheel	1124	690988	Seal-O Ring (Fuel Transfer Tube)
801	691283	Cap-Drive	1013	690954	Nipple-Oil Filter	1126	690991	Screw (Fuel Transfer Tube)
			1017	690770	Screen-Oil Pump	1127	695407	Screw (Float Bowl)
						1128	690990	Screw (Carburetor Nozzle)
						1330	273521	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.