



91200

Illustrated Parts List

Model Series

91200

TYPE NUMBERS
0002 through 1385.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	8
Cam	2
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Flywheel	7
Fuel Tank	4
Gear Reduction	3
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets-Carburetor	4
Kits/Gaskets-Valves	2
Muffler	6
Piston Group	2
Rewind Starter	7
Rewind Starter/Blower Housing	8
Valves	2

BRIGGS & STRATTON

















PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


91200

1058 OPERATOR'S MANUAL






1330 REPAIR MANUAL

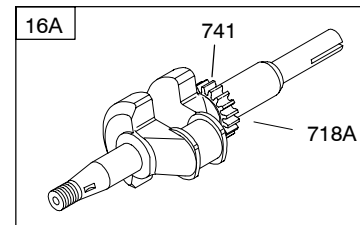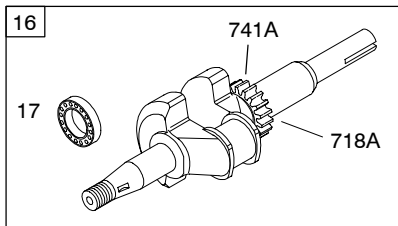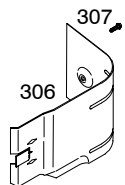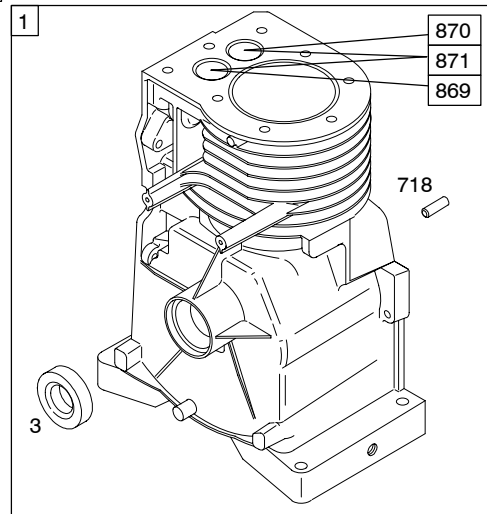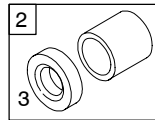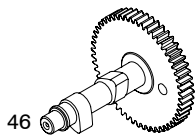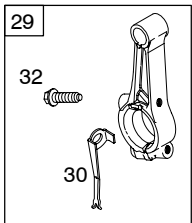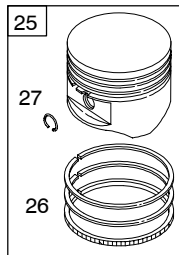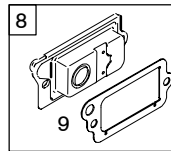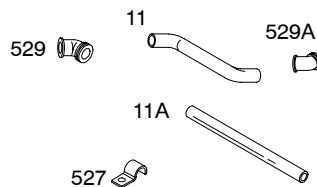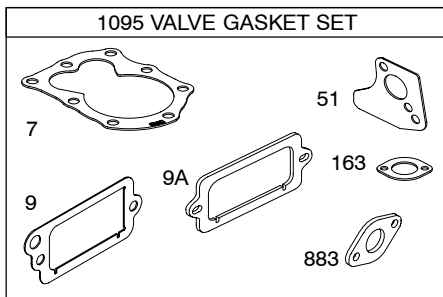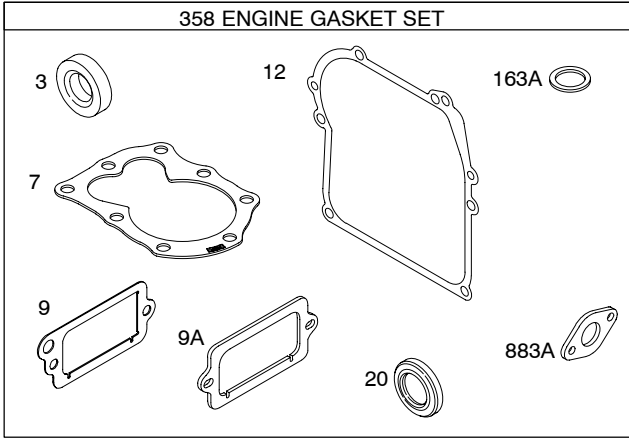






BALL BEARING

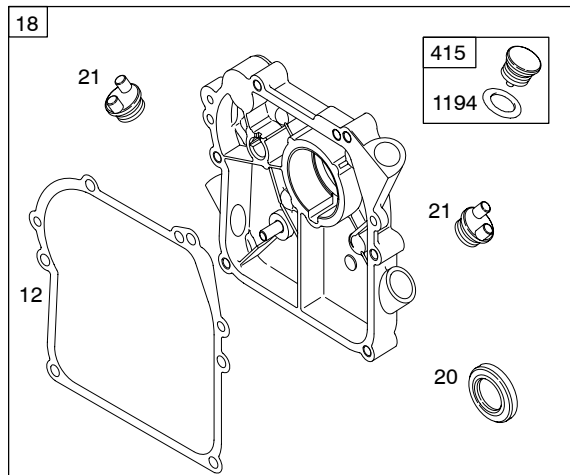

PLAIN BEARING

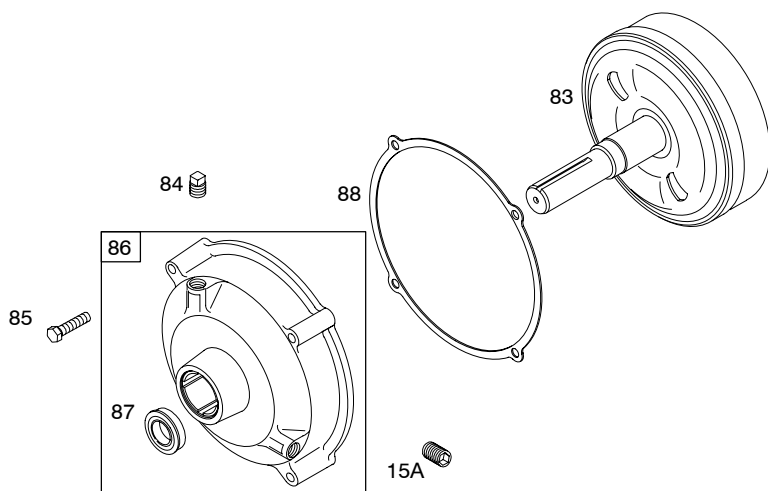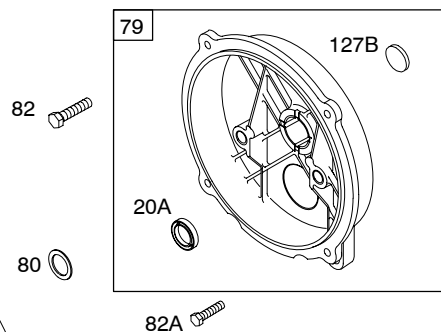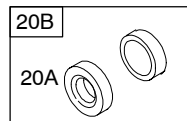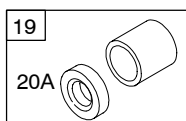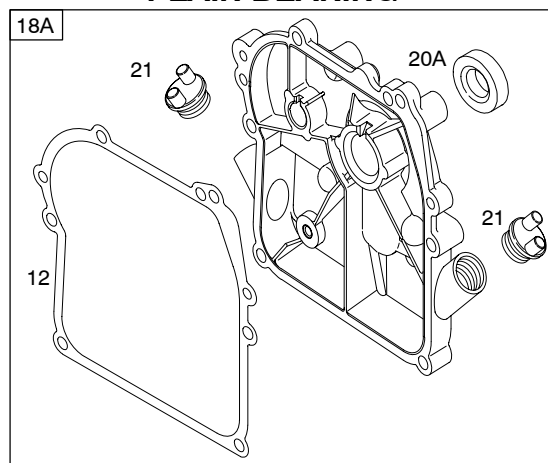

91200

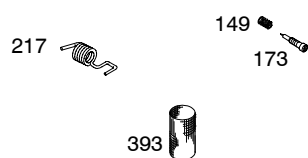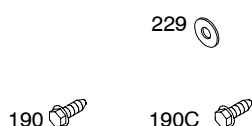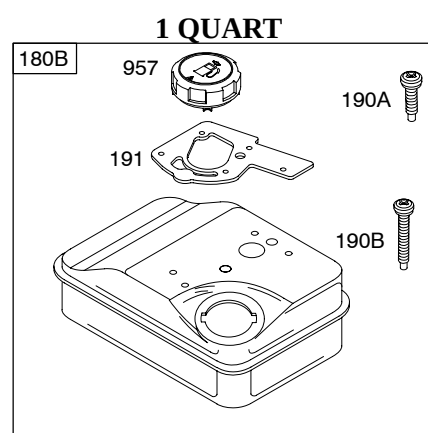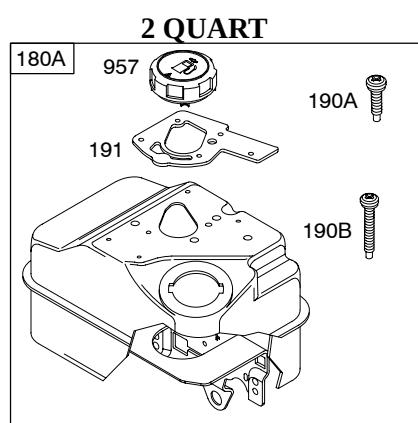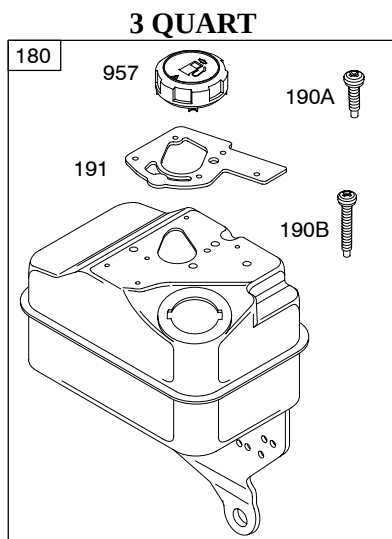



Carburetor Mounting Surface


Pickup Tube

D













To replace carburetor assembly, determine fuel tank capacity as shown.






Fuel Tank Capacity (Quarts)	1	2	3
D (Inches)	2-5/16	4-1/4	4-7/8

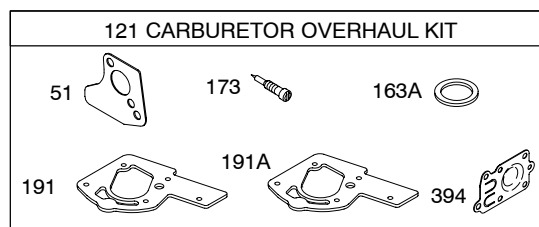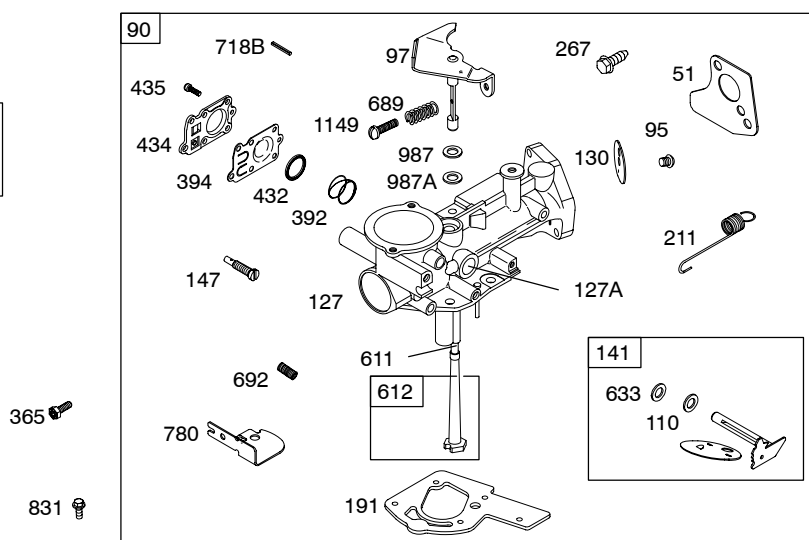

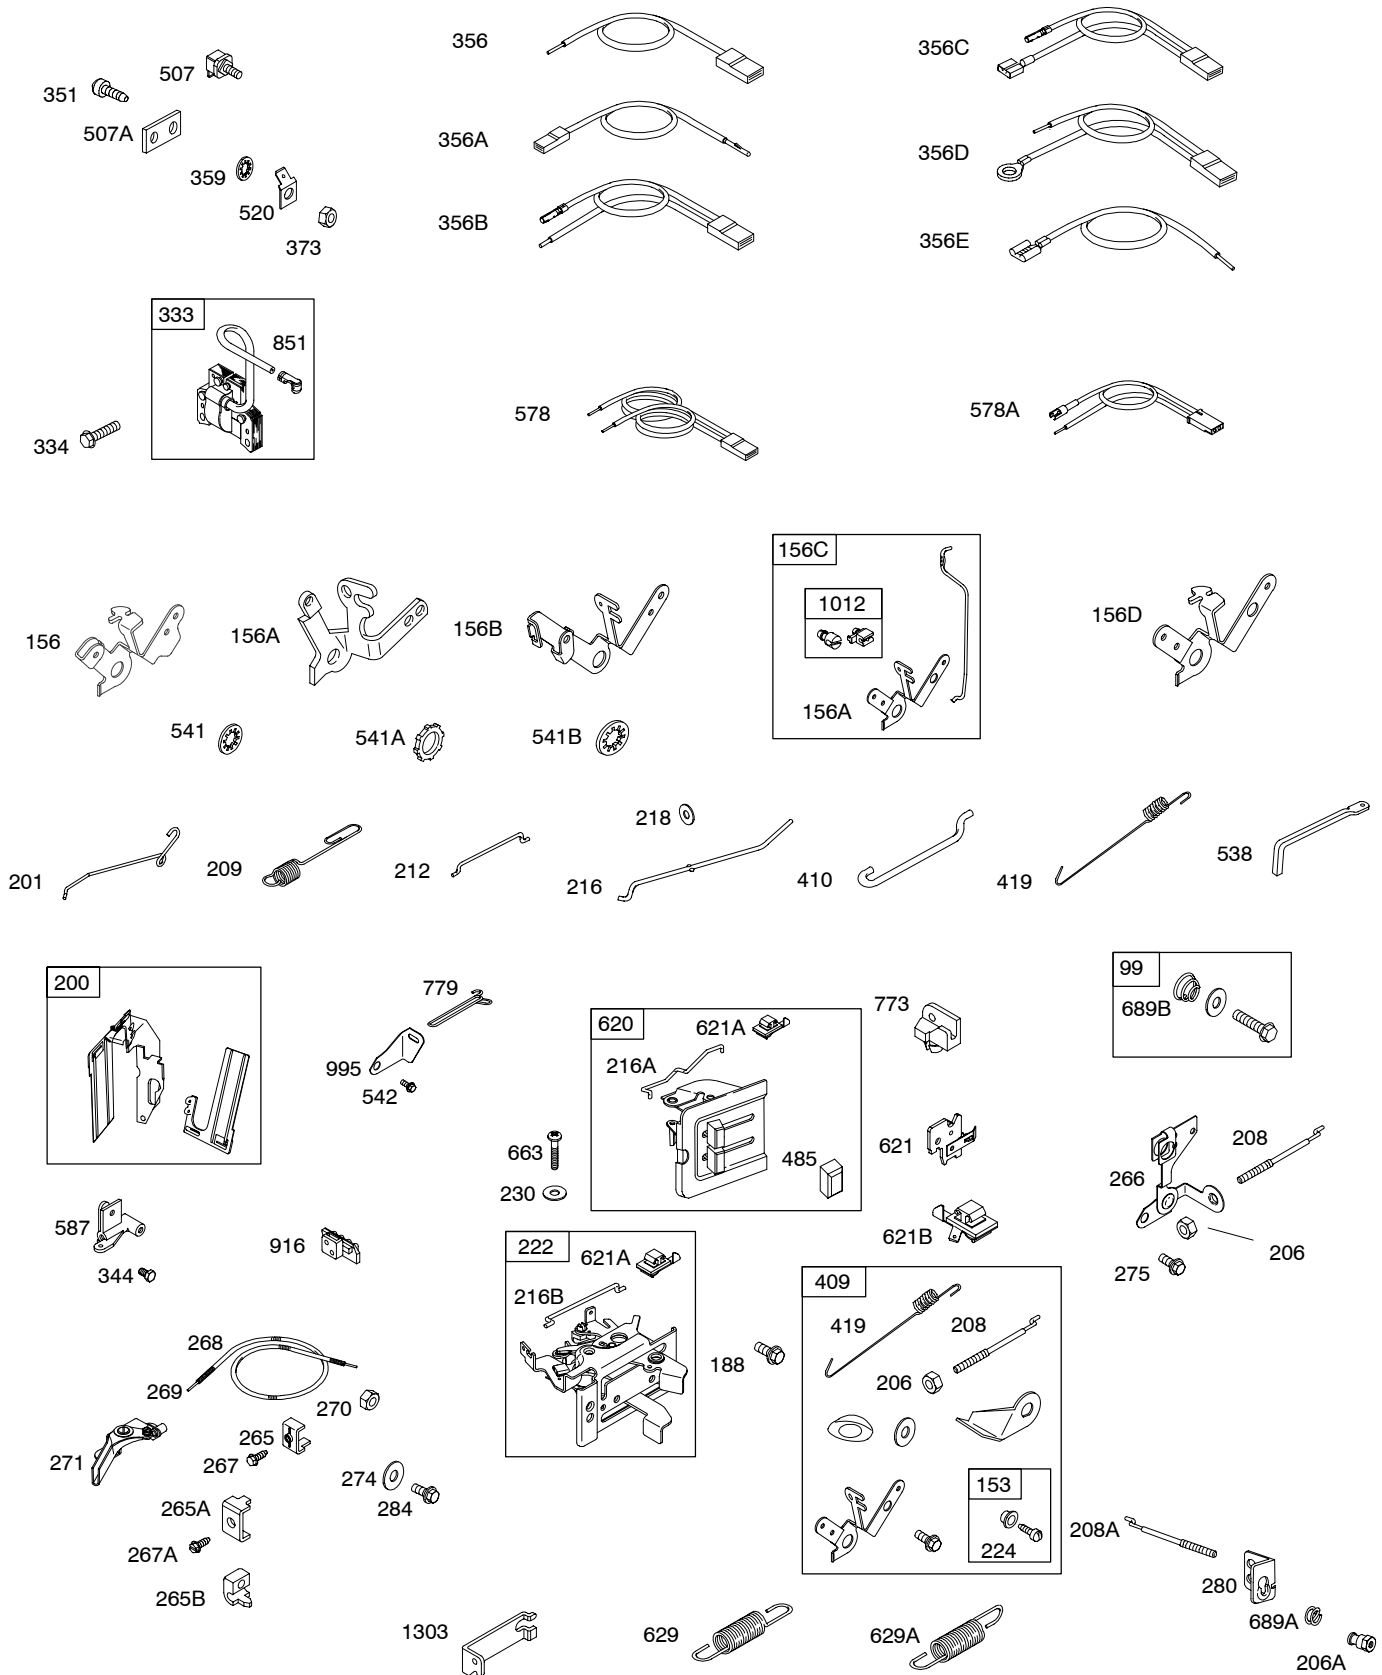


91200

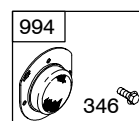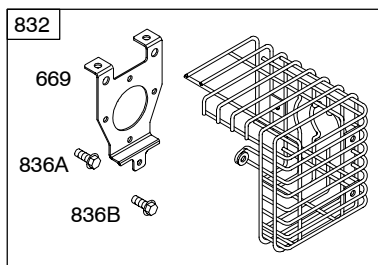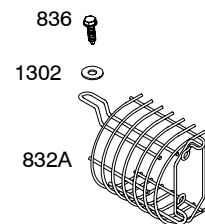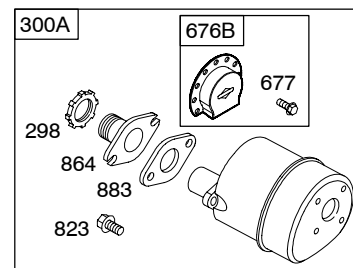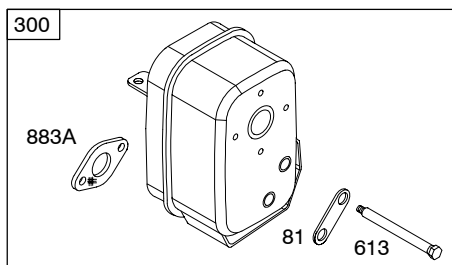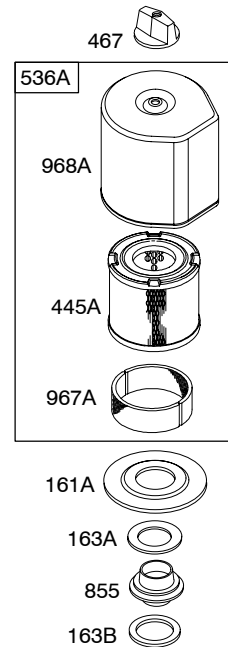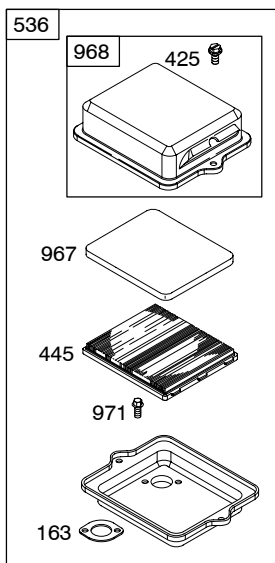


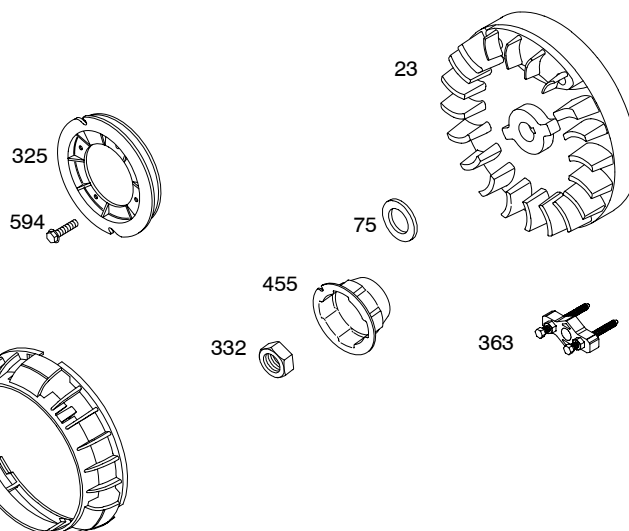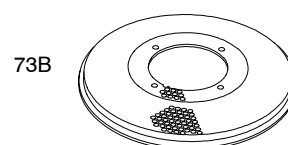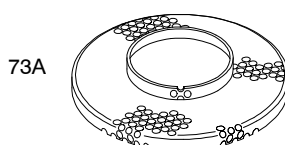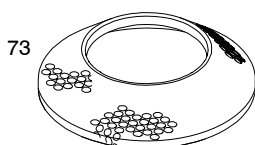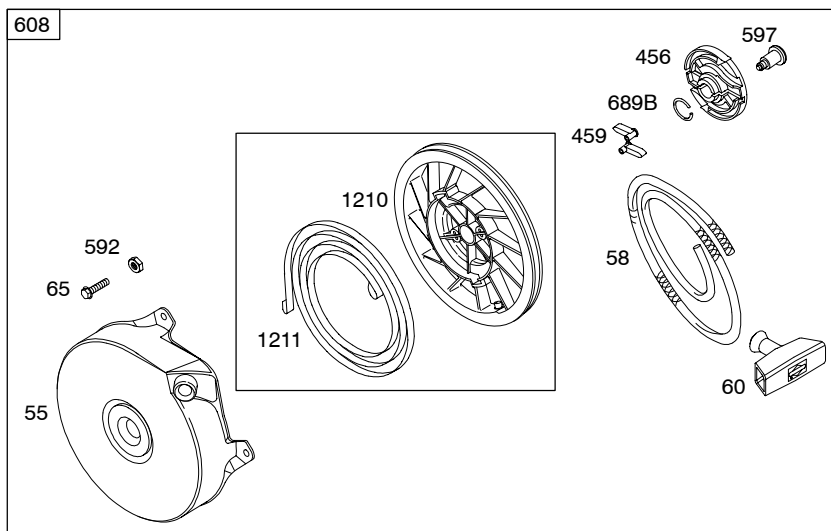

91200

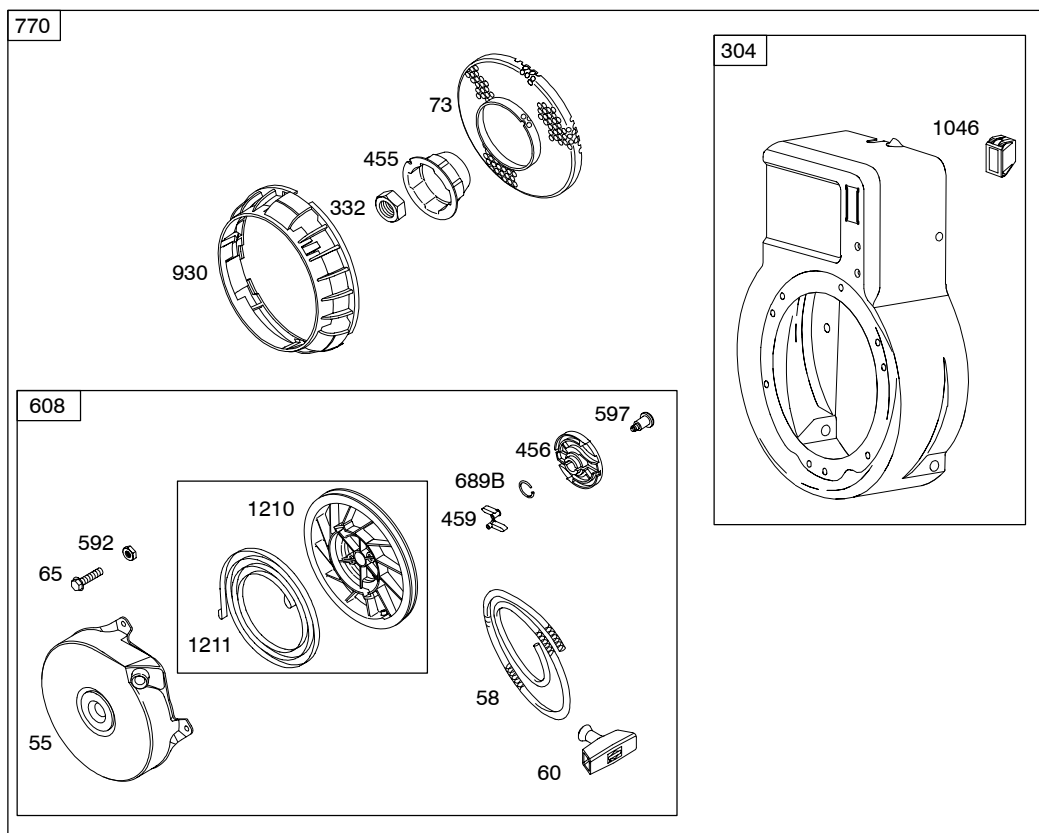

1036 EMISSIONS LABEL

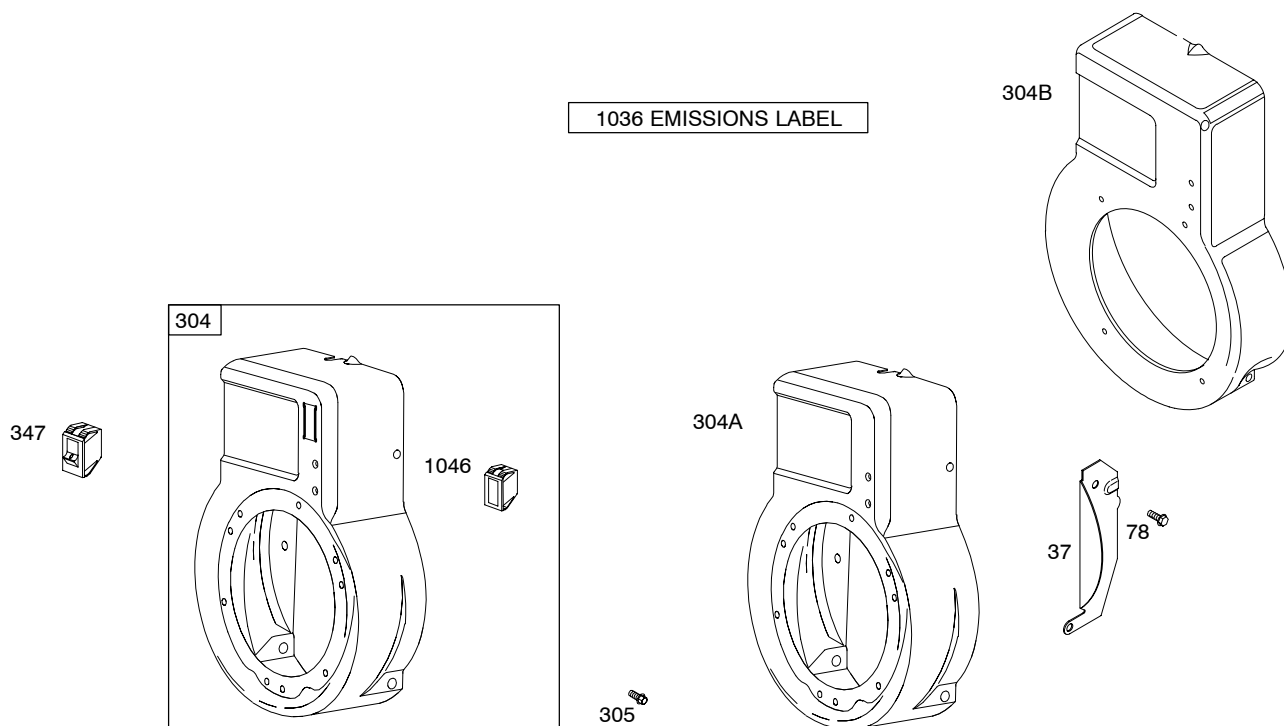

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	494549	Cylinder Assembly			----- Note -----		495210	Crankshaft
2	399269	Kit-Bushing/Seal (Magnetos Side)			493633 Crankshaft			Used on Type No(s).
3	299819s	Seal-Oil (Magnetos Side)			Used on Type No(s).			0024, 0036, 0052,
5	790169	Head-Cylinder			0014, 0020, 0034,			0062, 0063, 0117,
7	698717	Gasket-Cylinder Head			0035, 0038, 0061,			0175, 0204, 0208.
8	791779	Breather Assembly			0068, 0105, 0107,		493632	Crankshaft
9	695890	Gasket-Breather (Used After Code Date 03031900).			0114, 0115, 0116,			Used on Type No(s).
9A	27549s	Gasket-Breather (Used Before Code Date 03032000).			0118, 0133, 0134,			0219, 0619.
10	691666	Screw (Breather Assembly)			0145, 0153, 0155,		493599	Crankshaft
11	692528	Tube-Breather			0156, 0162, 0174,			Used on Type No(s).
11A	231550	Tube-Breather			0181, 0188, 0191,			0005, 0049, 0050,
12	692218	Gasket-Crankcase (.015" Thick, Standard)			0192, 0201, 0203,			0108, 0139, 0165,
		----- Note -----			0206, 0207, 0210,			0178, 0183.
		270895 Gasket-Crankcase (.005" Thick)			0223, 0225, 0335,		791415	Crankshaft
		270896 Gasket-Crankcase (.009" Thick)			0354, 0676.			Used on Type No(s).
13	691640	Screw (Cylinder Head)			791417 Crankshaft (Used Before Code Date 05110900).			1002, 1005, 1013,
14	690361	Stud (Cylinder Head)			Used on Type No(s).			1017, 1025, 1220,
15	691686	Plug-Oil Drain			1040, 1286, 1353.			1226, 1235, 1244,
15A	691682	Plug-Oil Drain			791418 Crankshaft (Used Before Code Date 05110900).			1251, 1327, 1354,
16	791421	Crankshaft (Used Before Code Date 05110900).			Used on Type No(s).			1356, 1359, 1366,
		Used on Type No(s).			0003, 0013, 0017,			1368, 1371.
		0800, 1014, 1020,			0018, 0040, 0064,		791416	Crankshaft
		1034, 1035, 1047,			0067, 0119, 0123,			Used on Type No(s).
		1054, 1061, 1205,			0127, 0128, 0129,			1319, 1372.
		1207, 1213, 1214,			0131, 0135, 0144,		791422	Crankshaft
		1215, 1218, 1224,			0146, 0149, 0150,			Used on Type No(s).
		1227, 1229, 1234,			0151, 0160, 0172,			1049, 1208, 1239,
		1253, 1265, 1298,			0186, 0189, 0198,			1250, 1259, 1278.
		1310, 1323, 1325,			0209, 0214, 0227,		792226	Crankshaft
		1328, 1332, 1362,			0609, 0616, 0620,			(Used After Code Date 05110800).
		1363, 1364, 1365,			0649.			Used on Type No(s).
		1369, 1375, 1378.	16A	791414	Crankshaft			1036, 1052, 1062,
					----- Note -----			1063, 1304, 1308.
					691473 Crankshaft			792229 Crankshaft
					Used on Type No(s).			(Used After Code Date 05110800).
					1292, 1367, 1377,			Used on Type No(s).
					1380.			1035, 1047, 1054,
					691474 Crankshaft			1061, 1205, 1207,
					Used on Type No(s).			1213, 1214, 1218,
					1209, 1231, 1249,			1224, 1227, 1229,
					1309.			1253, 1265, 1298,
								1323, 1325, 1328,
								1332, 1363, 1365,
								1369, 1378.

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

2689-9

Assemblies include all parts shown in frames.

12/22/2005

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
17	690824	Bearing-Ball	20	692020	Seal-Oil (PTO Side)	25	790908	Piston Assembly (Standard)
18	792232	Cover-Crankcase (Ball Bearing Cover) (Used After Code Date 05110800).			(Ball Bearing Cover)			(Used After Code Date 05051800).
		----- Note -----	20A	299819s	Seal-Oil (PTO Side)			----- Note -----
		497502 Cover-Crankcase (Ball Bearing Cover) (Used Before Code Date 05110900).	20B	691356	Seal-Oil (PTO Side) Used on Type No(s). 0212, 1366.			498668 Piston Assembly (Standard) (Used After Code Date 96012800 and Before Code Date 05051900).
18A	699406	Cover-Crankcase (Plain Bearing Cover)	21	281658s	Cap-Oil Fill			298904 Piston Assembly (Standard) (Used Before Code Date 96012900).
		----- Note -----	22	691129	Screw (Crankcase Cover/Sump) (1 1/4" Long)			
		496679 Cover-Crankcase (Plain Bearing Cover) Used on Type No(s). 0002, 0003, 0004, 0005, 0022, 0042, 0049, 0050, 0060, 0108, 0121, 0125, 0136, 0137, 0138, 0139, 0140, 0142, 0143, 0148, 0157, 0158, 0159, 0161, 0165, 0167, 0168, 0171, 0172, 0176, 0178, 0183, 0189, 0190, 0192, 0193, 0196, 0197, 0202, 0205, 0202, 0213, 0219, 0249, 0619, 1002, 1022, 1025, 1042, 1049, 1060, 1208, 1221, 1226, 1237, 1239, 1240, 1250, 1251, 1257, 1259, 1267, 1269, 1278, 1289, 1290, 1292, 1296, 1302, 1305, 1313, 1319, 1331, 1356, 1360, 1366, 1367, 1368, 1370, 1377, 1379, 1380, 1381.			----- Note -----			298906 Piston Assembly (.020" Oversize) (Used Before Code Date 96012900).
					693732 Screw (Crankcase Cover/Sump) (Used in Positions 1 and 6) (7/8" Long) Used on Type No(s). 1002, 1022, 1025, 1042, 1049, 1060, 1208, 1221, 1226, 1230, 1237, 1239, 1240, 1250, 1251, 1257, 1259, 1267, 1269, 1278, 1290, 1292, 1302, 1305, 1319, 1331, 1356, 1360, 1366, 1367, 1368, 1370, 1377, 1379, 1380, 1381.			
			23	690843	Flywheel			498671 Piston Assembly (.030" Oversize) (Used After Code Date 96012800 and Before Code Date 05051900).
					----- Note -----			298907 Piston Assembly (.030" Oversize) (Used Before Code Date 96012900).
					699573 Flywheel Used on Type No(s). 0119, 0128, 0129, 0149, 0151, 0153, 0161, 0209, 0214, 0609, 0616, 0620, 0649, 1209, 1212, 1220, 1231, 1249, 1251, 1253, 1309, 1314, 1353, 1354.			
					692009 Flywheel Used on Type No(s). 0117, 1217, 1367.			
19	399269	Kit-Bushing/Seal (PTO Side)	24	222698s	Key-Flywheel			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	790909	Ring Set (Standard) (Used After Code Date 05051800). ----- Note ----- 695169 Ring Set (Standard) (Used After Code Date 99103100 and Before Code Date 05051900). 498680 Ring Set (Standard) (Used After Code Date 96012800 and Before Code Date 99110100). 298982 Ring Set (Standard) (Used Before Code Date 96012900). 695171 Ring Set (.010" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 695172 Ring Set (.020" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 498682 Ring Set (.020" Oversize) (Used After Code Date 96012800 and Before Code Date 99110100). 298984 Ring Set (.020" Oversize) (Used Before Code Date 96012900). 695173 Ring Set (.030" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 498683 Ring Set (.030" Oversize) (Used After Code Date 96012800 and Before Code Date 99110100).	27	691588	Lock-Piston Pin	60	691915	Grip-Starter Rope
			28	699659	Pin-Piston (Standard) (Used After Code Date 05051800). ----- Note ----- 298909 Pin-Piston (Standard) (Used Before Code Date 05051900). 298908 Pin-Piston (.005" Oversize) (Used Before Code Date 05051900).	65	690837	Screw (Rewind Starter)
			29	699655	Rod-Connecting (Standard)	66	399671	Clutch-Starter (Used Before Code Date 98123100).
			30	691719	Dipper-Connecting Rod	67	394897	Clutch-Housing
			32	691664	Screw (Connecting Rod)	68	691604	Ball-Clutch
			33	296676	Valve-Exhaust ----- Note ----- 497871 Valve-Exhaust Used on Type No(s). 0063, 0127, 0204, 1063.	70	691945	Ratchet-Clutch
			34	296677	Valve-Intake	71	691359	Cover-Ratchet
			35	690520	Spring-Valve (Intake)	73	699850	Screen-Rotating (Used After Code Date 04032800).
			36	690520	Spring-Valve (Exhaust) ----- Note ----- 691838 Spring-Valve (Exhaust) (Used After Code Date 92122000 and Before Code Date 93110100). Used on Type No(s). 0063, 0127.	73A	694018	Screen-Rotating (Used Before Code Date 04032900 and After Code Date 02060200).
			37	690463	Guard-Flywheel	73B	691725	Screen-Rotating (Used Before Code Date 02060100).
			40	692194	Retainer-Valve	74	94058	Screw (Rotating Screen)
			45	691762	Tappet-Valve	75	691736	Washer (Flywheel)
			46	691998	Camshaft	78	690364	Screw (Flywheel Guard)
			51	273113s	Gasket-Intake	79	690605	Case-Gear Reduction
			55	692144	Housing-Rewind Starter	80	691602	Gasket-Gear Case
			58	691921	Rope-Starter (70" Long)	81	691179	Lock-Muffler Screw
						82	690369	Screw (Gear Reduction Case) (7/8" Long)
						82A	699164	Screw (Gear Reduction Case) (1 1/2" Long)
						83	690374	Shaft-Auxiliary Drive
						84	691121	Plug-Breather
						85	691127	Screw (Gear Cover to Gear Reduction Case)
						86	690608	Cover-Gear
						87	691582	Seal-Gear Reduction
						88	691600	Gasket-Gear Reduction Cover

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
90	499952	Carburetor (2 Quart Tank) (Air Vane) (Used After Code Date 98082300). Used on Type No(s). 1014, 1016, 1017, 1022, 1035, 1036, 1040, 1049, 1212, 1213, 1214, 1220, 1229, 1230, 1234, 1237, 1240, 1241, 1244, 1249, 1250, 1253, 1258, 1259, 1264, 1265, 1267, 1269, 1278, 1286, 1290, 1298, 1300, 1305, 1309, 1310, 1325, 1328, 1331, 1332, 1360, 1361, 1363, 1369, 1370, 1372, 1379, 1381, 1383. ----- Note ----- 499491 Carburetor (2 Quart Tank) (Air Vane) (Used Before Code Date 98082400). Used on Type No(s). 1014, 1016, 1017, 1022, 1035, 1036, 1040, 1049, 1212, 1214, 1220, 1237, 1240, 1241, 1244, 1249, 1250, 1253, 1264, 1267, 1278, 1286, 1290, 1300, 1305, 1309, 1310, 1325, 1328, 1331, 1360, 1361, 1363. 693029 Carburetor (2 Quart Tank) (Air Vane) Used on Type No(s). 1257.		495459 Carburetor (2 Quart Tank) (Air Vane) Used on Type No(s). 0002, 0003, 0014, 0016, 0017, 0022, 0024, 0035, 0036, 0037, 0038, 0040, 0049, 0050, 0064, 0067, 0119, 0120, 0134, 0140, 0141, 0143, 0145, 0148, 0151, 0155, 0157, 0158, 0159, 0162, 0164, 0166, 0167, 0176, 0178, 0179, 0182, 0186, 0188, 0190, 0191, 0197, 0200, 0201, 0203, 0205, 0206, 0207, 0209, 0212, 0214, 0225, 0249, 0800. 499470 Carburetor (2 Quart Tank) (Choke A Matic) Used on Type No(s). 0149, 0153. 499953 Carburetor (3 Quart Tank) (Air Vane) (Used After Code Date 98082300). Used on Type No(s). 0354, 0359, 0676, 1020, 1034, 1047, 1052, 1054, 1059, 1060, 1061, 1062, 1063, 1204, 1205, 1207, 1208, 1210, 1211, 1215, 1218, 1221, 1224, 1225, 1227, 1228, 1235, 1239, 1292, 1304, 1308, 1323, 1326, 1327, 1353, 1354, 1362, 1364, 1365, 1367, 1371, 1375, 1378, 1380, 1384, 1385.		499490 Carburetor (3 Quart Tank) (Air Vane) (Used Before Code Date 98082400). Used on Type No(s). 1020, 1034, 1047, 1052, 1054, 1059, 1060, 1061, 1062, 1063, 1204, 1207, 1211, 1215, 1218, 1221, 1235, 1239, 1292, 1304, 1308, 1323, 1326, 1327, 1353, 1354, 1362, 1364, 1365, 1367. 495460 Carburetor (2 and 3 Quart Tank) (Manual Choke, Air Vane, Fixed Speed) 495461 Carburetor (1 Quart Tank) (Manual Choke, Air Vane, Fixed Speed) 499492 Carburetor (1 Quart) (Air Vane) Used on Type No(s). 0616, 1002, 1005, 1013, 1019, 1025, 1042, 1209, 1222, 1226, 1231, 1251, 1302, 1319, 1359, 1366, 1368, 1377. 95 691437 Screw (Throttle Valve) 97 692018 Shaft-Throttle 99 490956 Kit-Spring/Screw (Governor Control Rod) Used on Type No(s). 0019. 110 690401 Washer (Choke Shaft) 121 495606 Kit-Carburetor Overhaul 127 691718 Plug-Welch (Carburetor Body) 127A 691742 Plug-Welch (Mixing Chamber) 127B 691585 Plug-Welch (Gear Reduction Case)		

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
130	691743	Valve-Throttle	173	691777	Valve-Idle Mixture	209	692205	Spring-Governor (No Color)
141	497230	Kit-Choke Shaft (Used After Code Date 94092500).	180	495377	Tank-Fuel (2 Quart) (Air Vane)			----- Note -----
		----- Note -----			----- Note -----			691785 Governor
		491177 Kit-Choke Shaft (Used Before Code Date 94092600).			495376 Tank-Fuel (2 Quart) (Mechanical Governor)			Spring (Yellow) (2.1" Long)
		495949 Kit-Choke Shaft Used on Type No(s). 0149, 0153.	180A	495391	Tank-Fuel (3 Quart) (Air Vane)			Used on Type No(s). 0003, 0005, 0013, 0014, 0024, 0115, 0118, 0127, 0135, 0144, 0146, 0150, 0160, 0179, 0186, 0201, 0210, 0225.
147	691250	Jet-Pilot (Standard)			----- Note -----			
		----- Note -----			495388 Tank-Fuel (3 Quart) (Mechanical Governor)			
		499502 Jet-Pilot (High Altitude)	180B	495370	Tank-Fuel (1 Quart)			263200 Spring- Governor (Slate Gray)
149	691592	Spring-Needle Valve	188	692200	Screw (Control Bracket)			Used on Type No(s). 0354, 0609.
153	490501	Kit-Collar/Screw	190	691685	Screw (Fuel Tank) (2/3" Long)			
156		Lever-Speed Adjuster (No Longer Available) Used on Type No(s). 0609, 0616, 0620, 0649.	190A	692200	Screw (Fuel Tank) (3/4" Long)			692911 Spring- Governor (Yellow) (1.8" Long)
156A	690439	Lever-Speed Adjuster	190B	691687	Screw (Fuel Tank) (1 3/4" Long)			Used on Type No(s). 1020, 1034, 1036, 1047, 1052, 1054, 1061, 1062, 1063, 1224, 1227, 1304, 1308, 1323, 1353, 1354, 1364, 1365.
156B	690438	Lever-Speed Adjuster	190C	691141	Screw (Fuel Tank) (1/2" Long)			
156C	492905	Lever-Speed Adjuster	191	692241	Gasket-Fuel Tank (Used After Code Date 92090600).			690373 Spring- Governor (Stone Blue)
156D	225371	Lever-Speed Adjuster Used on Type No(s). 0335, 0354, 0359, 0619, 0676.	191A	272996	Gasket-Fuel Tank (Used Before Code Date 92090700).			691825 Spring- Governor (Red)
161A	691735	Base-Air Cleaner Used on Type No(s). 0149, 0153.	200	498770	Blade-Governor			Used on Type No(s). 0015, 0018, 0034, 0036, 0038, 0052, 0061, 0062, 0063, 0067, 0116, 0117, 0128, 0129, 0133, 0136, 0137, 0149, 0151, 0153, 0174, 0175, 0177, 0180, 0182, 0196, 0208, 0223, 0359, 0616, 0619, 0620, 0649, 0676, 0680, 1015, 1018, 1228.
163	271935s	Gasket-Air Cleaner	201	691305	Link-Air Vane			
163A	271139s	Gasket-Air Cleaner Used on Type No(s). 0149, 0153.	206	690325	Nut-Governor Adjusting Used on Type No(s). 0002, 0004, 0060, 0121, 0159, 0190, 0205, 1004.			
163B	690580	Gasket-Air Cleaner Used on Type No(s). 0149, 0153.	206A	691771	Nut-Governor Adjusting			
166	691248	Stud (Air Cleaner) Used on Type No(s). 0149, 0153.	208	691820	Rod-Governor Control Used on Type No(s). 0002, 0004, 0060, 0121, 0159, 0190, 0205, 1004.			
170	691120	Stud (Crankcase Cover/Sump) (Used in Position 1) Used on Type No(s). 1005, 1016, 1017, 1019, 1036, 1040, 1212, 1241, 1286, 1326.	208A	691821	Rod-Governor Control			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

2689-13

Assemblies include all parts shown in frames.

12/22/2005

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		690563 Spring–Governor (White) Used on Type No(s). 0017, 0022, 0035, 0042, 0050, 0059, 0111, 0114, 0119, 0120, 0121, 0122, 0125, 0131, 0138, 0140, 0141, 0142, 0145, 0155, 0156, 0161, 0164, 0168, 0172, 0176, 0181, 0189, 0197, 0198, 0212, 0213, 0214, 0219, 0249, 1017, 1022, 1025, 1035, 1042, 1059, 1209, 1211, 1212, 1214, 1220, 1221, 1226, 1231, 1237, 1240, 1241, 1249, 1250, 1251, 1253, 1264, 1269, 1289, 1305, 1309, 1313, 1314, 1319, 1328, 1360, 1366, 1368, 1377, 1383.	216	690551	Link–Choke	268	691025	Casing–Control Wire (72" Long) (Cut to Required Length) ----- Note -----
			216A	691824	Link–Choke			691072 Casing–Control Wire (48" Long) (Cut to Required Length)
			216B	692904	Link–Choke	269	691026	Wire–Control (78" Long) (Cut to Required Length)
			217	691815	Spring–Choke Return	270	691027	Nut (Control Wire Casing)
			218	691722	Washer (Choke Link)	271	691028	Lever–Control
						274	691607	Washer (Cable Casing)
			222	699132	Bracket–Control	275	691683	Screw (Throttle Control)
			224	690320	Screw (Collar/Screw Kit)	280	691184	Bracket–Rod ----- Note -----
			229	691607	Washer (Fuel Tank) Used on Type No(s). 0013, 0019, 0042, 0173, 0189, 0219.			690424 Bracket–Rod Used on Type No(s). 0005, 0052, 0059, 0061, 0062.
			230	690390	Washer (Control Bracket) Used on Type No(s). 0149, 0153.	284	691082	Screw (Control Wire Casing)
			265	690393	Clamp–Casing Used on Type No(s). 0015, 0171, 0180, 1015.	298	691720	Locknut–Muffler/Elbow
			265A	691024	Clamp–Casing	300	691360	Muffler
			265B	690798	Clamp–Casing Used on Type No(s). 1060, 1221, 1225, 1228, 1290, 1305, 1385.	300A	493288	Muffler
			266	691414	Control–Throttle	303	690291	Elbow–Exhaust
			267	691082	Screw (Casing Clamp) (Carburetor)	304	692622	Housing–Blower Used on Type No(s). 1034, 1060, 1215, 1221, 1225, 1227, 1239, 1244, 1290, 1305, 1310, 1356, 1385.
			267A	692577	Screw (Casing Clamp) (3/4" Long) (Used After Code Date 03092200). Used on Type No(s). 1225, 1228, 1305, 1385.	304A	693004	Housing–Blower (Used After Code Date 95072300). ----- Note -----
					----- Note -----			490443 Housing–Blower (Used Before Code Date 03092300). Used on Type No(s). 1060, 1221, 1225, 1290, 1305.
					690804 Screw (Casing Clamp) (2/3" Long) (Used Before Code Date 03092300). Used on Type No(s). 1060, 1221, 1225, 1290, 1305.	304B	690665	Housing–Blower Used on Type No(s). 0024.
211	691289	Spring–Governed Idle				305	692198	Screw (Blower Housing)
212	691788	Link–Throttle Used on Type No(s). 0019.						

★ Engine Gasket Set–Reference 358
● Carburetor Overhaul Kit–Reference 121

Ø Valve Gasket Set–Reference 1095

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
306	690461	Shield-Cylinder	363	19069	Puller-Flywheel	538	691787	Rod-Control
307	691660	Screw (Cylinder Shield)	365	690953	Screw (Carburetor) (3/4" Long)			Used on Type No(s). 0019.
308	690462	Cover-Cylinder Head	373	691612	Nut (Ground Terminal)	541	691067	Washer (Speed Adjuster Lever)
325	690590	Pulley-Rope Starter (Used Before Code Date 97110300). Used on Type No(s). 0024.	383	89838	Wrench-Spark Plug	541A	690299	Washer (Speed Adjuster Lever) (External Teeth)
332	690662	Nut (Flywheel)	392	691823	Spring-Pump Diaphragm	541B	690288	Washer (Speed Adjuster Lever) (Internal Teeth)
333	496914	Armature-Magneto ----- Note ----- 398428 Armature- Magneto Used on Type No(s). 0063, 0204, 1063, 1304.	393	691213	Screen-Carburetor	542	691683	Screw (Link Bracket)
334	691061	Screw (Magneto Armature)	394	272538s	Diaphragm-Carburetor (Used After Code Date 92063000).	570	280737	Support-Foam Element Used on Type No(s). 0035, 0042, 0060, 0115, 0145.
337	802592s	Plug-Spark (Resistor) ----- Note ----- 492167s Plug-Spark (Used Before Code Date 97110300).	394A	270026	Diaphragm-Carburetor (Used Before Code Date 92070100).	578	398153	Wire Assembly
344	691685	Screw (Cable Clamp)	409	492912	Control-Speed	578A	696031	Wire Assembly
346	690661	Screw (Spark Arrester)	410	691274	Link-Control	587	690769	Clamp-Cable
347	691396	Switch-Rocker	415	691363	Plug (Crankcase Cover/Sump)	592	690800	Nut (Rewind Starter)
351	90200	Screw (Ground Terminal)	419	691818	Spring-Return (Throttle) Used on Type No(s). 0121.	594	94058	Screw (Rope Start Pulley)
356	692390	Wire-Stop	425	694515	Screw (Air Cleaner Cover)	597	691696	Screw (Pawl Friction Plate)
356A	690791	Wire-Stop	432	690766	Cap-Spring	608	690101	Starter-Rewind (70" Rope) ----- Note ----- 499706 Starter- Rewind (88 5/8" Rope) Used on Type No(s). 0680, 0800, 1237, 1369, 1370.
356B	695283	Wire-Stop	434	691713	Cover-Diaphragm	611	690507	Pipe-Fuel (2 Quart Tank) ----- Note ----- 691770 Pipe-Fuel (3 Quart Tank)
356C	691409	Wire-Stop	435	691619	Screw (Diaphragm Cover)	612	391813	Tube-Pick Up (2 and 3 Quart Tanks) ----- Note ----- 297219s Tube-Pick Up (1 Quart Tank)
356D	490346	Wire-Stop	445	491588s	Filter-Air Cleaner Cartridge	613	691632	Screw (Muffler)
356E	493501	Wire-Stop	445A	396424s	Filter-Air Cleaner Cartridge			
357	692191	Key-Drive Pulley Used on Type No(s). 0145, 0155, 0179, 0186, 0198, 0225, 1286, 1325, 1332, 1359.	455	691236	Cup-Flywheel			
358	495605	Gasket Set-Engine	456	692299	Plate-Pawl Friction			
359	691077	Washer (Ground Terminal)	459	281505s	Pawl-Ratchet			
362	691954	Shield-Spark Plug Used on Type No(s). 0013, 1013.	467	691668	Knob-Air Cleaner			
			485	692295	Knob-Control			
			507	691972	Insulator			
			507A	66895	Insulator			
			520	691084	Terminal-Ground			
			527	691741	Clamp-Tube			
			529	692189	Grommet (90 Degree)			
			529A	692187	Grommet (45 Degree)			
			536	494279	Cleaner-Air			
			536A	396397	Cleaner-Air			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

91200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
620	490649	Panel-Speed Control	741	791124	Gear-Timing (Non Ball Bearing Crankshafts)	883	691314	Gasket-Exhaust
621	691941	Switch-Stop				883A	691880	Gasket-Exhaust Used on Type No(s). 0127, 1265.
621A	692310	Switch-Stop	741A	691805	Gear-Timing (Ball Bearing Crankshafts)	916	691900	Rack-Governor Gear
621B	692029	Switch-Stop				930	691348	Guard-Rewind
629	690457	Spring-Throttle Return Used on Type No(s). 0002, 0004, 0060, 0159, 0190, 0205.	770	690098	Kit-Rewind/Blower Housing (Used Before Code Date 95072400).	957	494559	Cap-Fuel Tank
629A	696015	Spring-Throttle Return Used on Type No(s). 1060, 1221, 1265, 1290, 1298, 1305, 1356.	773	697325	Retainer	967	491435s	Filter-Pre Cleaner
			779	691828	Link-Bell Crank	967A	271466	Filter-Pre Cleaner
633	691869	Seal-Choke/Throttle Shaft	780	691211	Anchor-Spring	968	692321	Cover-Air Cleaner
			823	692336	Screw (Muffler Adapter)	968A	493822	Cover-Air Cleaner
635	66538s	Boot-Spark Plug	831	691099	Screw (Spring Anchor)	971	690370	Screw (Air Cleaner Base to Carburetor)
648	690661	Screw (Muffler Guard Bracket) (13/16" Long)	832	490571	Guard-Muffler	987	692279	Seal-Throttle Shaft
			832A	690789	Guard-Muffler	987A	270167	Seal-Throttle Shaft
648A	690664	Screw (Muffler Guard Bracket) (13/32" Long)	836	690367	Screw (Muffler Guard) (19/32" Long)	994	398067	Arrester-Spark
			836A	690661	Screw (Muffler Guard) (13/32" Long)	995	691756	Bracket-Link
663	690370	Screw (Speed Control Panel)	836B	691683	Screw (Muffler Guard) (1/3" Long)	1012	490507	Retainer-Link
669	690427	Bracket-Muffler Guard				1036		Label-Emissions (Available from Authorized Briggs & Stratton Service Dealer)
669A	691194	Bracket-Muffler Guard	851	493880s	Terminal-Spark Plug	1046	691337	Plug-Blower Housing
676	393756	Deflector-Muffler	855	690599	Adapter-Air Cleaner	1058	276346	Operator's Manual
676A	397931	Deflector-Muffler	864	690776	Adapter-Muffler	1095	699450	Gasket Set-Valve
676B	393760	Deflector-Muffler	869	691701	Seat-Valve (Intake)	1149	691624	Screw (Throttle Shaft)
676C	396548	Deflector-Muffler	870	691702	Seat-Valve (Exhaust)	1194	691876	Seal-O Ring (Plug)
677	690661	Screw (Muffler Deflector)	871	262001	Bushing-Valve Guide (Exhaust) (Used After Code Date 92071900).	1210	499901	Pulley/Spring Assembly (Pulley)
689	691783	Spring-Friction (Throttle Shaft)				1211	499901	Pulley/Spring Assembly (Spring)
689A	692522	Spring-Friction (Governor Control Rod)				1302	691186	Washer (Muffler Guard)
689B	691855	Spring-Friction (Rewind Starter)			----- Note -----	1303	690594	Clamp-Speed Control
692	690572	Spring-Detent			231348 Bushing-Valve Guide (Exhaust) (Used Before Code Date 92072000).	1330	270962	Repair Manual
718	690959	Pin-Locating (Cylinder)			63709 Bushing-Valve Guide (Intake)			
718A	499047	Pin-Locating (Crankshaft)						
718B	690296	Pin-Locating (Diaphragm Cover)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095