


1020 S/N 126,001 - 207,400
Air Cleaner

Page 1 of 61

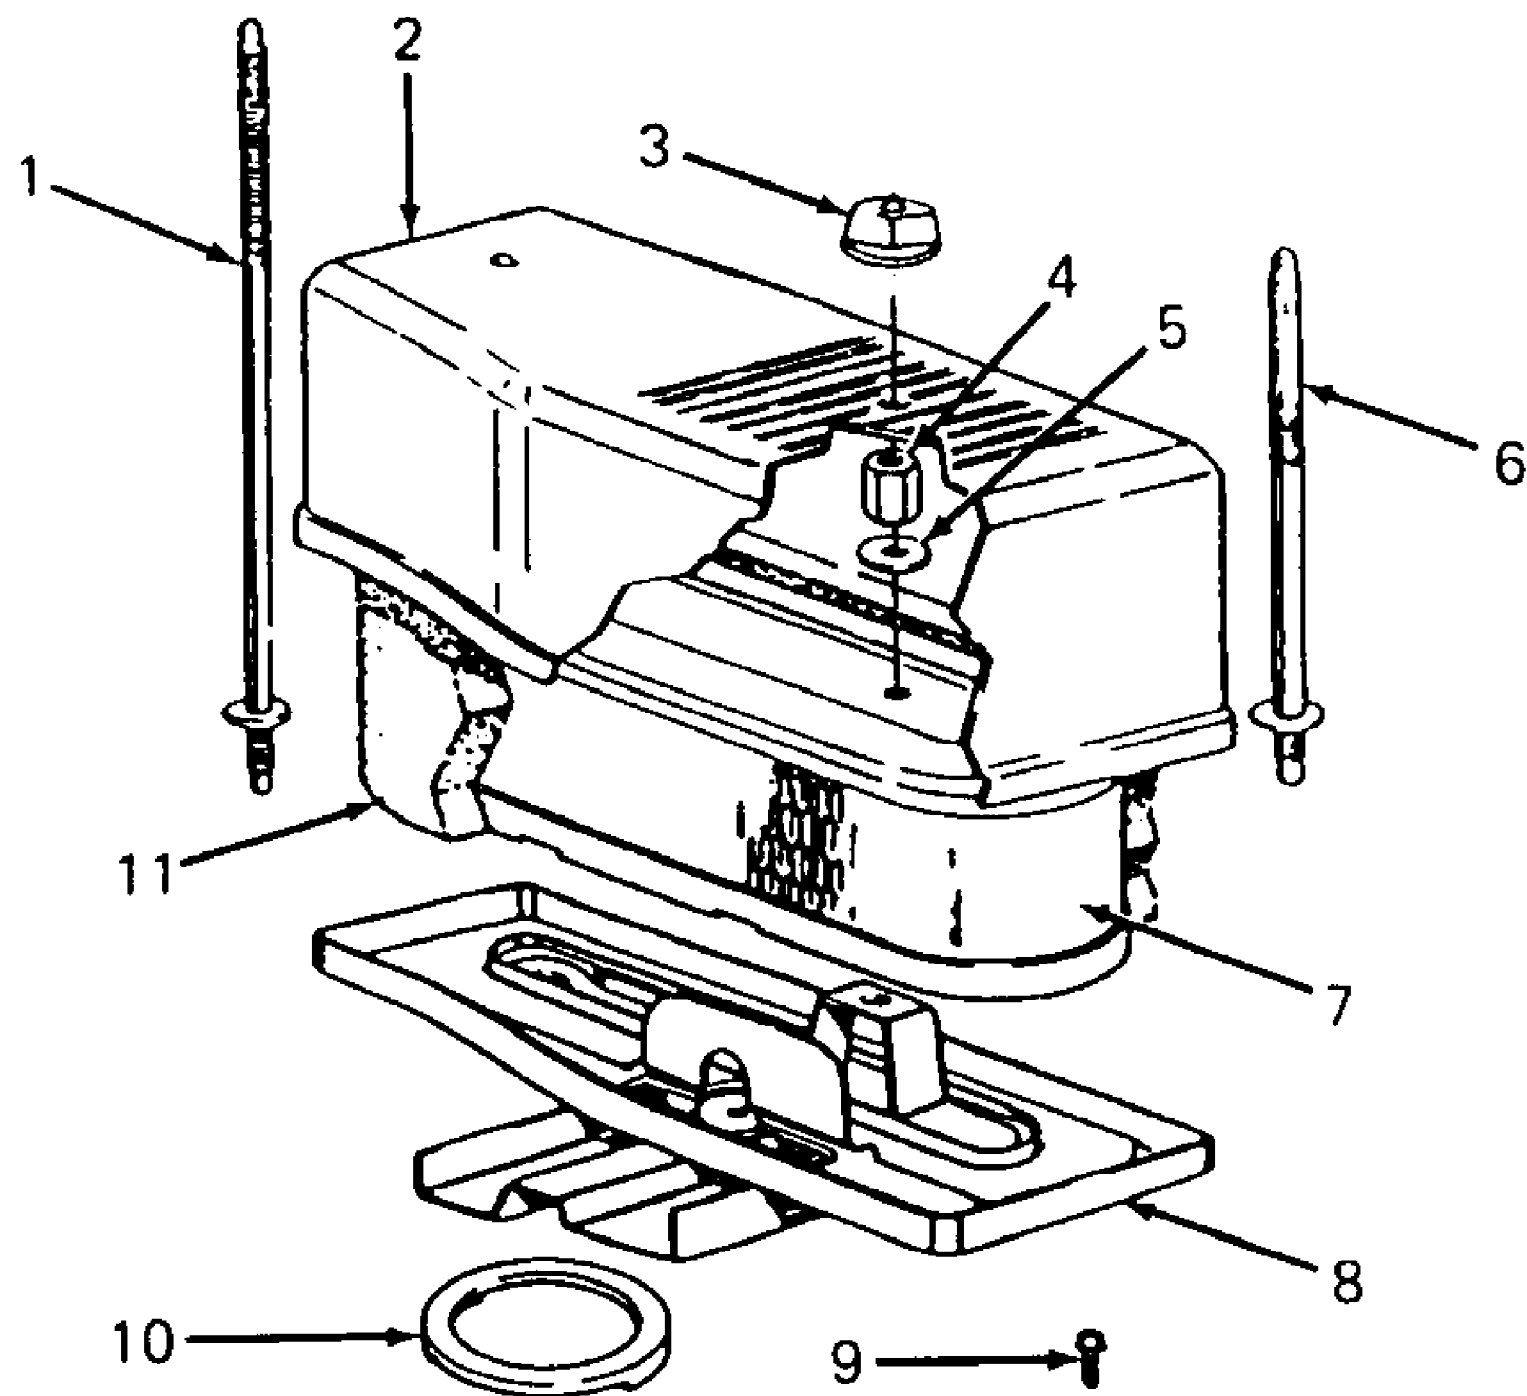



1020 S/N 126,001 - 207,400
Air Cleaner

Page 2 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	BS-94248	1		Screw, Air Cleaner
2	BS-223700	1		Cover, Air Cleaner
3	BS-212706	1	S	Knob, Air Cleaner
4	BS-231532	1	S	Nut, Air Cleaner Mounting
5	BS-94249	1	S	Washer, Air Cleaner
6	BS-94246	1		Screw, Air Cleaner
7	BS-491519	1	S	Cartridge, Air Cleaner
8	BS-490332	1		Body, Air Cleaner
9	BS-94018	1	S	Screw, Sems
10	BS-270853	1	/P	Gasket, Air Cleaner
11	BS-271962	1	S	Element, Air Cleaner

1020 S/N 126,001 - 207,400
Brake Pedal & Connections

Page 3 of 61

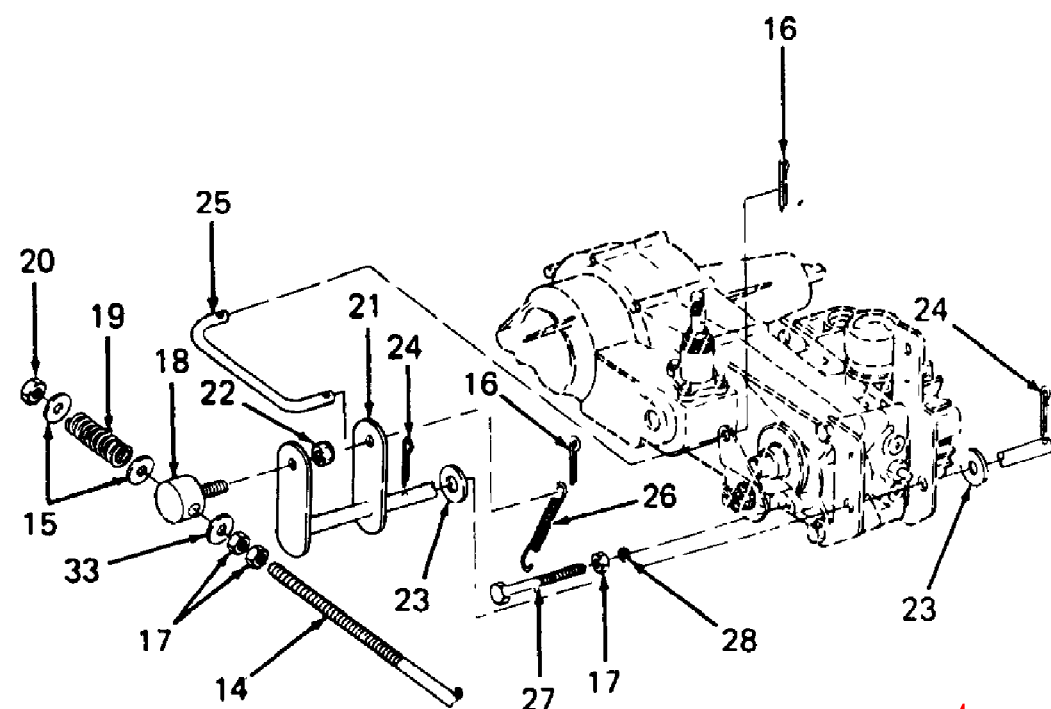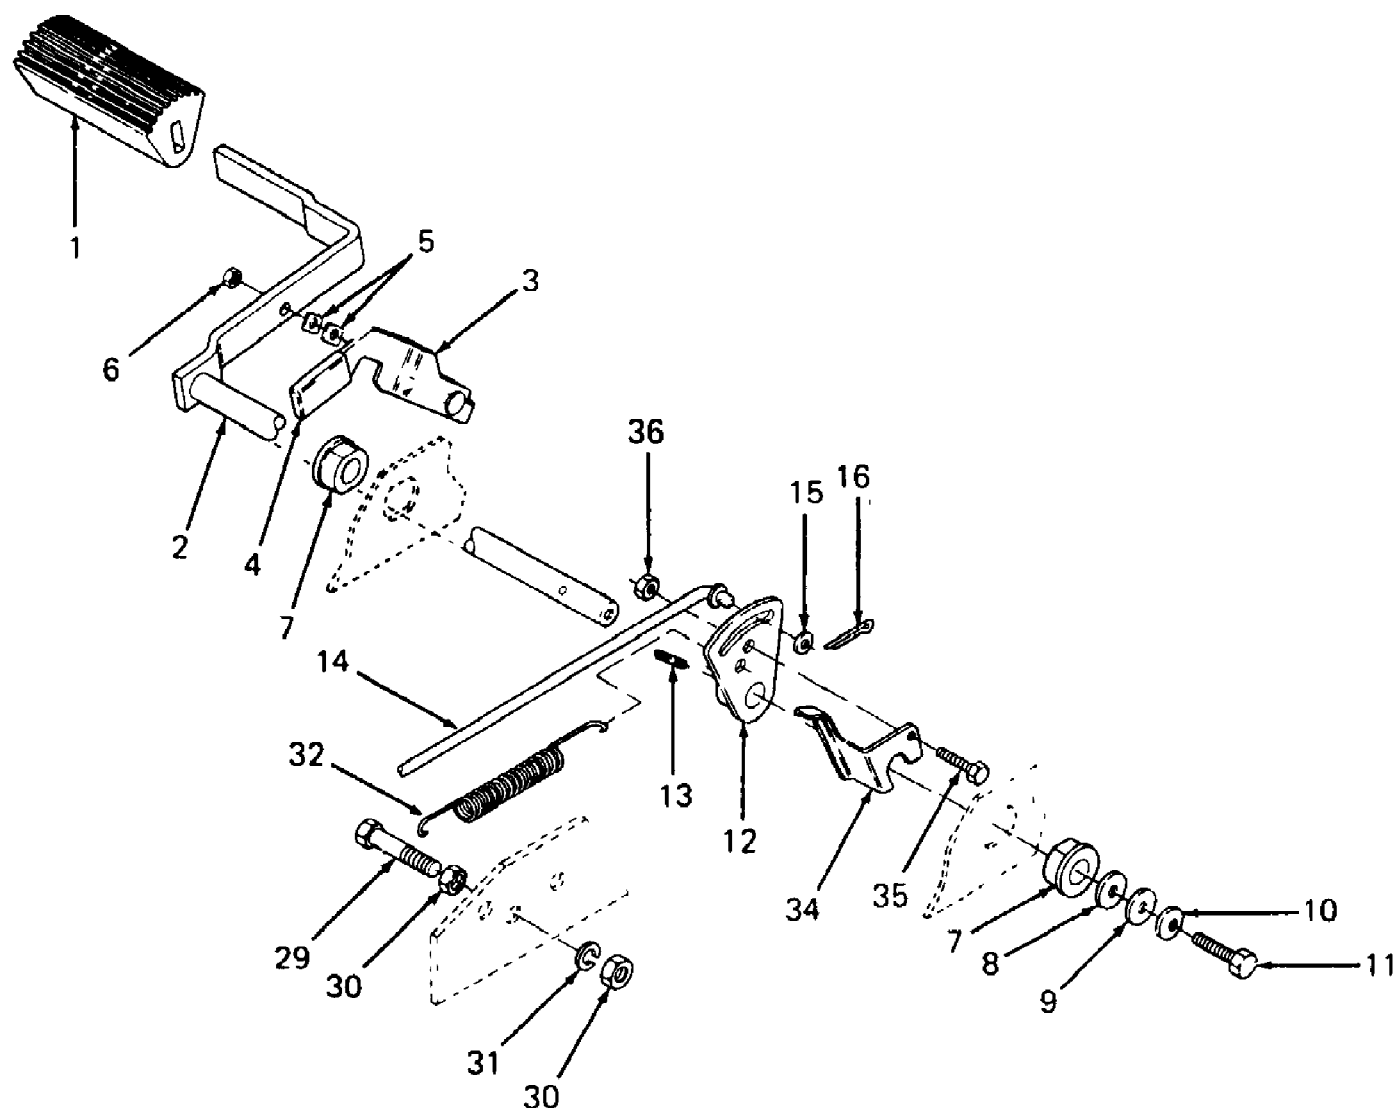


1020 S/N 126,001 - 207,400
Brake Pedal & Connections

Page 4 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	735-0189	1		Pad, Foot
2	703-1532	1		Pedal, Brake
3	703-1393	1		Bracket, Parking Brake
4	720-3019	1	S	Grip, Parking Brake
5	736-3001	2	/P	Washer, Wave
6	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20
7	748-0209	2	S	Bearing, Flange
8	736-0156	AR	/P	Washer, Flat, .635 X 1.12 X .090 Thk
9	736-0176	1	S	Washer, Flat, .26 X .93 X .120 Thk
10	736-0270	1	/P	Washer, Bell, .265 X .75 X .062 Thk
11	710-3015	1	/P	Screw, Hex Cap, 1/4-20 X .75 Lg GR5
12	703-1558A	1		Cam, Brake
13	715-0134	1	S	Pin, Spiral Spring, 3/16 Dia X 1.5 Lg
14	747-3131	1		Rod, Brake
15	736-0173	3	/P	Washer, Flat, .281 X .73 X .063 Thk
16	714-0507	3	S	Pin, Cotter, 3/32 X .75 Lg
17	712-0298	3	S	Nut, Hex Jam, 1/4-20
18	711-0471	1		Ferrule
19	732-0330	1	S	Spring, Compression, .58 OD X 2.00 Lg
20	712-0291	1	S	Nut, Hex Center Lock, 1/4-20
21	703-1634	1		Shaft, Brake
22	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
23	736-0272	2	S	Washer, Flat, .510 X 1.0 X .060 Thk
24	714-0115	2	S	Pin, Cotter, 1/8 Dia X 1.0 Lg
25	747-3130	1		Link, Brake
26	732-0339	1	S	Spring, Extension
27	710-3201	1		Screw, Hex Patch, 1/4-20 X 1.5 Lg GR5
28	736-0329	1	S	Washer, Lock, 1/4
29	710-0194	1	/P	Screw, Hex Cap, 3/8-16 X 3.0 Lg
30	712-3017	2	S	Nut, Hex, 3/8-16 GR5
31	736-0169	1	S	Washer, Lock, 3/8
32	732-0429A	1	S	Spring, Extension, .50 OD X 3.97 Lg
33	736-0142	1	S	Washer, Flat, .281 X .50 OD X .063 Thk
34	703-1897	1		Bracket, Switch Actuator (For tractors w/serial no. 170,600 and above)
35	710-0289	1	S	Screw, Hex Cap, 1/4-20 X .50 Lg (For tractors w/serial no. 170,600 and above)
36	712-0107	1	S	Nut, Hex Patch Lock, 1/4-20 (For tractors w/serial no. 170,600 and above)

1020 S/N 126,001 - 207,400
Carburetor

Page 5 of 61

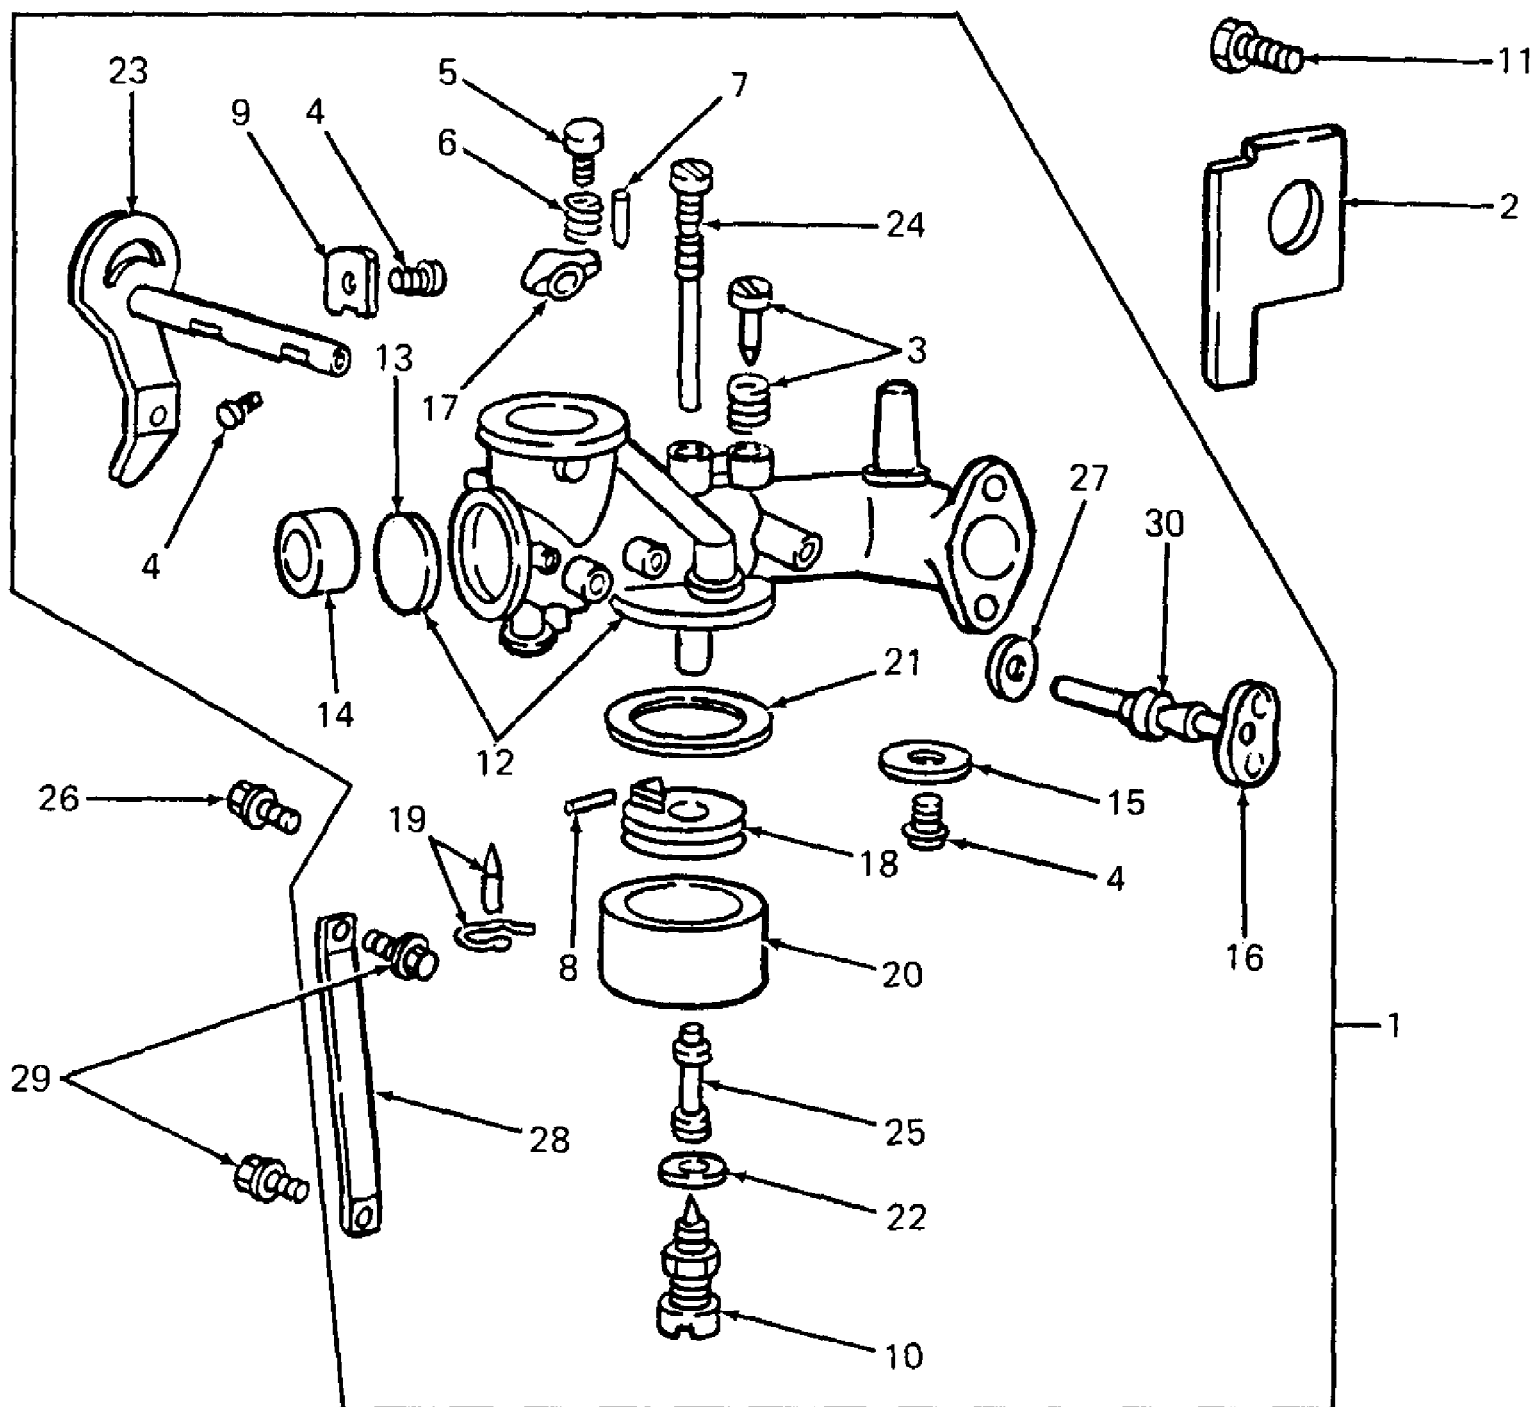


1020 S/N 126,001 - 207,400
Carburetor

Page 6 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	BS-491602	1		Carburetor Assembly
2	BS-270872	1	S	Gasket, Carburetor Mounting
3	BS-292681	1	/P	Valve Assy, Carburetor Idle
4	BS-93499	3	S	Screw, Throttle & Choke Valve Mtg Sems
5	BS-91920	1		Screw, Machine Fill Hd, #8-32 X .62 Lg
6	BS-26157	1	S	Spring, Throttle Adjustment
7	BS-93043	1		Pin, Throttle Stop
8	BS-230896	1		Pin, Float Hinge
9	BS-222010	1	/P	Valve, Choke
10	BS-396568	1		Valve, Needle
11	BS-93357	2		Screw, Carburetor Mounting
12	BS-490473	1		Body Assy, Carburetor (Includes Ref No. 13)
13	BS-221997	1		Plug, Welch
14	BS-213115	1		Venturi, Carburetor
15	BS-222433	1	/P	Valve, Throttle
16	BS-491006	1	/P	Shaft & Lever, Throttle
17	BS-211712	1	S	Stop, Throttle
18	BS-299707	1	/P	Float, Carburetor
19	BS-394681	1	/P	Valve, Fuel Inlet
20	BS-221995	1	/P	Bowl, Fuel
21	BS-270511	1	/P	Gasket, Float Bowl
22	BS-222014	1	S	Washer, Float Bowl
23	BS-299647	1		Shaft & Lever, Manual Choke
24	BS-299740	1		Nozzle, Carburetor
25	BS-231323	1		Screw, Nozzle
26	BS-93543	1	S	Screw, Control Casing
27	BS-271853	1	S	Washer, Foam
28	BS-222311	1		Bracket, Carburetor
29	BS-93572	2	S	Screw, Carburetor
30	BS-398970	1	S	Seal, Throttle Shaft
	BS-394698	1	/P	Kit, Carburetor Overhaul (Includes Ref No. 3, 8, 10, 13, 19, 21, 22, 24 & 25)

1020 S/N 126,001 - 207,400
Deck Lift & Hanger

Page 7 of 61

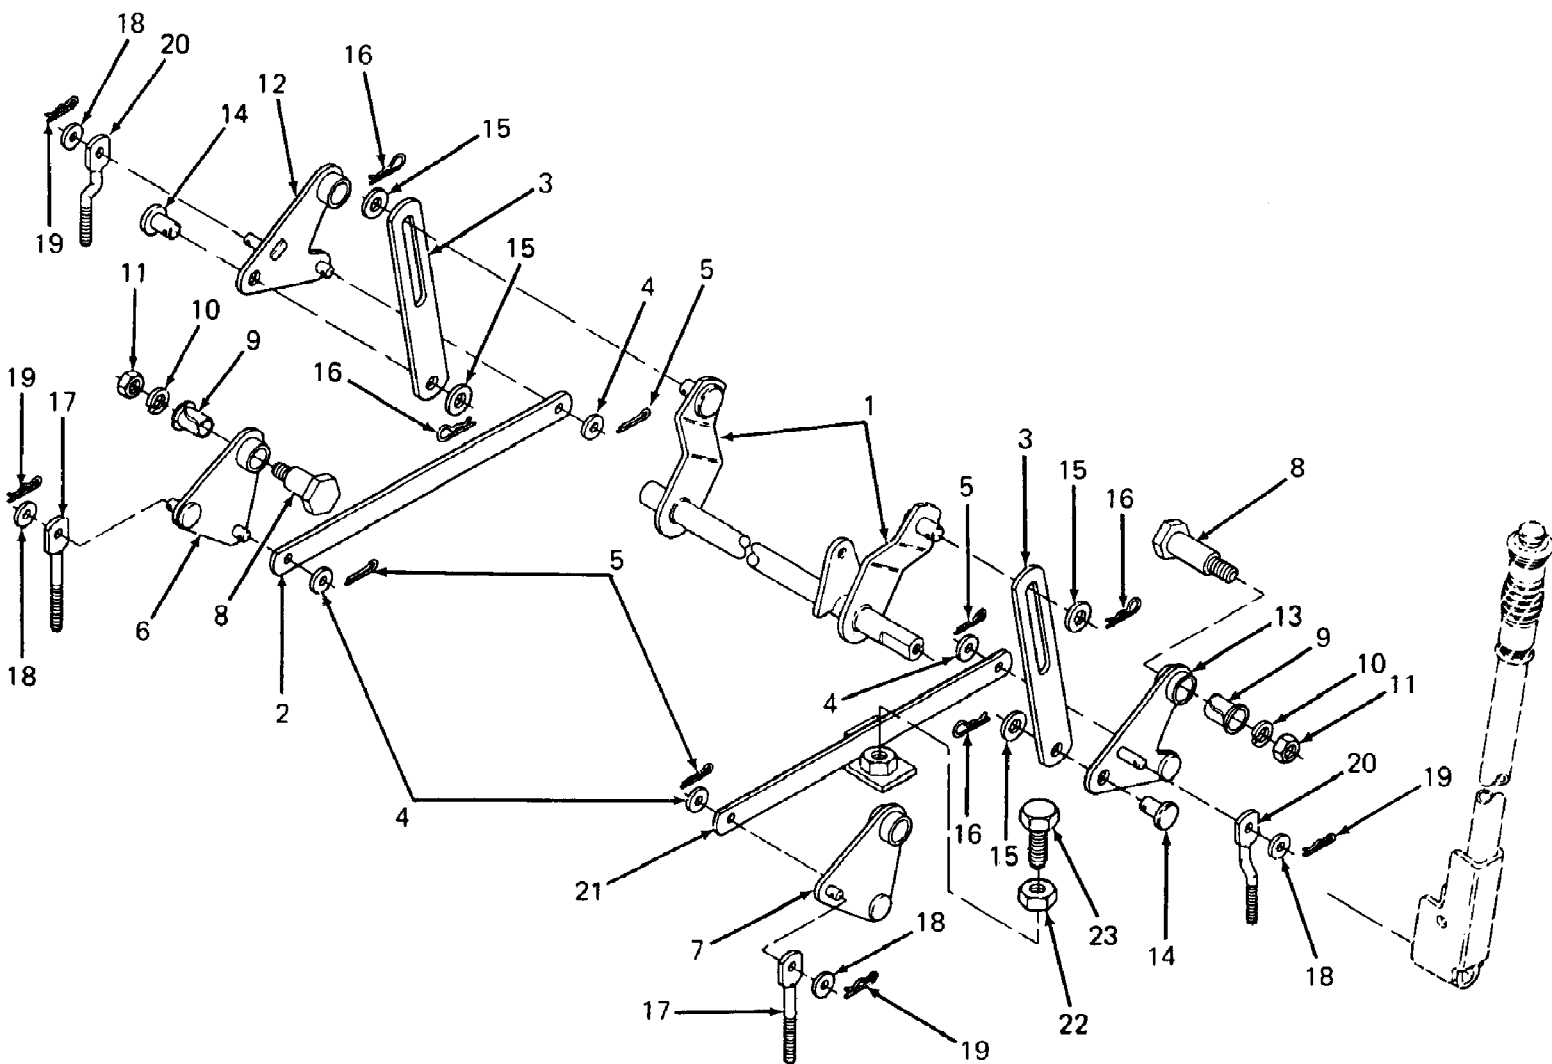


1020 S/N 126,001 - 207,400
Deck Lift & Hanger

Page 8 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1578	1		Shaft Assy, Lift
2	703-1602	1		Link
3	703-1601	2		Link, Lift
4	736-0101	4	S	Washer, Flat, .406 X 1.0 X .030 Thk
5	714-0474	4	S	Pin, Cotter, 1/8 X 3/4 Lg
6	703-1595	1		Cam Assy, Rear Lift - LH
7	703-1594	1	S	Cam Assy, Rear Lift - RH
8	738-0150	4	S	Screw, Shoulder, .625 X .960
9	741-0295	4	S	Bearing, Flanged Nyliner
10	736-0169	4	S	Washer, Lock, 3/8
11	712-3000	4	S	Nut, Hex Center Lock, 3/8-16 GR5
12	703-1597	1	S	Cam Assy, Front Lift - LH
13	703-1598	1	/P	Cam Assy, Front Lift - RH
14	711-3241	2	S	Pin, Clevis, .50 Dia X .62 Lg
15	736-0272	4	S	Washer, Flat, .510 X 1.0 X .06 Thk
16	714-0149	4	S	Pin, Internal Cotter
17	711-3239	2	S	Link, Rear Lift
18	736-0185	4	S	Washer, Flat, .406 X .75 X .063 Thk
19	714-0104	4	S	Pin, Internal Cotter
20	711-3237	2		Link, Front Lift
21	703-1708	1		Lift Stop Assy
22	712-3008	1	S	Nut, Hex, 3/16-18 GR5
23	710-0514	1	/P	Screw, Hex Cap, 3/8-16 X 1.0 Lg GR5

1020 S/N 126,001 - 207,400
Drive

Page 9 of 61

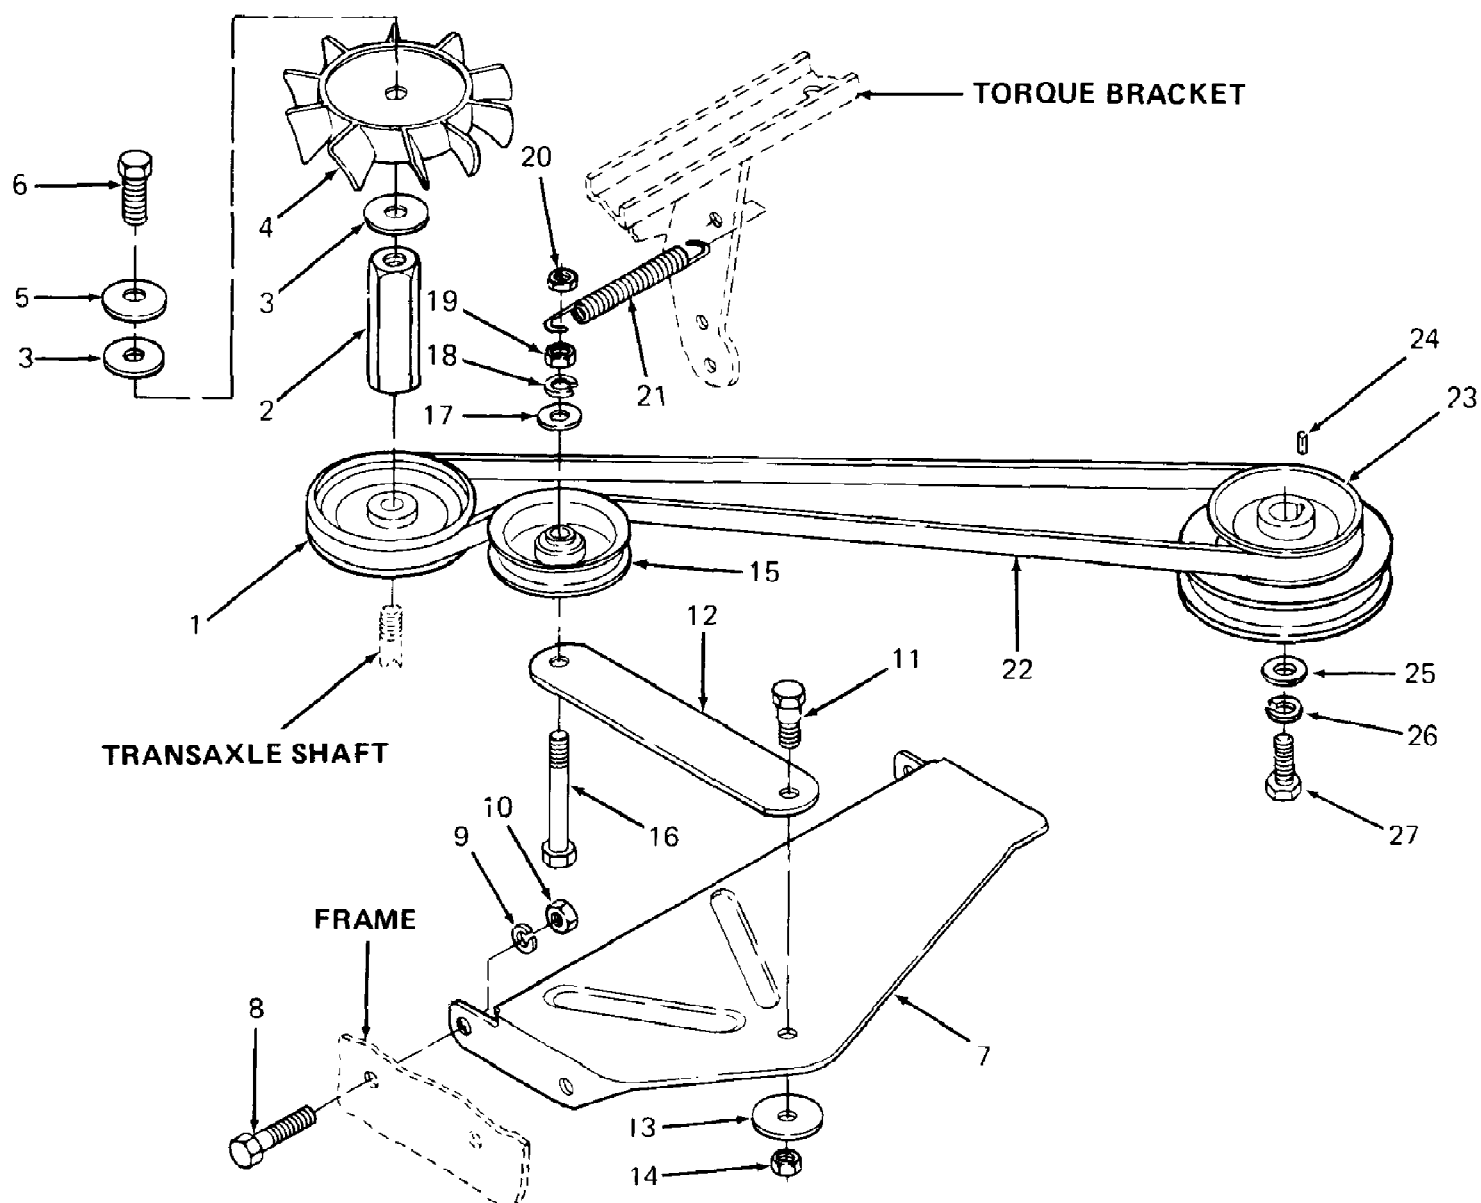


1020 S/N 126,001 - 207,400
Drive

Page 10 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	756-3039	1		V-Pulley, 4.0 Dia
2	711-3244	1		Adapter, Fan, 2.0 Lg
3	736-3021	2		Washer, Flat, .531 X 1.5 X .120 Thk
4	731-3080	1	S	Fan, 10 Blade Hydro
5	736-0253	1	S	Washer, Bell, .505 X 1.00 X .075
6	710-3194	1	/P	Bolt, Hex, 1/2-20 X .75 Lg GR5
7	703-1534	1		Bracket, Clutch Mounting
8	710-0759	4		Screw, Hex Cap, 5/16-18 X .62 Lg
9	736-0119	4	S	Washer, Lock, 5/16
10	712-3010	4	S	Nut, Hex, 5/16-18 GR5
11	738-0140	1	S	Screw, Shoulder
12	703-1644	1	S	Bracket, Hydro Idler
13	736-0123	1	S	Washer, Flat, .344 X 1.12 X .063 Thk
14	712-3009	1	S	Nut, Hex Center Lock, 5/16-18 GR5
15	756-3054	1	S	Idler, Flat, 2.75 Dia
16	710-3011	1	/P	Screw, Hex Cap, 3/8-16 X 2.25 Lg GR5
17	736-0185	1	S	Washer, Flat, .406 X .75 X .063 Thk
18	736-0169	1	S	Washer, Lock, 3/8
19	712-3017	1	S	Nut, Hex, 3/8-16 GR5
20	712-0266	1	S	Nut, Hex Center Lock Jam, 3/8-16
21	732-0429A	1	S	Spring, Extension
22	754-3037	1	S	V-Belt, A Sec X 80 in. Lg
23	756-3037	1		Pulley, Engine, 3.5 Dia
24	714-0119	1	S	Key, Square, 1/4 X .75 Lg
25	736-0322	1	/P	Washer, Flat, .450 X 1.25 X .172 Thk HDN
26	736-0171	1	S	Washer, Lock, 7/16
27	710-0757	1	/P	Screw, Hex Cap, 7/16-20 X 1.5 Lg

1020 S/N 126,001 - 207,400
Electrical

Page 11 of 61

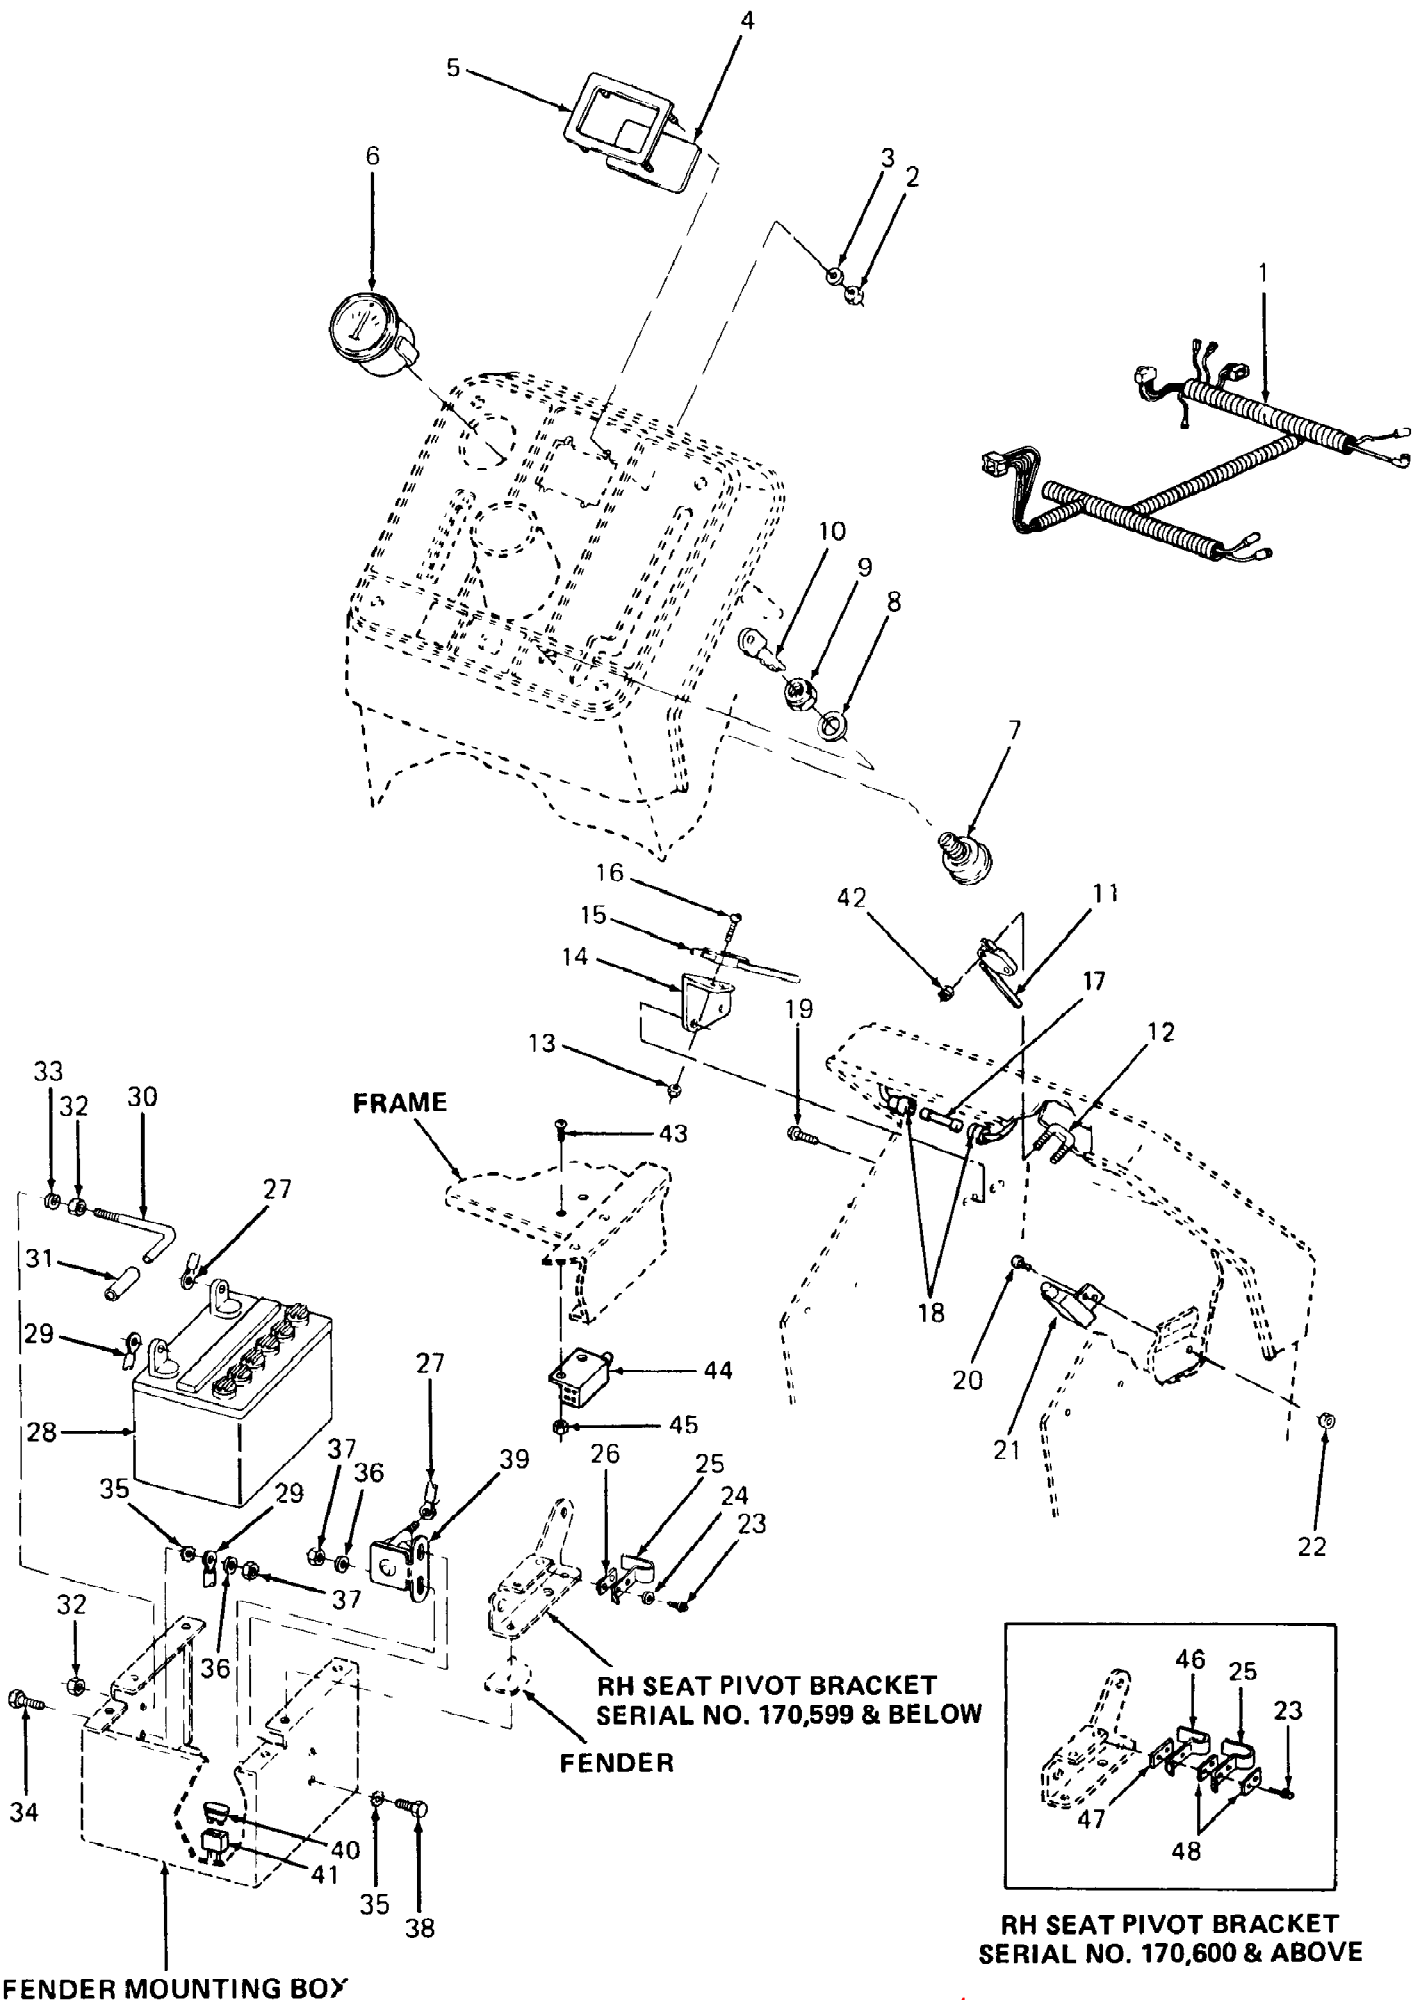

1020 S/N 126,001 - 207,400
Electrical

Page 12 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	725-3144	1		Harness, Wire (For tractors w/serial no. 170,599 and below)
	725-3171	1		Harness, Wire (For tractors w/serial no. 170,600 and above)
	725-1436	1	S	Diode, Harness Adapter
2	712-3060	4		Nut, Self-Threading
3	735-0640	4		Washer, Rubber, .18 X .50 X .06 Thk
4	779-3293	1		Label, Indicator
5	731-3049	1		Bezel, Light
6	725-3141	1	S	Ammeter
7	725-3026	1	S	Switch, Ignition Key
8	736-0302	1	/P	Washer, Flat
9	712-3013	1	/P	Nut, Ignition Switch
10	759-3476A	1	S	Key, Ignition (Set of 2)
11	725-3066	1	S	Switch, Rev. Micro
12	711-3259	1		Screw, Switch
13	712-3052	2	/P	Nut, Hex Insert Lock, #4-40 (For tractors w/serial no. 170,599 and below)
14	703-1606	1		Plate, Switch (For tractors w/serial no. 170,599 and below)
15	725-3146	1	S	Switch, Micro (For tractors w/serial no. 170,599 and below)
16	710-3112	2		Screw, Hex Hd Mach, #4-40 X .75 Lg (For tractors w/serial no. 170,599 and below)
17	725-3120	1	S	Fuse, 20 Amp Slo-Blow (For tractors with fuse under the dash)
18	729-0124	1		Fuse Holder (For tractors with fuse under the dash)
19	710-0776	2	S	Screw, Hex AB Tapp, 1/4 X .62 Lg (For tractors w/serial no. 170,599 and below)
20	710-0473	2	/P	Screw, Truss Mach, #10-24 X .50 Lg
21	725-0465A	1	S	Switch, Safety
22	712-0998	2	/P	Nut, Hex Center Lock, #10-24
23	710-0227	2	/P	Screw, Hex Wash Hd AB Tapp, #8 X .50 Lg
24	736-0426	2		Washer, Plastic (For tractors w/serial no. 170,599 and below)
25	725-1303	1	S	Switch, Spring
26	726-0222	1	S	Plate, Insulator Nut (For tractors w/serial no. 170,599 and below)
27	725-3158	1	S	Wire, Positive Battery
28	725-3061	1	S	Battery, 12 Volt
	710-0451	2	/P	Bolt, Carriage, 5/16-18 X .75 Lg
	712-3010	2	S	Nut, Hex, 5/16-18
29	725-0977	1	S	Wire, Ground, 11.5 in. Lg
30	747-0216	1	/P	Pin, Belt Guard Lock
31		1		Fuel Line, 2 in. Lg (Use bulk fuel line part no. 759-3330, 10 ft. Lg)

1020 S/N 126,001 - 207,400
Electrical


Page 13 of 61

Ref #	Part Number	Qty	S/P/F	Description
32	712-3057	2	S	Nut, Hex, 5/16-24 GR5
33	736-0119	1	S	Washer, Lock, 5/16
34	710-0751	1	/P	Screw, Hex Cap, 1/4-20 X .62 Lg GR5
35	736-3006	3	/P	Washer, Int Ext Lock, 1/4 X 3/4
36	736-0173	3	/P	Washer, Flat, .281 X .73 X .063 Thk
37	712-0107	3	S	Nut, Hex Patch Lock, 1/4-20
38	710-3013	2	/P	Screw, Hex Cap, 1/4-20 X .50 Lg GR5
39	725-0771	1	S	Solenoid, 12 Volt (For tractors w/serial no. 170,599 and below)
	725-1426	1	S	Solenoid, 12 Volt w/Spade Terminal (For tractors w/serial No. 170,600 and above)
	736-0329	2	S	Washer, Lock, 1/4
	712-3006	2	/P	Nut, Hex, 1/4-20 GR5
40	725-1381	1	S	Fuse, Auto Type, 20 Amp (For tractors with fuse under the seat)
41	729-0207	1		Fuse Holder
	729-0209	1		Clip, Fuse Holder Mtg (For tractors with fuse under the seat)
42	712-3052	2	/P	Nut, Hex Insert Lock, #4-40
43	710-0519	2		Screw, #10-24 X .50 Lg (For tractors w/serial no. 170,600 and above)
44	725-3169	1	S	Switch, Double Poled Plunger (For tractors w/serial no. 170,600 and above)
45	712-0998	2	/P	Nut, Hex Center Lock, #10-24 (For tractors w/serial no. 170,600 and above)
46	725-1439	1		Switch, Spring (For tractors w/serial no. 170,600 and above)
47	726-0278	1		Plate, Insulator Boss (For tractors w/serial no. 170,600 and above)
48	726-0279	2		Plate, Insulator (For tractors w/serial no. 170,600 and above)

1020 S/N 126,001 - 207,400


Page 14 of 61

Electrical System 1990 L.T. S/N 170,601-Up

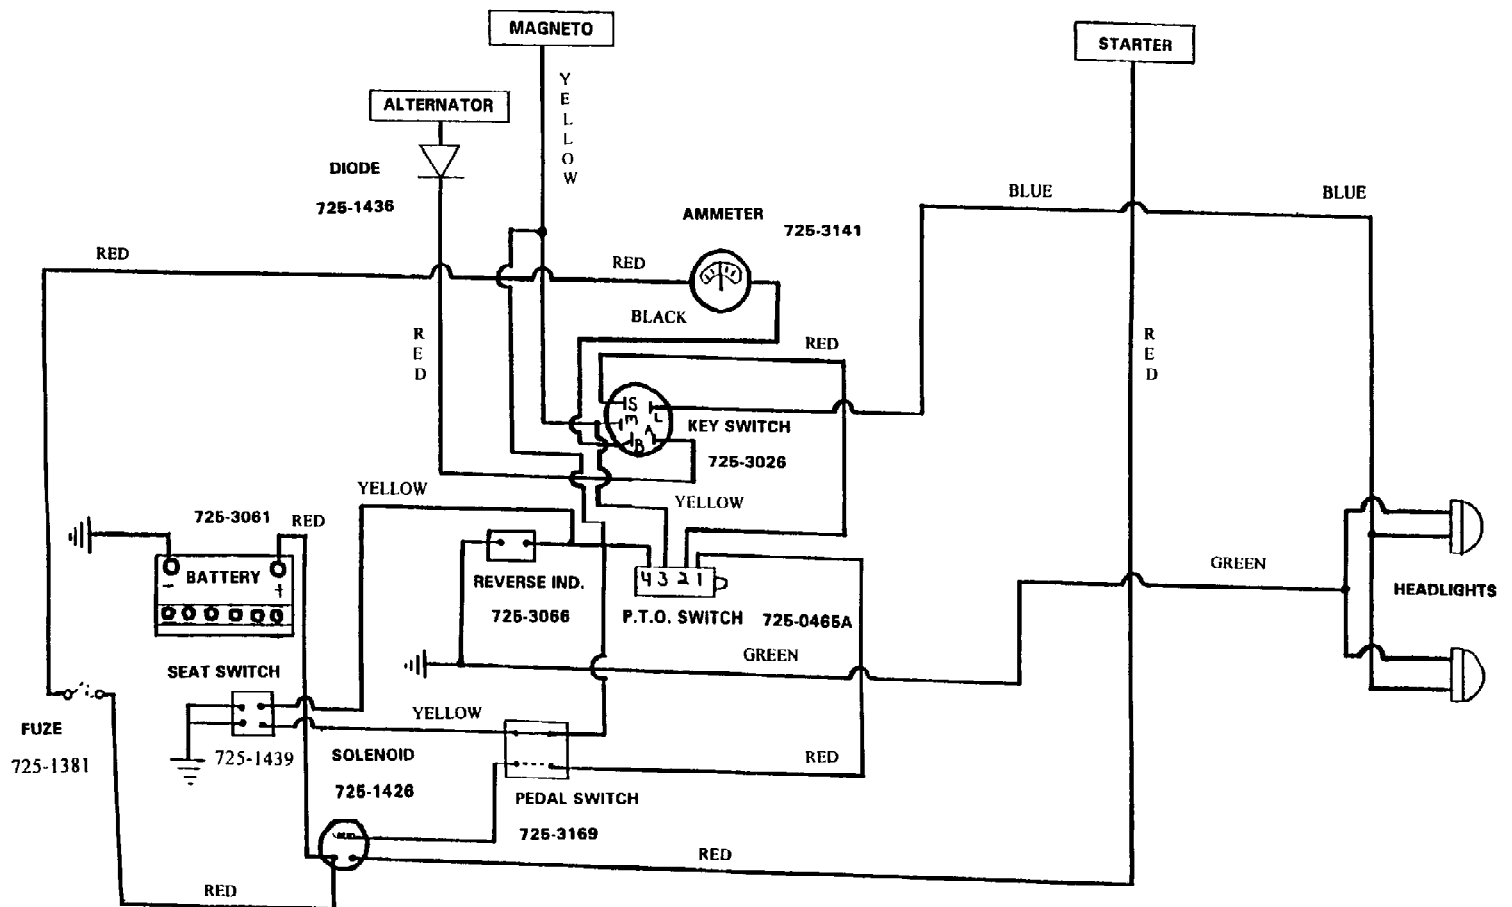

1020 S/N 126,001 - 207,400
Engine

Page 15 of 61

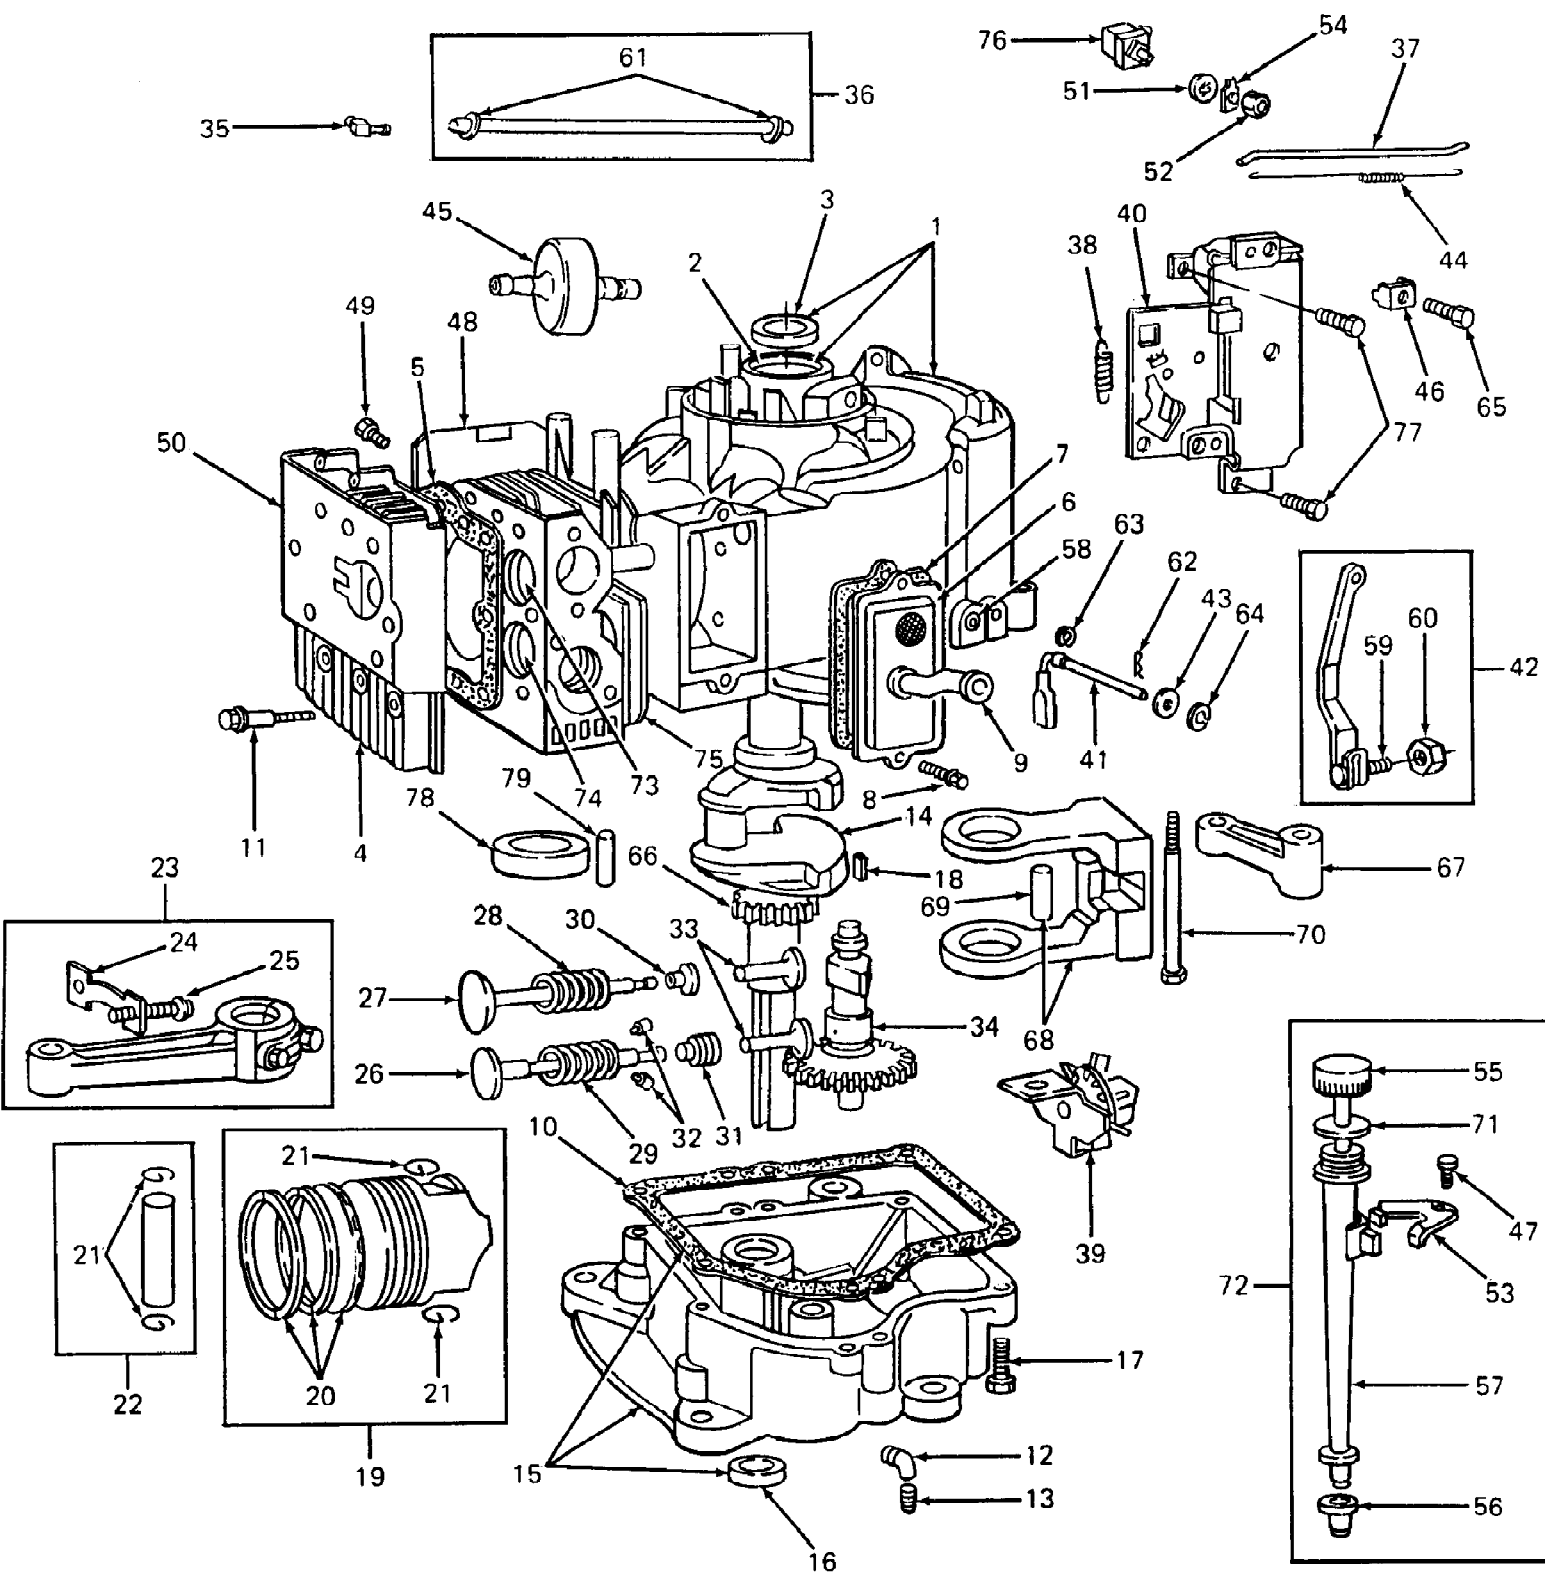

1020 S/N 126,001 - 207,400
Engine

Page 16 of 61

Ref #	Part Number	Qty	S/P/F	Description
	752B010501	1		Engine Assembly - 10 HP
	710-0624	3	/P	Screw, Hex Cap, 5/16-24 X 1.50 Lg GR5
	710-0772	1	/P	Screw, Hex Cap, 5/16-24 X 2.0 Lg GR5
	712-3057	3	S	Nut, Hex, 5/16-24 GR5
	712-0305	1	S	Nut, Hex Patch Lock, 5/16-24
	736-0119	3	S	Washer, Lock, 5/16
	BS-396610	1		Short Block
1	BS-395705	1		Cylinder Assembly (Includes Ref No. 2, 3, 73, 74 & 75)
2	BS-399265	1	/P	Bearing, Cylinder
3	BS-391086	1	S	Seal, Oil
4	BS-212914	1		Head, Cylinder
5	BS-271866	1	S	Gasket, Cylinder Head
6	BS-391406	1	S	Breather Assembly
7	BS-27803	1	S	Gasket, Valve Cover
8	BS-93394	2	S	Screw, Sems
9	BS-280100	1	S	Tube, Breather
10	BS-271702	1	S	Gasket, Crankcase Cover, 1/64" Thk
	BS-270915	1		Gasket, Crankcase Cover, .005" Thk
	BS-270916	1		Gasket, Crankcase Cover, .009" Thk
11	BS-93723	9		Screw, Cylinder Head
12	751-3058	1		Tube, Oil Drain
13	751-3001	1	/P	Plug, Oil Drain
14	BS-491647	1		Crankshaft
	BS-94196	1		Key, Timing Gear
15	BS-391784	1		Sump, Engine (Includes Ref No. 10 & 16)
16	BS-291675	1	S	Seal, Oil
17	BS-93585	12		Screw, Sump Mounting Sems
18	BS-222698	1	S	Key, Flywheel
19	BS-394661	1	S	Piston Assy, Std [Includes Ref No. 20 & 21 (Qty 2)]
	BS-394662	1	S	Piston Assy, .010" O.S.
	BS-394663	1		Piston Assy, .020" O.S.
	BS-394664	1		Piston Assy, .030" O.S.
20	BS-394665	1	S	Ring Set, Piston, Std
	BS-392331	1		Ring Set, Piston, Chrome Std
	BS-391781	1		Ring Set, Piston, .010" O.S.
	BS-391782	1		Ring Set, Piston, .020" O.S.
	BS-391783	1	S	Ring Set, Piston, .030" O.S.
21	BS-260924	2	S	Lock, Piston Pin
22	BS-299691	1	/P	Pin, Assembly, Piston, Std [Includes Ref No. 21 (Qty 2)]
	BS-391286	1		Pin, Assembly, Piston, .005" O.S.
23	BS-490348	1	/P	Rod Assembly, Connecting [Includes Ref No. 24 & 25 (Qty 2)]
	BS-490469	1		Rod Assembly, Connecting, .020" U.S. Crankpin Bore
24	BS-222299	1		Lock, Connecting Rod Screw
25	BS-92909	2		Screw, Connecting Rod
26	BS-261185	1		Valve, Exhaust

1020 S/N 126,001 - 207,400
Engine

Page 17 of 61

Ref #	Part Number	Qty	S/P/F	Description
27	BS-261462	1		Valve, Intake
28	BS-65906	1	/P	Spring, Intake Valve
29	BS-26828	1	S	Spring, Exhaust Valve
30	BS-221596	1	S	Retainer, Intake Valve
31	BS-292260	1	S	Rotocoil, Exhaust Valve
32	BS-93630	2	S	Retainer, Exhaust Valve Rotocoil
33	BS-262248	2		Tappet, Valve
34	BS-212897	1		Gear, Cam
35	BS-67218	1		Connector, Elbow
36	BS-393815	1		Line, Fuel [Includes Ref No. 61 (Qty 2)]
37	BS-262348	1		Link, Governor
38	BS-260695	1	S	Spring, Governor
39	BS-490815	1	S	Oil Slinger, Governor Gear & Bracket Assembly
40	BS-491593	1		Plate, Governor Control
41	BS-231058	1	S	Crank, Governor
42	BS-490927	1		Lever Assy, Governor (Includes Ref No. 59 & 60)
43	BS-222450	1	S	Washer, Governor Crank
44	BS-260584	1	S	Spring, Governor Link
45	BS-298090	1	S	Filter, Fuel
46	BS-221535	1	S	Clamp, Casing
47	710-0432	1	/P	Screw, Clamp Mounting
48	BS-222744	1		Shield, Cylinder
49	BS-93163	1		Screw, Cylinder Shield Mtg Sems
50	BS-222725	1		Cover, Cylinder Head
51	BS-92791	1	S	Washer, Lock
52	712-0142	1	/P	Nut, Hex, #8-32
53	BS-223394	1	S	Clamp, Oil Filler Tube
54	BS-93722	1	S	Terminal, Spade
55	BS-391841	1		Cap & Dipstick, Oil Filler
56	BS-68838	1	S	Seal, Filler Tube
57	BS-280134	1		Tube, Oil Filler
58	BS-231597	1		Bushing, Governor Crank
59	BS-92613	1	/P	Bolt, Governor Lever
60	BS-231082	1		Nut, Hex, #10-24
61	BS-93053	2	S	Clamp, Fuel Pipe
62	BS-93306	1	/P	Cotter, Hair Pin
63	BS-93307	1	/P	Retainer, E-Ring
64	BS-491323	1	S	Seal, Oil
65	BS-93496	1	S	Screw, Sems
66	BS-262135	1	S	Gear, Timing
67	BS-212359	1		Link, Counterweight
68	BS-391373	1	S	Counterweight Assembly (Includes Ref No. 69)
69	BS-298909	1	/P	Pin, Counterweight
70	BS-93875	1		Screw, Counterweight
71	BS-270920	1	S	Seal, Oil Filler Cap
72	BS-392067	1		Fill Group, Oil (Includes Ref No. 47, 53, 55, 56, 57 & 71)
73	BS-261463	1		Seal, Intake Valve Std


1020 S/N 126,001 - 207,400
Engine

Page 18 of 61

Ref #	Part Number	Qty	S/P/F	Description
74	BS-210940	1	S	Seat, Exhaust Valve Std
75	BS-261961	1		Guide, Exhaust Valve
	BS-231218	1		Guide, Intake Valve (Brass)
76	BS-398525	1	S	Insulator Assy
77	BS-39572	2		Screw, Carburetor
78	BS-261242	1		Eccentric
79	BS-94160	1		Pin, Eccentric
	BS-393411	1	/P	Overhaul Gasket Kit
	BS-271866	1	S	Gasket, Cylinder Head
	BS-27803	1	S	Gasket, Valve Cover
	BS-271702	1	S	Gasket, Crankcase Cover
	BS-270872	1	S	Gasket, Carburetor Mounting

1020 S/N 126,001 - 207,400
Engine Electrical

Page 19 of 61

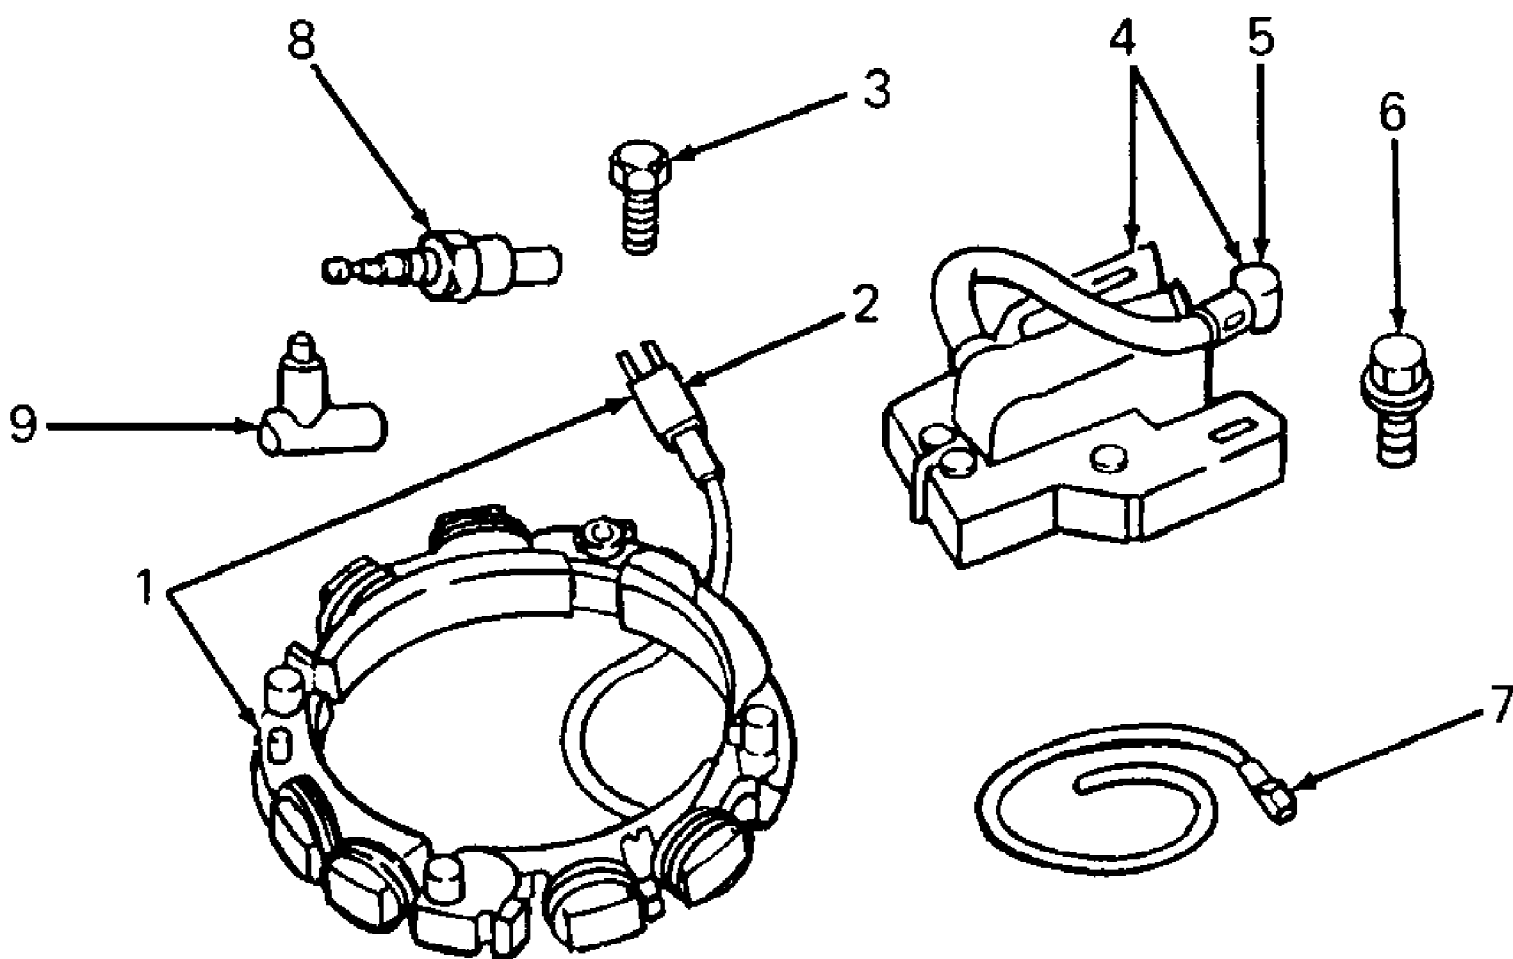

1020 S/N 126,001 - 207,400
Engine Electrical


Page 20 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	BS-392595	1	S	Stator, Alternator (Includes Ref No. 2)
2	BS-393537	1		Connector Assy
3	BS-93621	4	/P	Screw, Sems
4	BS-398811	1	/P	Armature, Magneto (Includes Ref No. 5)
5	BS-221798	1	S	Terminal, Ignition Cable
6	BS-93381	4		Screw, Armature Mtg Sems
7	BS-398808	1		Wire, Ground
8	759-3331	1	/P	Plug, Spark - Resistor Type
9	BS-66538	1	S	Elbow, Spark Plug

1020 S/N 126,001 - 207,400

Engine Flywheel, Ring Gear, Blower Housing & Screen

Page 21 of 61

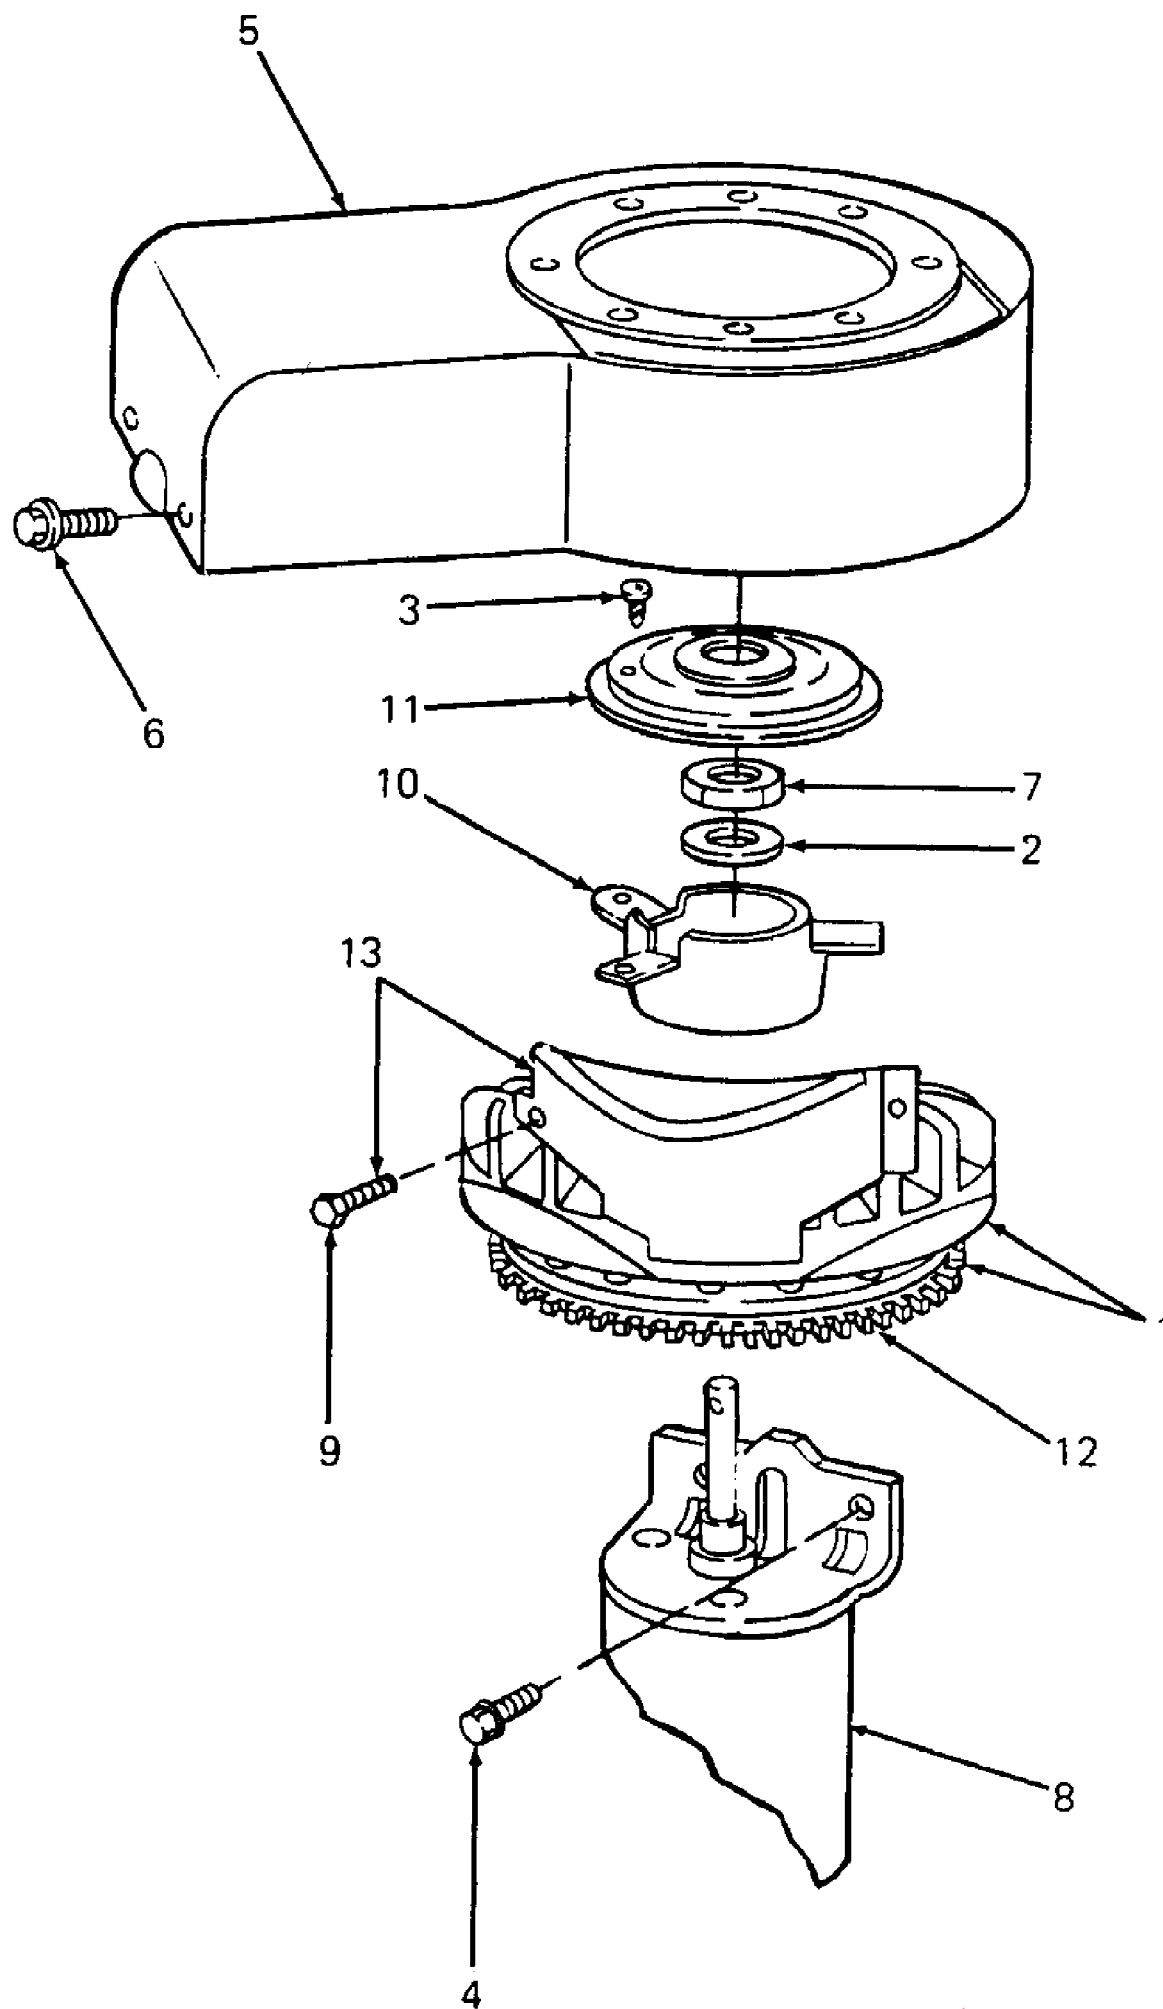

1020 S/N 126,001 - 207,400


Page 22 of 61

Engine Flywheel, Ring Gear, Blower Housing & Screen

Ref #	Part Number	Qty	S/P/F	Description
1	BS-391988	1		Flywheel & Ring Gear Assy - Magneto (Includes Ref No. 12)
2	BS-224061	1		Washer, Spring
3	BS-93805	3	S	Screw, Sems
4	BS-93535	2		Screw, Sems
5	BS-398333	1		Housing, Blower
6	BS-93158	4		Screw, Blower Housing Mtg Sems
7	BS-92284	1	S	Nut, Hex
8	BS-394805	1	S	Motor, Starting
9	BS-93984	2		Screw, Sems
10	BS-222561	1		Cup, Screen Mounting
11	BS-222562	1	S	Screen, Flush Rotating
12	BS-392134	1	S	Gear, Ring (Includes Mtg Hardware)
13	BS-395405	1	/P	Cover, Starter (Includes Mtg Screws)

1020 S/N 126,001 - 207,400
Fenders, Foot Rests & Battery Tray

Page 23 of 61

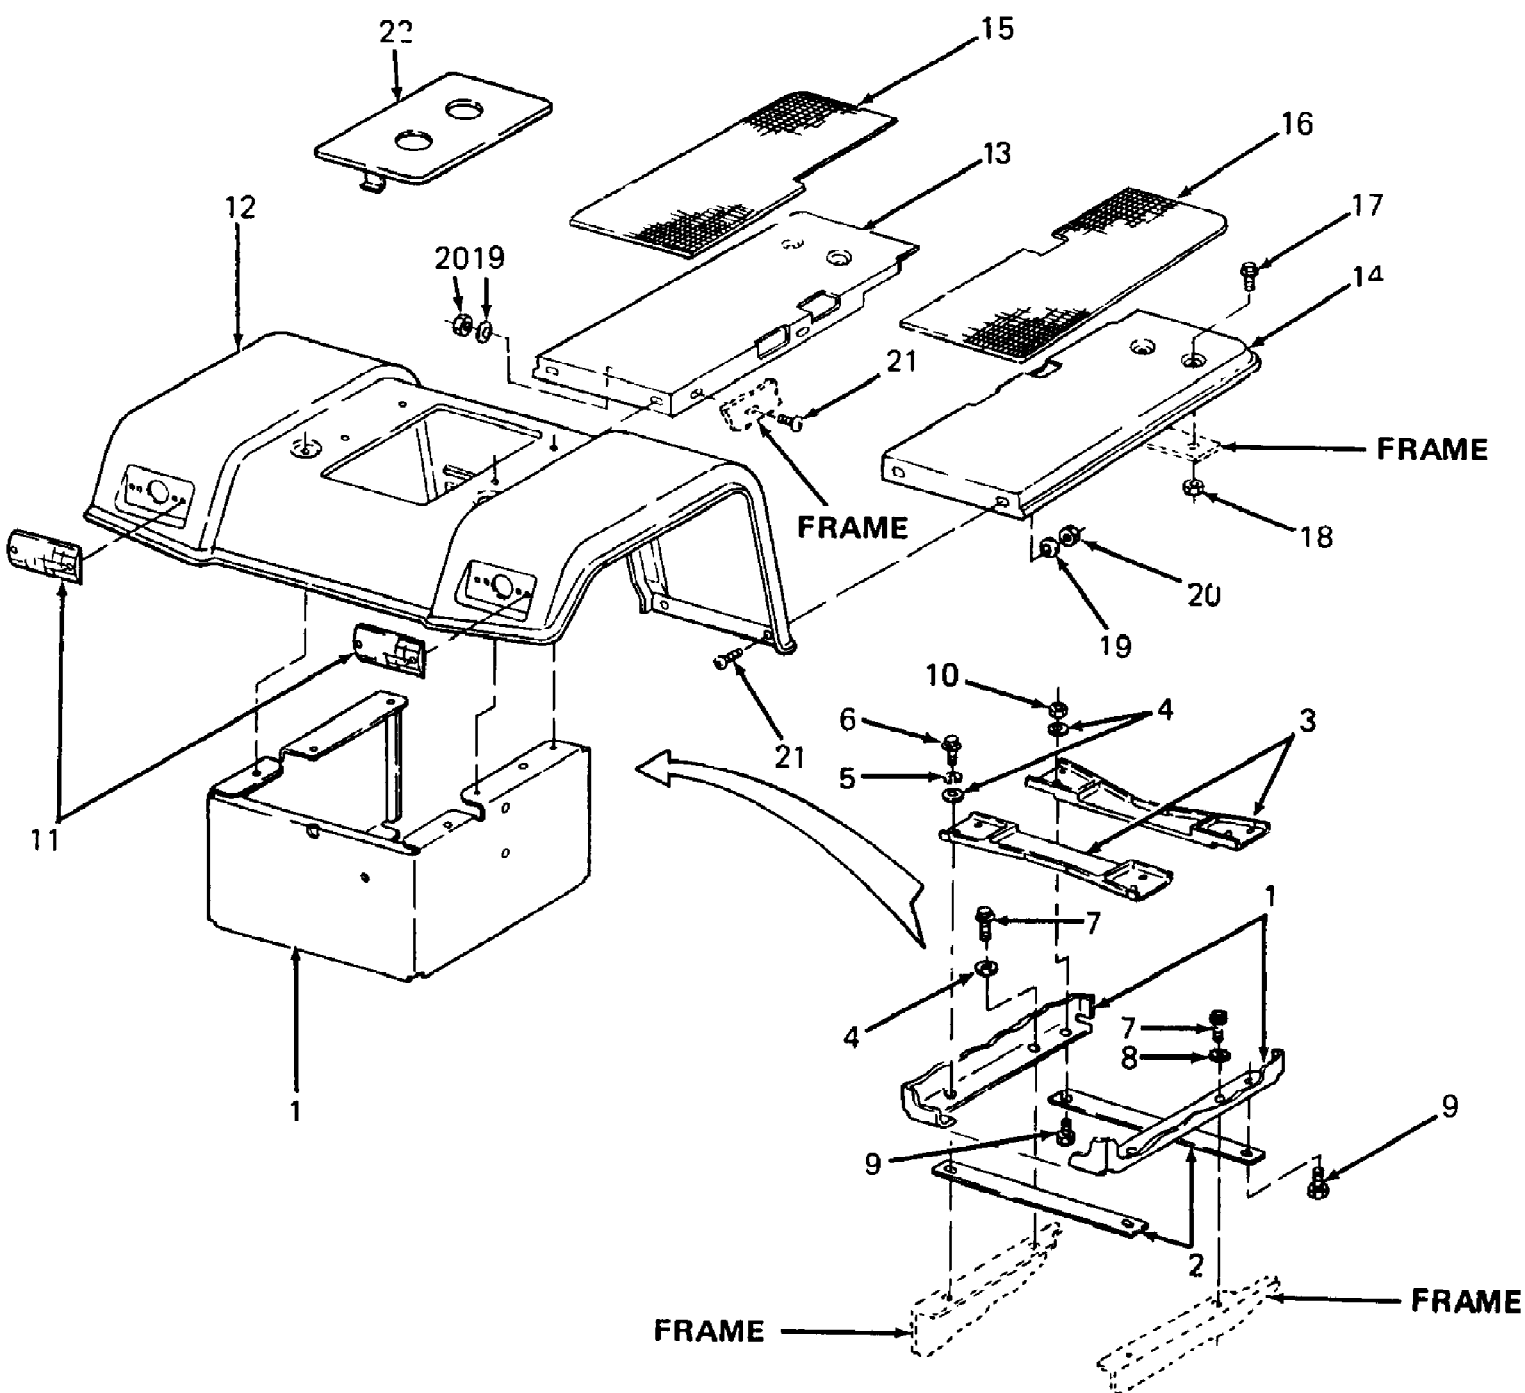


1020 S/N 126,001 - 207,400
Fenders, Foot Rests & Battery Tray

Page 24 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1525B	1		Box, Fender Mounting
2	703-1719	2		Plate, Reinforcement
3	731-3082A	2		Tray, Battery
4	736-0159	5	S	Washer, Flat, .344 X .875 X .06 Thk
5	736-0119	2	S	Washer, Lock, 5/16
6	710-0650	2	/P	Screw, Hex Wash Hd Tapp, 5/16-18 X .88 Lg
7	710-0607	2	/P	Screw, Hex Wash Hd Tapp, 5/16-18 X .50 Lg
8	736-3007	1		Washer, Int Ext Lock, 5/16 X 7/8
9	710-3008	2	/P	Screw, Hex Cap, 5/16-18 X .75 Lg GR5
10	712-3068	2	S	Nut, Hex Patch Lock, 5/16-18
11	730-3000	2	S	Reflector
12	703-1574A	1		Fender
13	703-1575	1		Foot Rest - LH
14	703-1576	1		Foot Rest - RH
15	723-3056	1		Pad, LH - Foot Rest
16	723-3057	1		Pad, RH - Foot Rest
17	710-0604	4	S	Screw, Hex Wash Hd Tapp, 5/16-18 X .62 Lg
18	712-3009	4	S	Nut, Hex Center Lock, 5/16-18 GR5
19	736-0270	8	/P	Washer, Bell, .265 X .75 X .062 Thk
20	712-0287	8	S	Nut, Hex, 1/4-20
21	710-0286	8	/P	Screw, Truss Mach, 1/4-20 X .50 Lg
22	731-3083	1		Cover, Battery

1020 S/N 126,001 - 207,400
Frame & Drawbar

Page 25 of 61

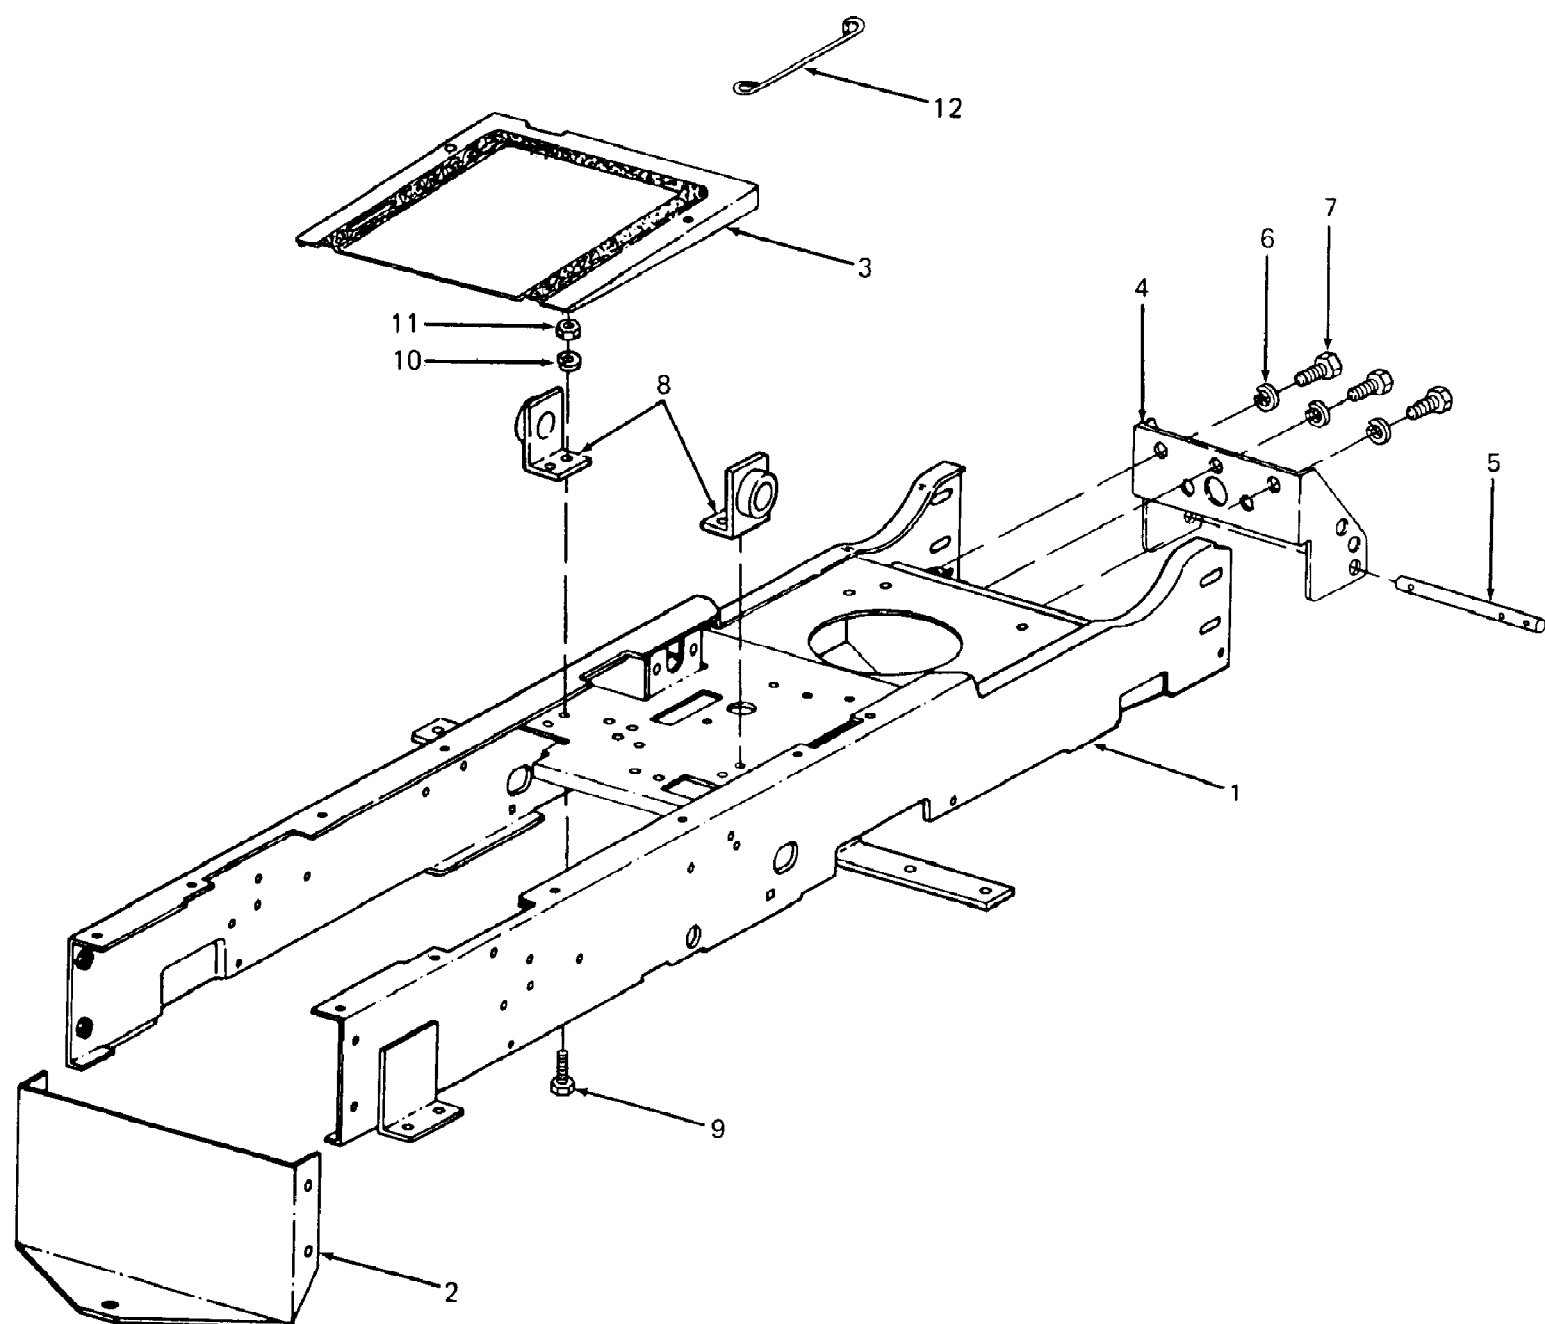


1020 S/N 126,001 - 207,400
Frame & Drawbar

Page 26 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1550A	1		Frame
2	703-1119	1	S	Drawbar
	710-3000	4	S	Screw, Hex Cap, 3/8-16 X .75 Lg GR5
	736-0169	4	S	Washer, Lock, 3/8
3	759-3385	1	S	Cover, Frame w/Graphic
	779-3433	1		Graphic, Caution
	710-3149	2		Screw, #10 AB X 1.0 Lg Oval Hd Cnt Snk
	726-3039	2		Nut, Speed
4	703-1964	1	S	Bracket, Front Deck
5	703-1297	1		Rod, Deck Support
	736-0272	3	S	Washer, Flat, .510 X 1.0 X .06 Thk
	714-0149B	3	S	Pin, Internal Cotter
6	736-0169	3	S	Washer, Lock, 3/8
7	710-3000	3	S	Screw, Hex Cap, 3/8-16
8	703-1535	2		Bracket, Lift Shaft
9	710-3008	4	/P	Screw, Hex Cap, 5/16-18 X .75 Lg GR5
10	736-0119	4	S	Washer, Lock, 5/16
11	712-3010	4	S	Nut, Hex, 5/16-18
12	747-3106	1		Rod, Link Retaining
	736-0206	2	S	Washer, Flat, .378 X 1.0 X .125 Thk
	712-3005	2	S	Nut, Hex Flange Lock, 3/8-16 GR5

1020 S/N 126,001 - 207,400
Front Axle & Connections

Page 27 of 61

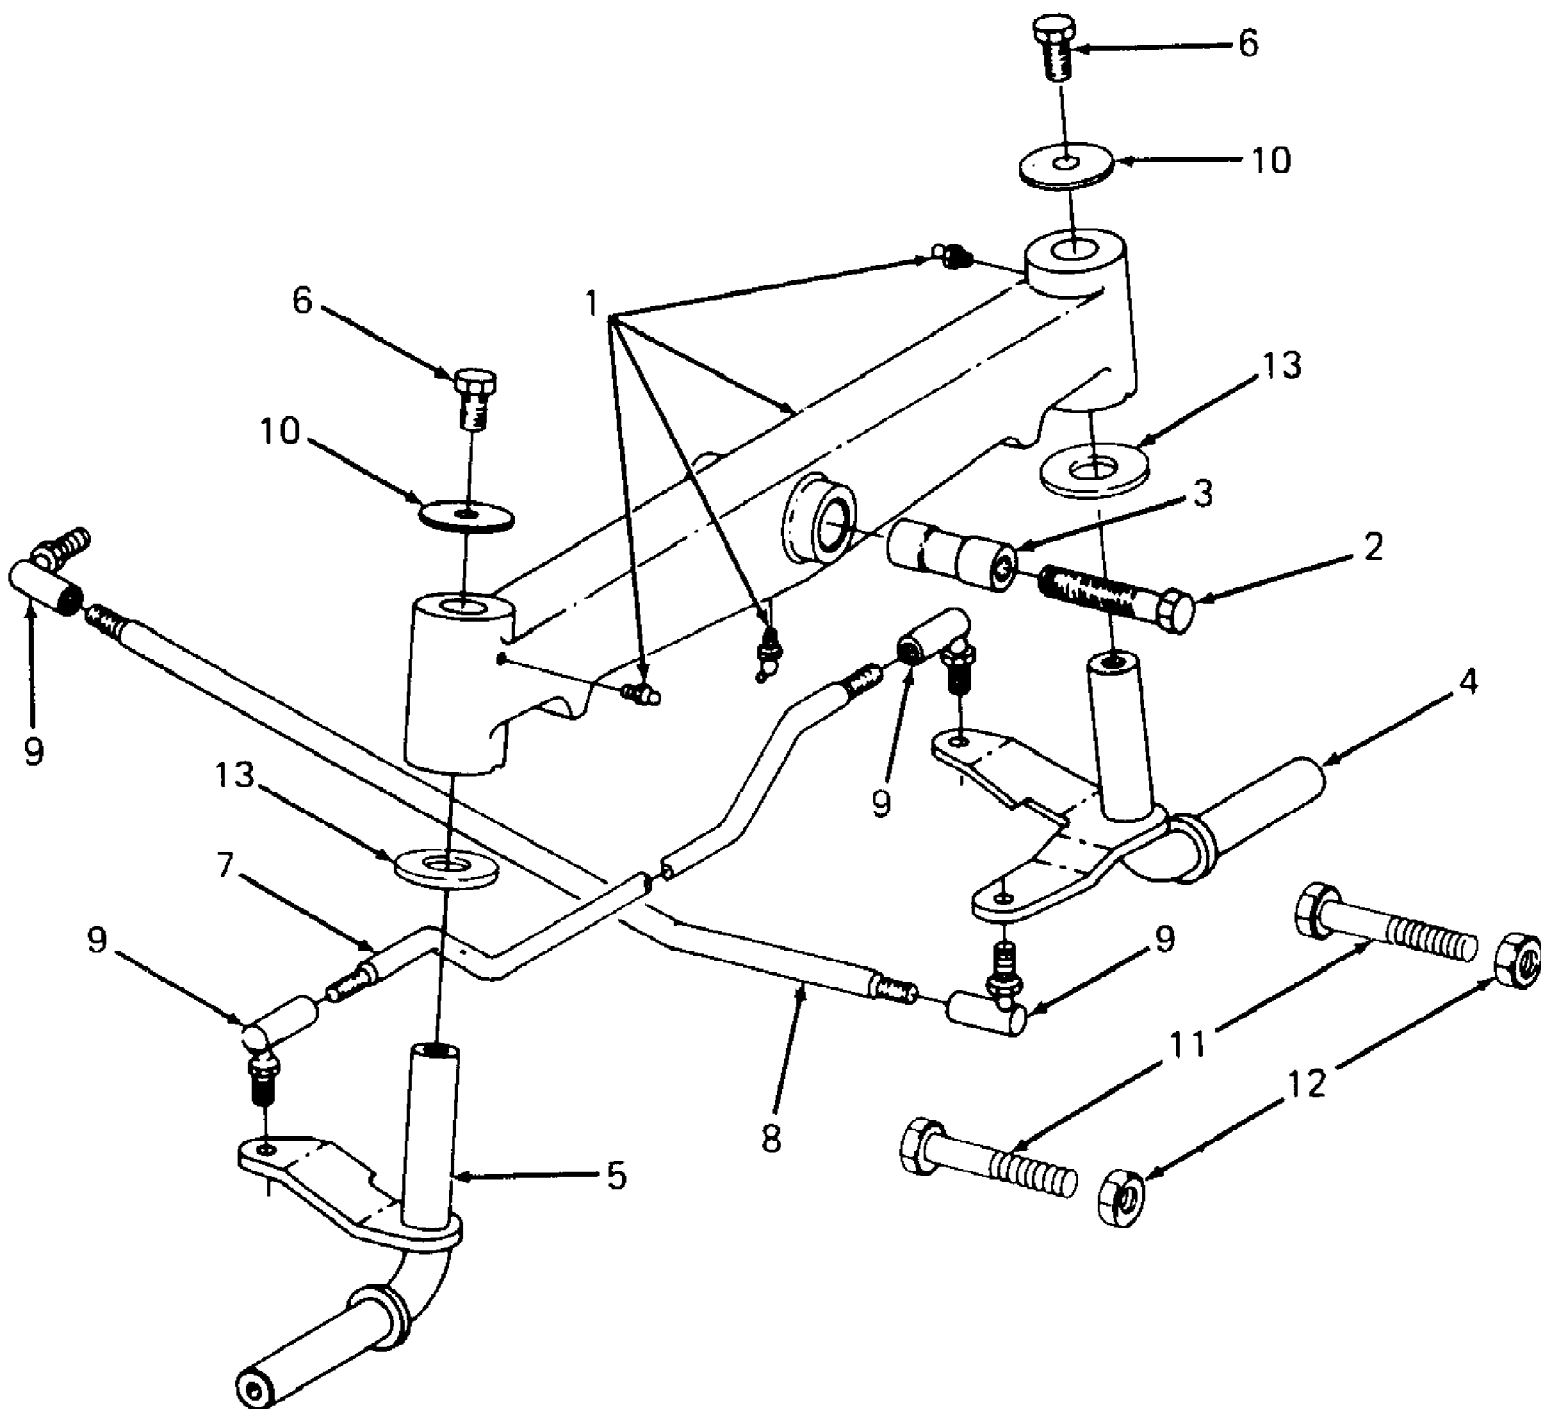


1020 S/N 126,001 - 207,400
Front Axle & Connections

Page 28 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	759-3269	1	S	Axle, Front
	737-3000	3	S	Fitting, Lube, 3/16 Drive Type
2	710-3161	1		Bolt, 1/2-20 X 4.0 Lg GR5
	712-3012	1	S	Nut, Castle, 1/2-20
	714-0470	1	S	Pin, Cotter, 1/8 X 1-1/4
3	711-3220	1		Bushing, Axle Pivot
4	703-1252	1	S	Knuckle Assy, LH
5	703-1253	1	/P	Knuckle Assy, RH
6	710-3000	2	S	Bolt, 3/8-16 X 3/4 Lg GR5
7	711-3205	1		Link, Drag
	712-3001	2	S	Nut, Jam, 3/8-24 GR5
8	711-3153	1		Link, Drag
	712-3001	2	S	Nut, Jam, 3/8-24 GR5
9	723-3018	4	S	Joint, Ball, 3/8-24 Type G
	712-3001	4	S	Nut, Jam, 3/8-24 GR5
	736-0169	4	S	Washer, Lock, 3/8
10	736-3039	1	S	Washer, .406 X 1.50 X 11 ga.
11	710-3179	2		Bolt, 3/8-16 X 1.25 GR5
12	712-3017	2	S	Nut, 3/8-16 GR5
13	736-0188	2	/P	Washer, .79 X 1.49 X .06 HDN

1020 S/N 126,001 - 207,400
Front Wheel

Page 29 of 61

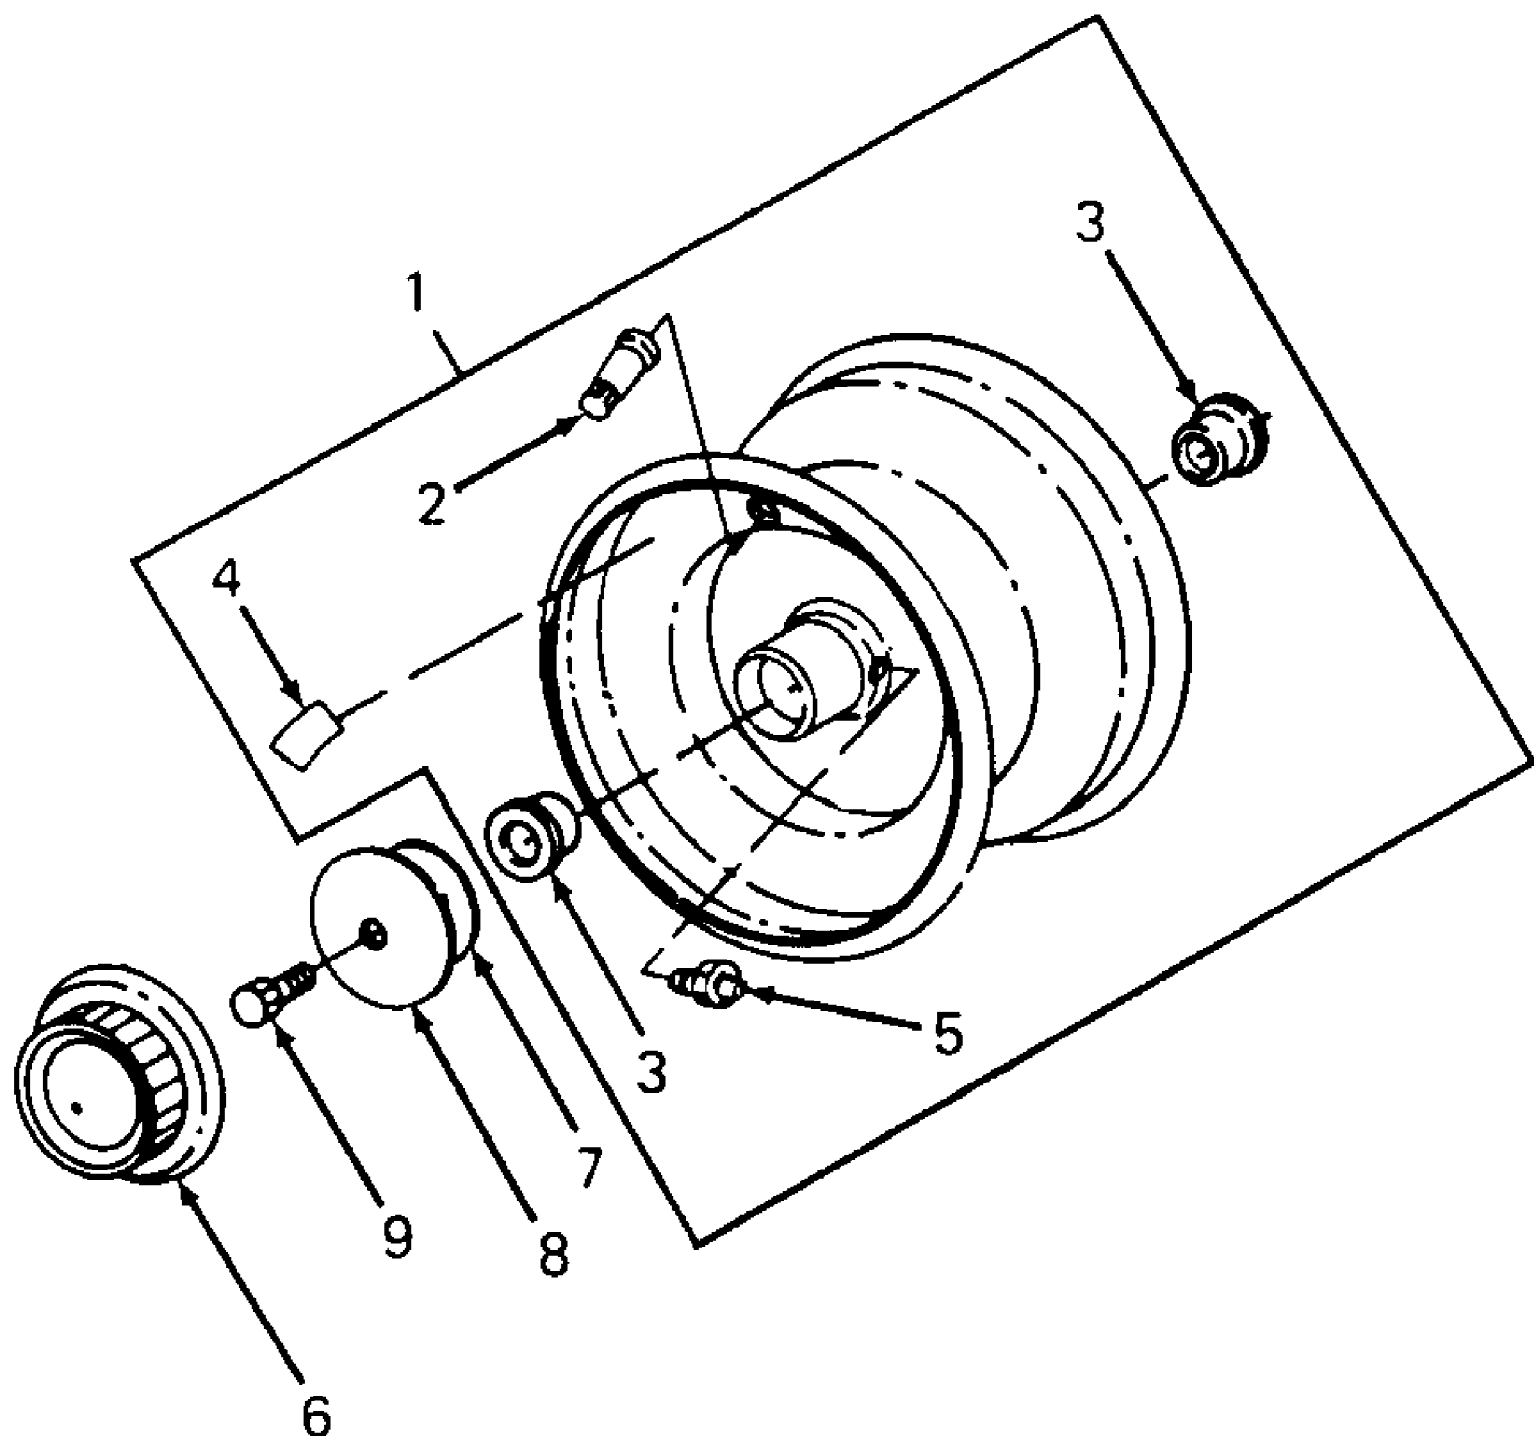


1020 S/N 126,001 - 207,400
Front Wheel

Page 30 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	734-3061	2	S	Tire, Soft Trac, 15 X 6
	734-3077	2	S	Wheel Assy, Front [Includes Ref No. 2, 3 (Qty 2), 4 & 5]
2	734-3068	2	S	Valve, Tubeless Air
3	748-3007	4	S	Bearing, Bronze Flange
4	777-5883	2		Label, Inflation
5	737-3000	2	S	Fitting Lube, 3/16 Drive Type
6	731-3020	2	S	Cap, Hub
7	736-3039	2	S	Washer, Flat, .406 X 1.5 X .110 Thk
8	736-3040	2	/P	Washer, Flat, .406 X 1.92 X .06 Thk
9	710-3119	2	/P	Bolt, Hex Patch, 3/8-16 X .75 Lg GR5

1020 S/N 126,001 - 207,400
Fuel Tank

Page 31 of 61

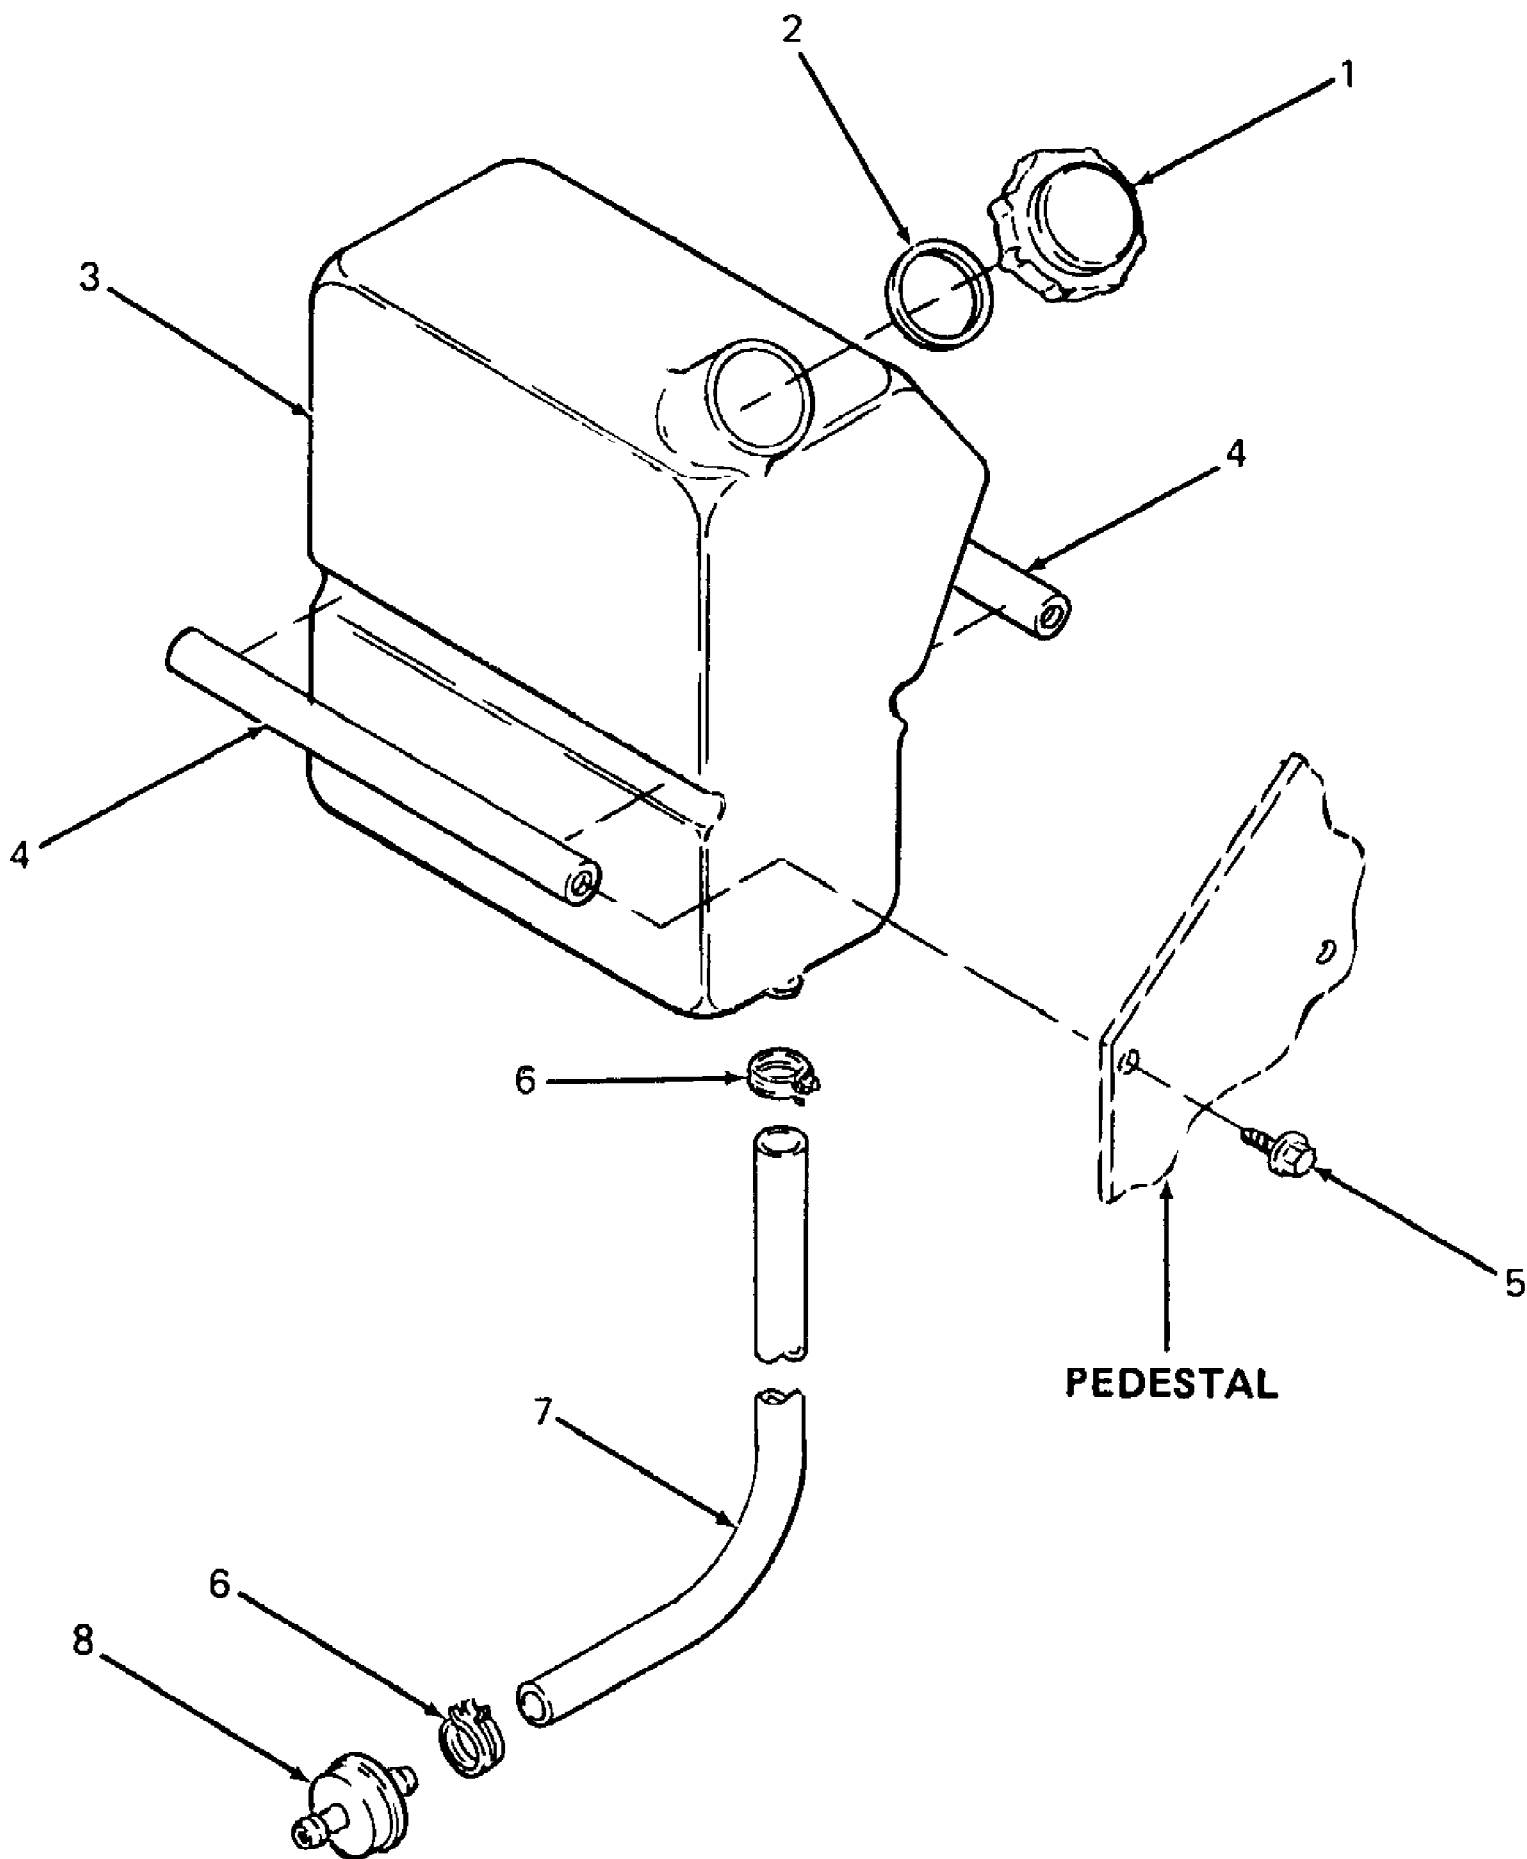


1020 S/N 126,001 - 207,400
Fuel Tank

Page 32 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	751-3071	1	S	Cap, Fuel
2	723-3003	1	/P	Gasket, Fuel Tank Cap
3	751-3070B	1	S	Tank, Fuel
4	749-3019	2		Tube, 11.27 Lg
5	710-0603	4	/P	Screw, Hex Wash Hd B Tapp, 5/16-18 X .50 Lg
6	726-0205	2	/P	Clamp, Hose
7		1		Line, Fuel, 10 in. Lg (Order Bulk Fuel Line Part No. 759-3330, 10 Ft Lg)
8	BS-298090	1	S	Filter, Fuel

1020 S/N 126,001 - 207,400
Hood & Grille

Page 33 of 61

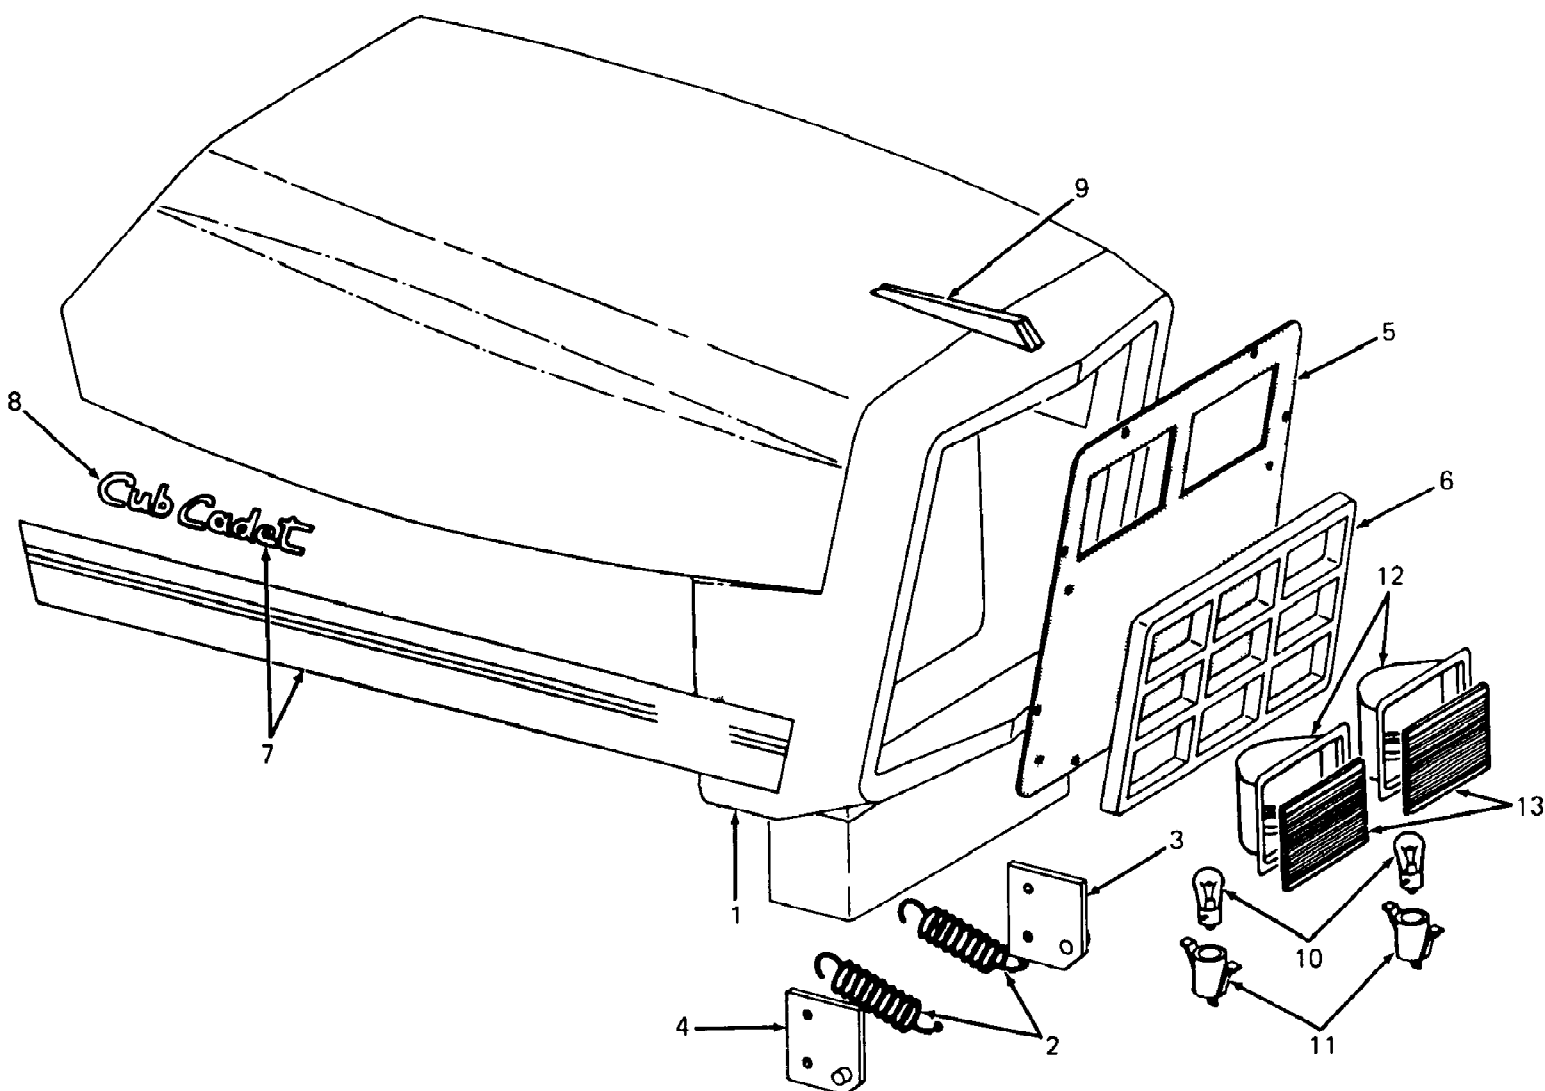


1020 S/N 126,001 - 207,400
Hood & Grille

Page 34 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	759-3234	1		Hood & Grille Assy (Includes Ref No. 9)
2	732-3048	2		Spring, Extension
3	703-1215	1		Plate, Hood LH
	710-3008	2	/P	Bolt, 3/8 X 3/4 GR5
4	703-1216	1		Plate, Hood RH
	710-3008	2	/P	Bolt, 3/8 X 3/4 GR5
5	703-1159	1	S	Screen, Grille
	710-0227	8	/P	Screw, No. 8 X 1/2 Hex- Washer-Hd Tap
6	731-3051	1		Insert, Grille
	726-3040	4	/P	Nut, No. 10 C-Z Stamped
7	759-3406	1		Graphic, Hood Decal Set (Model 1020) [Includes Ref No. 8]
8	731-3078	2		Graphic, Cub Cadet Script w/Adhesive
9	731-3059	1		Ornament, Hood (Included w/Ref No. 1)
10	725-0963	2	S	Bulb, 12V GE-1156
11	725-1058	2	S	Socket, Twist Lock Lamp
12	731-0705	2	S	Housing, Headlight
13	731-0706	1	S	Lens, Sq-Headlight

1020 S/N 126,001 - 207,400
Hydro Pump

Page 35 of 61

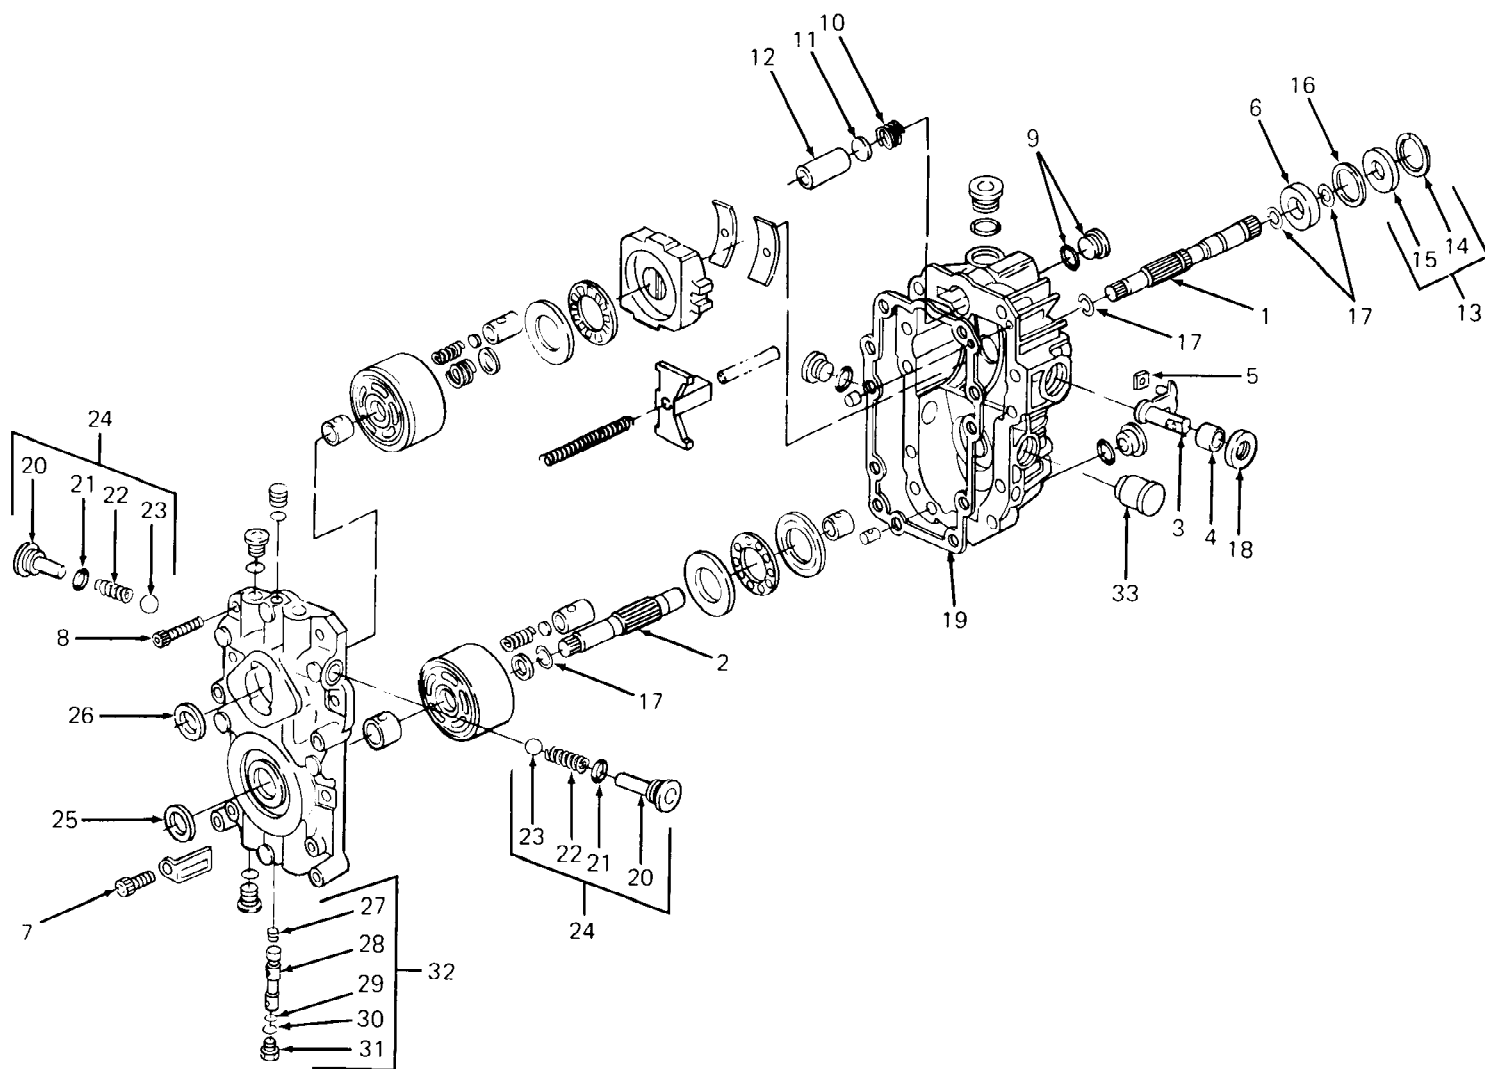


1020 S/N 126,001 - 207,400
Hydro Pump

Page 36 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	SU-2003022	1	S	Shaft - Pump
2	SU-2003033	1	S	Shaft - Motor
3	SU-2003005	1	S	Arm, Trunnion
4	SU-2003009	1		Bearing, Journal
5	SU-2000015	1	S	Guide, Slot
6	SU-2003043	1	S	Bearing, Ball
7	SU-9007314-0805	4		Screw, Socket Head
8	SU-9007314-0808	4	S	Screw, Socket Head
9	SU-9005110-8700	1	S	Plug
10	SU-2003010	1	S	Spring, Filter
11	SU-2000011	1	S	Washer, Filter
12	SU-2003003	1	S	Filter
13	SU-2513001	1	/P	Kit, Seal (Includes Ref No. 14 & 15)
14	716-3007	1	S	Ring, Retaining
15	SU-9008000-0128	1	S	Seal, Lip
16	SU-2003018	1	S	Spacer
17	SU-2003016	4	S	Ring, Retaining
18	SU-9008000-0126	1	S	Seal, Lip
19	SU-2003001	1	S	Gasket (Used on pumps w/serial no. A8925 and below)
	SU-2003060	1	S	Gasket (Used on pumps w/serial no. A8926 and above)
20	SU-2000020	2		Plug
21	SU-9004201-3700	2	S	O-Ring
22	SU-2003012	2		Spring
23	741-3059	2		Ball
24	SU-2513014	2	S	Kit, Check Valve (Includes Ref No. 20, 21, 22, & 23)
25	SU-9008000-0127	1	S	Seal, Lip
26	SU-9008000-0125	1	S	Seal, Lip
27	SU-2003011	1	S	Spring
28	SU-2003061	1		Spool, Bypass
29	SU-9004175-0027	1	S	O-Ring
30	SU-9004201-2500	1	S	O-Ring
31	SU-2000018	1		Plug
32	SU-2513012	1	S	Kit, Bypass Valve [Includes Ref No. 27, 28, 29, 30 & 31]
33	717-3049	1	S	Reservoir
	SU-2003084	1	S	Diaphragm
	SU-2513013	1	S	Kit, Overhaul Seal [Includes Ref No. 14, 15, 16, 17 (Qty 4), 18, 19 (Qty 2), 21 (Qty 2), 25, 2

1020 S/N 126,001 - 207,400
Implement Lift Handle

Page 37 of 61

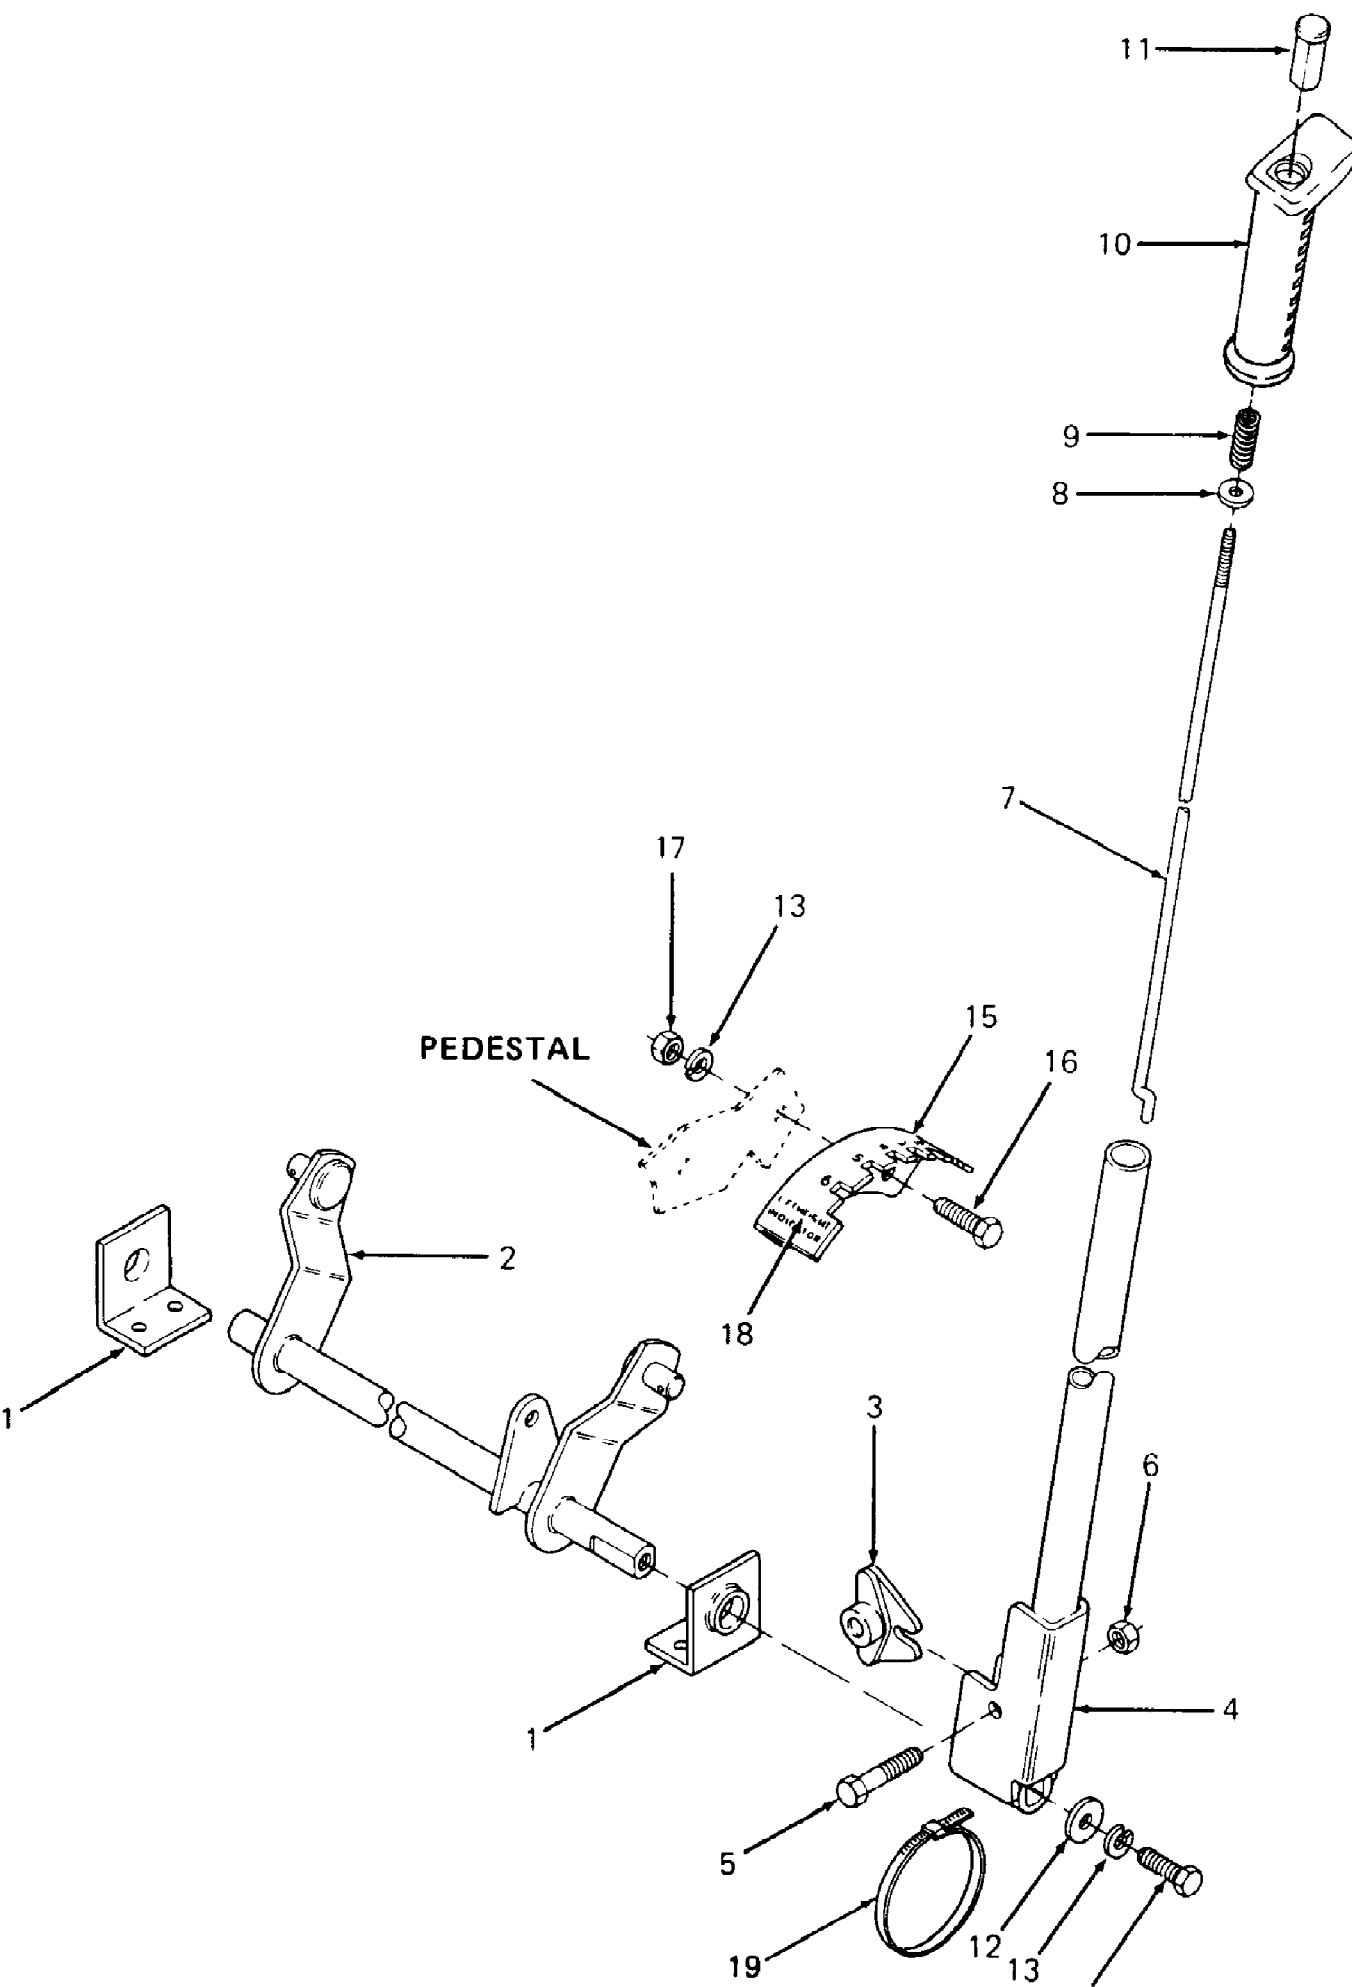


1020 S/N 126,001 - 207,400
Implement Lift Handle

Page 38 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1535	2		Bracket, Lift Shaft
	710-3008	4	/P	Screw, Hex Cap, 5/16-18 X .75 Lg GR5
	736-0119	4	S	Washer, Lock, 5/16
	712-3010	4	S	Nut, Hex, 5/16-18 GR5
2	703-1578	1		Shaft Assy, Lift
3	759-3495	1	S	Kit, Index Pawl
4	703-1592	1		Handle, Lift
5	710-3191A	1	/P	Screw, Hex, 3/8-16 X 1.62 Lg
6	712-0262	1	/P	Nut, Hex Center Lock Jam, 3/8-24
7	747-3126A	1		Rod, Index
8	736-3090	1	/P	Washer, Flat, .260 X .720 X .06
9	732-0335	1		Spring
10	720-3007	1	S	Grip, Lift Handle (Serial No. 170,600 & below)
	731-3109	1		Grip, Lift Handle (Serial No. 170,601 & above)
11	711-0642A	1	/P	Button, Handle
12	736-3089	1	/P	Washer, Flat, .345 X 1.0 X .100 Thk
13	736-0119	3	S	Washer, Lock, 5/16
14	710-0157	1	/P	Screw, Hex Cap, 5/16-24 X .75 Lg
15	703-1577	1	S	Bracket, Indicator
16	710-0759	2		Screw, Hex Cap, 5/16-18 X .62 Lg
17	712-3010	2	S	Nut, Hex, 5/16-18 GR5
18	779-3427	1		Label, Height Indicator
19	725-0157	1	/P	Tie, Cable

1020 S/N 126,001 - 207,400
Muffler

Page 39 of 61

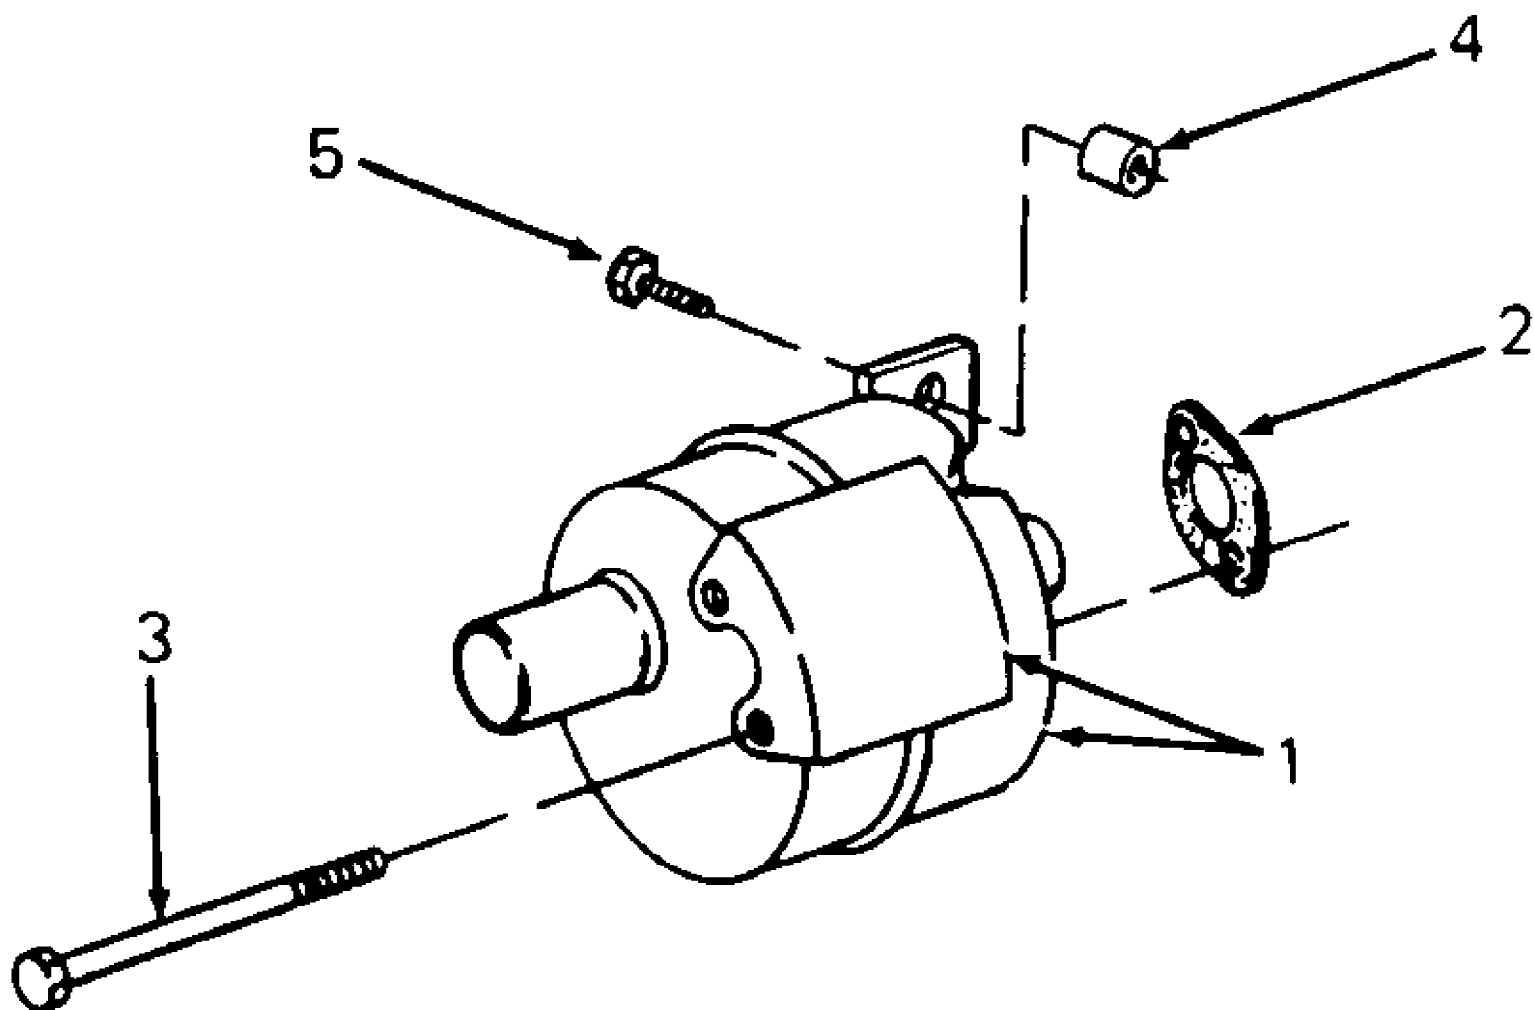


1020 S/N 126,001 - 207,400
Muffler

Page 40 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	751-3068	1	S	Muffler & Shield
2	721-0208	1	S	Gasket, Muffler
3	738-0636	2	S	Bolts, Muffler Shoulder, 7/16 Dia X 3-5/8 Lg
4	750-0709	1		Spacer, .28 ID X .50 OD X .33 Lg
5	710-0206	1	/P	Screw, Hex Cap, 1/4-20 X .88 Lg

1020 S/N 126,001 - 207,400
Pedal Neutral Return

Page 41 of 61

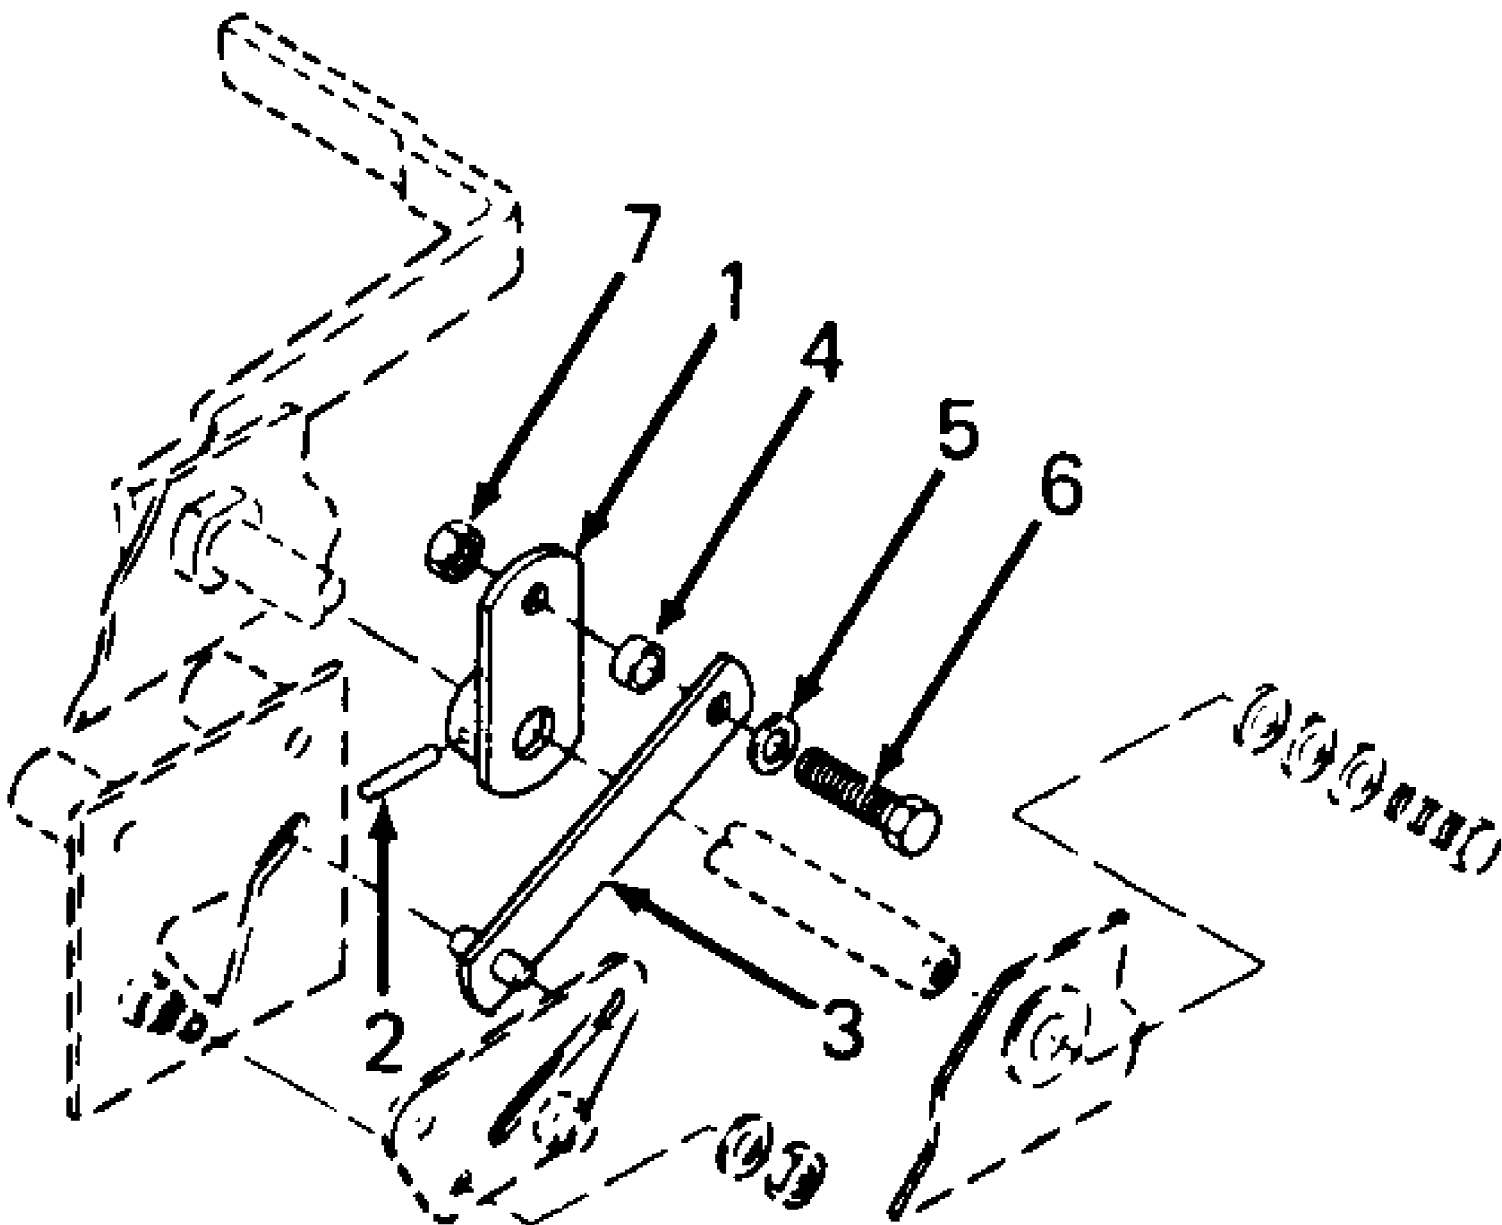


1020 S/N 126,001 - 207,400
Pedal Neutral Return

Page 42 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1638	1		Bracket, Neutral Return
2	715-0134	1	S	Pin, Spiral Spring, 3/16 Dia X 1.5 Lg
3	703-1191	1		Link, Actuator
4	711-3185	1		Bearing, .385 X .495 X .29 Lg HDN
5	736-0105	1	/P	Washer, Bell, .38 ID X .88 OD HDN
6	710-0152	1	S	Screw, Hex Cap, 3/8-24 X 1.00 Lg GR5
7	712-0262	1	/P	Nut, Hex Center Lock Jam, 3/8-24

1020 S/N 126,001 - 207,400
Pedestal, Engine Controls & Instrument Panel

Page 43 of 61

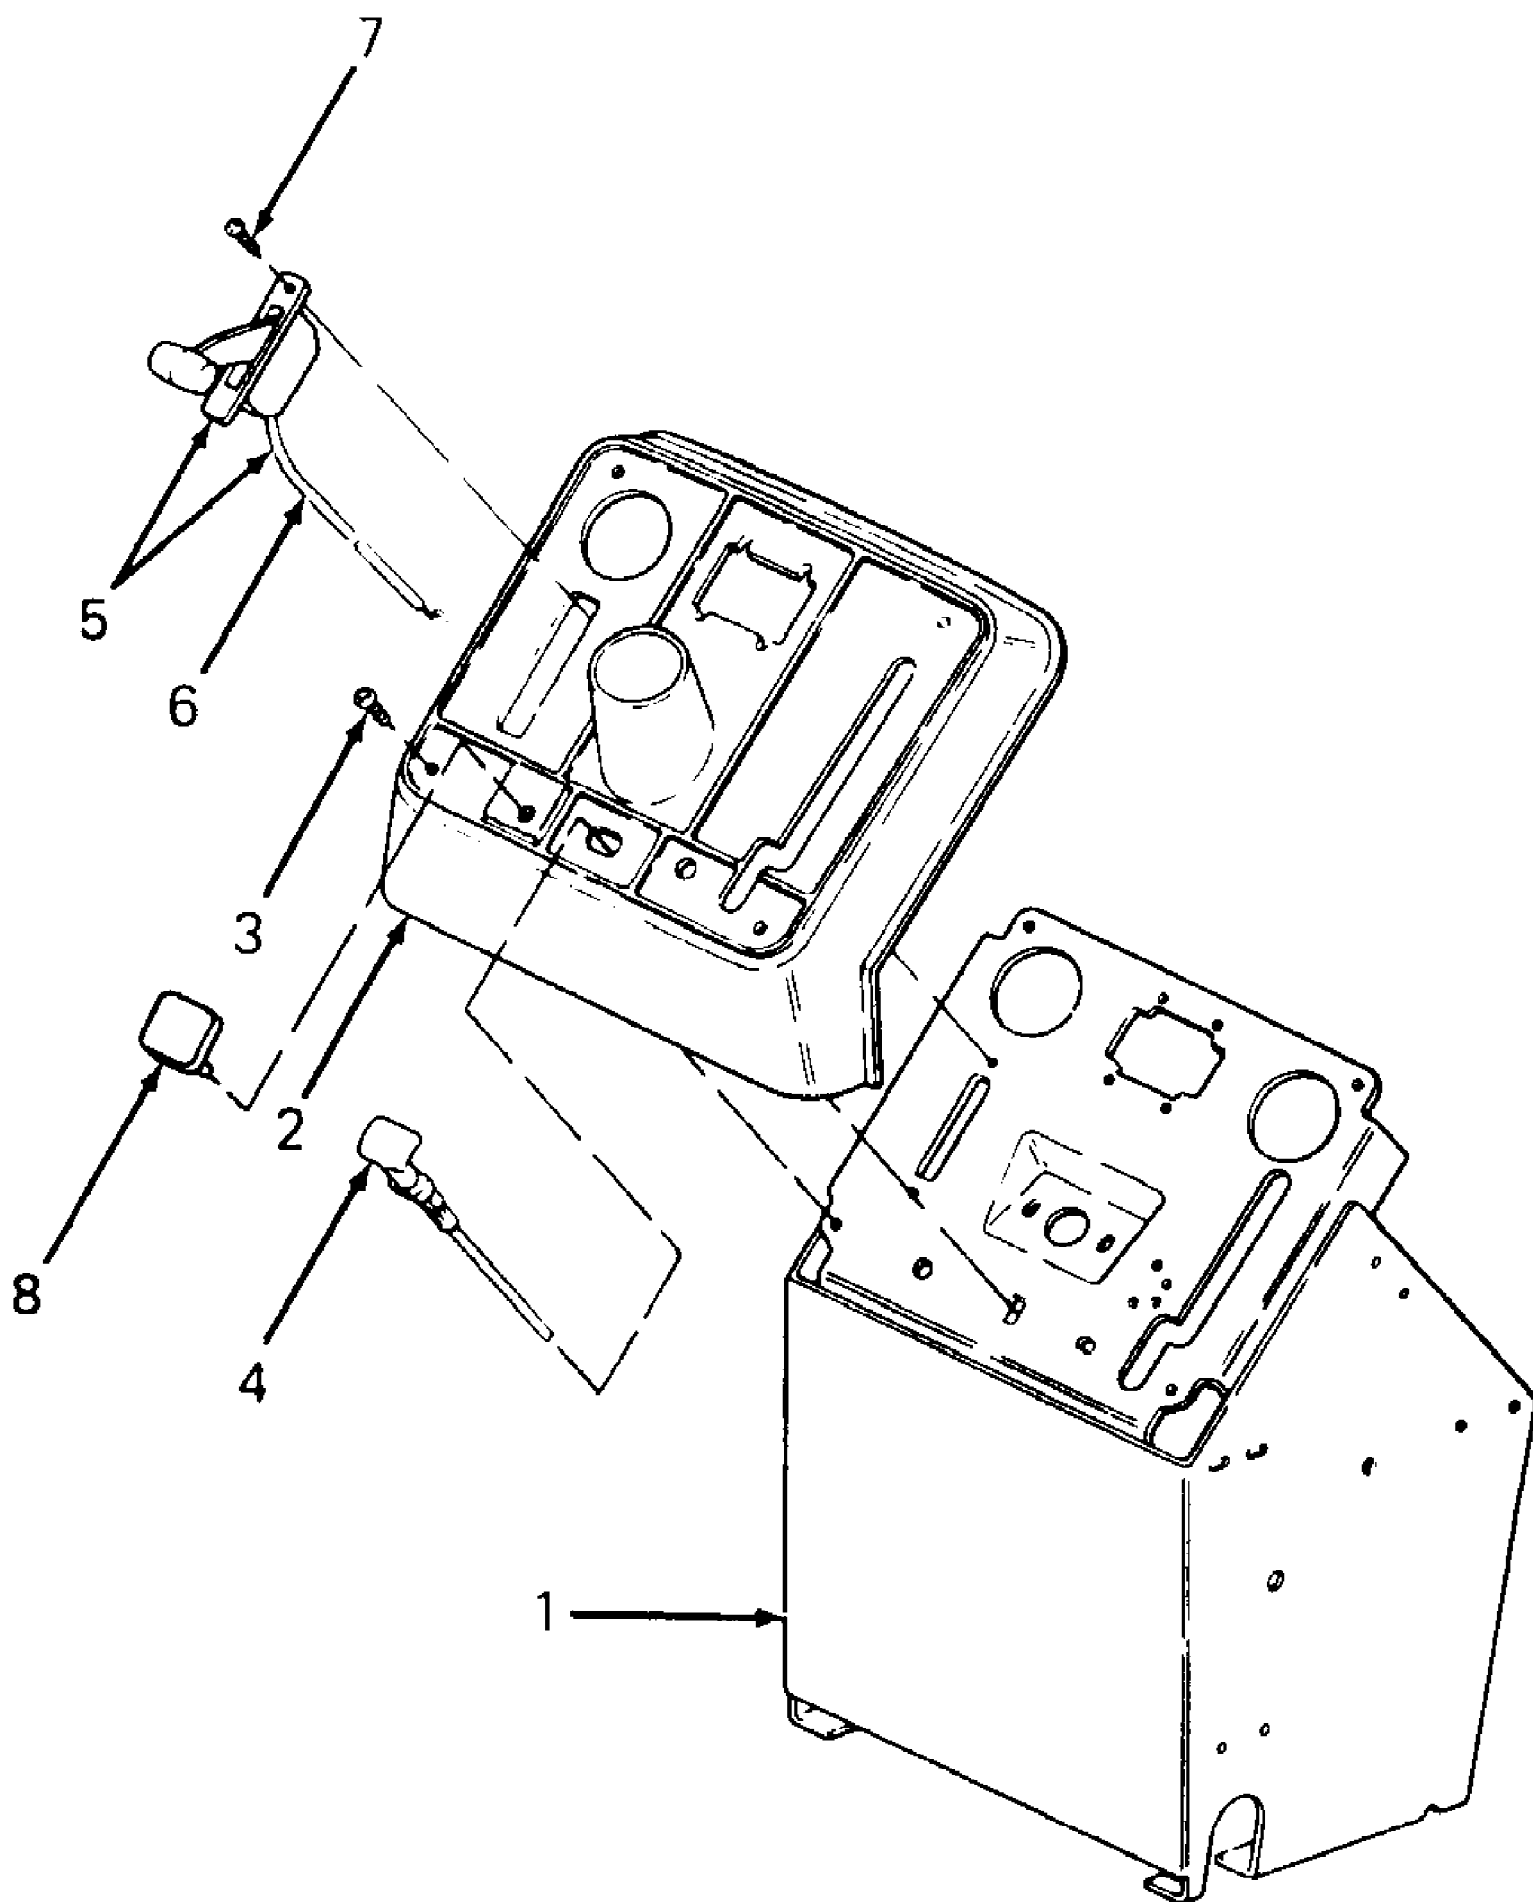

1020 S/N 126,001 - 207,400

Page 44 of 61

Pedestal, Engine Controls & Instrument Panel

Ref #	Part Number	Qty	S/P/F	Description
1	703-1527	1		Pedestal
	710-0514	1	/P	Screw, Hex Cap, 3/8-16 X 1.0 Lg GR5
	710-3005	4	/P	Screw, Hex Cap, 3/8-16 X 1.25 Lg GR5
	726-3028	5	S	Retainer, Push-on Bolt, 3/8 ID
	736-0169	1	S	Washer, Lock, 3/8
	736-0206	4	S	Washer, Flat, .378 X 1.0 X .125 Thk
	712-3017	1	S	Nut, Hex, 3/8-16 GR5
	712-3005	4	S	Nut, Hex Flange Lock, 3/8-16 GR5
2	731-3076	1		Panel, Dash
3	710-3009	4	/P	Screw, Pan Hd Cutting, #10-24 X .75 Lg
4	746-3021	1		Control, Choke
5	846-0500A6	1	S	Control Assy, Throttle - Complete (Includes Ref No. 6 & 7 Plus P/N 831-0823A Control Box)
6	746-0500	1	S	Wire, Throttle Control
7	710-0779	1	S	Screw, Truss Mach AB Tapp, #10 X .50 Lg
8	731-3077	1		Plaque, PTO Cover
	736-0211	1	S	Washer, Flat, .285 X 1.25 X .060 Thk
	712-3060	1		Palnut, Self-Threading


1020 S/N 126,001 - 207,400
PTO Drive

Page 46 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	703-1543	1		Guard, Belt
2	732-3002	2	S	Spring, Extension
3	720-0143	1		Grip
4	747-3115	1		Handle, PTO Clutch
5	736-0159	2	S	Washer, Flat, .344 X .875 X .06 Thk
6	714-0104	3	S	Pin, Internal Cotter, 5/16 Dia
7	747-3117	1		Rod, PTO Clutch
8	703-1539	1		Cam, Clutch Engagement
9	738-0140	1	S	Screw, Shoulder
10	703-1538	1		Bracket, Pivot
11	712-3009	1	S	Nut, Hex Center Lock, 5/16-18 GR5
12	710-0971	1		Screw, Truss Phillips Hd, 5/16-18 X 1.0 Lg
13	714-0127	1	/P	Pin, Cotter, 1/16 Dia X .75 Lg
14	736-0173	1	/P	Washer, Flat, .281 X .73 X .063 Thk
15	747-3123A	1	/P	Rod, Clutch
16	710-3153	1		Bolt, Hex, 3/8-16 X 4.75 Lg GR5
17	736-0169	3	S	Washer, Lock, 3/8
18	736-0247	1	/P	Washer, Flat, .406 X 1.25 X .157 Thk
19	750-0252	1	S	Spacer, .3776 X .500 X .830 Lg
20	736-0267	1	S	Washer, Flat, .385 X .87 X .06 Thk HDN
21	748-3025	1		Spacer, Idler, .385 X .75 X 2.68 Lg
22	703-1555	1	S	Bracket, Manual Idler Arm
23	732-3058	1	/P	Spring, Extension, .58 OD X 2.90 Lg
24	737-3000	1	S	Fitting, Lube, 3/16 Drive
25	710-0521	1	/P	Screw, Hex Cap, 3/8-16 X 3.0 Lg GR8
26	756-0217	1	S	Idler, Flat
27	711-3276	1		Spacer, .38 X .75 X .88 Lg
28	712-3017	2	S	Nut, Hex, 3/8-16 GR5
29	736-0185	2	S	Washer, Flat, .406 X .75 X .06 Thk
30	712-0266	1	S	Nut, Hex Center Lock Jam, 3/8-16
31	732-3056	1		Guard, Belt
32	751-3072	1	S	Line, Fuel, 1.31 Lg
33	714-0145	1	S	Pin, Internal Cotter
34	723-3047	2		Bushing, Nyliner
35	703-2100	1	/P	Bracket, Manual Idler Arm
36	710-0342	1	S	Screw, Hex Cap, 3/8-16 X 1.25 Lg GR5
37	756-0365	1	S	Idler, Flat
38	710-0859	1	/P	Screw, Hex Cap, 3/8-16 X 2.5 Lg GR5
39	736-0400	1	S	Washer, Flat, .218 X .62 X .063 Thk
40	736-0342	1		Washer, Flat, .28 X .72 X .030 Thk

1020 S/N 126,001 - 207,400
Rear Wheel

Page 47 of 61

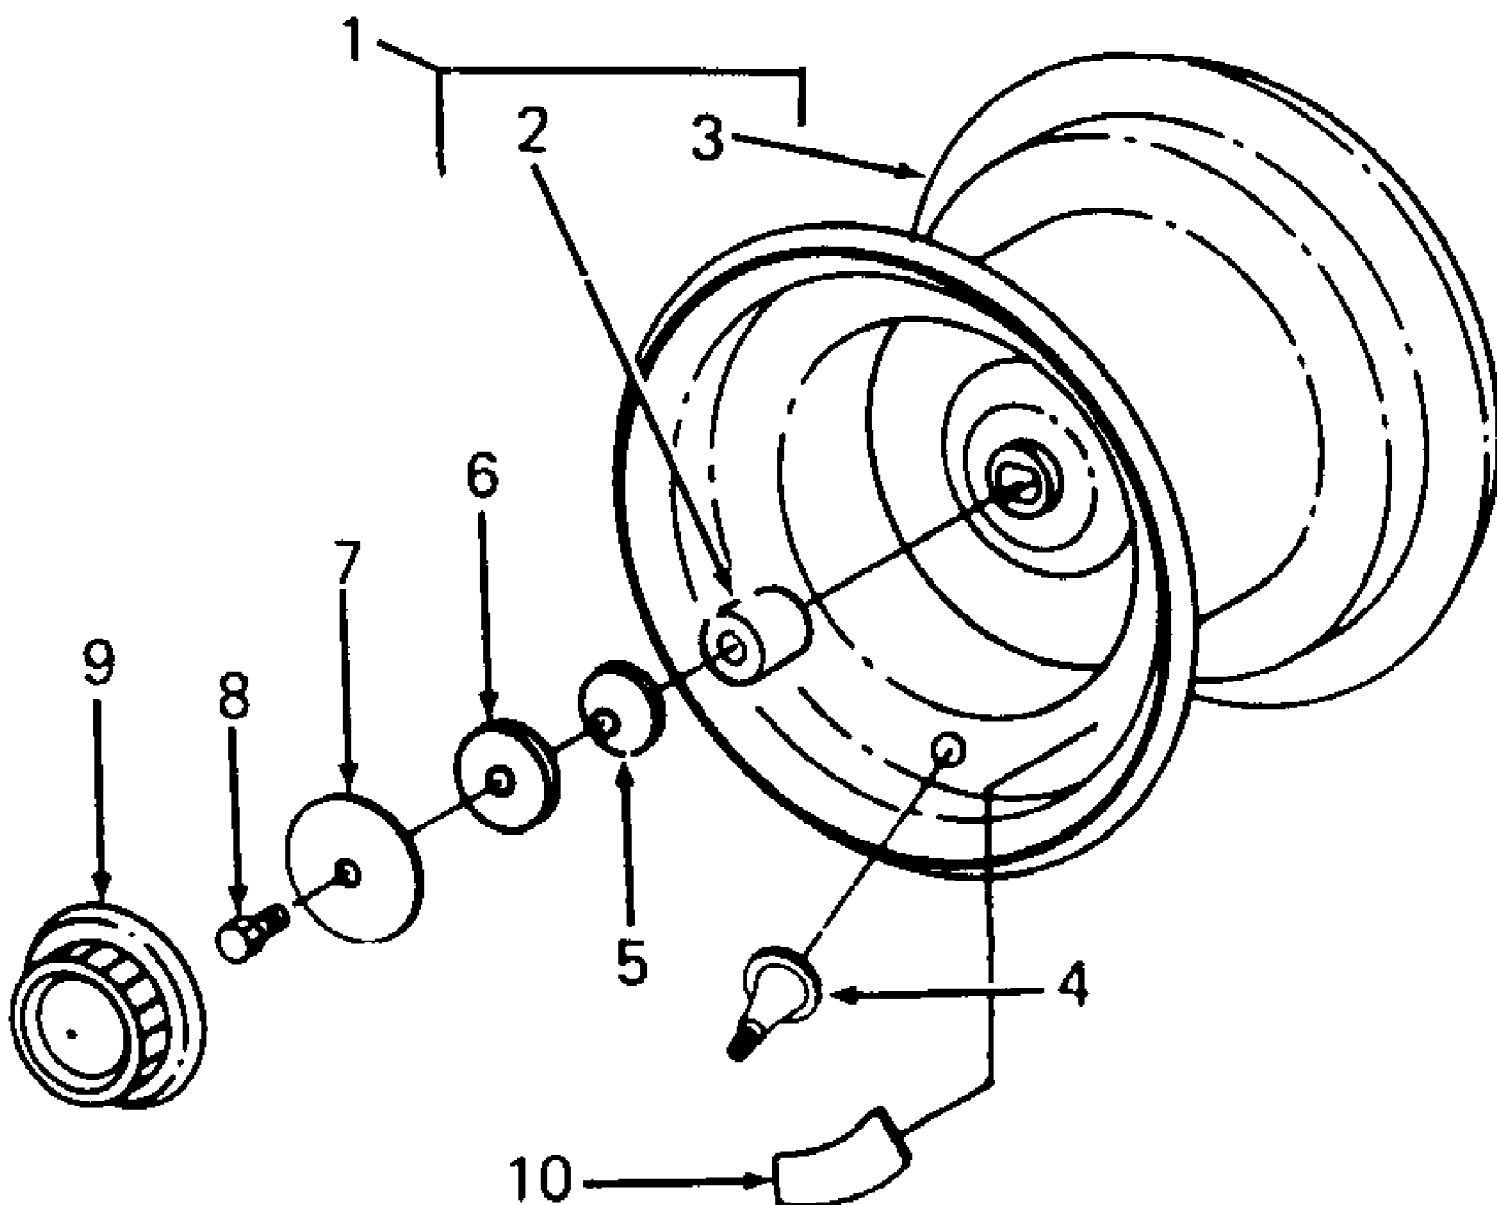


1020 S/N 126,001 - 207,400
Rear Wheel

Page 48 of 61

Ref #	Part Number	Qty	S/P/F	Description
	734-3019	2	S	Tire, Soft Trac, 18 X 8.5 X 8.0
1	759-3491	2		Wheel Rim Kit (Includes Ref No. 2 and 3)
2	711-3269	2		Spacer
3	734-3087	2		Wheel Rim Assy
4	734-3068	2	S	Valve, Tubeless Type
5	736-0242	2	/P	Washer, .345 X .88 Belleville
6	736-0231	2	S	Washer, .344 X 1.125 X .125
7	736-3040	2	/P	Washer, .406 X 1.92 X .06
8	710-3166	2	S	Bolt, 5/16 X 1.0 Lg GR5
9	731-3020	2	S	Cap, Hub
10	777-5883	2		Label, Inflation

1020 S/N 126,001 - 207,400
Seat & Support

Page 49 of 61

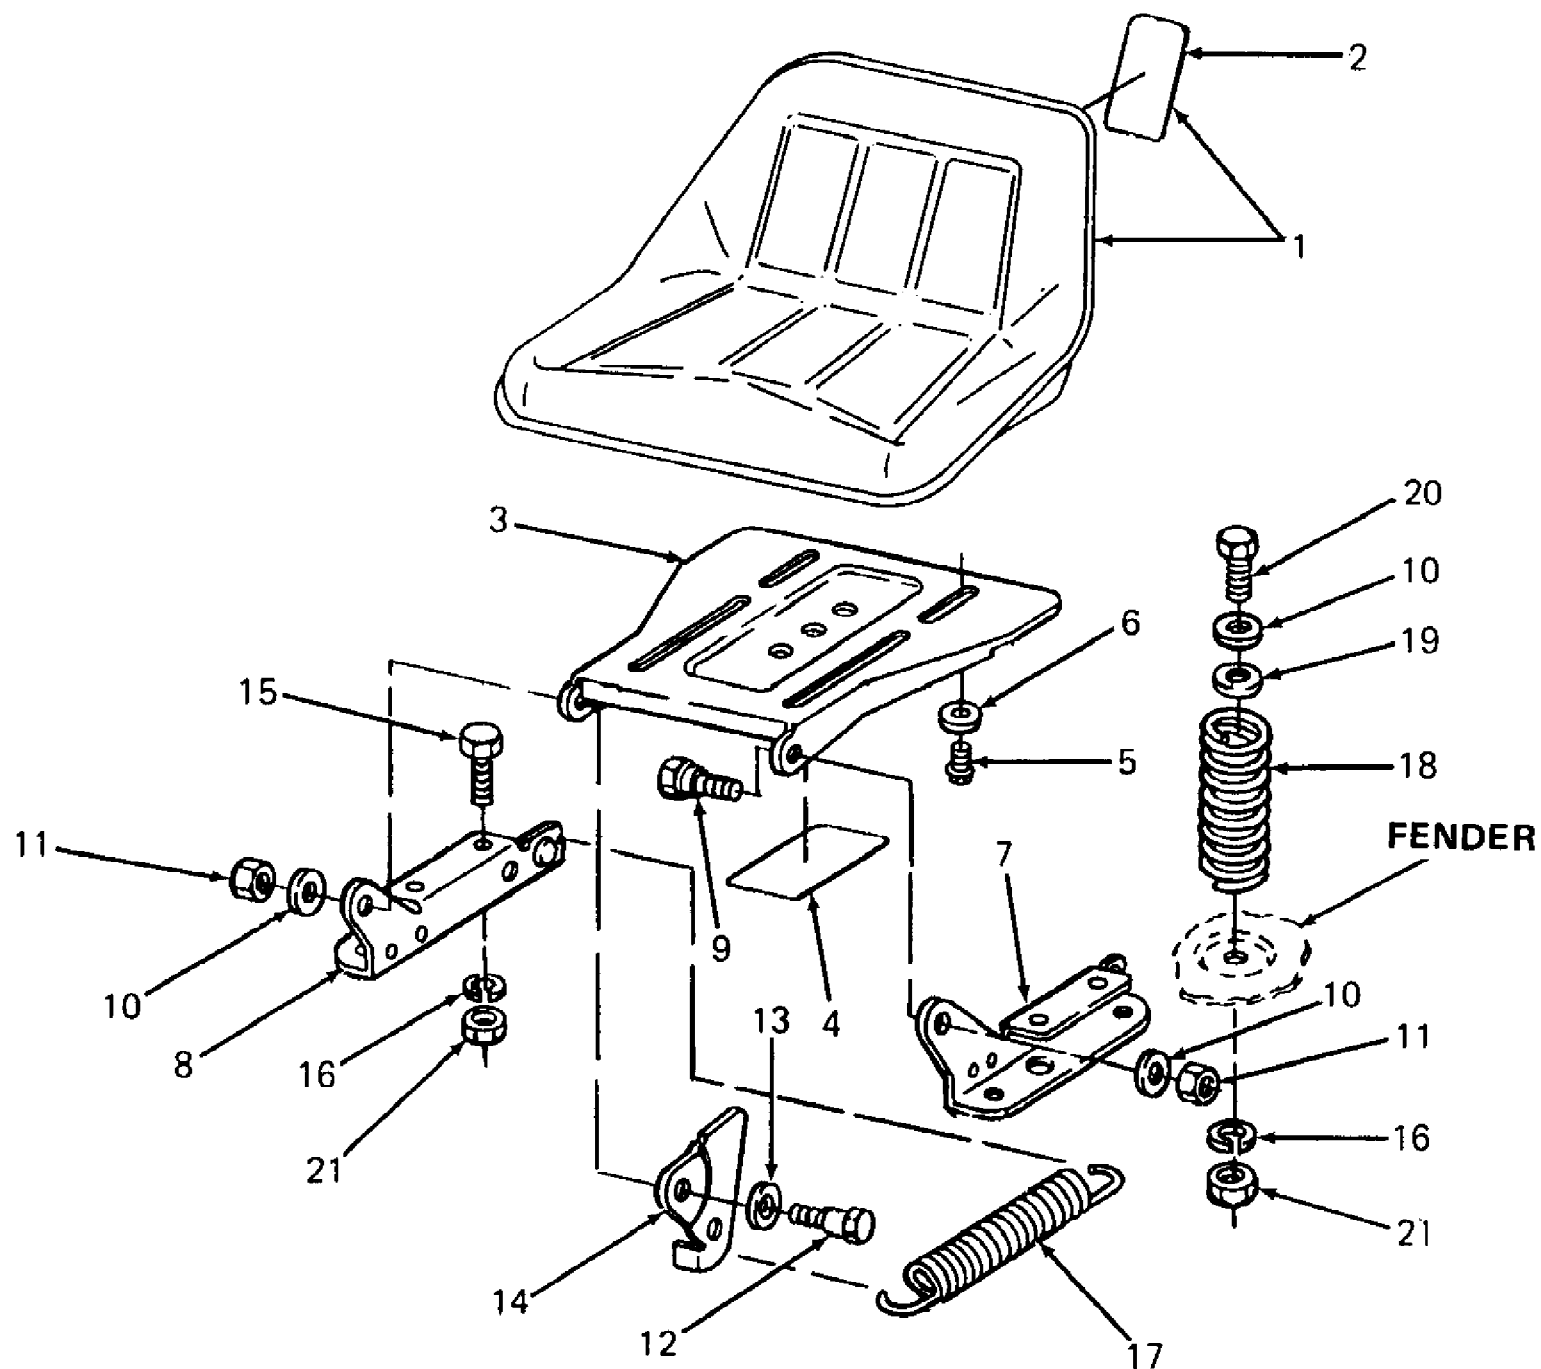


1020 S/N 126,001 - 207,400
Seat & Support

Page 50 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	759-3404	1		Seat w/Graphic (Includes Ref No. 2)
2	779-3449	1	S	Graphic, Seat
3	15607D	1	S	Bracket, Seat Pivot
4	779-3296	1	/P	Label, Booster Battery
5	710-0623	4	/P	Screw, Hex Wash Hd Tapp, 3/8-16 X .75 Lg
6	736-0219	4	S	Washer, Bell, .400 X 1.13 X .030 Thk
7	17243	1		Bracket, LH - Seat Pivot Support (For tractors w/serial no. 170,599 and below)
	17701	1	S	Bracket, LH - Seat Pivot Support (For tractors w/serial no. 170,600 and above)
8	17244	1		Bracket, RH - Seat Pivot Support (For tractors w/serial no. 170,599 and below)
	17702	1	S	Bracket, RH - Seat Pivot Support (For tractors w/serial no. 170,600 and above)
9	738-0155	1	S	Screw, Shoulder, .437 Dia X .162
10	736-0159	4	S	Washer, Flat, .344 X .875 X .06 Thk
11	712-3009	2	S	Nut, Hex Center Lock, 5/16-18 GR5
12	738-0296	1	S	Screw, Shoulder, .437 Dia X .268
13	736-0141	1	S	Washer, Spring, .445 X .75 X .017 Thk
14	17239A	1	S	Bracket, Seat Lift
15	710-3008	4	/P	Screw, Hex Cap, 5/16-18 X .75 Lg GR5
16	736-0119	6	S	Washer, Lock, 5/16
17	732-0581	1	S	Spring, Extension, .75 OD X 5.31 Lg
18	732-0548	2		Spring, Compression
19	722-0160	2		Bushing, .930 OD X .50 Lg
20	710-0528	2	/P	Screw, Hex Cap, 5/16-18 X 1.25 Lg
21	712-3010	6	S	Nut, Hex, 5/16-18 GR5

1020 S/N 126,001 - 207,400
Starter Motor

Page 51 of 61

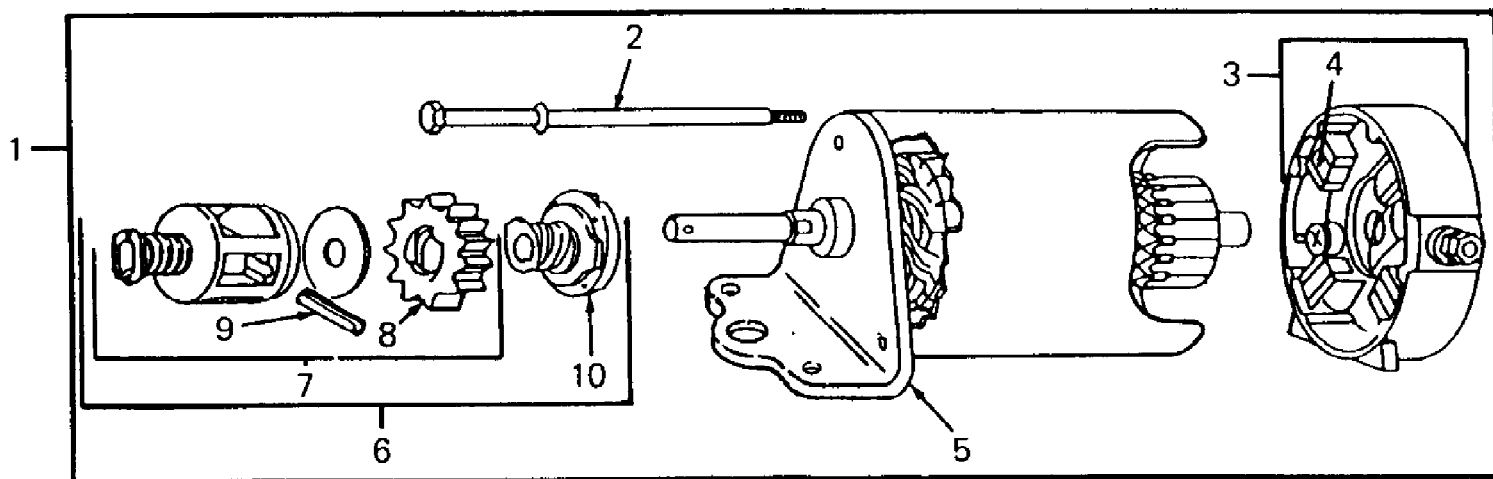


1020 S/N 126,001 - 207,400
Starter Motor

Page 52 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	BS-394805	1	S	Motor, Starting
2	BS-94003	2		Bolt, Hex
3	BS-492021	1		End Cap Assy (Includes Ref No. 4)
4	BS-492020	4		Brush Assy
5	BS-394857	1	/P	Cap Assy, Drive End
6	BS-490421	1	S	Drive Assy (Includes Ref No. 7 & 10)
7	BS-490467	1	S	Retainer & Pin (Includes Ref No. 8 & 9)
8	BS-280104	1	S	Gear
9	BS-94288	1	S	Pin, Roll
10	BS-398003	1	S	Clutch Assy

1020 S/N 126,001 - 207,400
Steering

Page 53 of 61

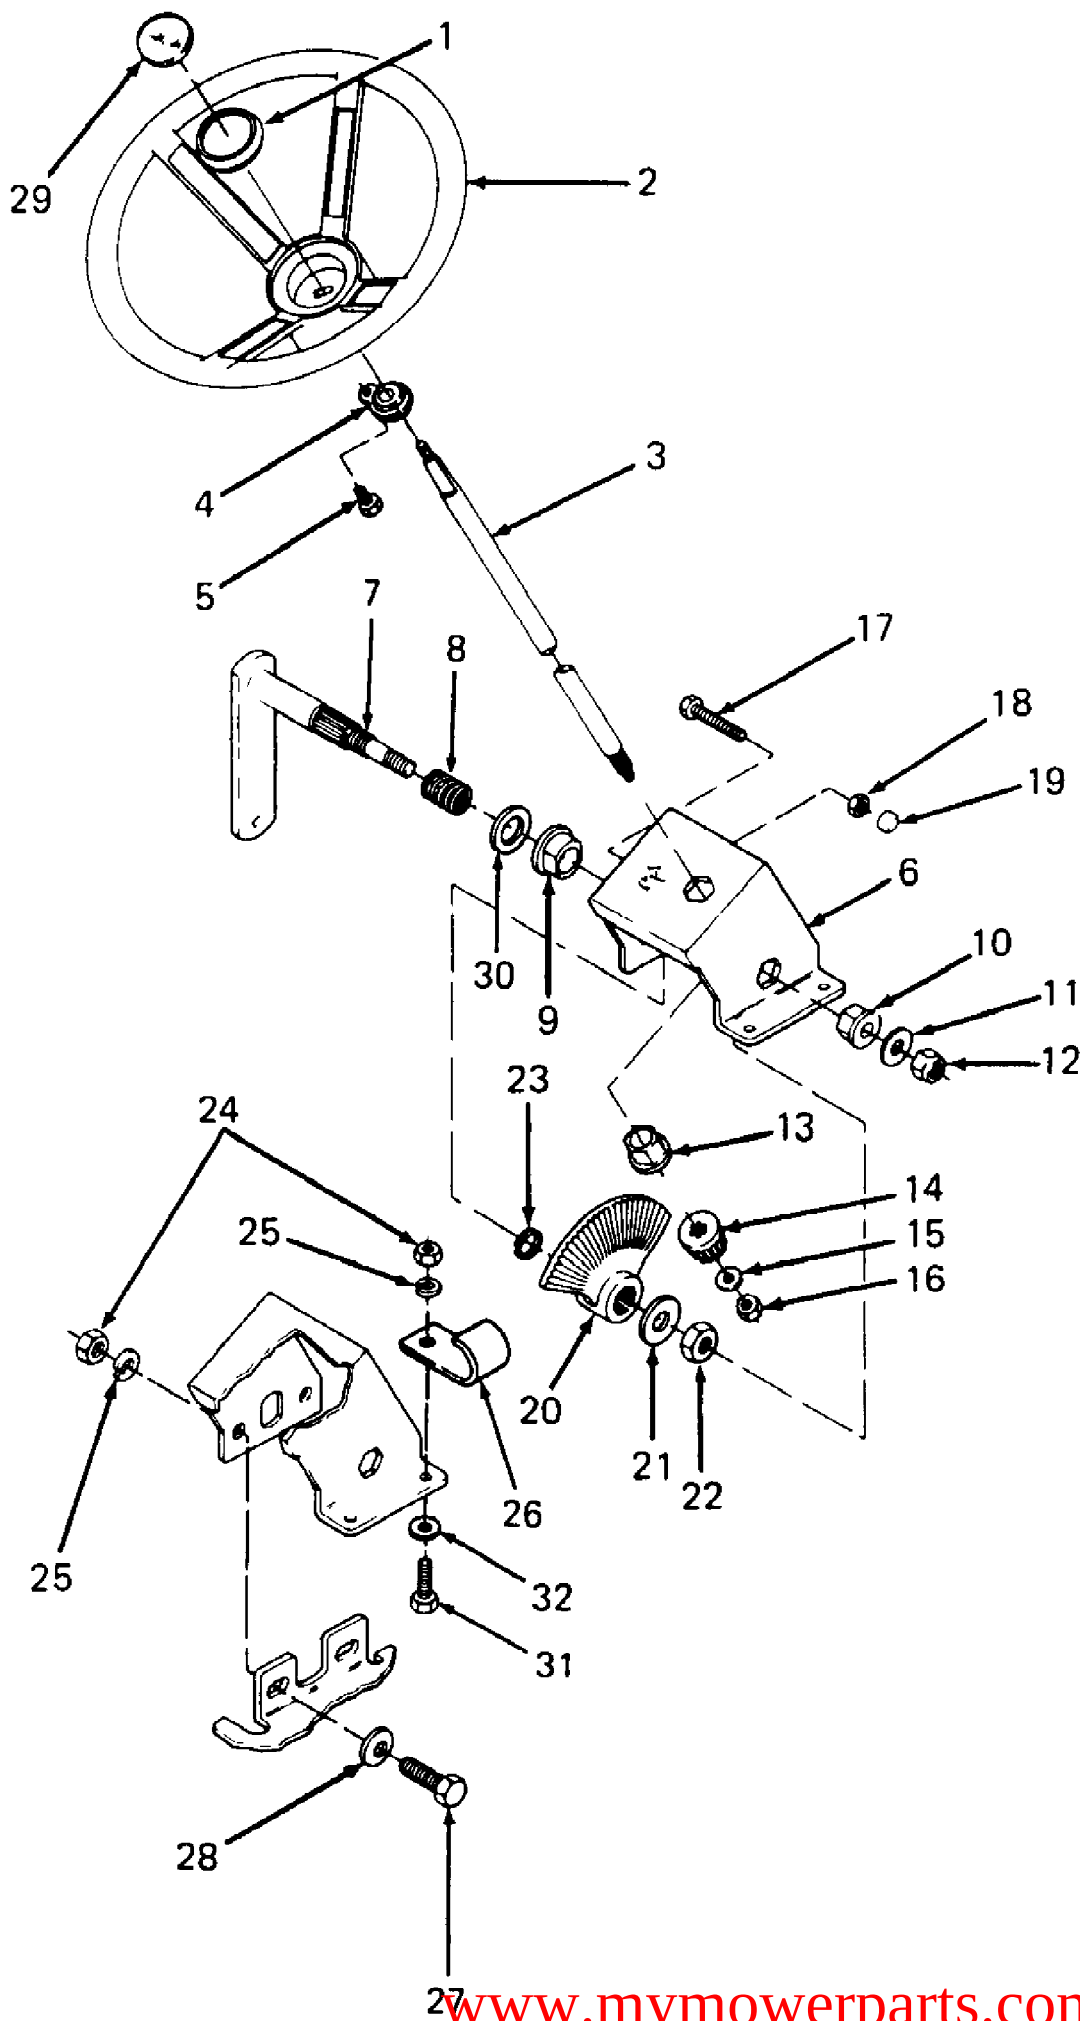


1020 S/N 126,001 - 207,400
Steering

Page 54 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	731-0220	1	S	Cap, Steering Wheel
2	731-0806A	1	S	Wheel, Steering
	712-0237	1	S	Nut, Hex Center Lock, 5/16-24
	736-0242	1	/P	Washer, Bell, .345 X .88 X .060 Thk
3	738-3070	1		Shaft, Steering Wheel
4	741-0501	1	S	Bearing, Steering Column
5	710-0837	1		Screw, Oval Hd Cnt. Sunk, #10 X .62 Lg
6	703-1551	1		Box, Steering
7	703-1531	1		Shaft, Steering
8	732-3054	1	S	Spring, Compression
9	741-0490	1	S	Bearing, Flange
10	748-0228	1		Bearing, Flange
11	736-3087	1		Washer, Flat, .515 X 1.12 X .100 Thk HDN
12	712-3022	1	/P	Nut, Hex Center Lock, 1/2-13 GR5
13	748-0227	1	S	Bearing, Flange
14	748-0237	1	S	Gear, Pinion
15	736-3081	1		Washer, Flat, .320 X .60 X .06 Thk HDN
16	712-0237	1	S	Nut, Hex Center Lock, 5/16-24
17	710-3200	1		Screw, Hex, 3/8-16 X 2.25 Lg GR5
18	712-3008	1	S	Nut, Hex Jam, 3/8-16 GR5
19	731-0988	1		Cap
20	748-0236	1		Gear, Bevel
21	736-0187	1	/P	Washer, Flat, .640 X 1.25 X .06 Thk
22	712-0318	1	/P	Nut, Hex Jam, 5/8-18
23	716-3001	1	S	Ring, Snap
24	712-3010	4	S	Nut, Hex, 5/16-18 GR5
25	736-0119	4	S	Washer, Lock, 5/16
26	726-3008	1	/P	Clip, Cable
27	710-3002	2	S	Screw, Hex Cap, 5/16-18 X 1.0 Lg GR5
28	736-0242	2	/P	Washer, Bell, .345 X .88 X .060 Thk
29	779-3077	1		Label, Steering Cap (For tractors w/serial no. 170,599 and below)
	779-3537	1		Label, Steering Cap (For tractors w/serial no. 170,600 and above)
30	736-0188	1	/P	Washer, Flat, .760 X 1.49 X .06 Thk HDN
31	710-0528	2	/P	Screw, Hex Cap, 5/16-18 X 1.25 Lg
32	726-3043	2		Retainer, Bolt, 5/16-18

1020 S/N 126,001 - 207,400
Transmission

Page 55 of 61

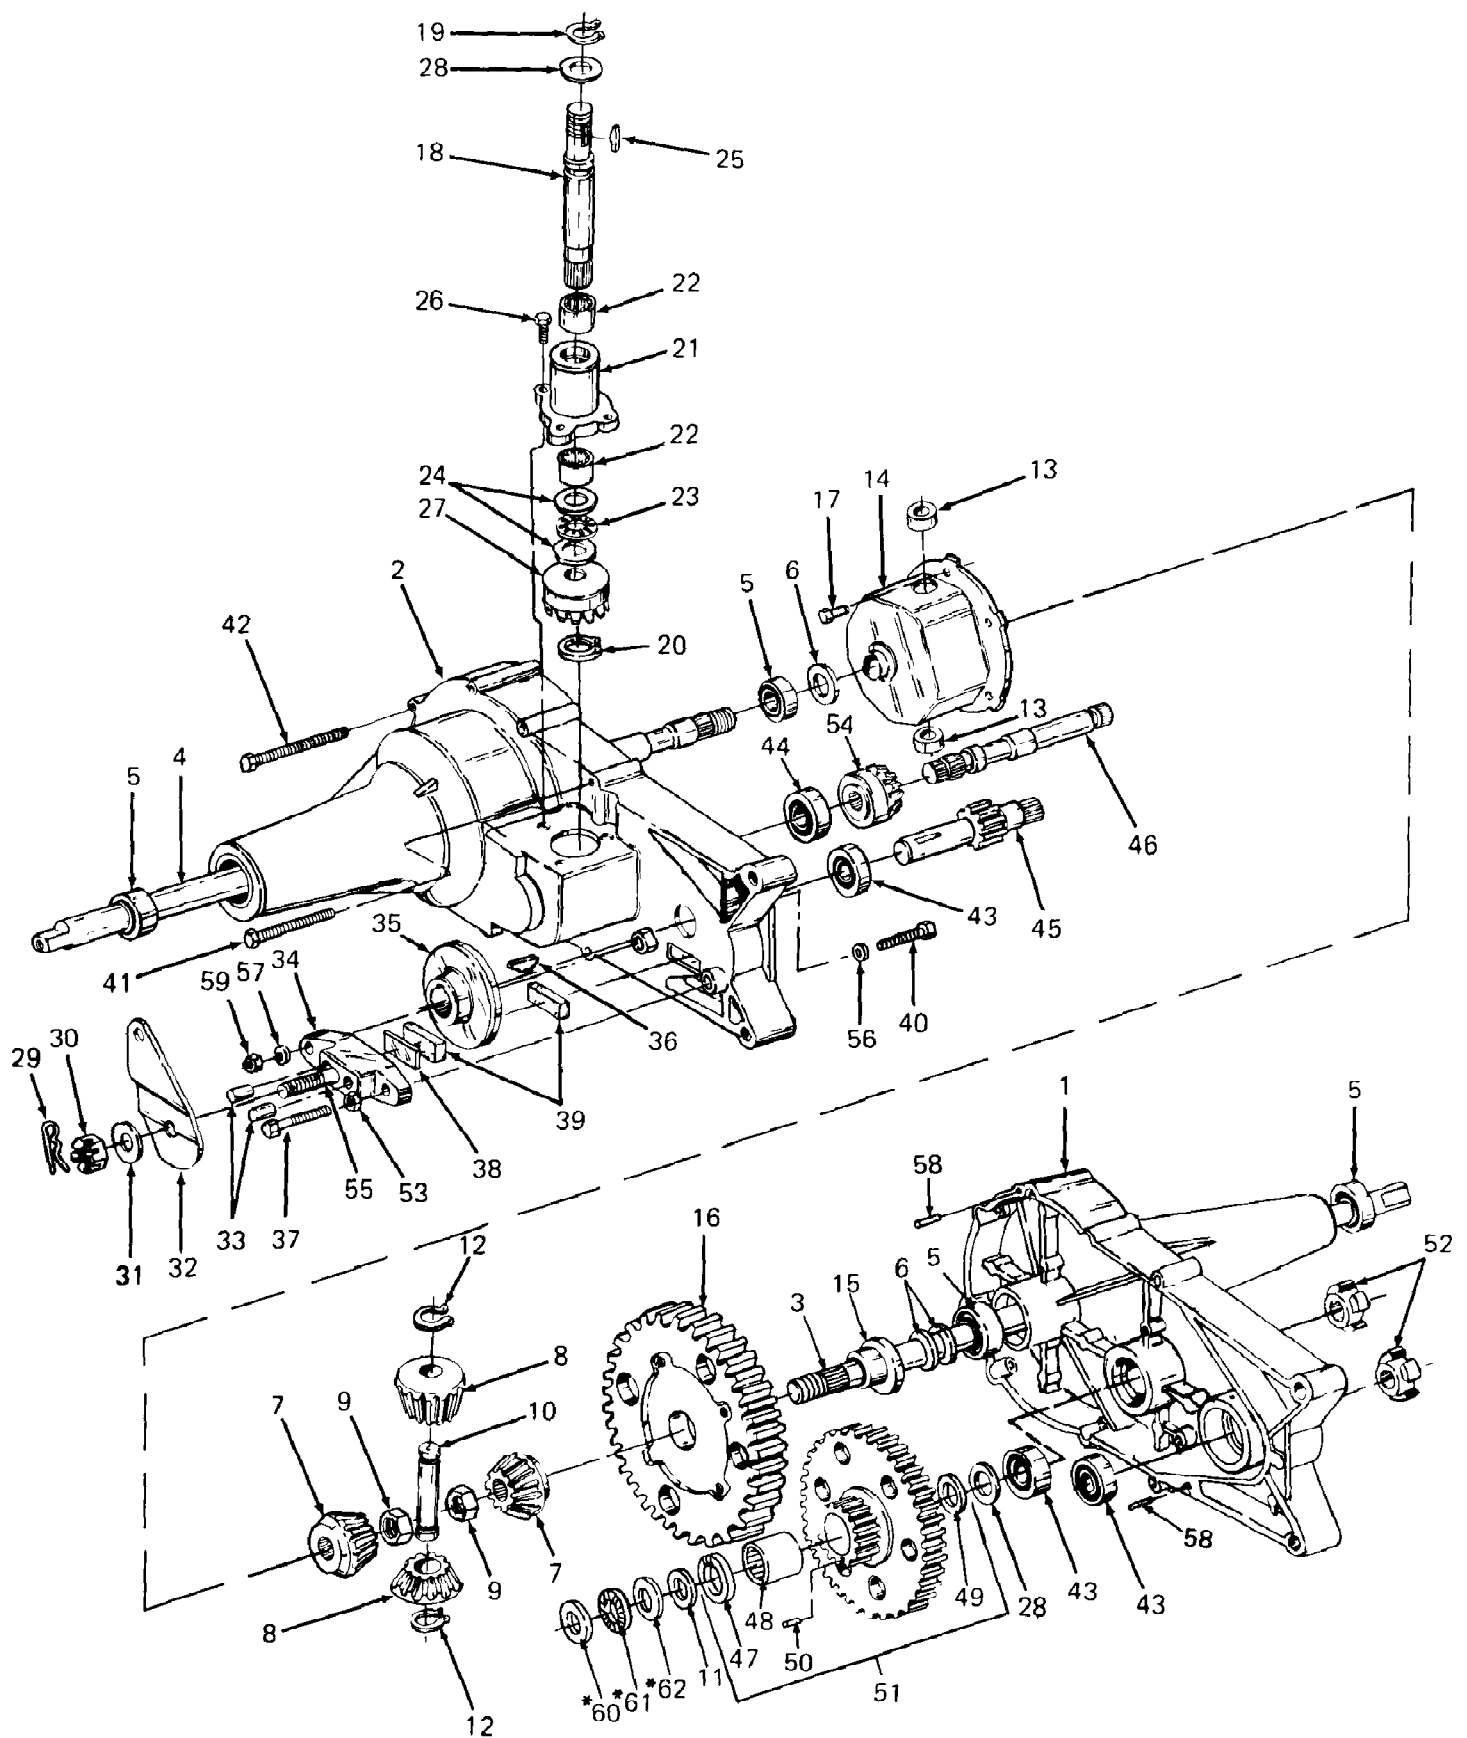

1020 S/N 126,001 - 207,400
Transmission

Page 56 of 61

Ref #	Part Number	Qty	S/P/F	Description
	717-3048	1		Axle Assy, Complete
1	AF-44077	1	S	Housing Half, LH
2	AF-44076	1	S	Housing half, RH
3	AF-44065	1		Axle, LH
4	AF-44086	1	S	Axle, RH
5	AF-44121	4	S	Bearing, Ball
6	736-0351	3	S	Washer, Flat, .76 X 1.5 X .306 Thk Hdn
7	717-1019	2	S	Gear, Miter
8	717-1020	2	/P	Gear, Miter
9	712-0200A	2	/P	Nut, Hex Jam Patch Lock, 1/2-20
10		1		Shaft, Cross (Order service kit 753-0527)
11	AF-44371	1	S	Washer, Flat, .62 ID X 1.0 OD X .050 Thk
	736-0337	AR	S	Washer, Flat, .62 ID X 1.0 OD X .040 Thk
12		1		Ring, Snap (Order service kit 753-0527)
13		1		Bearing, Thrust (Order service kit 753-0527)
14	717-0777	1	S	Housing Assy, Differential
15	741-0376	1	S	Bearing, Flange, .75 ID X .587
16	717-0767	1	S	Gear, Differential, 72 Tooth
17	AF-44126	4	S	Bolt, Hex Wash Hd Patch, 1/4-28 X .62 Lg
18	717-0634A	1	/P	Shaft, Input
19	716-0115	1	S	Ring, Snap
20	716-0108	1	S	Ring, Retaining, Ext, 7/16 Dia
21	AF-44081	1		Bearing, Input Housing
22	741-0335	2	S	Bearing, Needle, 5/8 ID X .50 Lg
23	AF-44139	1	S	Bearing, Thrust
24	AF-44109	2	S	Washer, Flat, 5/8 OD X 1.12 OD X .030 Thk
25	714-0129	1	S	Key, #4 Hi-Pro, 3/32 X 5/8 Dia Hdn
26	AF-44122	3		Screw, Hex Patch Lock, 1/4-20 X 3/4 Lg
27	AF-44078	1		Gear, Input Pinion, 17 Tooth
28	AF-44371	1	S	Washer, Flat, .62 ID X 1.0 OD X .050 Thk
	AF-44110	AR		Washer, Flat, .62 ID X 1.12 OD X .060 Thk
	736-0337	AR	S	Washer, Flat, .62 ID X 1.0 OD X .040 Thk
29	AF-44101	1		Pin, Cotter
30	712-0335	1	S	Nut, Castle, 5/16-24
31	736-0371	1	/P	Washer, Flat, .343 X .88 X .062 Thk
32	AF-44094	1		Arm, Brake Actuator
33	741-0343	2	S	Pin, Actuating, 5/16 Dia
34	717-0679	1		Yoke, Brake
35	717-0677	1	/P	Disc, Brake
36	714-0161	1	S	Key, Hi-Pro, 3/16 X 5/8 Dia
37	710-3201	1		Screw, Hex Patch Lock, 1/4-20 X 1.5 Lg
38	717-0682	1	S	Plate, Puck
39	717-0678	2	S	Puck, Brake
40	AF-44277	1		Screw, Hex Cap, 1/4-20 X 1.5 Lg
41	AF-44123	2		Screw, Hex Self-Tapp, 1/4-20 X 2.0 Lg
42	AF-44124	6		Screw, Hex Self-Tapp, 1/4-20 X 2.75 Lg
43	741-0155	3	S	Bearing, Ball
44	AF-44232	1	S	Bearing, Ball
45	AF-44083	1	S	Shaft, Pinion w/11 Tooth Gear
46	AF-44080	1	S	Shaft, Drive
47	AF-44343	1	S	Bearing, Bronze Thrust
48	AF-44342	1	S	Bearing, Needle
49	AF-44394	1	S	Seal, Grease


1020 S/N 126,001 - 207,400
Transmission

Page 57 of 61

Ref #	Part Number	Qty	S/P/F	Description
50	AF-44346	1		Pin, Dowel, 3/32 Dia X .25 Lg
51	AF-62760	1	S	Gear Assy, 60 & 17 Tooth
52	AF-44084	4	S	Coupling
53	712-0298	1	S	Nut, Hex Jam, 1/4-20
54	AF-44079	1	S	Gear, Drive Pinion, 17 Tooth
55	717-0796	1	/P	Bolt, Square Hd, 5/16-24
56	736-0176	1	S	Washer, Flat, .265 X .938 X .12 Thk
57	736-0329	1	S	Washer, Lock, 1/4
58	AF-44269	2		Pin, Roll, 3/16 Dia X .50 Lg
59	712-3006	1	/P	Nut, Hex, 1/4-20
60	AF-44110	1	F	Washer, Flat, .62 ID X 1.12 OD X .060 Thk
61	AF-44139	1	S/F	Bearing, Thrust
62	AF-44109	1	S/F	Washer, Flat, .62 ID X 1.12 OD X .030 Thk
	737-0223	16	S	Grease, Transmission
	753-0527	1	/P	Kit, Differential Cross Shaft
	711-0918	1	/P	Shaft, Cross
	716-0184	2	S	Ring, Snap
	741-0589	2	S	Bearing, Thrust

1020 S/N 126,001 - 207,400
Transmission Controls

Page 58 of 61

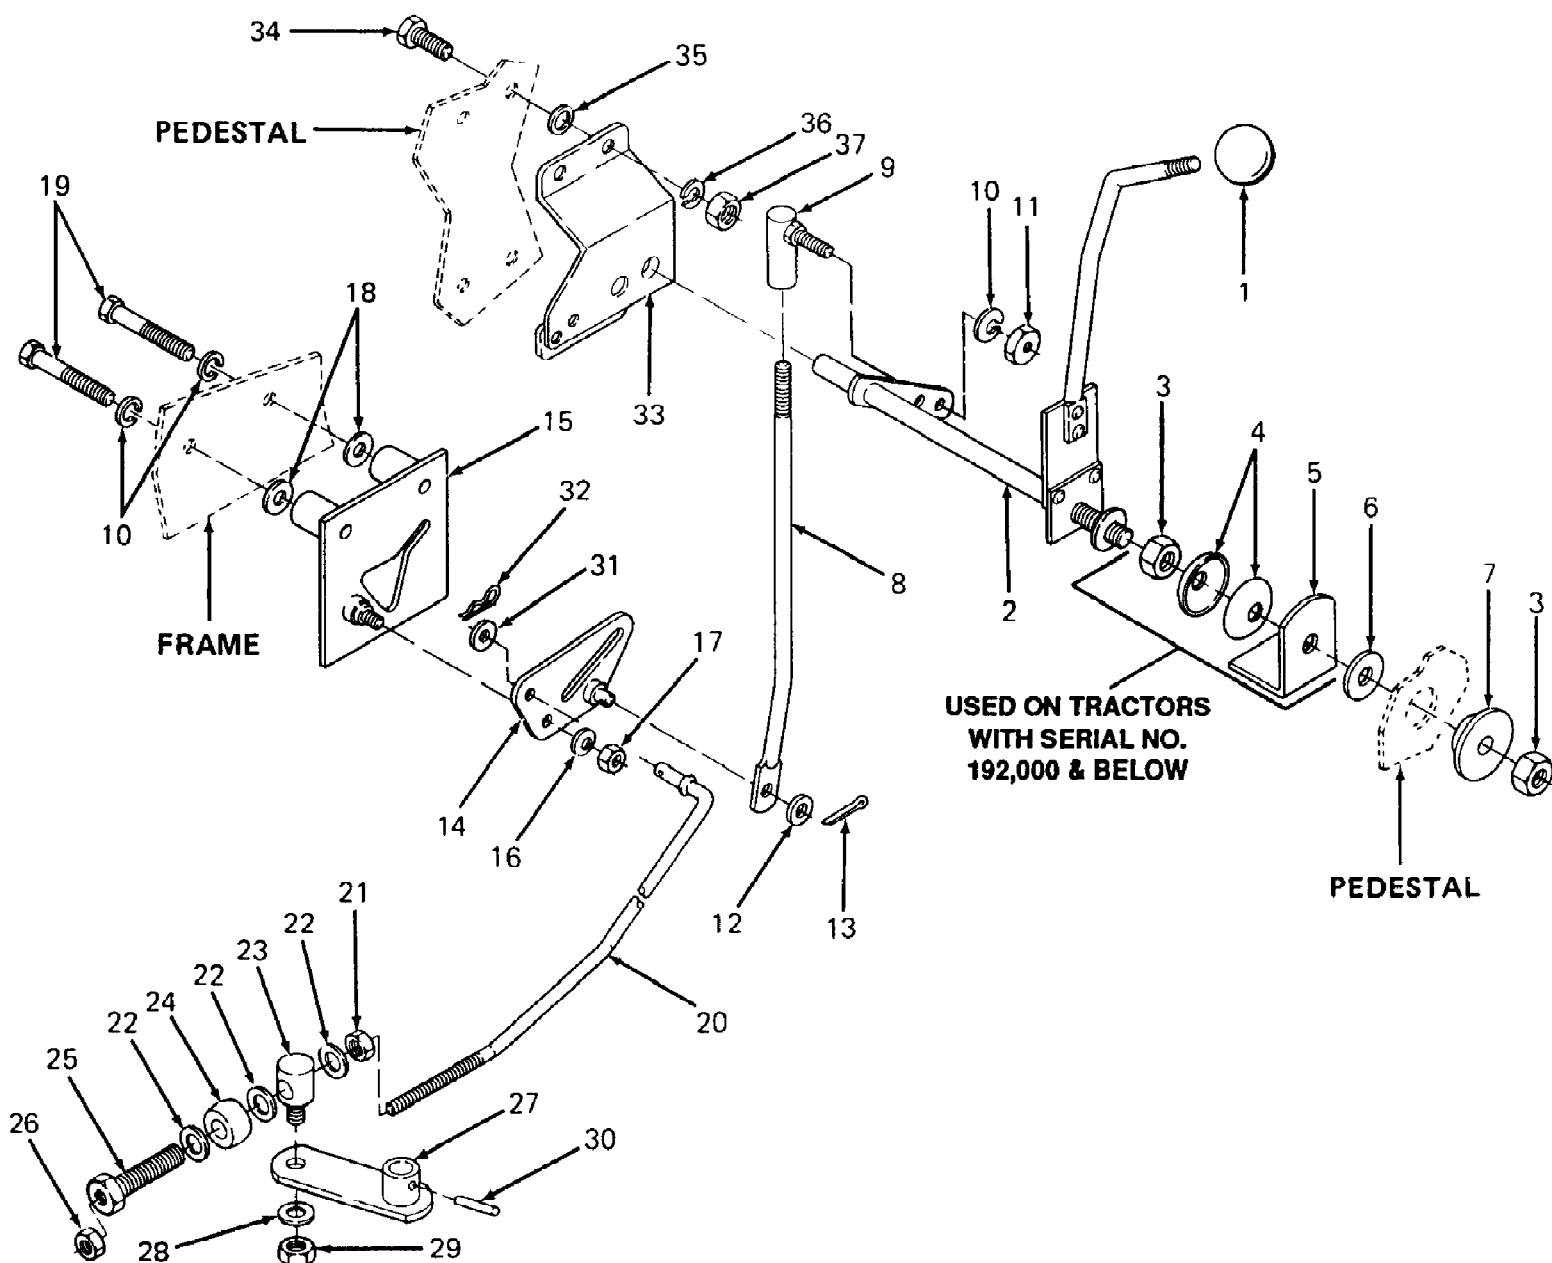


1020 S/N 126,001 - 207,400
Transmission Controls

Page 59 of 61

Ref #	Part Number	Qty	S/P/F	Description
1	720-3000	1	S	Knob, Control
2	703-1544A	1	/P	Shifter Assembly [Replaces 703-1544 by omitting Ref No. 3 (Qty 1), 4 (Qty 2) & 5]
3	712-3059	2	/P	Nut, Hex Top Lock, 1/2-20
4	736-3022	2	S	Washer, Bell
5	703-1705	1		Bracket, Friction
6	723-3055	1	S	Washer, Friction
7	748-3024	1		Spacer, Shoulder
8	711-3252	1		Rod, Upper Shift Control
9	723-3018	1	S	Ball Joint
10	736-0169	3	S	Washer, Lock, 3/8
11	712-3054	1	/P	Nut, Hex Patch Lock, 3/8-24 GR5
12	736-0185	1	S	Washer, Flat, .406 X .75 X .063 Thk
13	714-0507	1	S	Pin, Cotter, 3/32 Dia X .75 Lg
14	703-1640	1		Lever, Cam
15	703-1642	1		Plate, Cam
16	736-0105	1	/P	Washer, Bell
17	712-0262	1	/P	Nut, Hex Center Lock Jam, 3/8-24
18	736-0206	2	S	Washer, Flat, .378 X 1.00 X .125 Thk
19	710-0152	2	S	Screw, Hex Cap, 3/8-24 X 1.0 Lg
20	747-3133	1		Rod, Hydro Control
21	712-3067	1	/P	Nut, Hex Patch Lock, 7/16-20
22	736-0226	3	S	Washer, Flat
23	711-3255	1		Ferrule
24	735-0200	1		Washer, Rubber, .38 X .87
25	711-3254	1		Stud, Adjustment
26	712-3057	1	S	Nut, Hex, 5/16-24 GR5
27	748-3027	1	S	Arm, Control
28	736-3081	1		Washer, Flat, .320 X .60 X .06 Thk HDN
29	712-3068	1	S	Nut, Hex Patch Lock, 5/16-18
30	715-3036	1		Pin, Slotted Roll, 5mm X 30mm Lg
31	736-0275	2	S	Washer, Flat, .34 X .68 X .062 Thk
32	714-0104	1	S	Pin, Internal Cotter
33	703-1537	1		Bracket, Clutch Handle
34	710-0751	4	/P	Screw, Hex Cap, 1/4-20 X .62 Lg GR5
35	736-3000	4		Washer, Flat, .281 X .75 X .105 Thk
36	736-0329	4	S	Washer, Lock, 1/4
37	712-3006	4	/P	Nut, Hex, 1/4-20 GR5

1020 S/N 126,001 - 207,400
Transmission Dump Valve & Mounting

Page 60 of 61

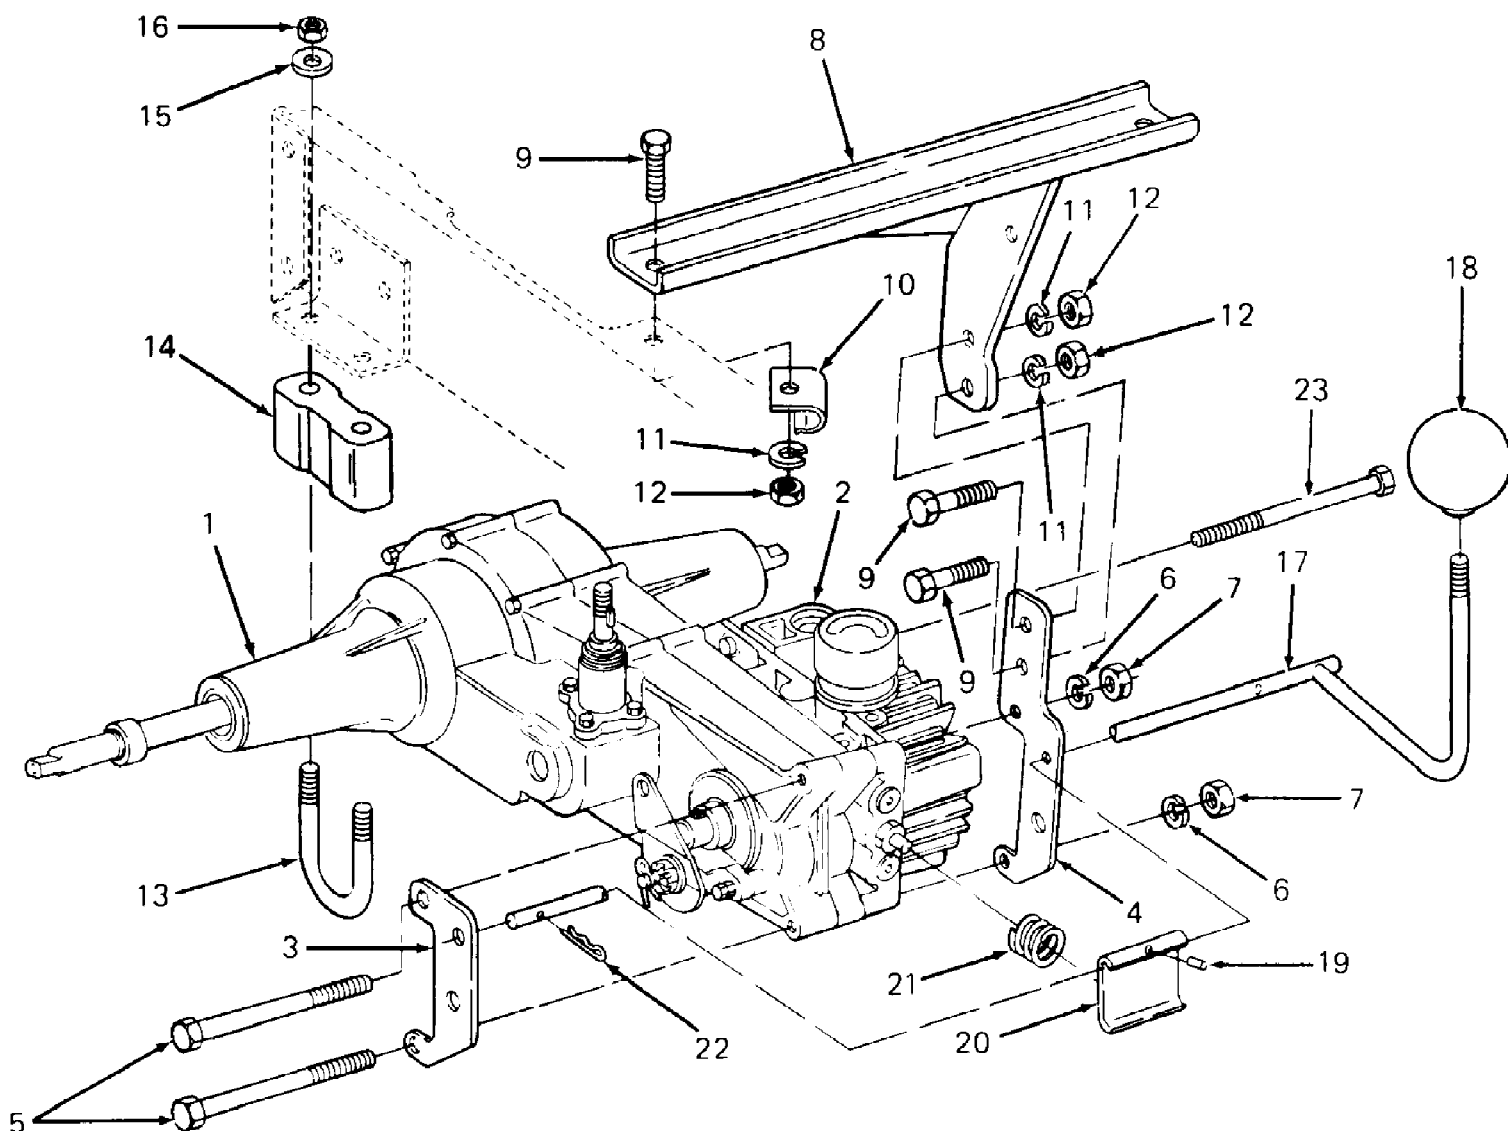

1020 S/N 126,001 - 207,400

Page 61 of 61

Transmission Dump Valve & Mounting

Ref #	Part Number	Qty	S/P/F	Description
1	717-3048	1		Transaxle (Refer to Transaxle for Component Breakdown)
2	717-3047A	1	S	Pump, Hydro (Refer to Hydro Pump for Breakdown)
3	703-1623	1		Bracket, Transmission Dump Valve
4	703-1624	1		Bracket, Transmission Dump Valve Torque
5	710-3195	2		Screw, Hex Cap, 5/16-18 x 4.5 Lg GR5
6	736-0119	2	S	Washer, Lock, 5/16
7	712-3010	2	S	Nut, Hex, 5/16-18 GR5
8	703-1636	1		Bracket, Torque
9	710-3000	4	S	Screw, Hex Cap, 3/8-16 x .75 Lg GR5
10	726-3008	2	/P	Clip, Cable
11	736-0169	4	S	Washer, Lock, 3/8
12	712-3017	4	S	Nut, Hex, 3/8-16 GR5
13	710-3192	2		U-Bolt, 5/16-18 x 2.75 Lg
14	748-3023	2		Spacer, Axle
15	736-0242	4	/P	Washer, Bell, .345 x .88 x .06 Thk
16	712-3009	4	S	Nut, Hex Center Lock, 5/16-18 GR5
17	703-1627	1		Rod, Dump Valve
18	720-3017	1	/P	Knob, Ball, 1/4-20 Trd
19	715-3008	1	/P	Pin, Spiral Spring, 1/8 Dia x .75 Lg
20	703-0310	1	/P	Lever, Dump Valve
21	732-3054	1	S	Spring, Compression
22	714-0104	1	S	Pin, Internal Cotter
23	710-3196	2		Bolt, Hex Patch, 5/16-18 x 4.5 Lg GR5