


3184 Tractor S/N 1K010G & After
Air Intake

Page 1 of 60

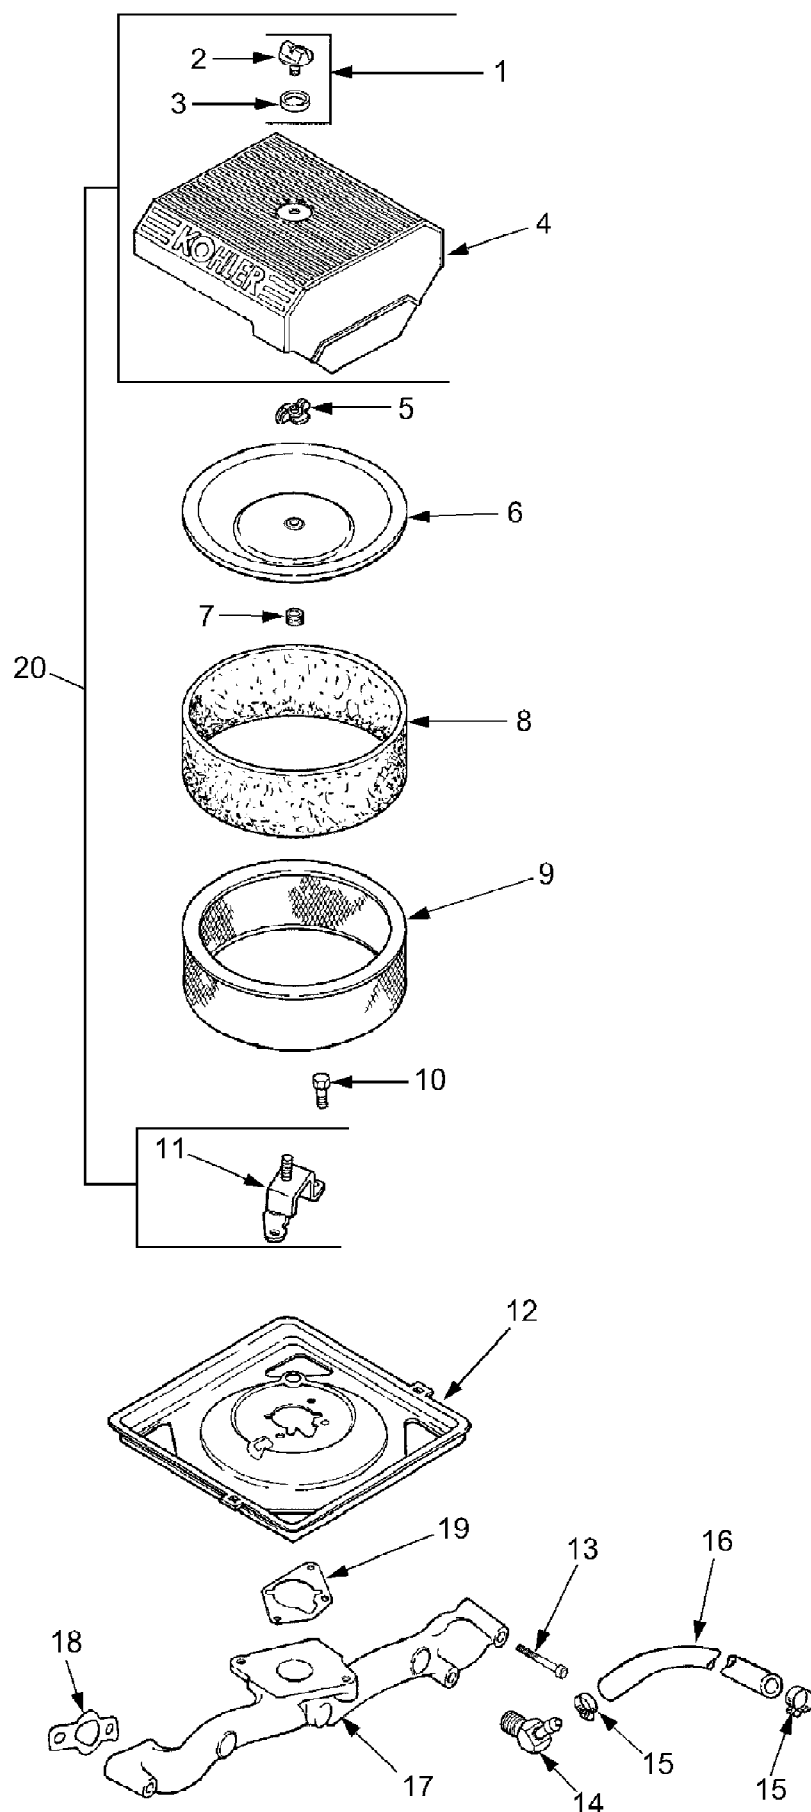


3184 Tractor S/N 1K010G & After
Air Intake

Page 2 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01	1	S	Kit, Knob w/Seal (Includes 2,3)
2	KH-25-341-03	1	/P	Knob, Cover
3	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
4	KH-24-096-69-S	1	/P	Cover, Air Cleaner
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
7	KH-24-032-03	1	/P	Seal, Inner Air Cleaner
8	KH-24-083-02	1	S	Precleaner, Element
9	KH-47-083-03	1	S	Element, Air Cleaner
10	KH-M-0639016	3	S	Screw, Hex Flange M6 x 1.0 x 16
11	KH-24-126-21	1		Bracket, Air Cleaner Base
12	KH-24-094-03	1	S	Base, Air Cleaner
13	KH-M-0651055	4		Screw, Hex Flange M6 x 1.0 x 55
14	KH-25-155-11	1		Connector, Hose 45°.
15	KH-25-237-14-S	2	/P	Clamp, Hose
16	KH-15-353-02-S	1		Line, Fuel 17"
17	KH-24-164-29	1		Manifold, Intake
18	KH-24-041-01	2	/P	Gasket, Intake Manifold
19	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
20	KH-24-743-08	1		Kit, Air Cleaner Cover (Includes 1-4, 11)

3184 Tractor S/N 1K010G & After
Blower Housing And Baffles


Page 3 of 60

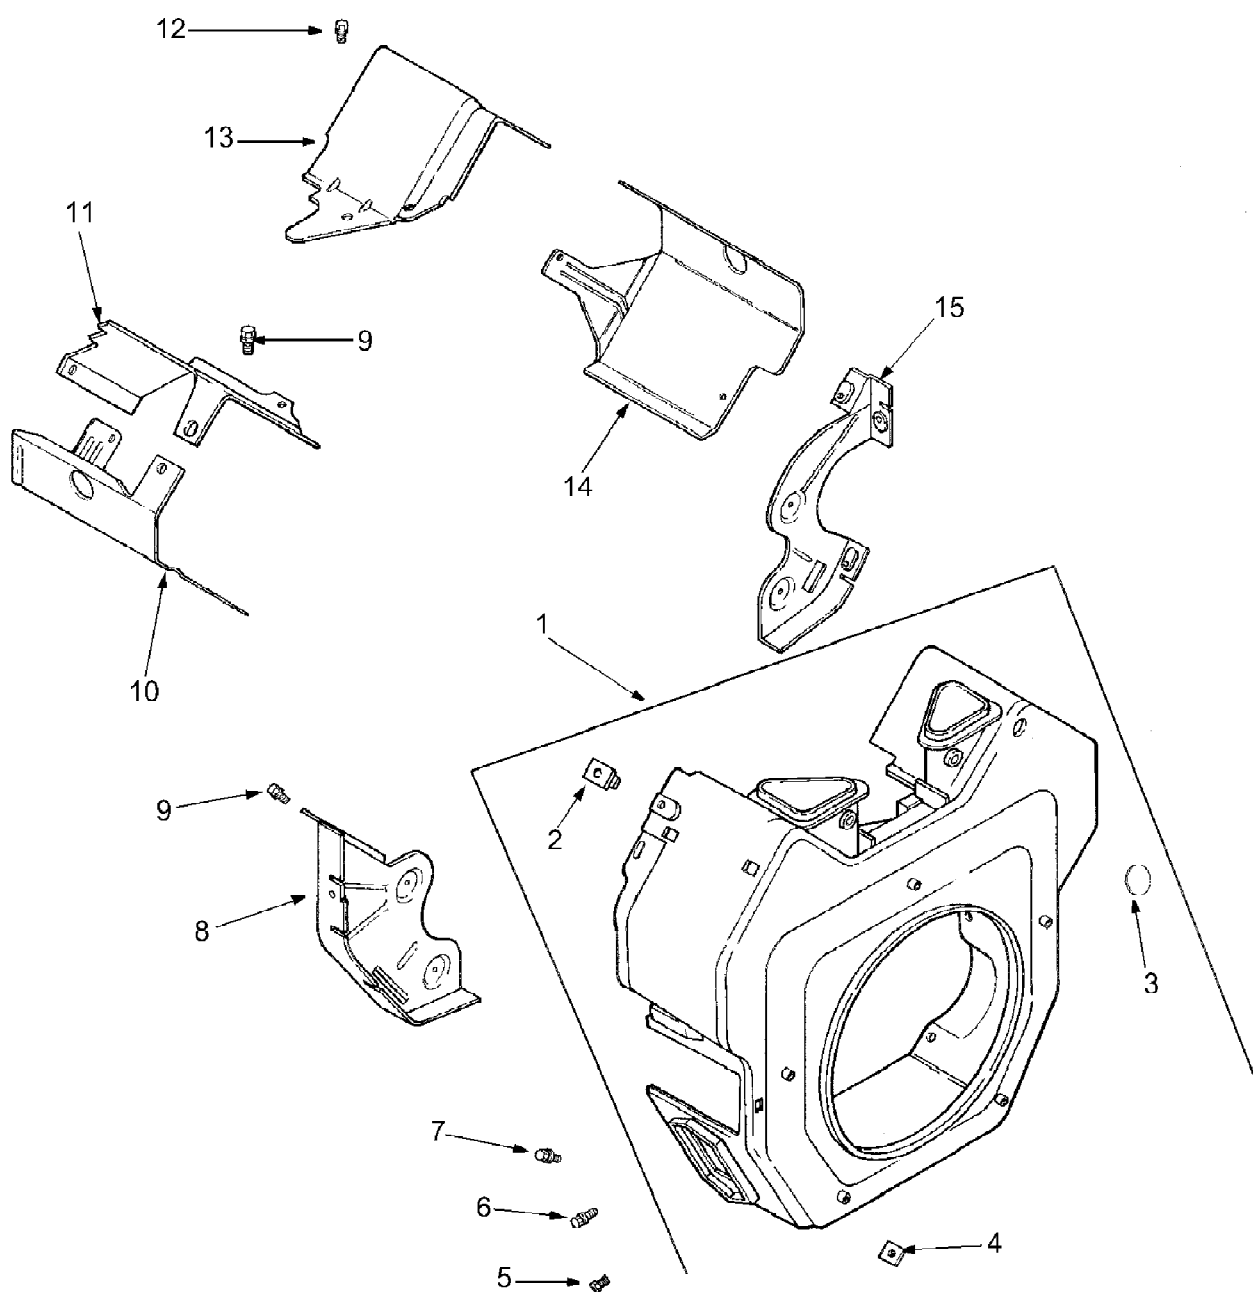

3184 Tractor S/N 1K010G & After
Blower Housing And Baffles

Page 4 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-20	1	S	Housing, Blower (Includes 2-4)
2	KH-24-100-02	2		Nut, Plastic
3	KH-25-139-16	1		Plug, Button 9/16"
4	KH-24-100-01	3		Nut, Plastic
5	KH-M-0551016	1		Screw, Hex Flange M5 x 0.8 x 16
6	KH-M-0545016	3	S	Screw, Hex Flange M5 x 0.8 x 16
7	KH-M-0545020	4	/P	Screw, Hex Flange M5 x 0.8 x 20
8	KH-24-146-16	1	S	Plate, Backing #2 Side
9	KH-M-0645016	6	S	Screw, Hex Flange M6 x 1.0 x 16
10	KH-24-063-20	1	/P	Baffle, Cyl. Barrel #2 Side
11	KH-24-063-17	1	/P	Baffle, Valley #2 Side
12	KH-M-0545010	2	/P	Screw, Hex Flange M5 x 0.8 x 10
13	KH-24-063-24	1	S	Baffle, Valley #1 Side
14	KH-24-063-58-S	1	S	Baffle, Cyl. Barrel #1 Side
15	KH-24-146-20	1	S	Plate, Backing #1 Side

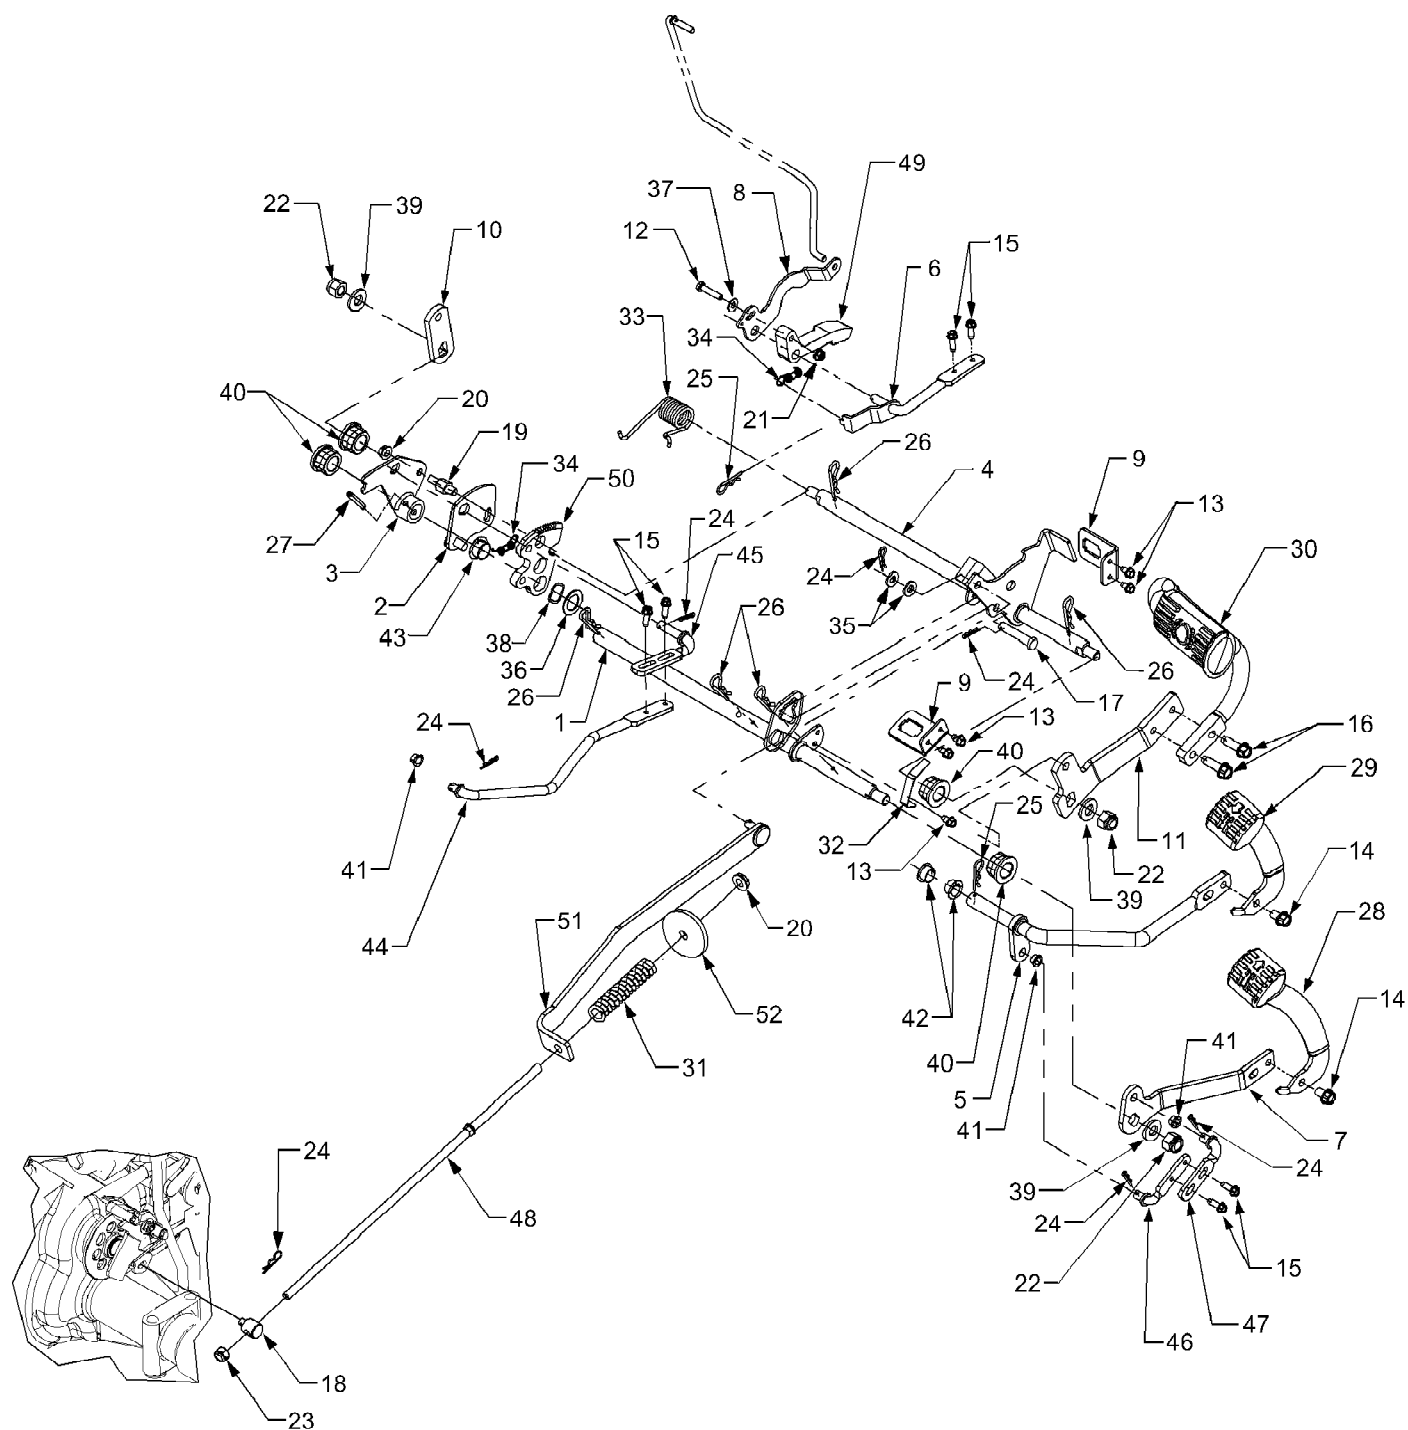

3184 Tractor S/N 1K010G & After
Brake And Control Pedals

Page 6 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	603-0379	1		Shaft Assembly, Pedal
2	603-0421A	1	/P	Plate, Disengagement
3	603-0437-0637	1	/P	Cam, Clutch
4	603-0445A	1		Shaft Assembly, Brake
5	603-0449	1		Shaft Assembly, Reverse
6	603-0634	1		Rod Assembly, Cruise
7	703-3012-0716	1		Link, Pedal Mounting
8	703-3020-0637	1		Bracket, Rod Adjust
9	703-3152-0637	2		Bracket, Switch
10	703-3155-0716	1		Lever, Brake
11	703-3156-0716	1	S	Link, Brake Pedal
12	710-0106	1	/P	Screw, Hex Cap, 1/4-20 x 1.25 GR5
13	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
14	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
15	710-0642	6	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .75
16	710-1315	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
17	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
18	711-1530	1		Ferrule, Adjust
19	711-1138	1		Stud, Actuator
20	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
21	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
22	712-3058	3	S	Nut, Hex Insert Lock, 1/2-20
23	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
24	714-0104	7	S	Pin, Internal Cotter
25	714-0145	2	S	Pin, Internal Cotter
26	714-0147	5	/P	Pin, Internal Cotter
27	715-0114	1	S	Pin, Spiral Spring, .25 x 1.5
28	731-3247	1		Pedal, Forward
29	731-3248	1		Pedal, Reverse
30	731-3249	1	S	Pedal, Brake
31	732-0324	1		Spring, Compression
32	732-0859	1	S	Spring, No Cut Reverse
33	732-0871	1		Spring, Torsion
34	732-3118	2		Spring, Extension, .380 OD x 1.44
35	736-0275	2	S	Washer, Flat, .344 x .688 x .065
36	736-0287	1	S	Washer, Flat, .79 x 1.24 x .060
37	736-0463	1	S	Washer, Flat, .25 x .62
38	736-0621	1		Washer, Wave, .785 x 1.0 x .012
39	736-3019	3		Washer, Flat, .531 x 1.06 x .134
40	741-0598	4	S	Bearing, Hex Flange
41	741-3073	3	S	Bearing, Flange
42	741-3074	2		Bearing, Flange
43	741-3084	1		Bearing, Flange
44	747-3319	1		Rod, Rear Control
45	747-3320	1		Rod, Front Control
46	747-3324	1		Rod, Rear Connecting
47	747-3353	1		Rod, Front Connecting
48	747-3422	1		Rod, Brake
49	748-3060	1		Cruise Latch
50	748-3080	1	S	Plate, Cruise
51	603-0738	1	S	Link Assembly, Brake
52	736-0418A	1	/P	Washer, Flat, .341 x 2.25 x .10

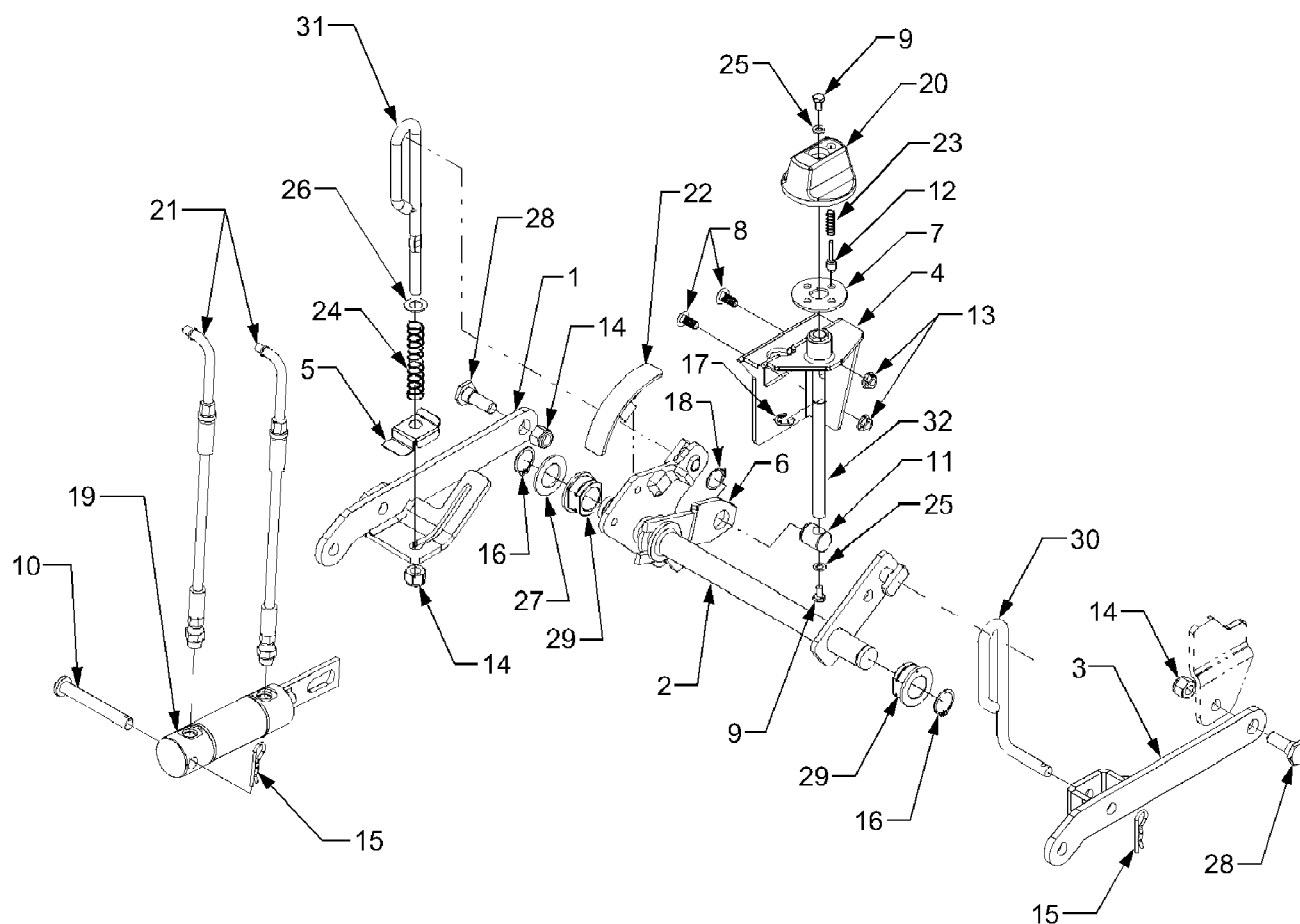

3184 Tractor S/N 1K010G & After
Center Hydraulic Lift Linkage

Page 8 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	603-0434-0716	1	/P	Link, LH Lift
2	603-0435A	1	/P	Shaft Assembly, Lift
3	603-0456-0716	1		Link, RH Lift
4	603-0803	1		Bracket, Downstop
5	703-3426	1		Stop Bracket, Lift Rod
6	703-3797	1		Arm, Downstop
7	748-3103	1		Disk, Detent
8	710-3178	2	/P	Bolt, Carriage, 3/8-16 x .75
9	710-3013	2	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
10	711-1206	1		Pin, Clevis, .5 x 3.75
11	711-1553	1		Ferrule, Adjustment
12	711-1561	1		Pin, Detent Plunger
13	712-0431	2	S	Nut, Flange Lock, 3/8-16 GR5
14	712-3083	3	/P	Nut, Hex Lock, 1/2-13
15	714-0147	2	/P	Pin, Internal Cotter
16	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
17	716-0104	1	S	Ring, `E' Retaining, .5 Dia.
18	716-0111	1	/P	Snap Ring, .875 Dia. Shaft
19	717-3518	1		Cylinder, Center Lift
20	720-0236	1	S	Knob
	777I20466	1		Graphic, Height Adjust
21	727-3135	2		Hose, Lift
	725-0157	1	/P	Tie, Cable
22	731-3215A	1	S	Indicator, Lift Position
23	732-0437	1		Spring, Compression
24	732-0870A	1	/P	Spring, Compression
25	736-0142	2	S	Washer, Flat, .281 x .5 x .063
26	736-0160	1	S	Washer, Flat, .536 x .93 x .050
27	736-0250	1	/P	Washer. Flat, 1.0 x 1.7 x .10
28	738-0744A	2	S	Shoulder Screw
29	741-0170	2	S	Bearing, Flange w/Flats
30	747-3330	1		Rod, RH Lift
31	747-3331A	1		Rod, LH Lift
32	747-3437	1		Screw, Adjustment

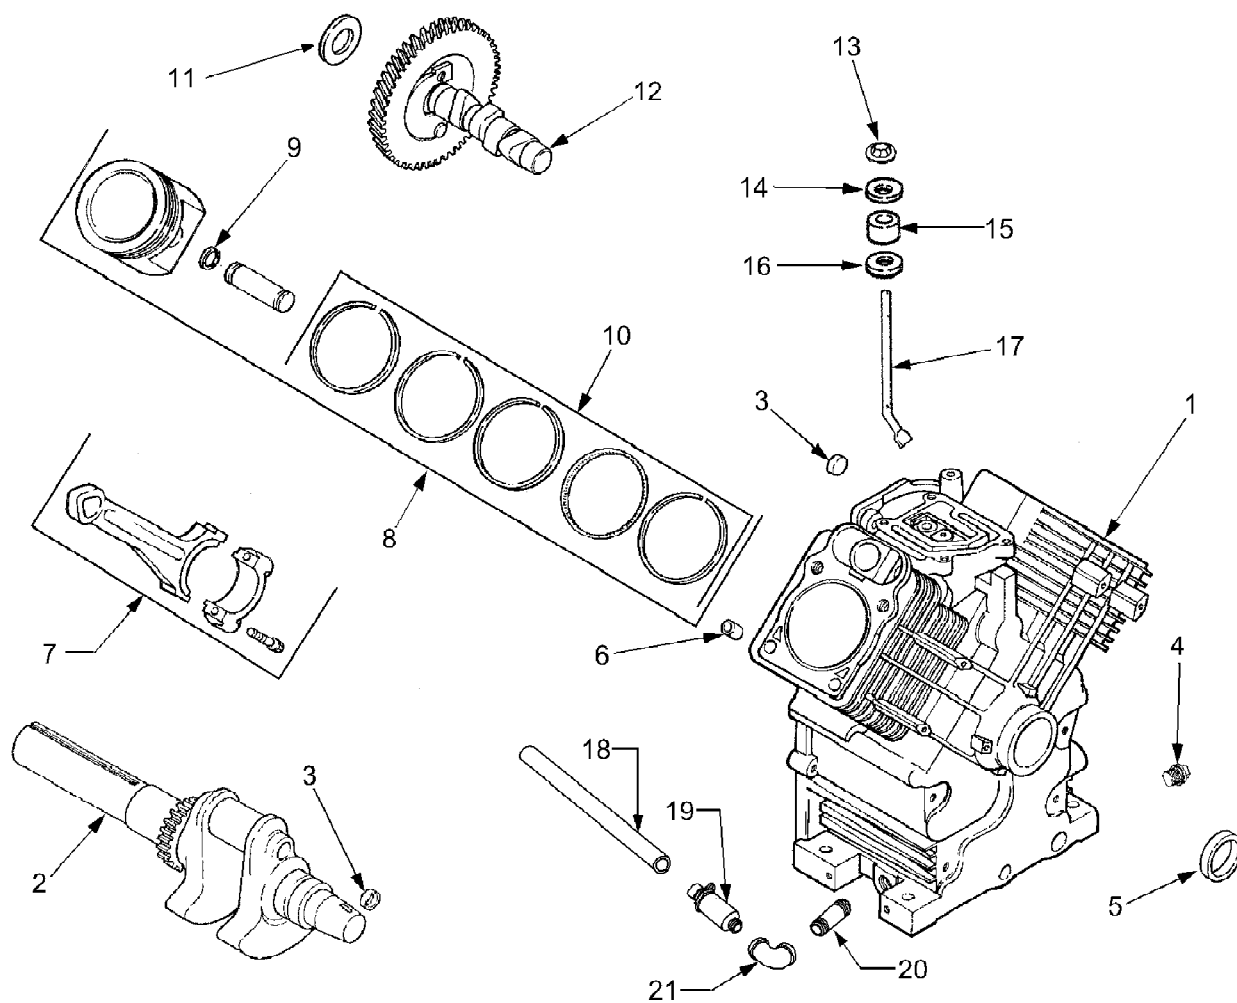


3184 Tractor S/N 1K010G & After
Crankcase And Crankshaft

Page 10 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-64631	1	S	Engine, Complete
	KH-24-522-180	1	/P	Short Block
	KH-24-782-15	1	/P	Miniblock
2	KH-24-014-06	1	S	Crankshaft (Includes 3)
3	KH-52-139-09	2	S	Plug, Cup
4	KH-27-139-57-S	2		Plug, Hex Head, 3/8 NPTF
5	KH-24-032-01	1	S	Seal, Oil
6	KH-24-380-13-S	6	S	Pin, Dowel Locating
7	KH-24-067-13	2	S	Rod, Connecting, Std
	KH-24-067-14	2		Rod, Connecting, .010
8	KH-24-874-09	2	S	Piston w/Ring Set, Std
	KH-24-874-10	2	S	Piston w/Ring Set, .010
	KH-24-874-11	2		Piston w/Ring Set, .020
	KH-24-874-15	2		Piston w/Ring Set, .003
9	KH-24-018-01	4	S	Retainer, Piston Pin
10	KH-24-108-08	1		Ring Set, Std
	KH-24-108-09	1		Ring Set, .010
	KH-24-108-10	1		Ring Set, .020
11	KH-12-422-09	A/R	S	Shim, Camshaft, .0320
	KH-12-422-13	A/R	S	Shim, Camshaft, .0400
	KH-12-422-07	A/R	S	Shim, Camshaft, .0280
	KH-12-422-08	A/R	S	Shim, Camshaft, .0300
	KH-12-422-10	1	S	Shim, Camshaft, .0340
	KH-12-422-11	A/R	S	Shim, Camshaft, .0360
	KH-12-422-12	A/R	S	Shim, Camshaft, .0380
12	KH-24-012-10	1	S	Camshaft
13	KH-24-018-09-S	1		Ring, Retainer
14	KH-M-931010-S	1		Washer, Nylon
15	KH-28-032-09-S	1		Seal, Governor Cross Shaft
16	KH-24-468-15-S	1		Washer, Plain
17	KH-24-144-33-S	1	S	Shaft, Governor Cross
18	751-3141-12	12 in.	S	Hose, Oil Drain
19	751-3140	1	S	Drain, Oil
	751-3142	1		Cap, Oil Drain
20	737-0199	1	S	Pipe, Straight
21	737-0272	1		Elbow, 90°.
	KH-24-755-107-S	1	/P	Gasket Set

3184 Tractor S/N 1K010G & After
Cylinder Head, Valves And Breather

Page 11 of 60

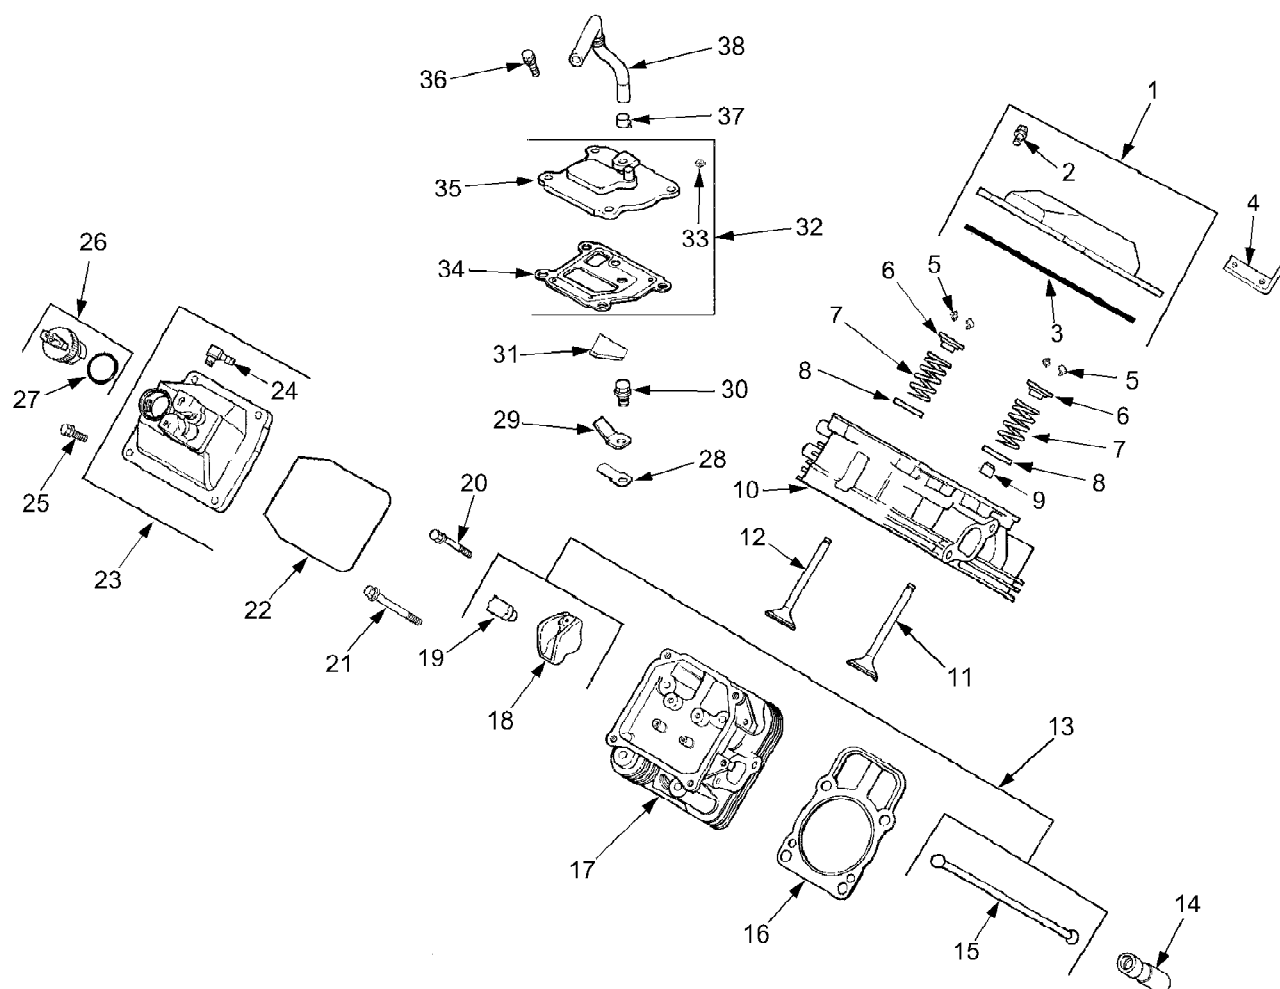


3184 Tractor S/N 1K010G & After
Cylinder Head, Valves And Breather

Page 12 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-74	1	S	Kit, Valve Cover (Includes 2-3)
2	KH-24-086-32	4		Screw, Shoulder
3	KH-24-153-16	1	S	O-Ring, Valve Cover
4	KH-24-445-01	1	S	Strap, Lifting
5	KH-12-755-03	4	/P	Kit, Retainer
6	KH-12-173-01	4	/P	Cap, Valve Spring
7	KH-24-089-02	4	/P	Spring, Valve
8	KH-235011	4	S	Retainer, Spring
9	KH-24-032-05	2	S	Seal, Valve Stem.
10	KH-24-318-09	1	S	Head Assembly, #1 Cylinder
11	KH-24-017-01	2	/P	Valve, Intake (Std.)
	KH-24-017-02	2		Valve, Intake (.25mm)
12	KH-24-016-01	2	/P	Valve, Exhaust (Std.)
	KH-24-016-02	2		Valve, Exhaust (.25mm)
13	KH-24-755-66	1	/P	Kit, Valve Train (Includes 15, 18, 19)
14	KH-25-351-01	4	S	Lifter, Valve
15	KH-24-411-05	4	/P	Rod, Push
16	KH-24-041-08	2	S	Gasket, Cylinder Head
17	KH-24-318-10	1	S	Head Assembly, #2 Cylinder
18	KH-25-186-01	4	/P	Arm, Rocker
19	KH-24-599-01	4	S	Pivot, Rocker Arm
20	KH-M-0640034	4	/P	Screw, Hex Flange M6 x 1 x 34
21	KH-12-086-16	8	S	Screw, Hex Flange M10 x 1.5 x 90
22	KH-24-153-16	1	S	O-Ring, Valve Cover.
23	KH-24-393-14	1	S	Cover, Fuel Pump Valve (Includes 24)
24	KH-25-155-02	2	/P	Connector 90°.
25	KH-24-086-34	4	/P	Screw, Shoulder
26	KH-24-227-02	1	S	Cap Assembly, Oil Fill (Includes 27)
27	KH-24-153-09	1	S	O-Ring
28	KH-24-402-03	1	/P	Reed, Breather
29	KH-12-018-01	1	S	Retainer, Breather Reed
30	KH-M-0545010	1	/P	Screw, Hex Flange M5 x 0.8 x 10
31	KH-24-050-01	1	S	Filter, Breather
32	KH-24-033-01	1	/P	Kit, Breather (Includes 33-35)
33	KH-25-139-60-S	1	/P	Plug, Allen Head 1/8 NPTF
34	KH-24-041-23	1	S	Gasket, Breather
35	KH-24-096-58	1		Cover, Breather
36	KH-M0645020	4		Screw, Hex Flange M6 x 1.0 x 20
37	KH-25-237-14-S	1	/P	Clamp, Breather
38	KH-24-326-26	1	S	Hose, Breather

3184 Tractor S/N 1K010G & After
Dash Panel

Page 13 of 60

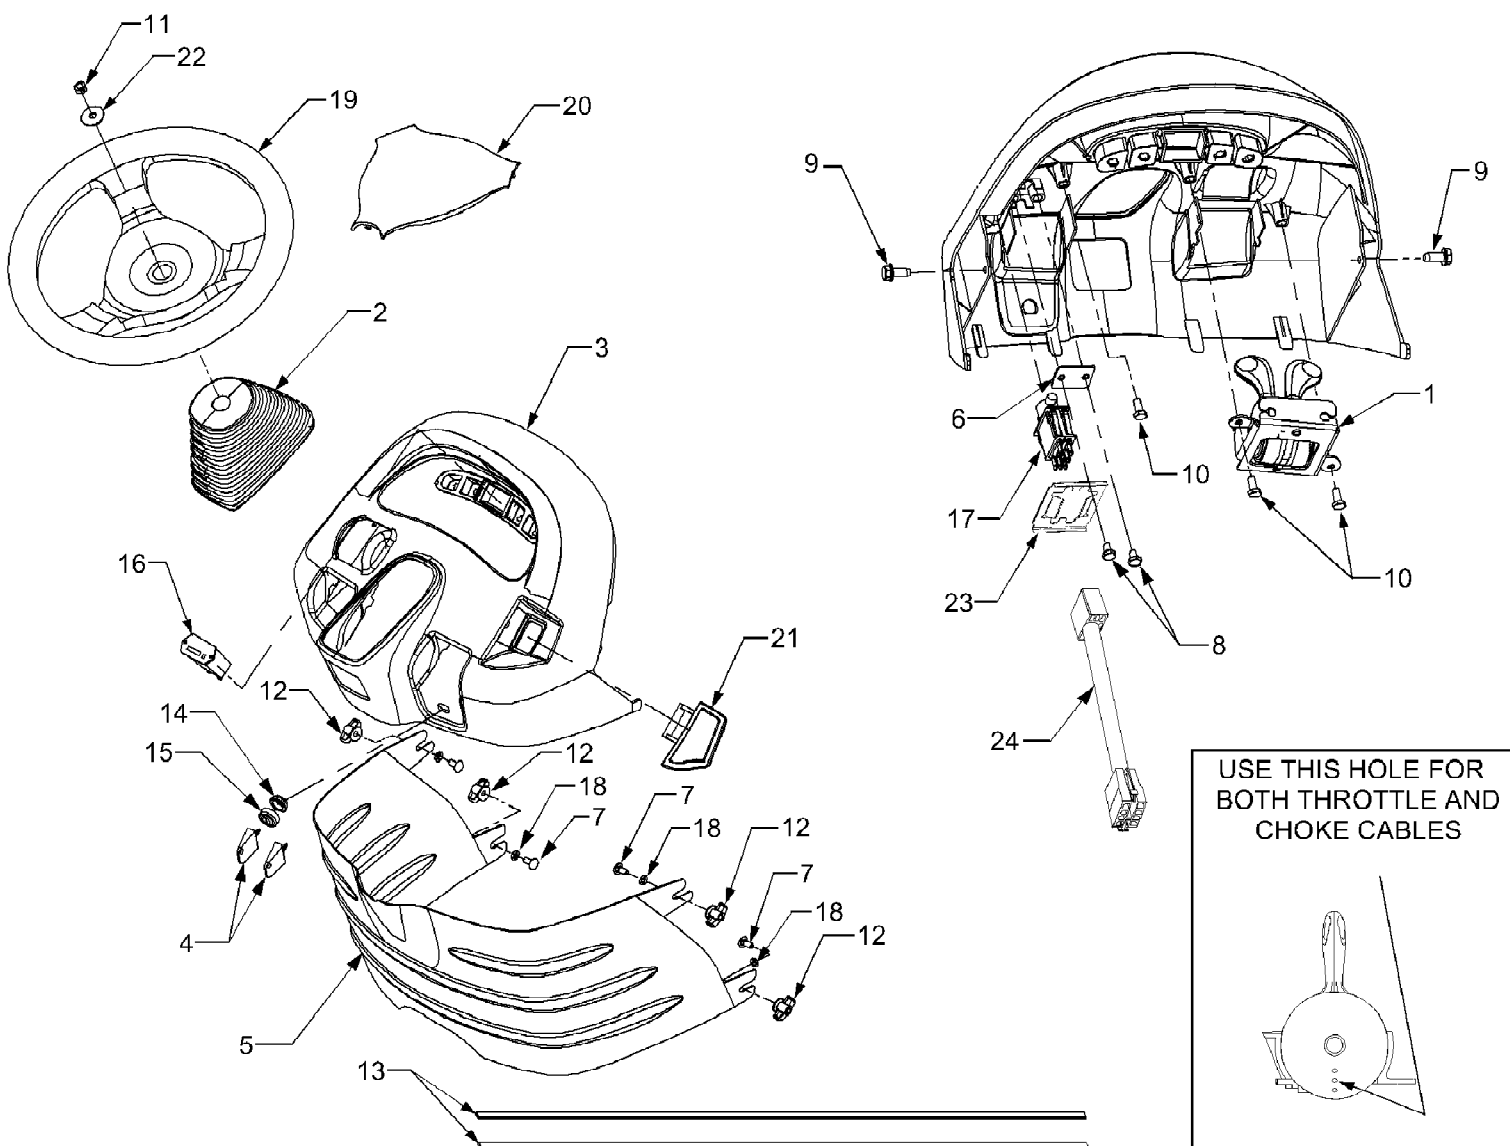


3184 Tractor S/N 1K010G & After
Dash Panel

Page 14 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	603-0586	1		Control Assembly, Throttle/Choke
2	631-0076	1		Boot, Tilt Steer
3	631-3014	1	S	Dash Panel
	777I20183	1		Graphic, Monitor Light Cover
4	759-3476A	1	S	Key, Ignition (Set of 2)
5	703-3072	1	/P	Screen, Dash
6	703-3162	1		Plate, PTO Handle
7	710-0134	4	/P	Carriage Bolt, 1/4-20 x .62
8	710-0294	2		Screw, Hex Cap 1/4-20 x .375 GR5
9	710-1260A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
10	710-3013	3	/P	Screw, Hex Cap 1/4-20 x .50 GR5
11	712-0237	1	S	Nut, Hex Lock, 5/16-24
12	712-0397	4	S	Wing Nut, 1/4-20 w/Bell Washer
13	723-0465	2		Seal, Screen Cut to fit screen
14	725-1346	1	S	Nut, Ignition Switch, 5/8-32
15	725-1347	1	/P	Cap, Ignition Switch
16	725-3159	1	S	Hour Meter
17	725-3256	1	S	Switch, PTO
18	726-0233	4	/P	Nut, Push
19	731-3209	1		Steering Wheel
20	731-3210	1		Cover, Steering Wheel
21	731-3241	1		Handle, PTO Switch
22	736-3070	1	/P	Washer, Flat, .34 x 1.5 x .10
23	783-0462	1	/P	Bracket, PTO Switch Retainer
24	629-3079	1	S	Harness, PTO Adapter w/ Diode

3184 Tractor S/N 1K010G & After
Driveshaft And Engine Connections

Page 15 of 60

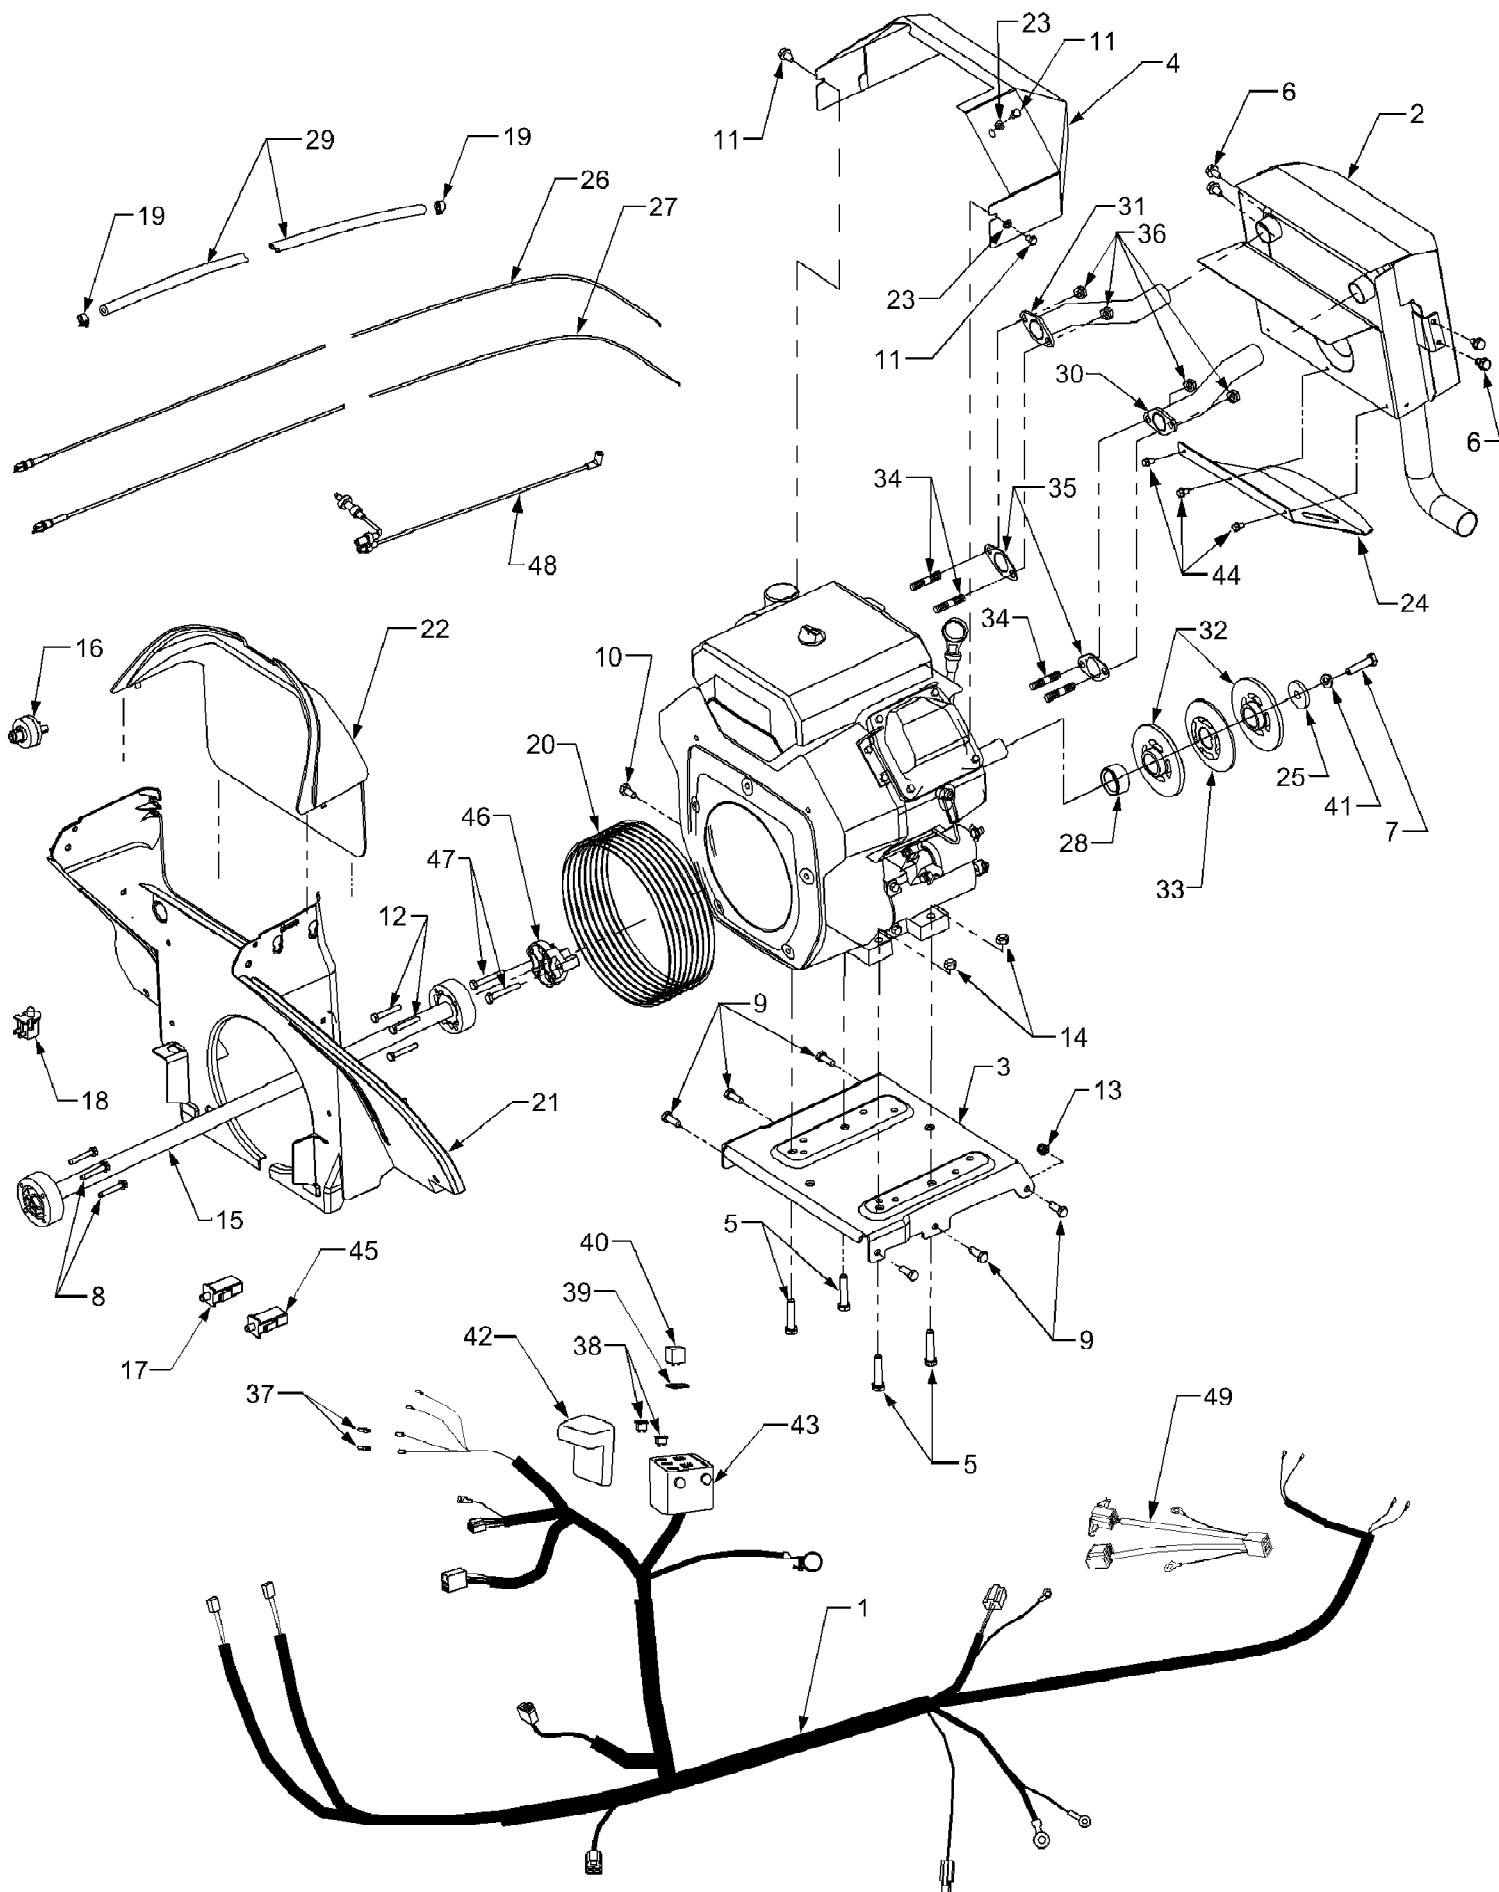


Ref #	Part Number	Qty	S/P/F	Description
1	629-3077	1		Harness, Wire
1	726-0154	4	S	Tie, Pushmount
1	726-3055	2		Clip, Cable
2	651-3003	1		Muffler Assembly
3	703-2909A-0716	1		Plate, Engine Mounting
4	703-2999	1		Shield, Muffler Heat
5	710-0539	4	/P	Screw, Hex Cap, 3/8-24 x 1.75 GR5
6	710-0607	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
7	710-0757	1	/P	Screw, Hex Cap, 7/16-20 x 1.5 GR5
8	710-1062	4		Screw, Hex Cap Lock 1/4-20 x 1.25 GR5
9	710-3038	6	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
10	710-3138	1	/P	Screw, Hex Cap, M8 - 1.25 x 16MM GR5
11	710-3209	4		Screw, Hex Cap, M6 - 1.0 x 10MM
12	710-3288	4		Screw, Hex Cap, Lock 1/4-20 x 1.62 GR5
13	712-0429	6	S	Nut, Hex Insert Lock, 5/16-18
14	712-3054	4	/P	Nut, Hex Lock, 3/8-24
15	718-3093	1	S	Shaft, Drive, 27.125 Long
15	759-3765	2		Drive Barrels Kit Not shown (2 used per tractor)
16	725-3163	1	S	Switch, Key, w/Ground
17	725-3164A	1	S	Switch, Plunger
18	725-3166	1	S	Switch, Snap Mount
19	726-0205	2	/P	Clamp, Hose
20	731-3166	1		Boot, Intake
21	731-3221A	1	/P	Baffle, Lower Air
22	731-3231	1	S	Baffle, Upper Air
23	736-0142	4	S	Washer, Flat, .281 x .50 x .06
24	703-3398	1		Shield, Lower Exhaust
25	736-3017	1	/P	Washer, Flat, .417 x 1.5 x .225
26	746-3075	1		Cable, Throttle Control
27	746-3077	1		Cable, Choke Control
28	750-3201	1		Spacer, Crankshaft
29	751-0535-60	1	S	Hose, Fuel Line 60in.
30	751-3154	1		Pipe, Exhaust RH
31	751-3155	1		Pipe, Exhaust LH
32	756-3091A	2	/P	Pulley Half
33	756-3099	1		Pulley, Center
34	KH-25-072-04	4	/P	Stud, M8 - 1.25 x 33MM
35	KH-24-041-02	2	S	Gasket, Exhaust
36	712-3086	4	/P	Nut, Hex, M8 x 1.25
37	725-1365	2	S	Bulb, Indicator
38	725-3243	2		Fuse, 25 Amp
39	721-0342	1	S	Gasket, Silicone
40	725-1648	1	S	Relay
41	736-0171	1	S	Washer, Lock, 7/16
42	759-3868	1	S	Cover, Fuse Box
43	759-3869	1	S	Box, Fuse
44	710-3007	3	/P	Screw, Hex Wash. Hd. Tapp, #12-24 x .38
45	725-3191A	1	S	Switch, Plunger
46	719-3096	1	/P	Adapter, Drive Shaft
47	KH-24-086-16	2	S	Screw, Hex Flange, M10 x 1.5 x 90
48	751-3199	1		Hose, Vacuum

3184 Tractor S/N 1K010G & After
Driveshaft And Engine Connections

Page 17 of 60

Ref #	Part Number	Qty	S/P/F	Description
49	629-3078	1	S	Harness Assembly, Bypass

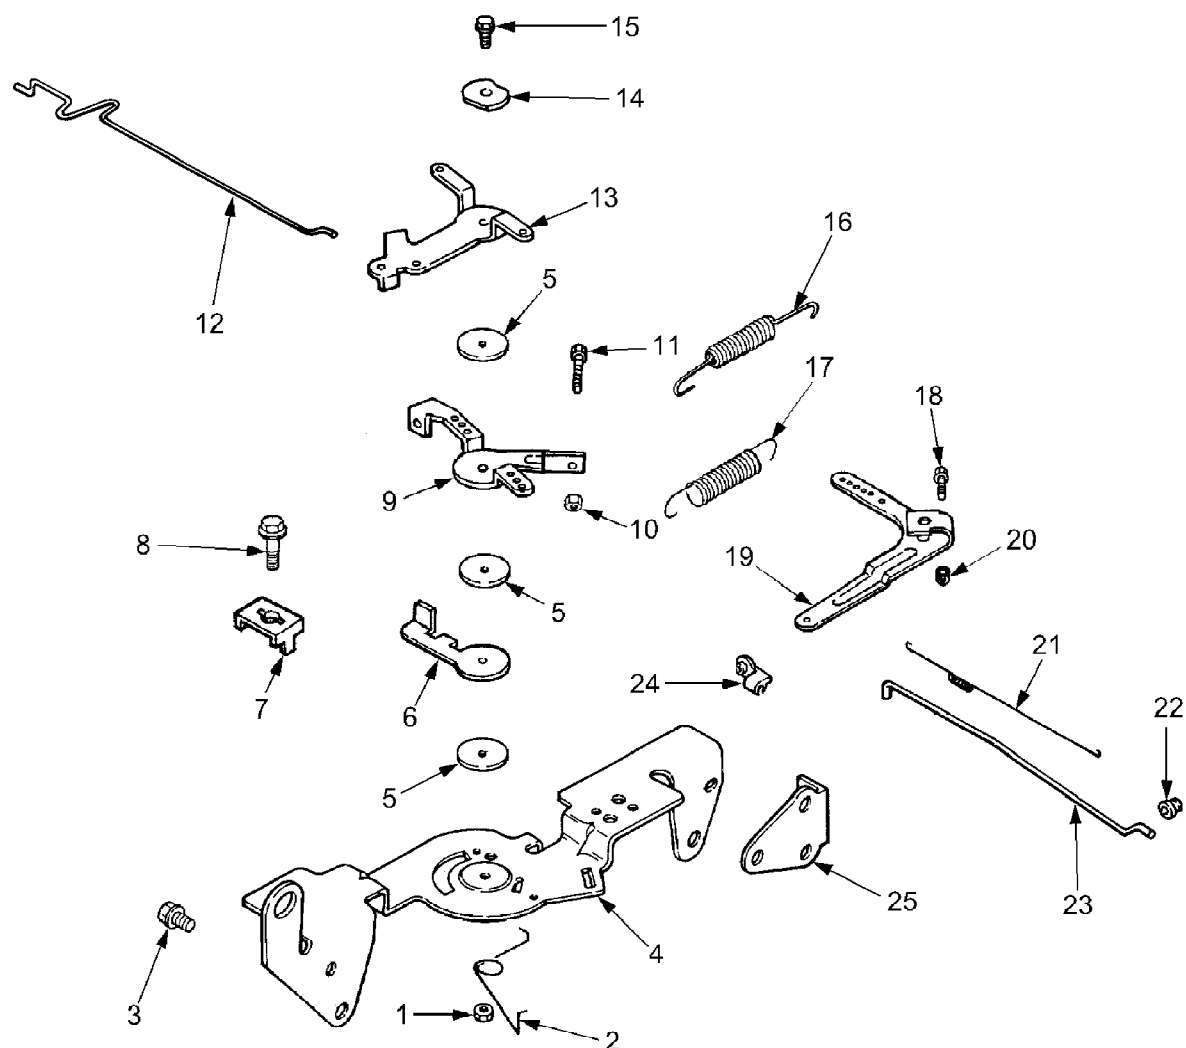


3184 Tractor S/N 1K010G & After
Engine Controls

Page 19 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0547050	1	/P	Nut, Hex Lock M5 x 0.8
2	KH-24-089-03	1		Spring, Choke Return
3	KH-M-0645016	4	S	Screw, Hex Flange M6 x 1.0 x 16
4	KH-24-126-56	1	S	Bracket, Control
5	KH-24-468-01	3		Washer, Plain 5.5 mm
6	KH-24-090-07	1	/P	Lever, Throttle Actuator
7	KH-12-237-01	2		Clamp,Cable,
8	KH-M-0545016	3	S	Screw, Hex Flange M5 x 0.8 x 16
9	KH-24-090-13	1		Lever, Throttle Control
10	KH-M-0446030	1	S	Nut, Hex M4 x 0.7
11	KH-M-0401030	1	S	Screw, Hex Cap M4 x 0.7 x 30
12	KH-24-079-02	1	S	Linkage,Choke
13	KH-24-090-05	1		Lever, Choke
14	KH-41-468-03	1		Washer, Spring 1/4"
15	KH-M-0545020	1	/P	Screw, Hex Flange M5 x 0.8 x 20
16	KH-24-089-51-S	1	/P	Spring, Throttle Limiter
17	KH-24-089-46-S	1		Spring, Governor
18	KH-24-211-03-S	1		Screw, Carriage
19	KH-24-090-33-S	1	S	Lever, Governor
20	KH-M-0641060	1	S	Nut, Hex Flange M6 x 1.0"
21	KH-24-089-01	1		Spring, Linkage
22	KH-25-158-08	1	/P	Bushing, Linkage Retaining
23	KH-24-079-01	1		Linkage, Throttle
24	KH-25-158-11	1	/P	Bushing, Linkage Retaining
25	KH-24-126-04	2	S	Bracket Support

3184 Tractor S/N 1K010G & After
Fender And Running Board


Page 20 of 60

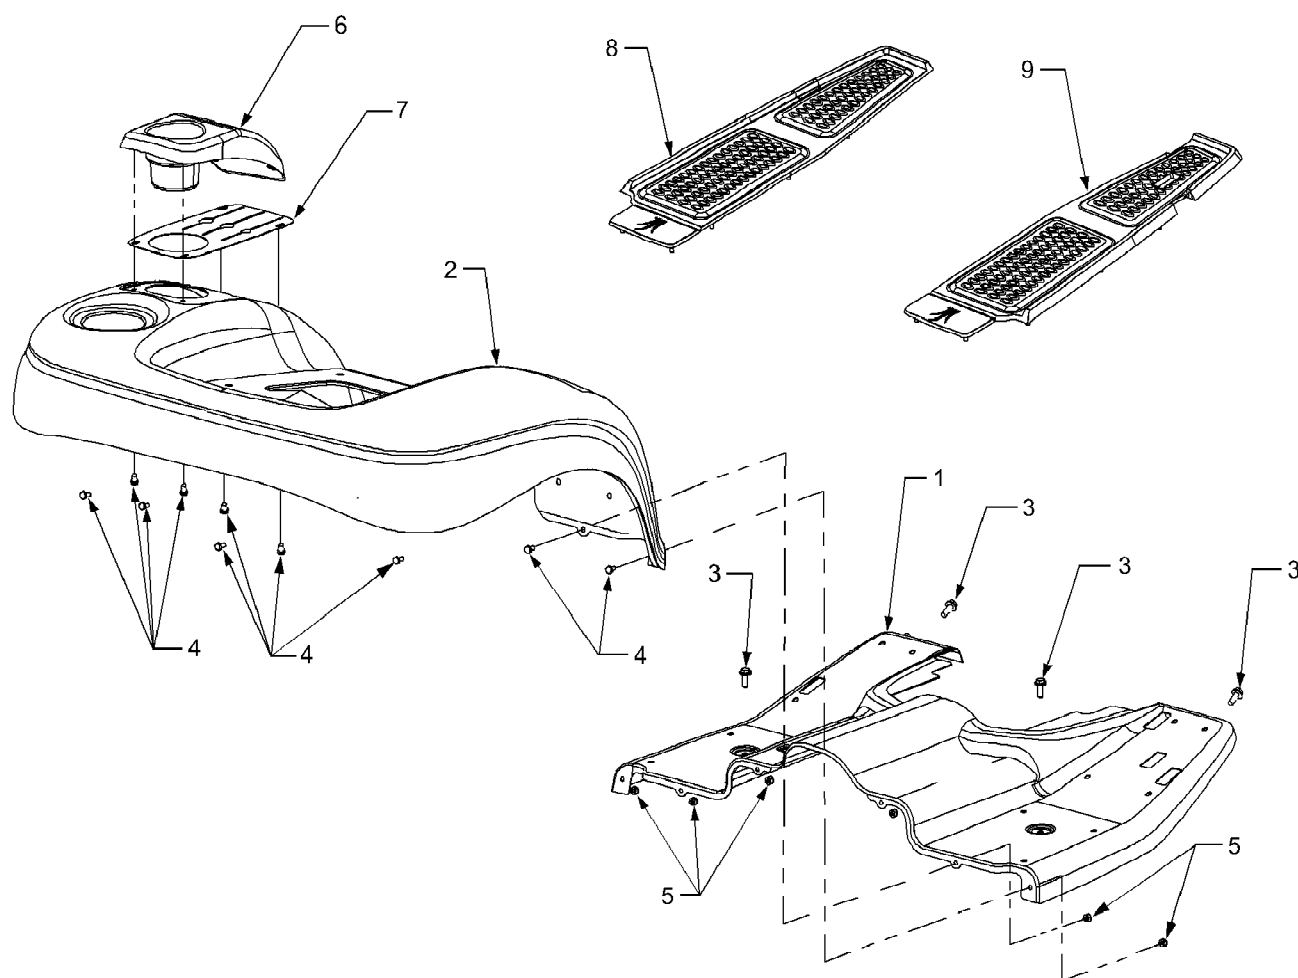

3184 Tractor S/N 1K010G & After
Fender And Running Board

Page 21 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	703-3622-0716	1		Running Board
	777D04383	2		Graphic, All Shaft Drive
	777I20860	1		Graphic, Starting Instructions
	777I20859	1		Graphic, Height Adjustment
	777S30017	1		Graphic, Warning
2	703-3512-0716	1	S	Fender
	777D04792	1	S	Graphic, 3000 Series
3	710-0602	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
4	710-3013	10	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
5	712-0324	6	/P	Nut, Hex Lock, 1/4-20
6	731-3239	1		Cover, Lift Lever
7	731-3253	1		Flap, Lift Lever
8	735-0275	1		Pad. Floor LH.
9	735-0276	1		Pad. Floor RH

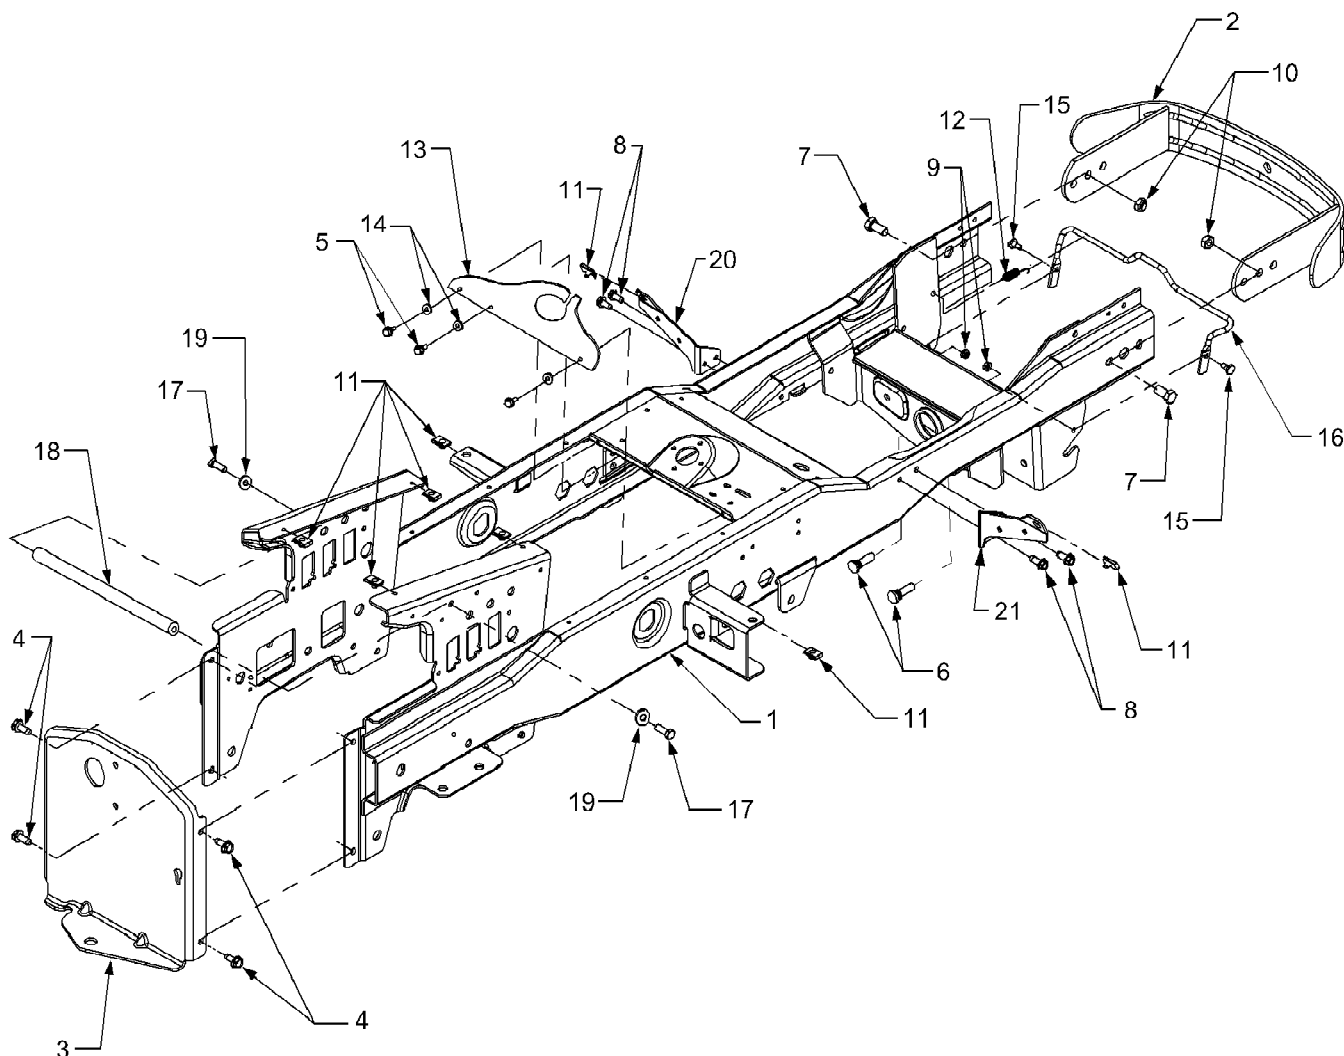



3184 Tractor S/N 1K010G & After
Frame And Hitch Plate

Page 23 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	603-0446B-0716	1	/P	Frame Assembly
2	603-0463A-0716	1	S	Bumper, Front
	777D00585	1		Graphic
3	703-3546-0716	1		Hitch Plate
	777I20773	1		Graphic, Trans. Release
	777S30265	1		Graphic, Trans. Oil
4	710-0623	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
5	710-0599	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
6	710-0617	2		Screw, Round Hd., 3/8-24
7	710-3131	2	/P	Screw, Hex Cap 1/2-13 x 1.0 GR5
8	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
9	712-3027	2	S	Nut, Hex Flange Lock, 1/4-20
10	712-3083	2	/P	Nut, Hex Lock, 1/2-13
11	726-0211	8	S	Speed Nut, U-Type, 5/16-18
12	732-3002	1	S	Spring, Extension
13	735-0653	1		Flap, Intk.
14	736-0342	3		Washer, Flat, .283 x .75 x .030
15	738-0704	2	S	Shoulder Screw, .312 x .18
16	747-3336	1		Rod, Front Latch
17	710-3038	2	/P	Screw, Hex Cap, 5/16-18 x .875
18	711-1333	1		Shaft, Frame Brace
19	736-3008	2	S	Washer, Flat, .344 x .75 x .12
20	703-3417-0716	1		Bracket, Running Board LH
21	703-3418-0716	1		Bracket, Running Board RH

3184 Tractor S/N 1K010G & After
Front Axle


Page 24 of 60

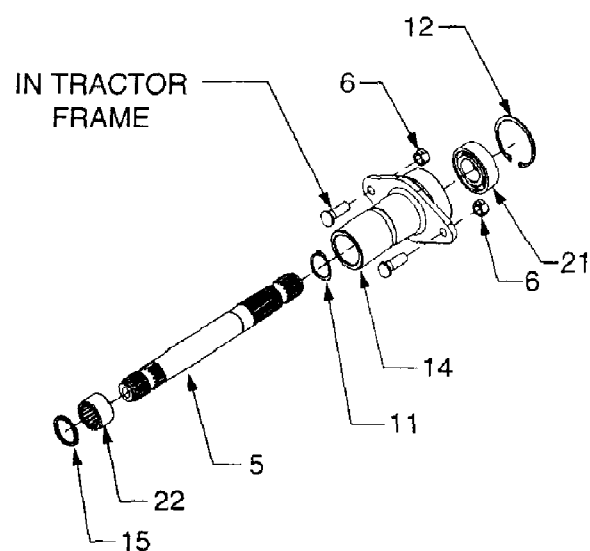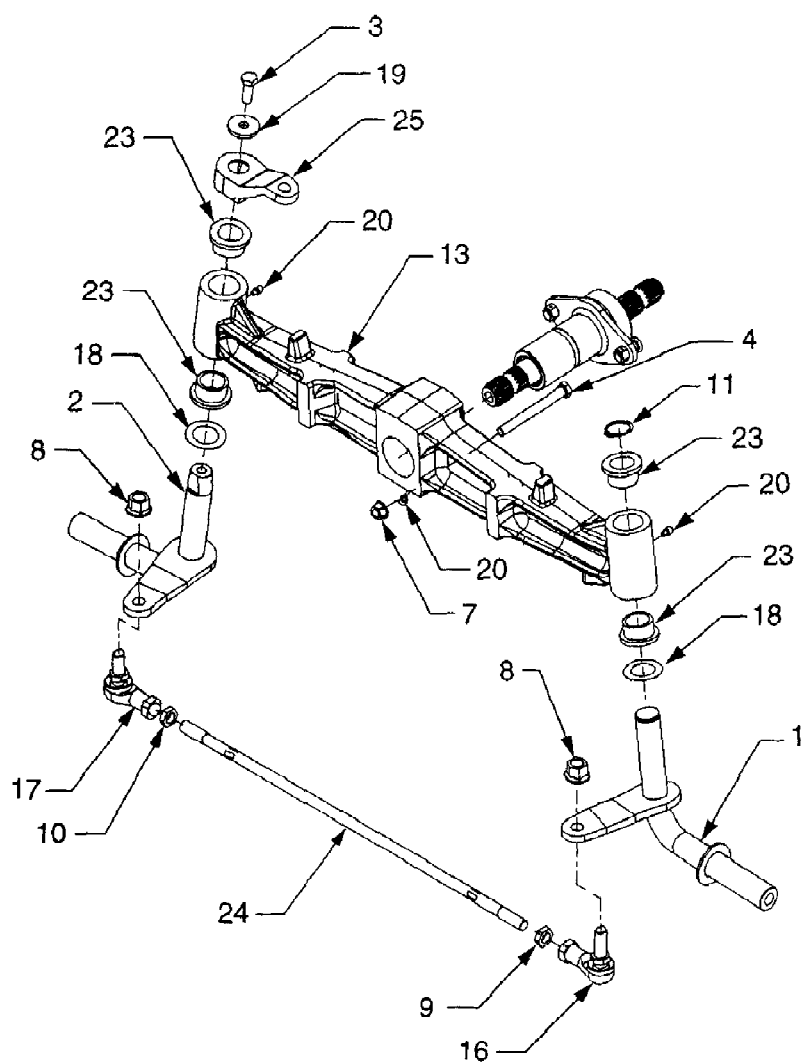

3184 Tractor S/N 1K010G & After
Front Axle

Page 25 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	603-0426-0637	1	S	Axle, RH Steering
2	603-0427-0637	1	S	Axle, LH Steering
3	710-1039	1	/P	Screw, Hex Cap 3/8-24 x 1.0 GR8
4	710-3085	1	/P	Screw, Hex Cap 3/8-16 x 3.5 GR5
5	711-1141	1		Shaft, Splined
6	712-0355	2	S	Nut, Hex Center Lock, 3/8-24
7	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
8	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
9	712-3104	1		Nut, Hex - RH, M12 x 1.75
10	712-3105	1		Nut, Hex - LH, M12 x 1.75
11	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
12	716-0188	1	/P	Retaining Ring, Internal, 2.0
13	719-3119A	1	/P	Pivot Axle
14	719-3120	1		Axle Carrier
15	721-0462	1	/P	Seal, Grease, 1.31 x 1.0
16	723-0462	1		Ball Joint, 12MM x 1.75 RH
17	723-0463	1		Ball Joint, 12MM x 1.75 LH
18	736-0163	2	S	Washer, Flat, 1.03 x 1.62 x .030
19	736-0247	1	/P	Washer, Flat, .406 x 1.25
20	737-3000	3	S	Fitting, Lube, 3/16 Drive
21	741-0131	1	S	Bearing, Ball
22	741-0363	1	S	Bearing, Needle
23	741-0558	4	S	Bearing, Flange
24	747-3348A	1	/P	Tie Rod, M12 x 1.75 RH & LH
25	748-3074	1		Steering Arm

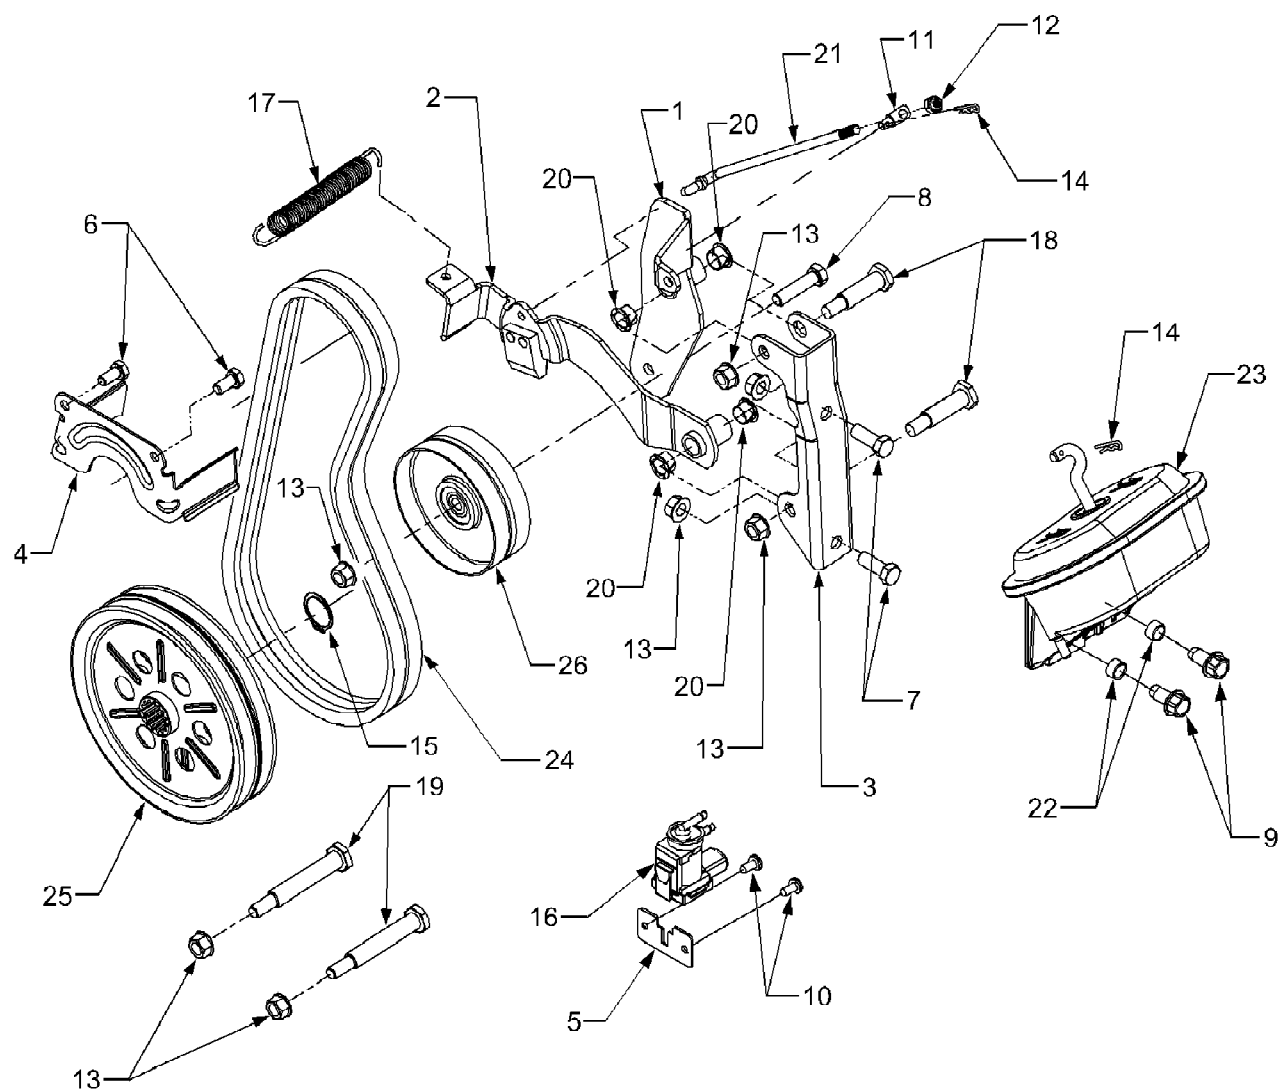

3184 Tractor S/N 1K010G & After
Front PTO

Page 27 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	603-0442-0637	1	/P	Bracket, Idler
2	759-3867	1	/P	Bracket Assembly, Brake
3	703-3009-0637	1	/P	Bracket, PTO Mounting
4	703-3165-0637	1	/P	Belt Guide
5	703-3812-0716	1		Bracket, Solenoid Mounting
6	710-0237	2	/P	Screw, Hex Cap 5/16-24 x .625 GR5
7	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
8	710-0520	1	/P	Screw, Hex Cap 3/8-16 x 1.5 GR5
9	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
10	710-0748	2	/P	Screw, Phil. Hd. Tapp #12-14 x .5
11	711-1196	1		Ferrule, Brake Adjustment
12	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20
13	712-0431	7	S	Nut, Flange Lock, 3/8-16
14	714-0104	2	S	Pin, Internal Cotter
15	716-0102	1	S	Snap Ring, 1.0 Dia Shaft
16	759-04258	1	/P	Solenoid, Kit Vacuum Actuator Replaces 725-3278
17	732-0470A	1	S	Spring, Extension, .530 x 4.74
18	738-0213	2	/P	Shoulder Screw, .498 x 1.45
19	738-3056	2	S	Shoulder Screw
20	741-0491	4		Bearing, Nylon Flange
21	747-3322	1		Rod, PTO Brake
22	750-0526	2		Spacer, .380 x .5 x .265
23	751-3173	1	S	Vacuum Actuator
24	754-3084	1	S	V-Belt, A-Section x 37.63 (Set of two belts)
25	756-3092	1		Pulley, PTO Drive. 6.75-Double
26	756-3094	1		Pulley, Flat Idler, 4.0

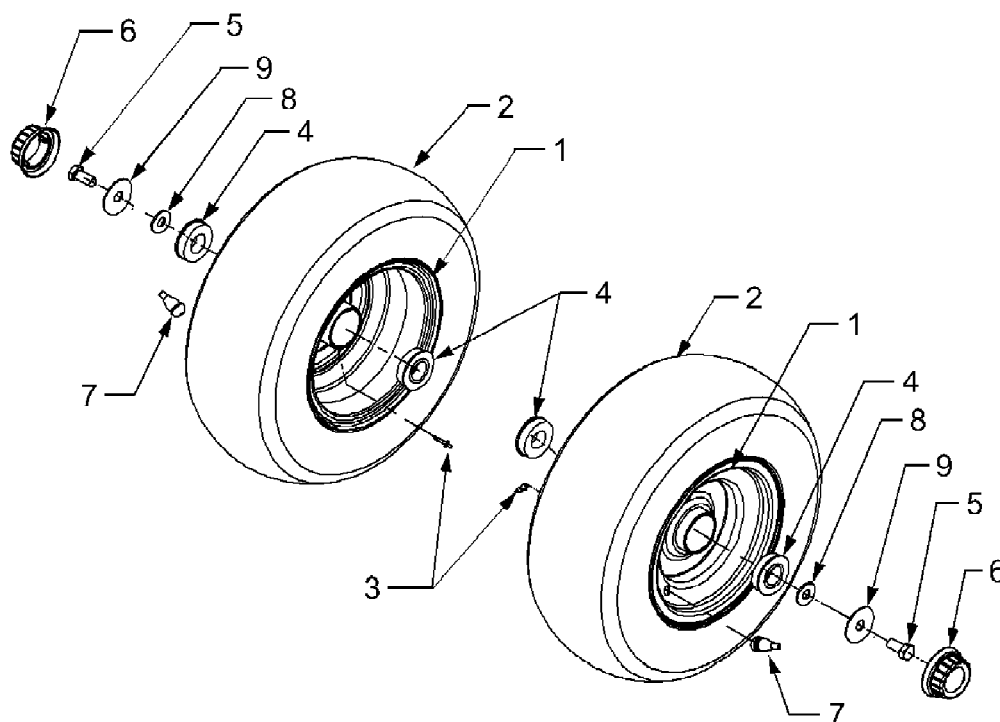

3184 Tractor S/N 1K010G & After
Front Wheels

Page 29 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	734-3053-0499	2	S	Rim Assembly, Wheel
2	734-3187	2	S	Tire, Turf, 16 x 6.5 x 8.0
3	737-0224	2		Lube Fitting
4	741-3002	4	S	Bearing, Ball
5	710-3126	2	/P	Screw, Hex Cap, 1/2-13 x 1.0 GR5
6	731-3020	2	S	Hubcap
7	734-0255	2	S	Valve, Tubeless Air
8	736-0179	2	S	Washer, Flat, .531 x 1.25 x .1
9	736-3095	2	S	Washer, Flat, .535 x 1.92 x .060

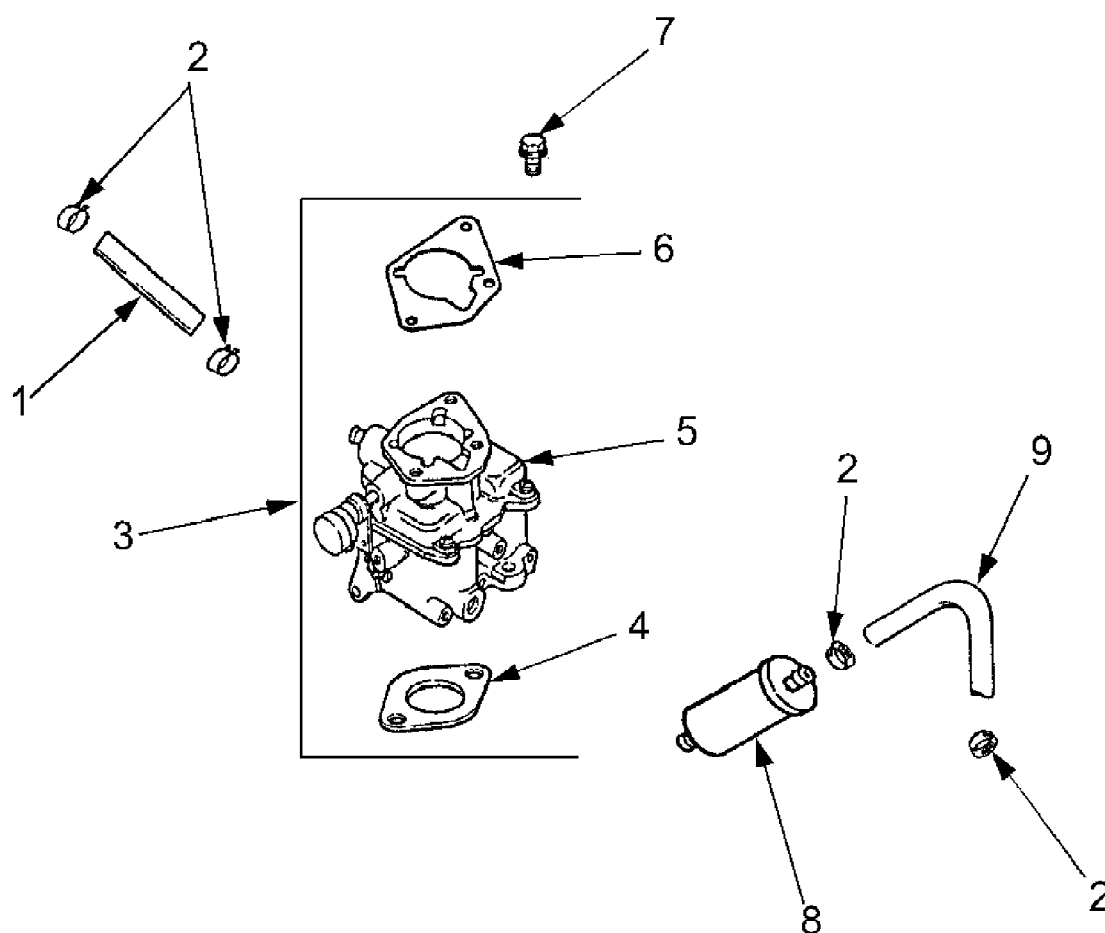

3184 Tractor S/N 1K010G & After
Fuel System

Page 31 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	KH-52-353-20	2	S	Line, Fuel 10"
2	KH-25-237-14-S	4	/P	Clamp, Hose
3	KH-24-853-32-S	1		Kit, Carburetor w/Gasket (Includes 4-6)
4	KH-24-041-17	1	/P	Gasket, Carburetor
5		1		Carburetor Assembly Not available separately
6	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
7	KH-M-0651030	2	/P	Screw, Hex Flange
8	KH-24-050-02	1	S	Filter, Fuel
9	KH-24-353-12	1		Line, Fuel 11"
	KH-24-757-01	1	/P	Kit, Solenoid Not illustrated; Includes Solenoid Screw [qty. 2], O-Ring, O-Ring, O-Ring , Solenoid Assembly & Solenoid Seat
	KH-24-757-02	1	S	Kit, Float Repair Not illustrated; Includes Carburetor Body Gasket, Float Screw, Float Assembly and Float Shaft
	KH-24-757-03	1	S	Kit, Carburetor Repair Not illustrated; Includes Carburetor Gasket; Carburetor Body Screw; Idle Needle Spring; U-Ring; Slow Jet O-Ring; Main Jet Screw O-Ring; Solenoid O-Rings; Inlet Needle Valve Clip; Idle Needle and Inlet Needle Valve
	KH-24-757-07	1		Kit, Choke Repair Not illustrated; Includes Choke Plate Screws; Choke Spring; Choke Lever; Choke Shaft; Choke Plate; Choke Bushings; and Choke Lever Cap

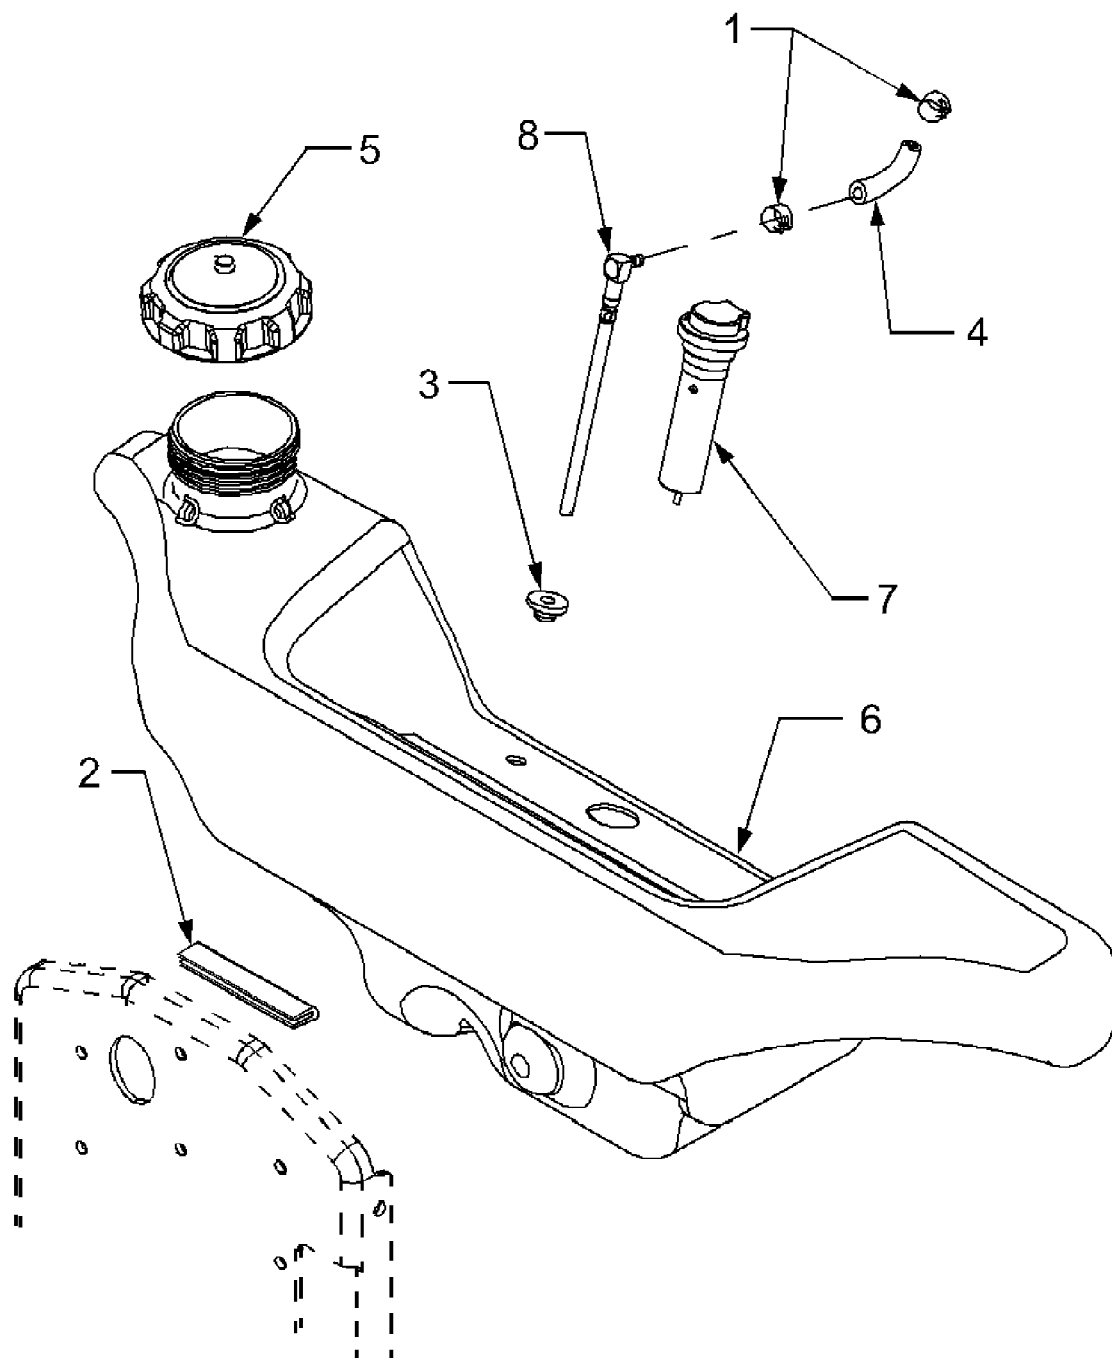

3184 Tractor S/N 1K010G & After
Fuel Tank

Page 33 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	726-0205	2	/P	Clamp, Hose
2	731-3268	1		Trim, Tank Protector
3	735-0149	1	S	Bushing, Rubber
4	751-0535-60	60in	S	Fuel Line
5	751-3124B	1	S	Cap, Fuel
6	751-3144A	1	S	Tank, Fuel, 45 Gallon
7	751-3161	1		Sensor, Low Fuel
	751-3146	1	S	Grommet
8	751-3162A	1	/P	Fitting, Fuel Pickup

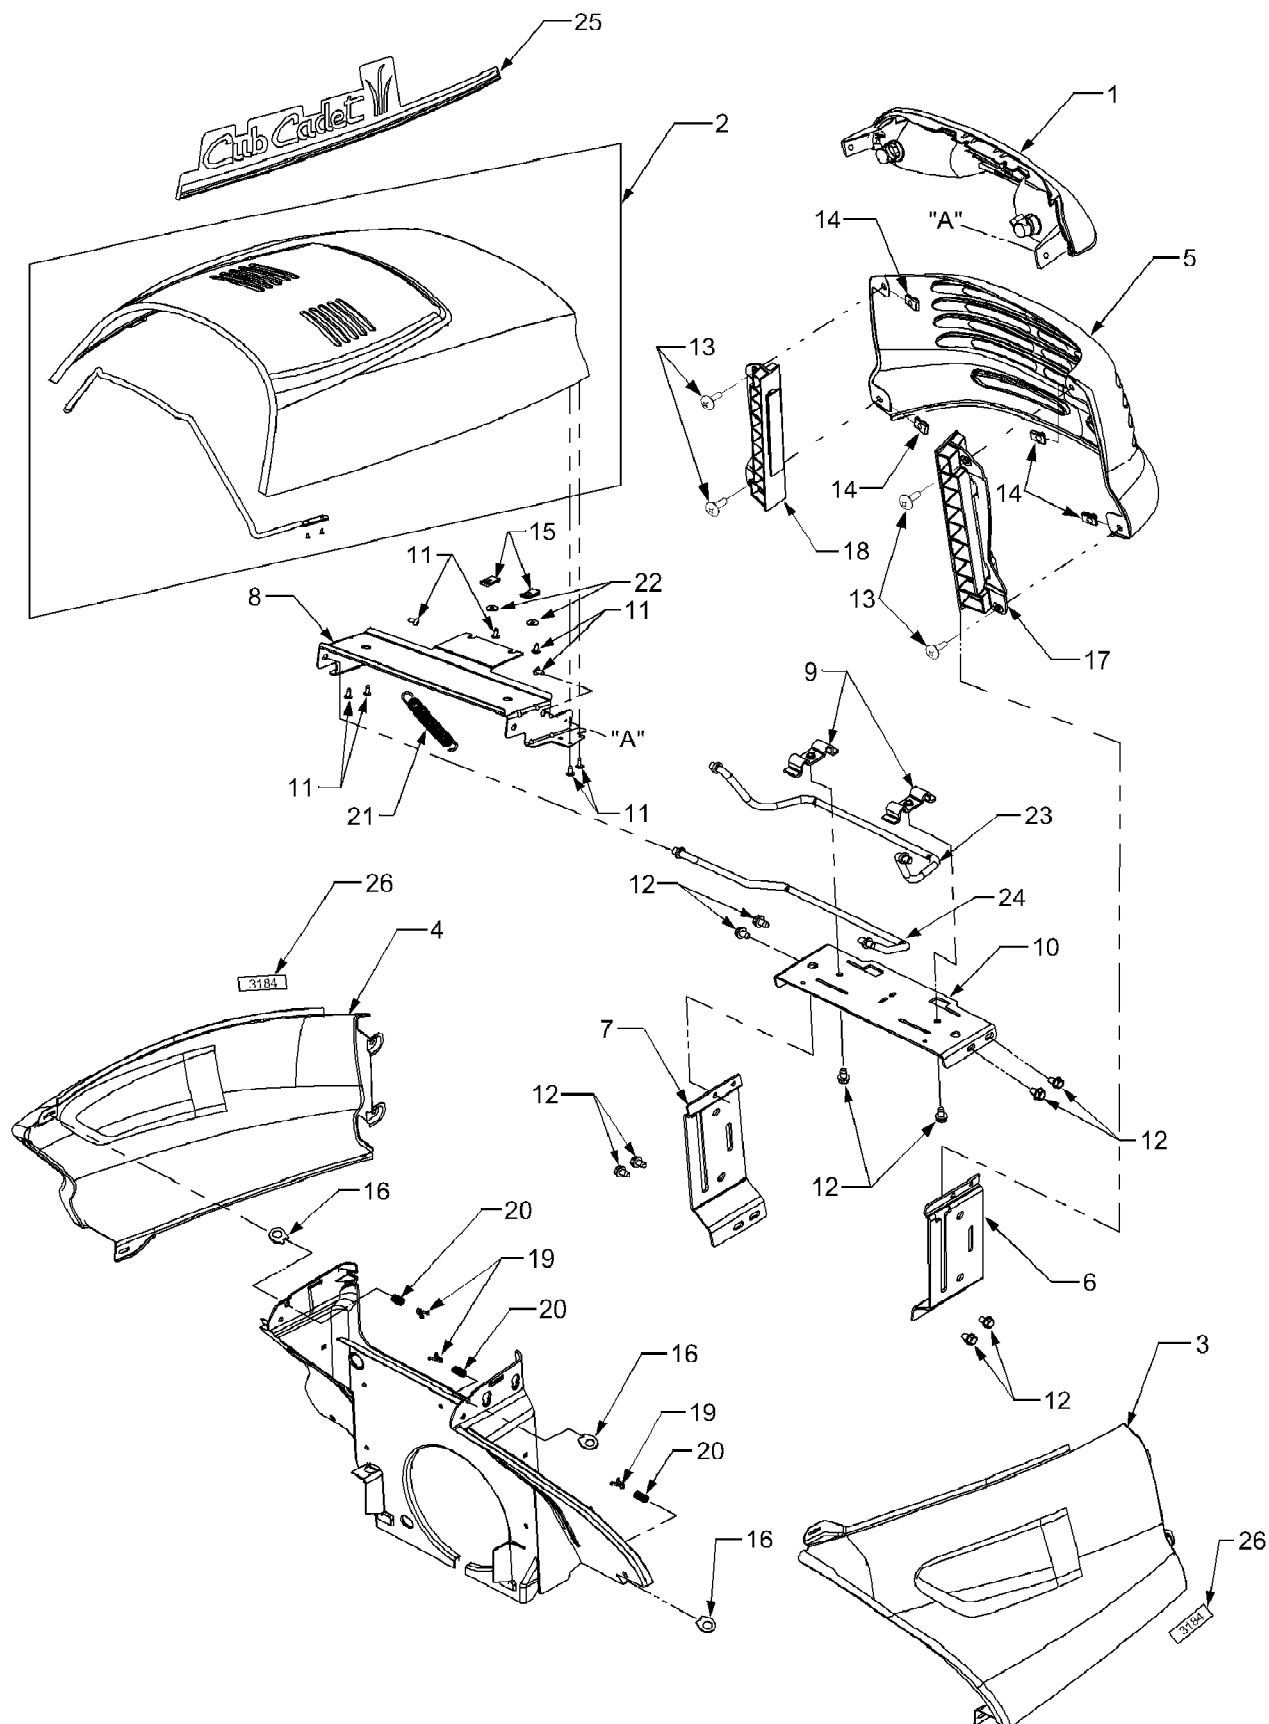

3184 Tractor S/N 1K010G & After
Hood, Grille And Side Panels

Page 35 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	625-0053	1	S	Headlight Assembly (Lens glued to reflector)
	725-0963	2	S	Bulb, Headlight
	725-1649	2	S	Socket Assembly, Headlight
2	759-3865-0499	1		Hood w/Support Rod Assembly
3	703-2946-0499	1		Side Panel, RH
4	703-2947-0499	1		Side Panel, LH
5	703-2950-0499	1		Grille, Series 3000
	777I20314	1	/P	Graphic, Warning
6	703-2984-0716	1		Support, Grille - RH
7	703-2985-0716	1		Support, Grille - LH
8	703-3070A-0499	1	S	Bracket, Upper Hood
	777S30538	1		Graphic, Hot Surface
9	703-3071	2		Bracket, Rod Retainer
10	703-3101A-0716	1	S	Support, Hood
11	710-0351	8	/P	Screw, Truss Hd, Tapp, #10-16 x .5
12	710-0607	10	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
13	710-0924	4	/P	Screw, Phil. Pan Hd. 1/4-20 x .75
14	726-3054	4		Nut, U Type Speed, 1/4-20
15	726-0139	2	/P	Nut, U-type Speed, #10
16	726-3056	4		Latch, 1/4 Turn
17	731-3227	1		Mount, Side Panel/Grille RH
18	731-3228	1		Mount, Side Panel/Grille LH
19	732-0936	4		Clip, Spring
20	732-0937	4		Spring, Compression
21	732-1153	1		Spring, Extension
22	736-0400	2	S	Washer, Flat, .194 x .62 x .063
23	747-3337A	1	/P	Rod, Upper Hood
24	747-3338	1		Rod, Lower Hood
25	777D03265	1	/P	Graphic, Hood - RH
	777D03266	1	/P	Graphic, Hood - LH
26	777D03274	2		Graphic, 3184

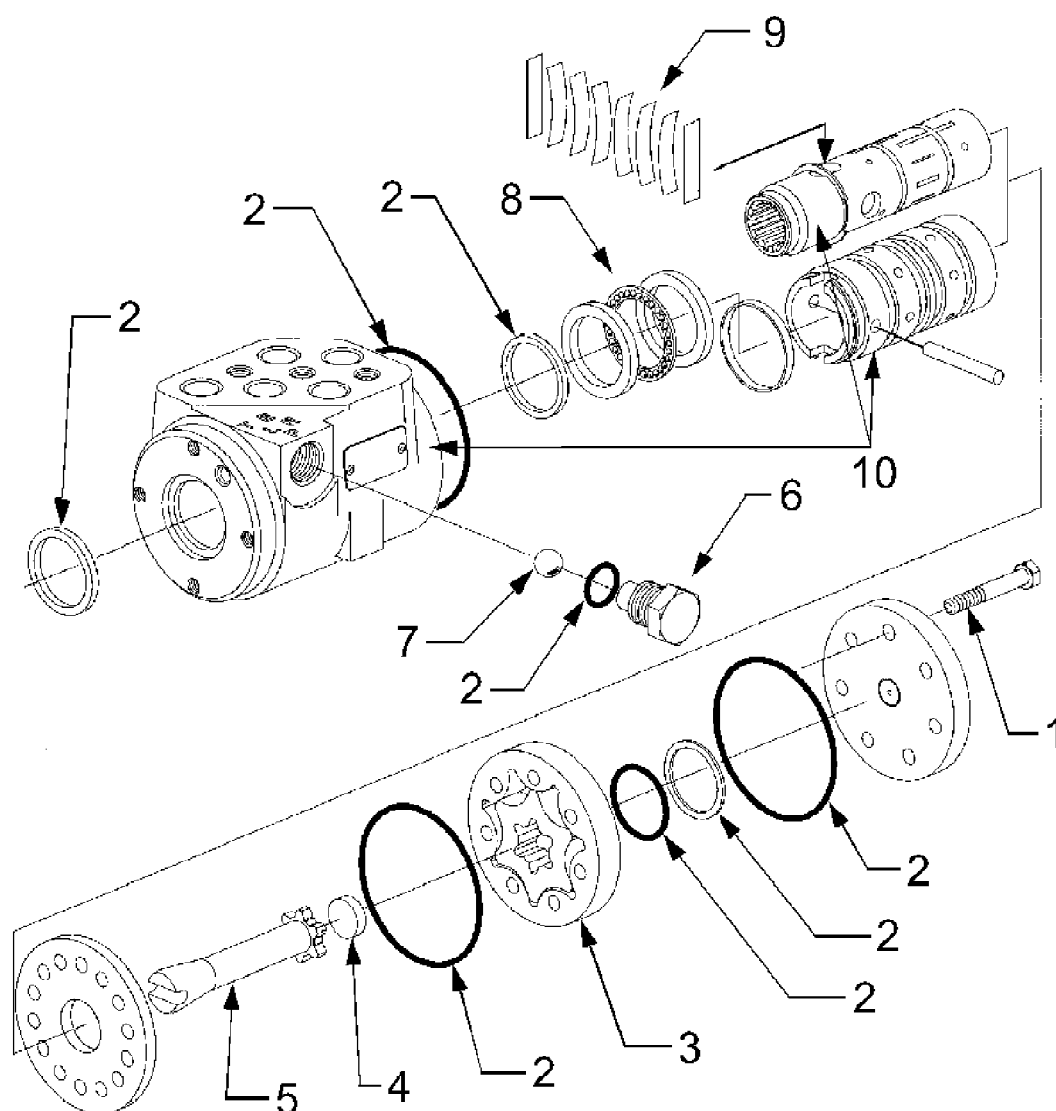

3184 Tractor S/N 1K010G & After
Hydraulic Steering Pump

Page 37 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	ET-14543-002	1		Screw, Hex Cap, 1.57" Lg.
2	ET-64455-000	1		Seal Kit (Includes All Parts Marked Ref. 2
3	ET-22991-003	1	S	Gerotor Assembly
4	ET-22919-005	1		Spacer, .240 Lg.
5	ET-22918-000	1		Drive
6	ET-9199-000	1		Plug, Manual Check
7	ET-285020-140	1		Ball, Manual Check
8	ET-64457-000	1		Bearing Kit
9	ET-64456-000	1		Spring Kit, Centering
10	~N/A	1		Spool, Sleeve and Housing Not Available as Replacement Parts. Order Complete Steering Pump

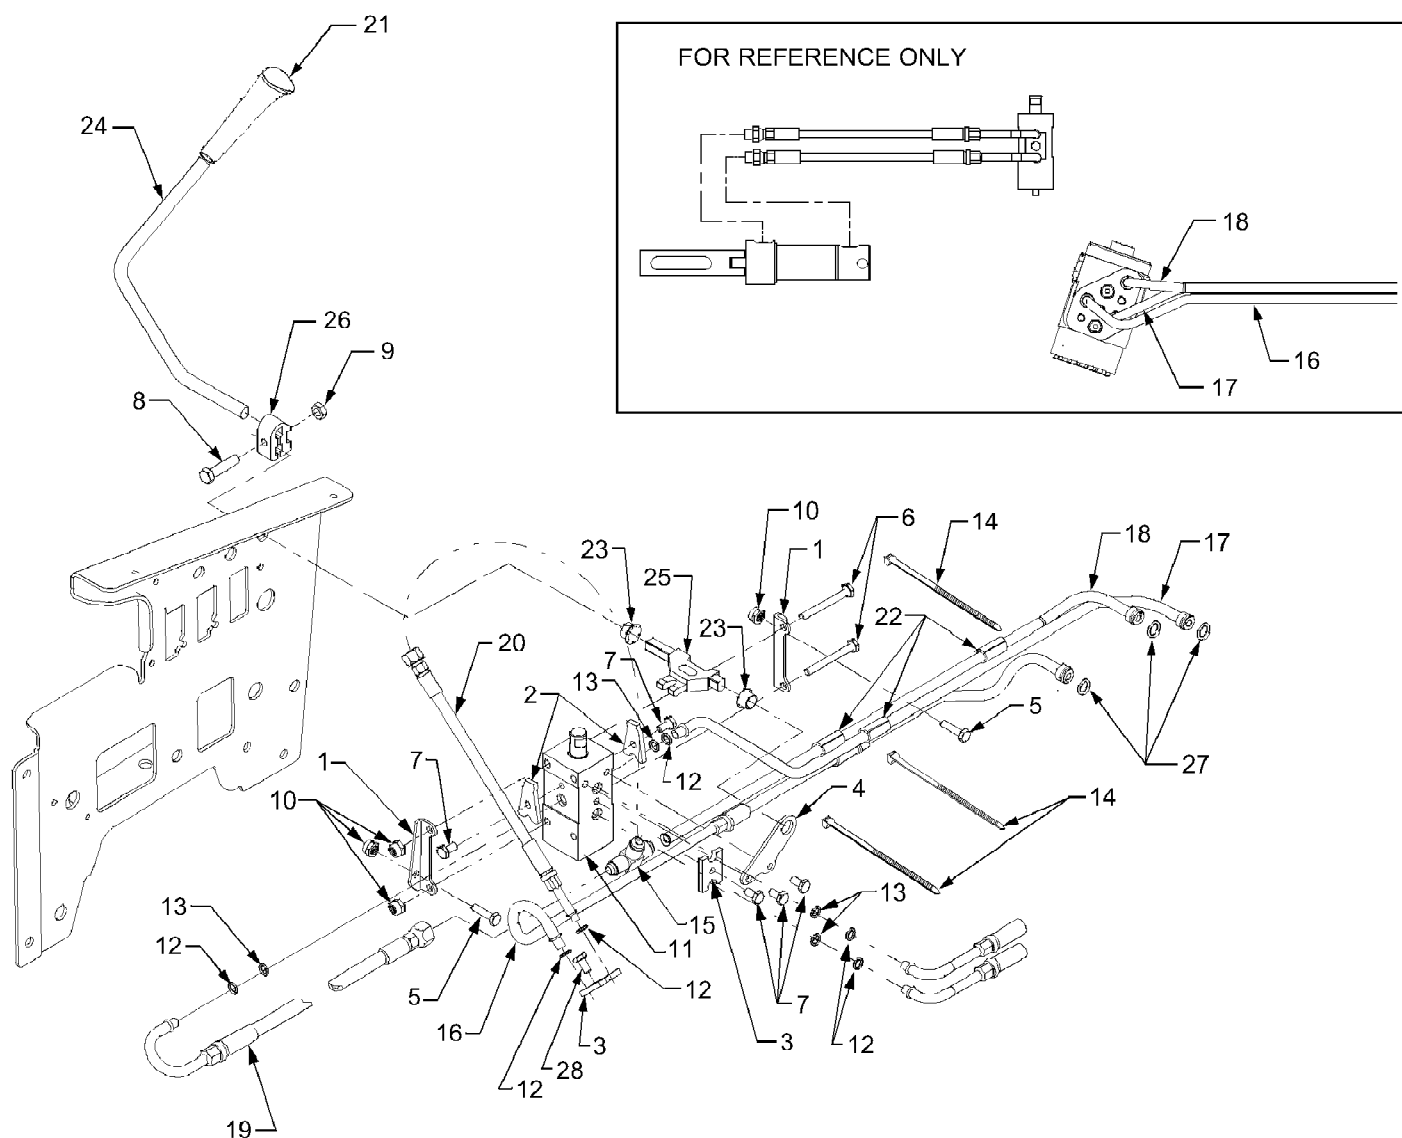

3184 Tractor S/N 1K010G & After
Hydraulic Valve And Lines

Page 39 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	703-1801	2		Bracket, Valve Mounting
2	703-1802	2		Clamp, Side Valve
3	703-1803	2	S	Clamp, Double Valve
4	703-3154	1	S	Bracket, Lift Valve
5	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
6	710-0641	2	/P	Screw, Hex Cap 1/4-20 x 2.25 GR5
7	710-3013	5	/P	Screw, Hex Cap 1/4-20 x .50 GR5
8	710-3083	1	/P	Screw, Hex Cap 5/16-18 x 1.375 GR5
9	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
10	712-3027	4	S	Nut, Hex Flange Lock, 1/4-20
11	717-3452	1		Valve, Hydraulic
12	721-0492	4		O-Ring, Backup
13	721-3021	6	S	O-Ring
14	726-0197	3		Cable Tie
15	727-3056	1		T-Fitting, 9/16-18 Thrd.
16	727-3130	1		Tube, Hydraulic (Pump to Strng)
17	727-3131	1		Tube, Hydraulic (Aux. from Strng)
18	727-3162	1		Tube, Hydraulic (Strng Return)
19	727-3160	1		Tube, Hydraulic (Aux Return)
20	727-3161	1	/P	Tube, Hydraulic (Return to Pump)
21	731-3259	1		Knob, Lift
22	735-3007	3	S	Rubber Spacer
23	741-0491	2		Bearing, Nylon Flange
24	747-3349A	1	/P	Handle, Center Lift Valve
25	748-3081A	1	/P	Link, Lift
26	748-3082	1		Clamp, Handle
27	721-0493	3		O-Ring, .426 x .566 x .070
28	710-0751	1	/P	Screw, Hex Cap 1/4-20 x .62 GR5

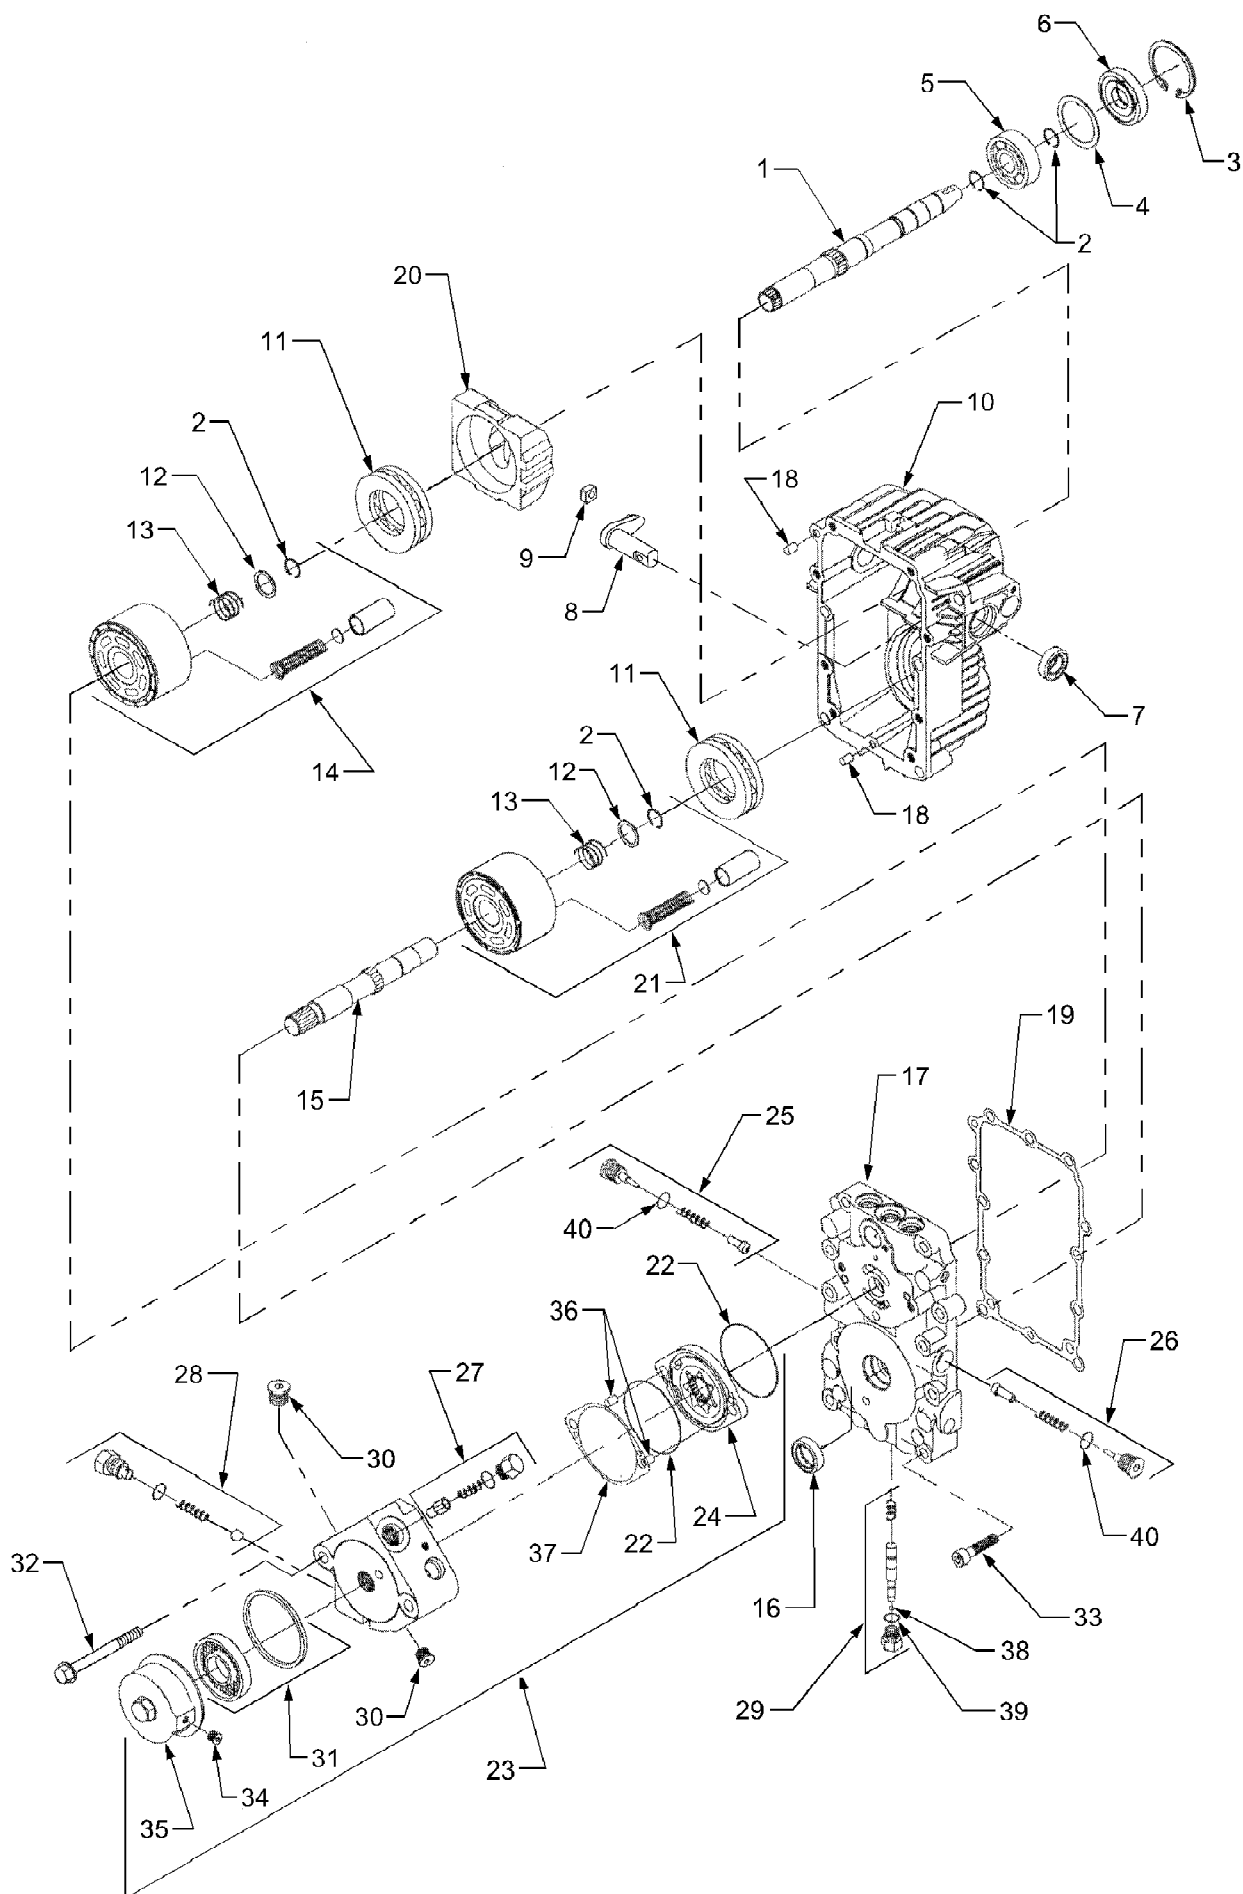


3184 Tractor S/N 1K010G & After
Hydrostatic Transmission

Page 41 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	HG-51206	1	/P	Shaft, Pump
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-2000036	1	S	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510097	1		Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	~N/A	1		Not Used In This Application
17	HG-2510098	1	/P	Kit, Center Section
18	HG-50641	2		Pin
19	HG-2000061	1	/P	Gasket, Center Section
20	HG-50203	1		Swashplate, Variable
21	HG-2510013	1	/P	Kit, Motor Cylinder Block
22	HG-9004100-1430	2	/P	O-Ring
23	HG-2510083	1	S	Kit, Auxiliary Charge Pump
24	HG-50761	1	/P	Gerotor & Housing Assembly
25	HG-2510050	1	/P	Kit, Check Valve
26	HG-2510034	1	/P	Kit, Check Valve w/ .044 Orifice
27	HG-2510081	1		Kit, Check Relief
28	HG-2510082	1		Kit, Auxiliary Relief Valve
29	HG-2510012	1	/P	Kit, Bypass Valve
30	HG-9005110-4400	2		Plug, 7/16-20
31	HG-2510090	1	/P	Kit, Auxiliary Filter
32	HG-50969	2		Screw, Flange Head Cap, M8 x 60
33	HG-9007314-0808	8	/P	Screw, Socket Head Cap
34	HG-9005110-3100	1		Plug, 5/16-24
35	HG-50994	1	S	Cover, Filter
36	HG-50408	2	/P	Pin
37	HG-2000044	1	/P	Shim, Charge Pump
38	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
39	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
40	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
	HG-2510010	1	/P	Kit, Overhaul Seal (Includes Ref. Nos. 2, 3, 4, 6, 7, 19, 22, 38, 39 & 40)

3184 Tractor S/N 1K010G & After
Ignition/Electrical

Page 42 of 60

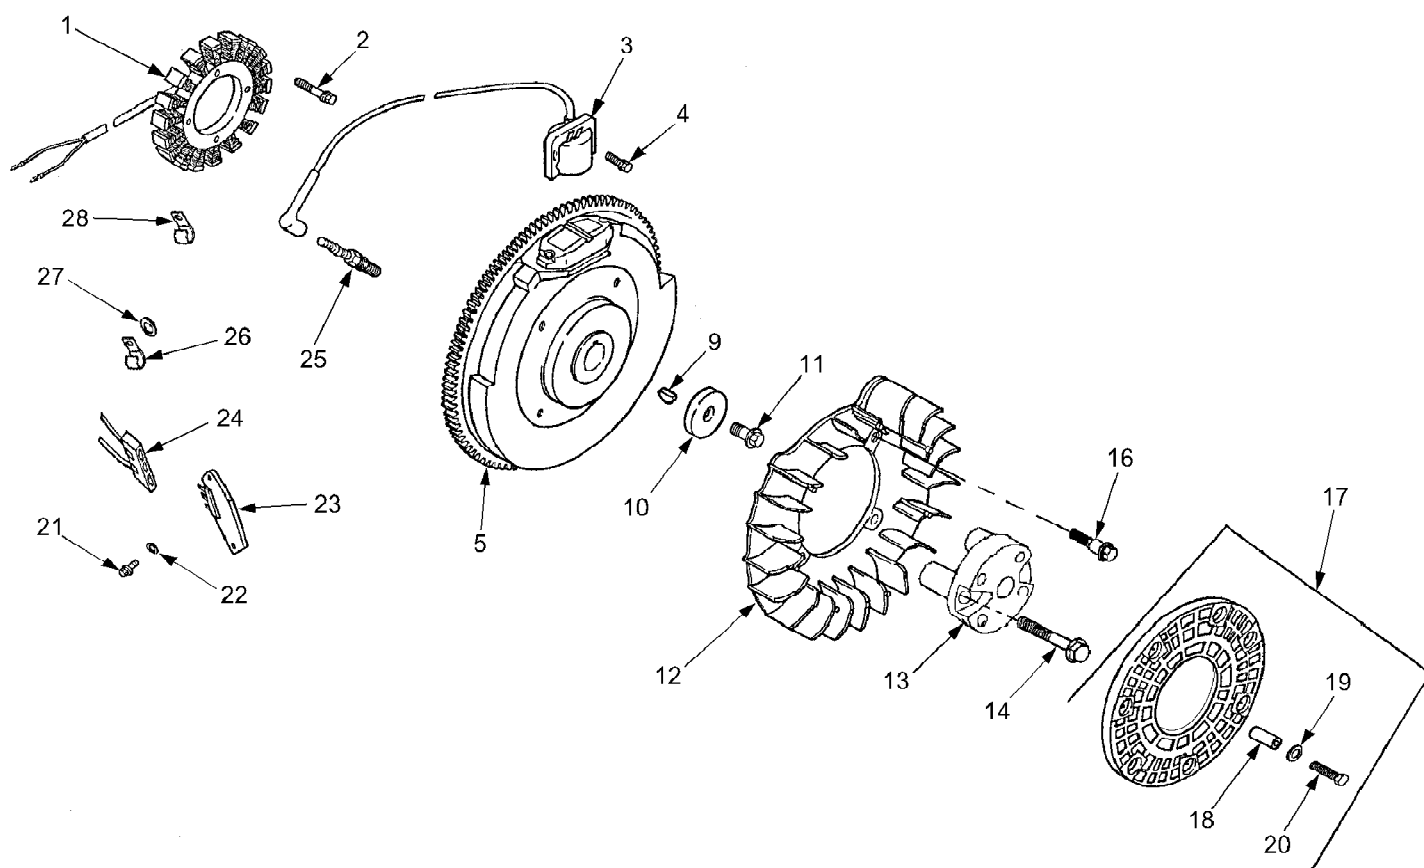


3184 Tractor S/N 1K010G & After
Ignition/Electrical

Page 43 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-09	1	S	Kit, 15 Amp Stator (Incl. P/N KH-24-126-71 Stator Bracket, Not Shown)
2	KH-M-0548025	2		Screw, Hex Cap M5 x 0.8 x 25
3	KH-24-584-01	2	S	Module, Ignition
4	KH-M-0545020	4	/P	Screw, Hex Socket Hd. M5 x 0.8 x
5	KH-24-025-04	1	S	Flywheel
9	KH-X-42-15	1	/P	Key
10	KH-12-468-03	1	/P	Washer, Plain 3/8"
11	KH-12-086-14	1		Screw, Hex Flange M10 x 1.5 x 46
12	KH-24-157-03	1	S	Fan
13	719-3096	1	/P	Adapter, Drive Shaft
14	KH-24-086-16	2	S	Screw, Hex Flange M10 x 1.5 x 90
16	KH-25-086-47	4	/P	Bolt, Shoulder, M6 x 1.0 x 16
17	KH-54-755-15	1	/P	Kit, Grass Screen (Incl. 18-20 and P/N KH-24-113-18)
18	KH-24-112-04	4		Spacer
19	KH-X-25-92	4		Washer, Plain 3/16"
20	KH-M-0403025	4		Screw, Hex Cap M4 x 0.7 x 25
21	KH-24-086-18	2		Screw, Phillips Hd. 11-16 x 7/8"
22	KH-X-25-92	4		Washer, Plain 3/16"
23	KH-25-403-03	1	S	Rectifier-regulator 15 Amp
24	KH-236602	1	S	Connector (3 Contact)
25	759-3336	2	/P	Spark Plug
26	KH-235173	2		Clip, Cable
27	KH-X-25-63	1	/P	Washer, Plain 1/4"
28	KH-48-154-02	1		Clip, Cable
	KH-24-176-08	1	S	Harness, Wire
	KH-24-518-12-S	1	/P	Lead
	KH-X-22-11	1		Washer, Lock, 1/4
	KH-25-086-91-S	2	/P	Screw, Tapping, #10-16 x .5
	KH-47-154-01-S	1	/P	Clip, Cable
	KH-24-126-71	1		Stator Bracket Not Shown
	KH-24-113-18	1		Label-Grass Screen

3184 Tractor S/N 1K010G & After
Lower Power Steering

Page 44 of 60

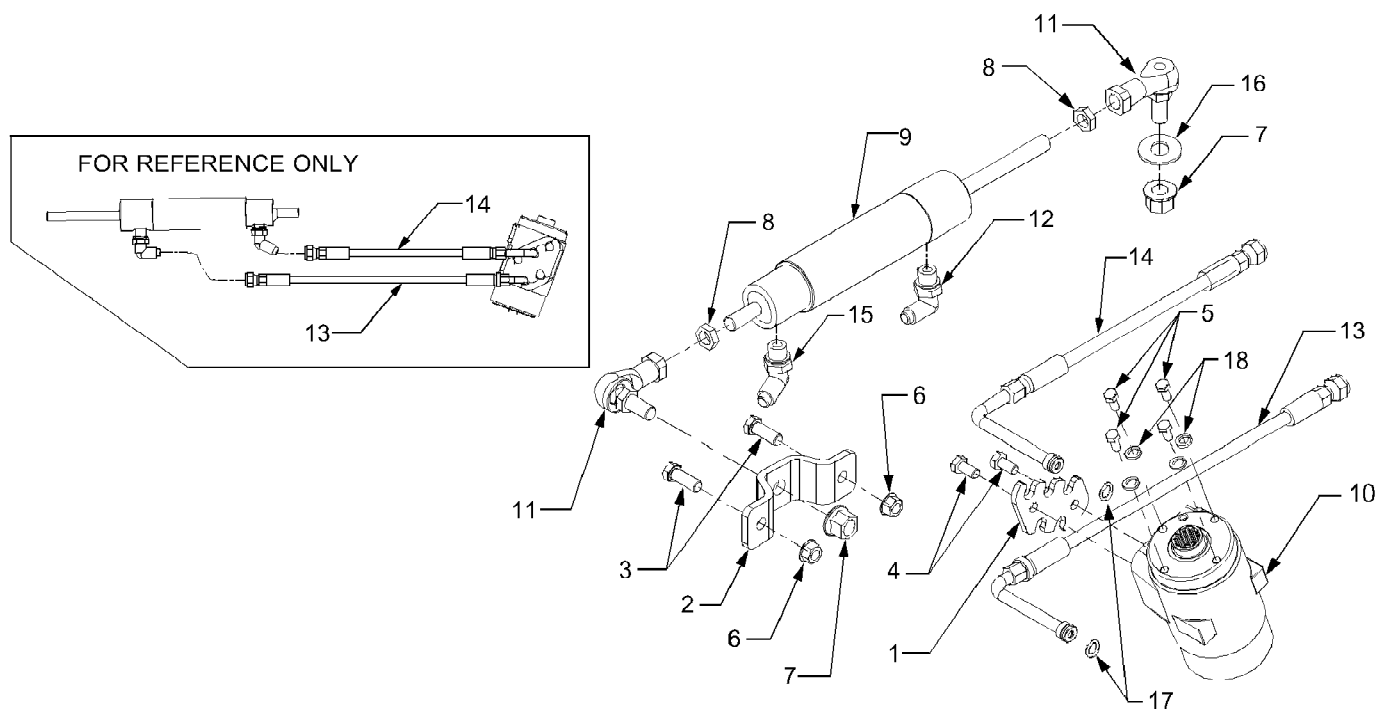


3184 Tractor S/N 1K010G & After
Lower Power Steering

Page 45 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	703-3015-0716	1		Plate, Steering Pump Port
2	703-3189-0716	1	/P	Bracket, Cylinder Mounting
3	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
4	710-3138	2	/P	Screw, Hex Cap M8-1.25 x 16MM GR5
5	710-3140	4		Screw, Hex Cap, M6 x 14MM
6	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
7	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
8	712-3104	2		Nut, Hex, M12 x 1.75 RH
9	717-3424	1		Cylinder, Steering
10	717-3442	1	S	Pump, Hydraulic Steering
11	723-0462	2		Ball Joint, 12MM x 1.75 RH
12	727-3012	1	/P	Fitting, 90 Degree Elbow
13	727-3126	1		Hose, Front Steering
14	727-3127	1		Hose, Rear Steering
15	727-3159	1		Fitting, 45 Degree
16	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .060
17	721-0493	2		O-Ring, .426 x .566 x .070
18	736-0329	4	S	Washer, Lock, 1/4"

3184 Tractor S/N 1K010G & After
Oil Pan/Lubrication


Page 46 of 60

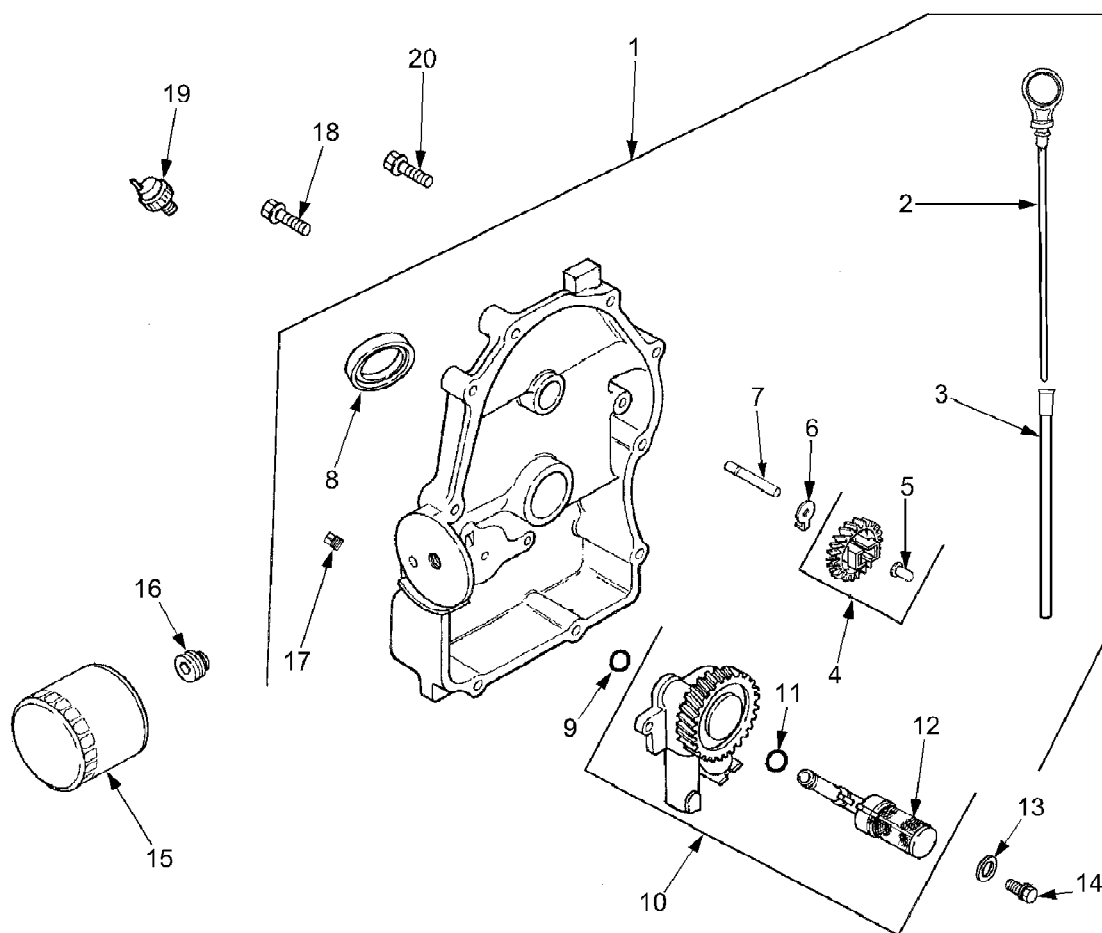

3184 Tractor S/N 1K010G & After
Oil Pan/Lubrication

Page 47 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-009-07	1		Plate, Closure Assembly (Includes 2-12, 17)
2	KH-24-038-10-S	1	/P	Dipstick
3	KH-24-755-121-S	1	/P	Tube, Dipstick (Includes 2)
4	KH-24-043-12	1	/P	Kit, Governor Gear (Includes 5)
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-52-448-02	1	S	Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08	1	S	Seal, Oil (PTO End)
9	KH-24-153-08	1		O-Ring
10	KH-24-393-10	1	S	Oil Pump Assembly (Includes 11,12)
11	KH-24-153-01	1	/P	O-Ring, Oil Pick-Up
12	KH-24-381-04	1		Pick-Up, Oil
13	KH-M-0631005	2	S	Washer, Plain
14	KH-M-0645025	2	S	Screw, Hex Flange M6 x 1 x 25
15	KH-12-050-08	1	S	Filter, Oil
16	KH-24-136-01	1		Nipple, Oil Filter
17	KH-25-139-60-S	2	/P	Plug, Pipe 1/8"
18	KH-24-086-16	9	S	Screw, Hex Flange M8 x 1.25 x 45
19	KH-25-099-24	1	S	Switch, Pressure
20	KH-24-086-17	1	S	Screw, Hex Flange M8 x 1.25 x 45

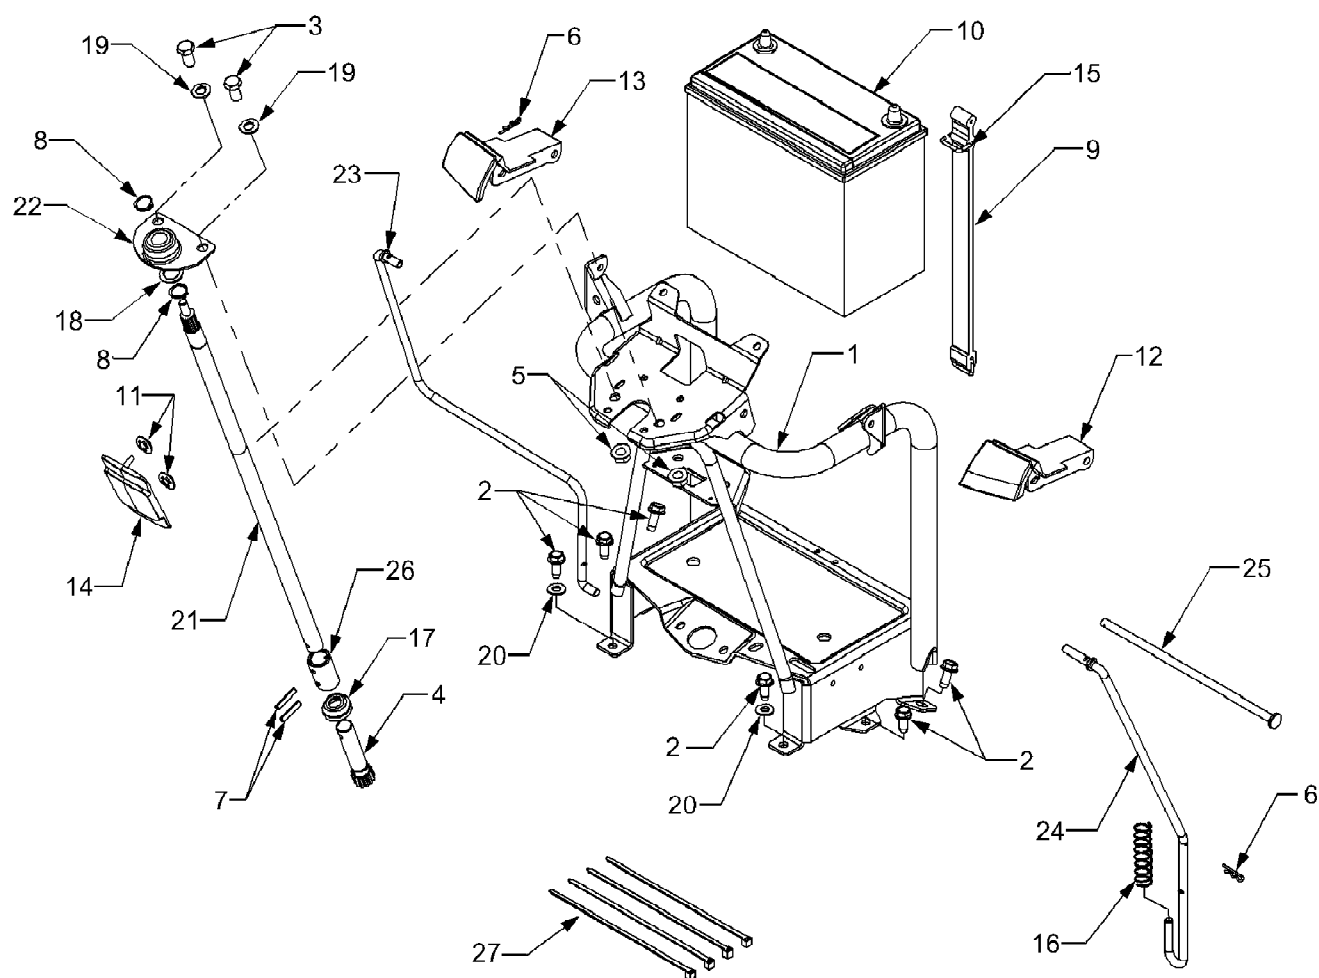

3184 Tractor S/N 1K010G & After
Pedestal And Connections

Page 49 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	603-0386A-0637	1	/P	Pedestal Assembly
2	710-1260A	6	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
3	710-0216	2	/P	Screw, Hex Cap 3/8-16 x .75 GR5
4	711-1423	1		Shaft, Lower Steering
5	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
6	714-0104	2	S	Pin, Internal Cotter
7	715-0120	2	S	Pin, Spirol, 3/16 x 1.0
8	716-0115	2	S	Ring, Retaining, .56 Dia Shaft
9	723-0467	1		Strap, Battery (Includes Ref No. 15)
10	725-3255	1	S	Battery
11	726-3047	2	S	Push Nut, .188 Dia.
12	731-3225	1		Lever, Park Brake
13	731-3226	1		Lever, Cruise
14	731-3323	1		Cover, Fixed Steering
15	732-0696	2		Hook, Wire Rectangular
16	732-0870	1	S	Spring, Compression, .676 x 2.57
17	735-0269	1		Boot, Shaft Cover.
18	736-0116	1	S	Washer, Flat, .635 x .93 x .06
19	736-0185	2	S	Washer, Flat, .375 x .738 x .063
20	736-0275	2	S	Washer, Flat, .344 x .688 x .065
21	738-3170	1		Shaft, Upper Steering
22	741-3111	1		Bearing, Steering Support
23	747-3327	1		Rod, Cruise Control
24	747-3328	1		Rod, Parking Brake
25	747-3354	1		Rod, Cruise/Brake Pivot
26	750-1229	1		Sleeve, Fixed Steering
27	725-0157	4	/P	Cable Tie, Harness

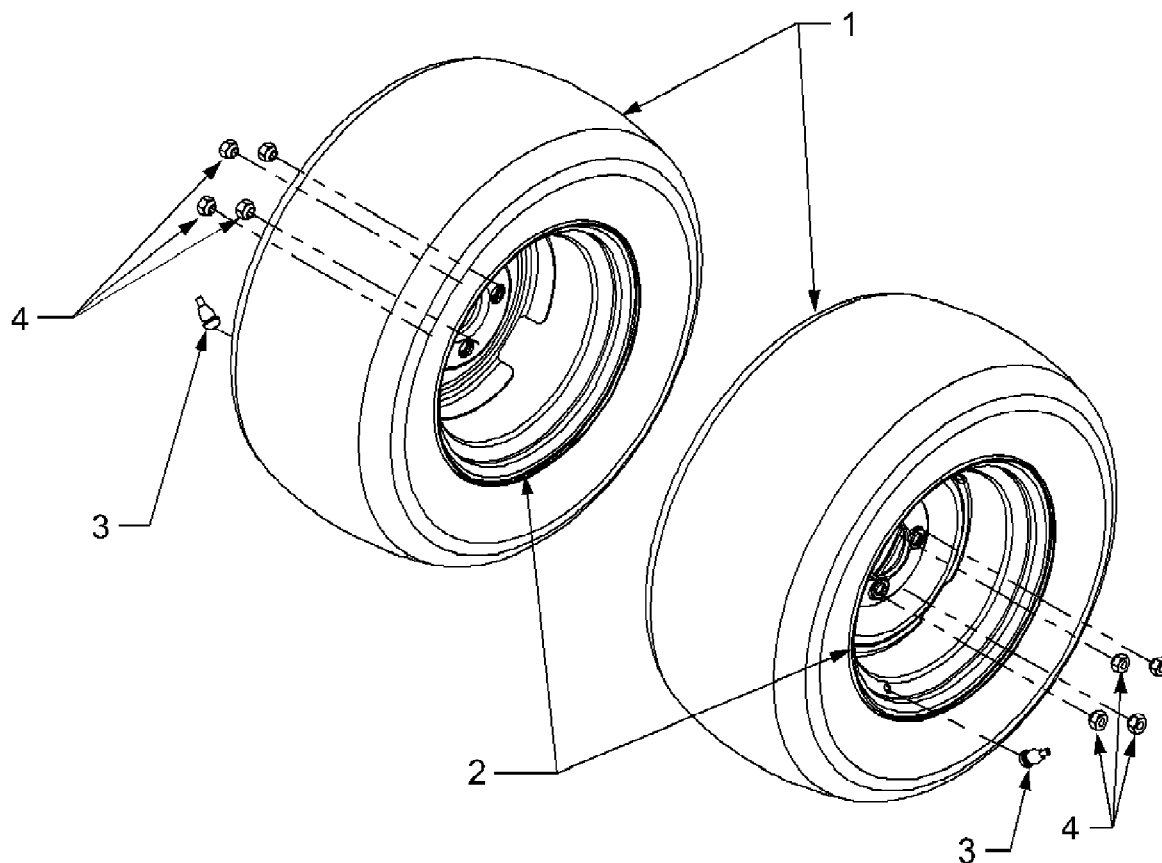

3184 Tractor S/N 1K010G & After
Rear Wheels

Page 51 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	734-3190	2	S	Tire, Turf, 23 x 9.5 - 12
2	634-3189-0499	2		Rim Assembly, Wheel
3	734-0255	2	S	Valve, Tubeless Air
4	712-3050	8	/P	Lug Nut, 7/16-14

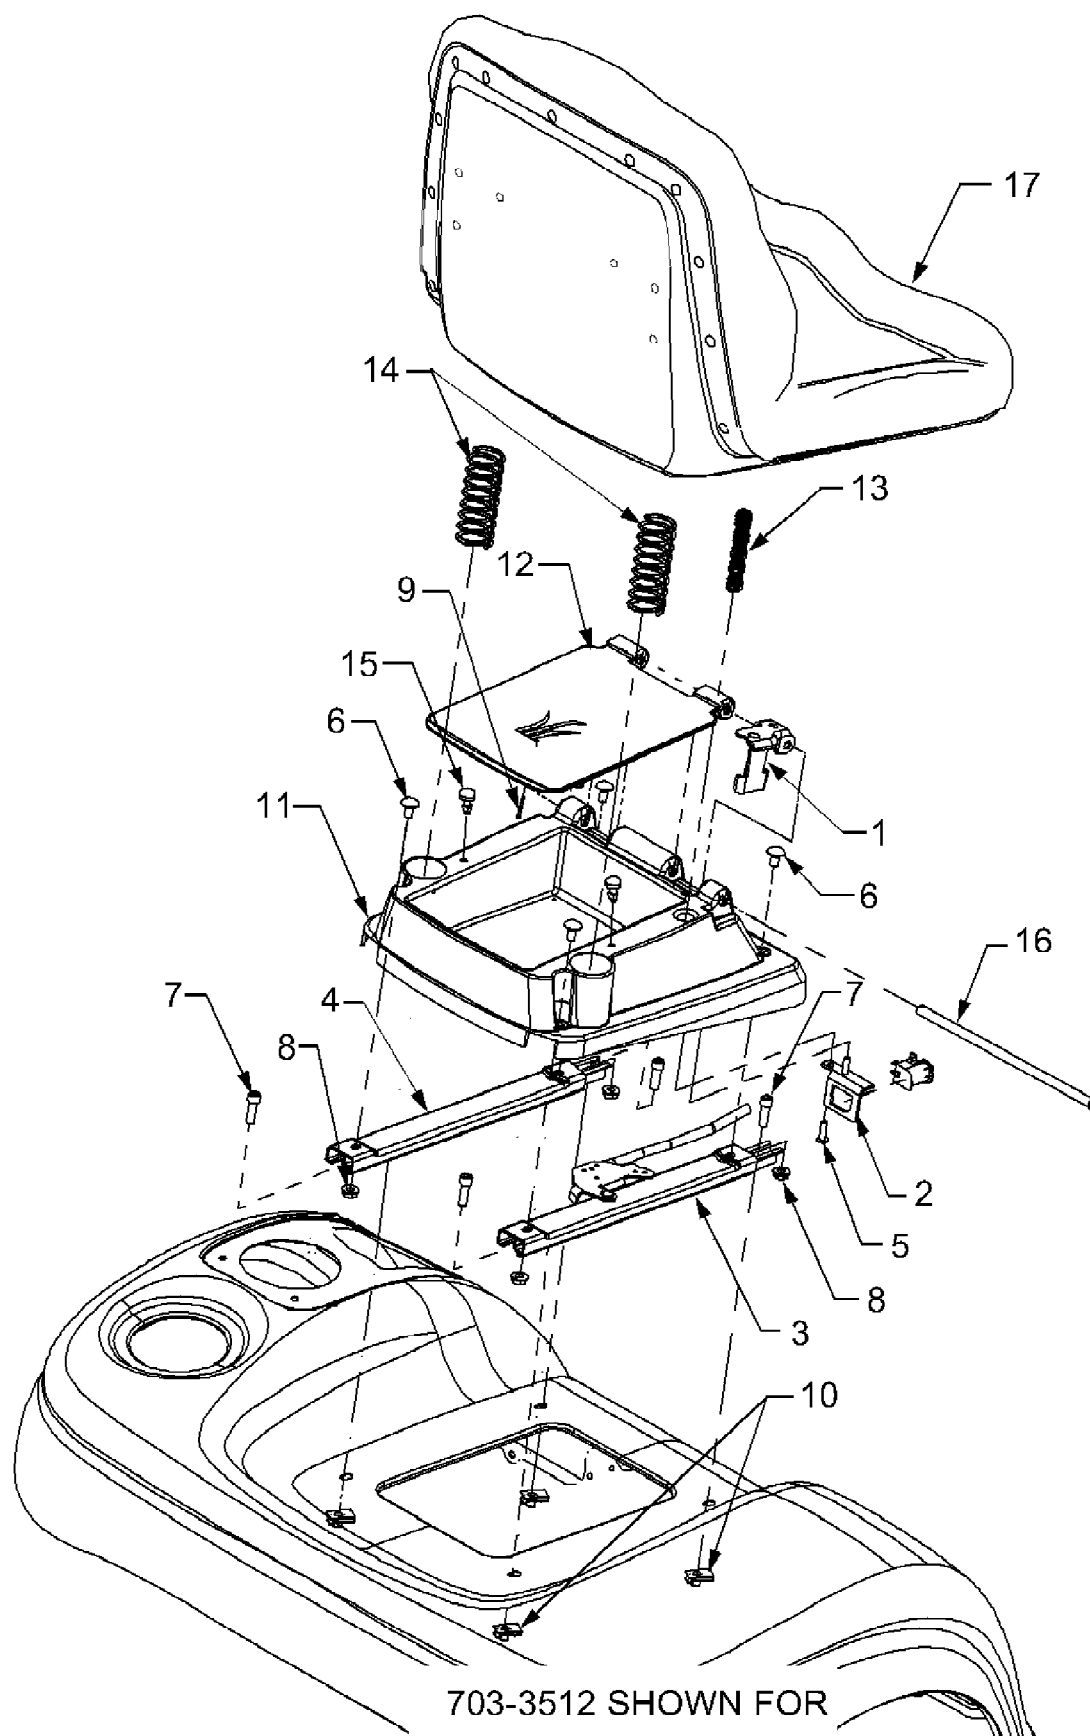


703-3512 SHOWN FOR
REFERENCE ONLY

3184 Tractor S/N 1K010G & After
Seat Assembly

Page 53 of 60


Ref #	Part Number	Qty	S/P/F	Description
1	703-3166A-0637	1	/P	Bracket, Seat Switch
2	703-3173-0637	1	/P	Bracket, Switch Mounting
3	703-3431	1	/P	Track, Seat, w/Latch
4	703-3208	1		Track, Seat, w/o Latch
5	710-0748	2	/P	Screw, Pan Torx Hd., #12-14 x .5
6	710-1636	4		Carriage Bolt, 5/16-18 x .62
7	710-1669	4		Screw, Pan Torx Hd 5/16-18 x 1.0
8	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
9	714-0507	1	S	Pin, Cotter, 3/32 x .75
10	726-0211	4	S	Speed Nut, U-Type, 5/16-18
11	731-3240A	1	S	Base, Seat
12	731-3244	1		Lid, Tlbox
13	732-1001	1		Spring, Compression
14	732-0869A	2	/P	Spring, Compression
15	735-0271	2	S	Bumper
16	747-3357A	1	/P	Rod, Seat Pivot
17	757-3010A	1	S	Seat, High Back
	777D04541	1		Graphic, Reflector
	777D01782	1	/P	Graphic, USA

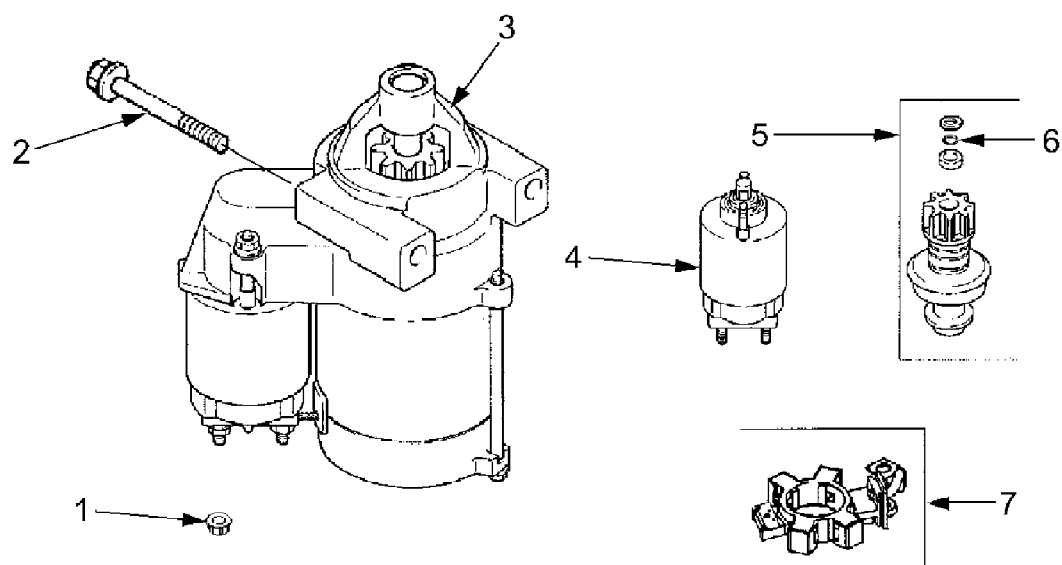

3184 Tractor S/N 1K010G & After
Starting System

Page 55 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-0839080	2		Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-08-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-7)
4	KH-25-435-04-S	1	/P	Kit, Solenoid
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 6)
6	KH-25-141-05-S	1		Ring, Retainer
7	KH-25-221-01-S	1		Kit, Brush

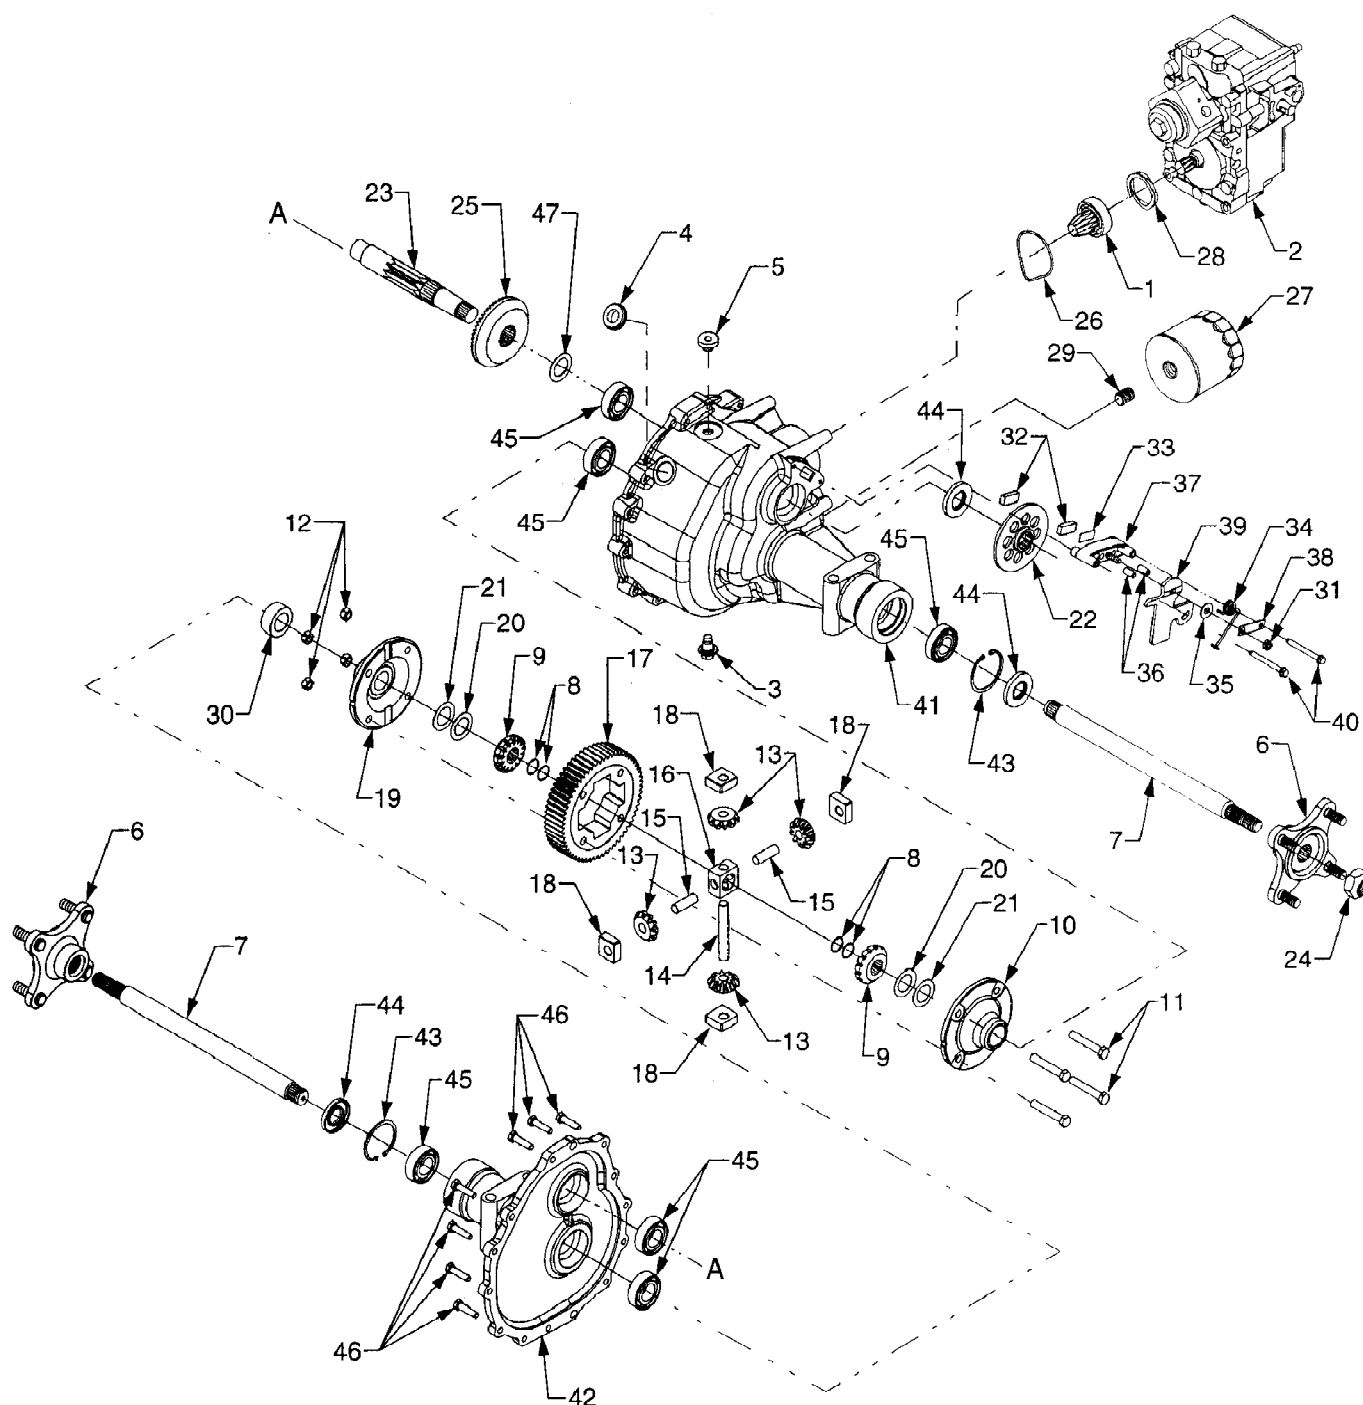

3184 Tractor S/N 1K010G & After
Transmission - Differential

Page 57 of 60

Ref #	Part Number	Qty	S/P/F	Description
	618-3236	1	S	Transmission Assembly Complete - DOES NOT include Ref. Nos. 1, 2, 6, 24, 26, 27, 28 and 29.
1	617-3001	1		Gear Assembly, Pinion 13T.
	741-3037	1	S	Bearing, Ball
2	618-3214	1	S	Hydrostatic Transmission Assy. For components see separate parts breakdown.
3	710-1633	1		Plug, Drain, M14 x 1.5 x .827
4	735-0277A	1		Grommet, Rubber
5	735-0279	1		Grommet
6	618-0579	2	S	Hub Assembly, Wheel
7	711-1386	2		Axle Shaft,
8	716-0172	4	S	Retaining Ring
9	717-1119	2		Gear, Spur, 14T
10	719-3165	1		Housing, Diff. Cover RH
11	710-0331	4	/P	Hex Cap Screw, 3/8-24 x 2.25 GR5
12	712-3054	4	/P	Nut, Hex Lock, 3/8-24
13	717-1120	4		Gear, Differential 10T
14	717-1173	1		Shaft, Cross, .5 x 3.485
15	717-1178	2		Shaft, Cross, Special
16	717-1180	1		Differential Pinion Block
17	717-3466	1		Gear, Spur 60T
18	718-3101	4		Block, Thrust Miter
19	719-3164	1		Housing, Differential Cover LH
20	736-0420	2	S	Washer, Flat, 1.0 x 1.56 x .040
21	736-0424	2	S	Washer, Flat, 1.0 x 1.56 x .020
22	761-0215	1		Disc, Brake
23	711-1385A	1	/P	Shaft, Output 9T
24	712-1329	2	/P	Nut, Lock, 3/4-16
25	717-3449	1		Gear, Bevel 54T
26	721-0519	1		Seal, Gland O-Ring
27	723-3014	1	S	Filter, Oil
28	736-0619	1		Washer, Spring
29	737-3022	1	S	Fitting, Filter Nipple
30	750-3254	1		Spacer, Axle, 1.0 x 1.665 x .71
31	712-0273	1	S	Nut, Hex Insert Lock, 5/16-24
32	717-0678	2	S	Pad, Brake
33	717-0682	1	S	Plate, Puck
34	732-0925	1		Spring, Torsion
35	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
36	741-0343	2	S	Pin, Brake Actuator
37	761-0207A	1	/P	Yoke, Brake
38	761-0208	1		Bracket, Brake Anti-Rotation
39	761-3074	1		Arm, Brake Actuator
40	710-1206	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x 2.375
41	619-3071	1		Housing, RH
42	619-3072	1		Housing, LH
43	716-0204	2		Retaining, Ring
44	721-0523	3		Seal, Oil, 1.0 ID
45	741-3114	6		Bearing, Ball
46	710-0573	14		Screw, Hex Cap Locking 5/16-18 x 1.25 GR5
47	736-0615	1		Washer, Flat, 1.0 x 1.56 x .030


3184 Tractor S/N 1K010G & After
Transmission - Differential

Page 58 of 60

Ref #	Part Number	Qty	S/P/F	Description
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube.
	737-3120	5.5	/P	Drive System Fluid Plus - Quart
	737-3121	A/R	/P	Drive System Fluid Plus - Gallon

3184 Tractor S/N 1K010G & After
Transmission Mounting And Neutral Linkage

Page 59 of 60

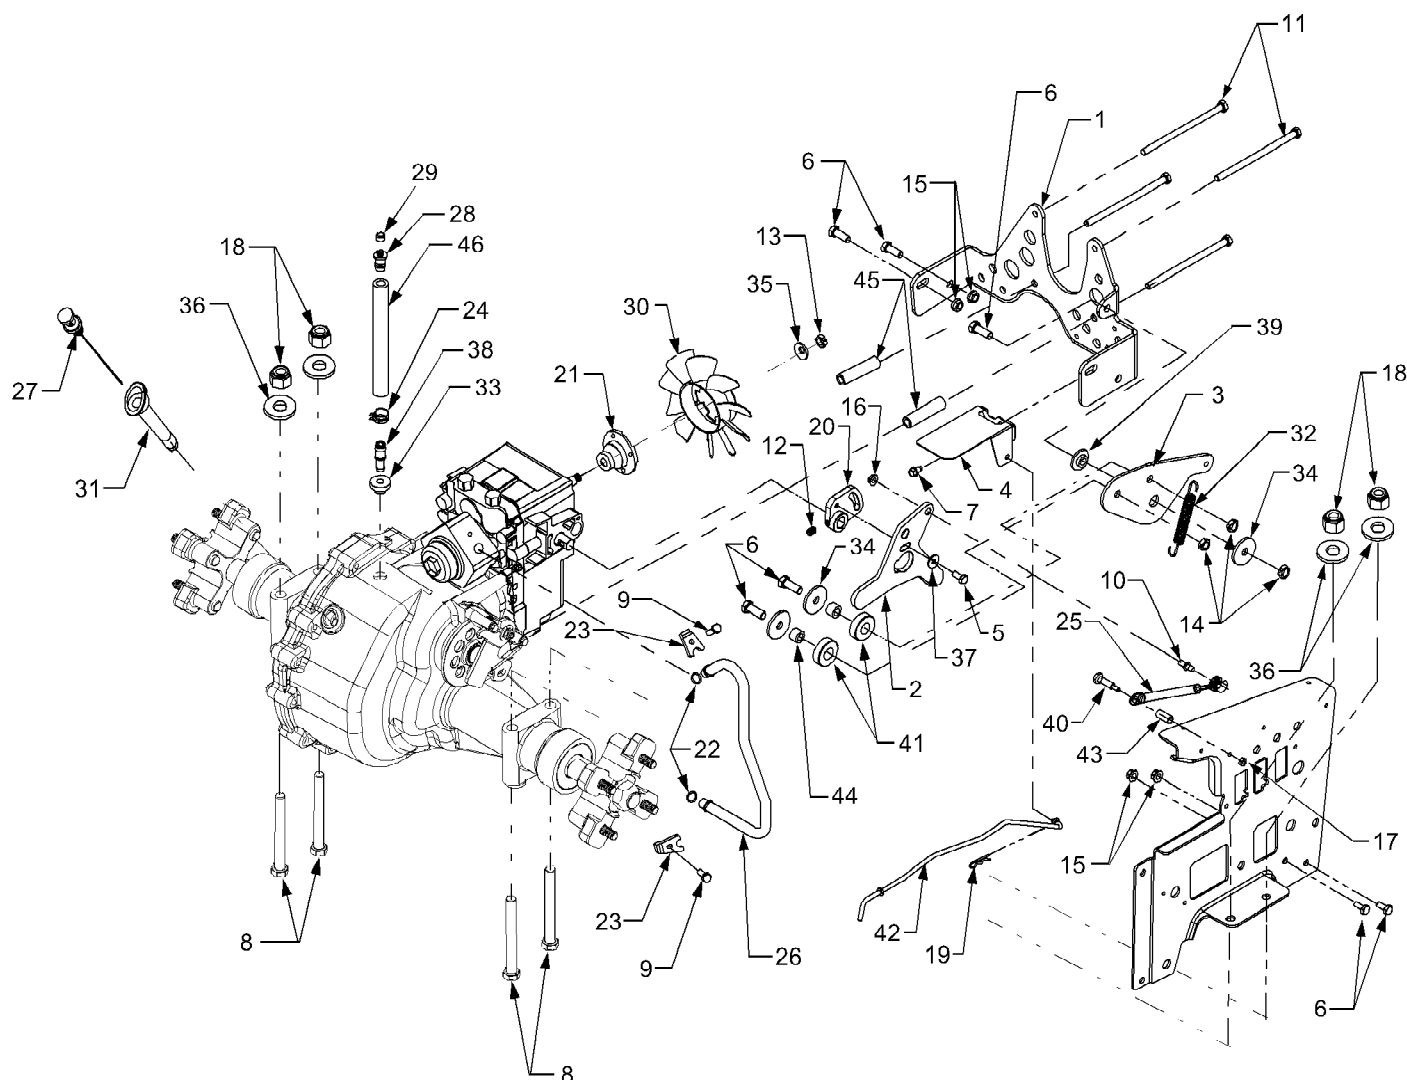

3184 Tractor S/N 1K010G & After
Transmission Mounting And Neutral Linkage

Page 60 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	603-0698	1		Bracket, Torque
2	703-3478	1		Plate, Hydro Neutral Return
3	703-3477	1		Link, Neutral Return Bearing
4	703-3187A	1	S	Spring Plate, Hydro Bypass
5	710-0433	1	/P	Screw, Hex Cap, 1/4-20 x .625 GR5 Lock
6	710-0514	7	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
7	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
8	710-0465	4		Screw, Hex Cap, 1/2-20 x 4.5 GR5
9	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
10	710-3170	1		Ball Screw, 5/16-18 x .56
11	710-1506	4		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 5.5 GR5
12	710-3242	1		Screw, Set, 5/16 x .5
13	712-3059	1	/P	Nut, Hex Top Lock Jam, 1/2-20
14	712-0266	3	S	Nut, Hex Ctr. Lock Jam, 3/8-16
15	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
16	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18
17	712-3006	1	/P	Nut, Hex, 1/4-20
18	712-3058	4	S	Nut, Hex Insert Lock, 1/2-20
19	714-0104	1	S	Pin, Internal Cotter
20	718-3097	1		Arm, Hydro
21	748-3093	1		Adapter, Pump
22	721-0459	2		O-Ring, .426 ID x .566 OD x .070
23	726-0295	2		Clamp, Tube
24	726-0324	1	S	Clamp, Hose
25	727-3090	1	/P	Cylinder, Damper
26	727-3139	1		Tube, Hydro Pickup
27	727-3148	1		Dipstick, Transmission
28	731-1480	1	/P	Plastic Vent
29	731-1481	1		Vent Cap
30	731-3297	1		Fan, Pump
31	731-3245	1		Holder, Dipstick
32	732-0429A	1	S	Spring, Extension
33	735-0279	1		Grommet
34	736-0227	3	S	Washer, Flat, .390 x 1.5 x .1
35	736-0253	1	S	Washer, Bell, .5 x 1.0 x .05
36	736-3019	4		Washer, Flat, .531 x 1.062 x .134
37	736-3090	1	/P	Washer, Flat, .26 x .72 x .06
38	737-3092	1		Fitting, Tube
39	738-0347	1	S	Spacer, Shoulder
40	738-0572	1	S	Shoulder Bolt
41	741-0155	2	S	Bearing, Ball
42	747-3424	1		Rod, Pump Bypass
43	750-0434	1	/P	Spacer, .375 x .5 x 1.02
44	750-0497	2		Spacer, .375 x .624 x .445
45	750-3212	2		Spacer, Hydro, .3223 x .60 x 2.44
46	751-0588-8	8 in.		Fuel Line