


5264DL Tractor
Alternator

Page 1 of 77

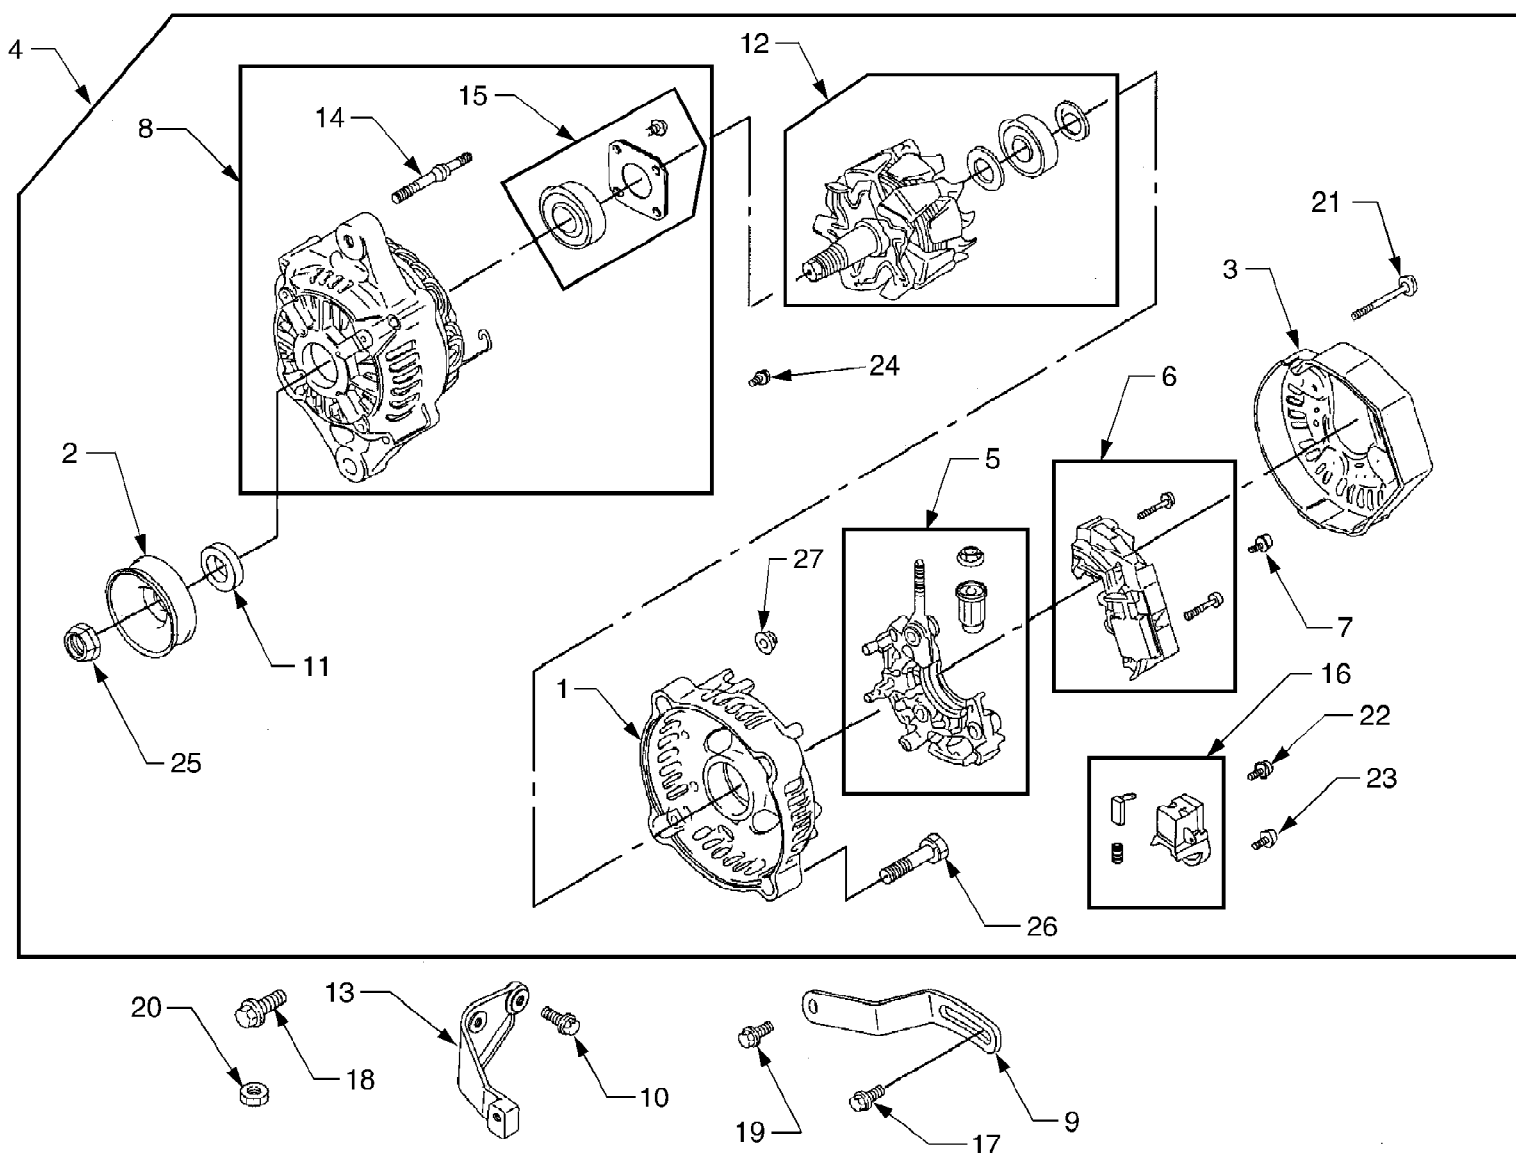


5264DL Tractor
Alternator

Page 2 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820692	1		Housing, Brush End
2	BS-820711	1		Pulley, Alternator
3	BS-820703	1		Cover, Brush
4	BS-825084	1		Alternator
5	BS-825385	1		Rectifier
6	BS-825388	1		Regulator
7	BS-820702	1		Screw, Rectifier
8	BS-825383	1		Housing, Drive End
9	BS-820819	1		Strap, Adjusting
10	BS-820275	1		Screw, Support Bracket
11	BS-820713	1		Spacer, Support Bracket
12	BS-825390	1		Rotor
13	BS-820213	1		Bracket, Support
14	BS-820690	1		Stud, Alternator
15	BS-825384	1		Retainer, Bearing
16	BS-825387	1		Retainer, Brush
17	BS-820343	1	S	Screw, Alternator
18	BS-820270	1		Screw, Alternator
19	BS-820023	1		Screw, Adjusting Strap
20	BS-820069	1		Nut, Alternator
21	BS-820715	1		Screw, Brush Cover
22	BS-820701	1		Screw, Brush Retainer
23	BS-820702	1		Screw, Brush Retainer
24	BS-820702	1		Screw, Ground Terminal
25	BS-820705	1		Nut, Alternator Pulley
26	BS-820707	1		Screw, Brush End Housing
27	BS-820709	1		Nut, Brush End Housing

5264DL Tractor Axle Assembly 4WD

Page 3 of 77

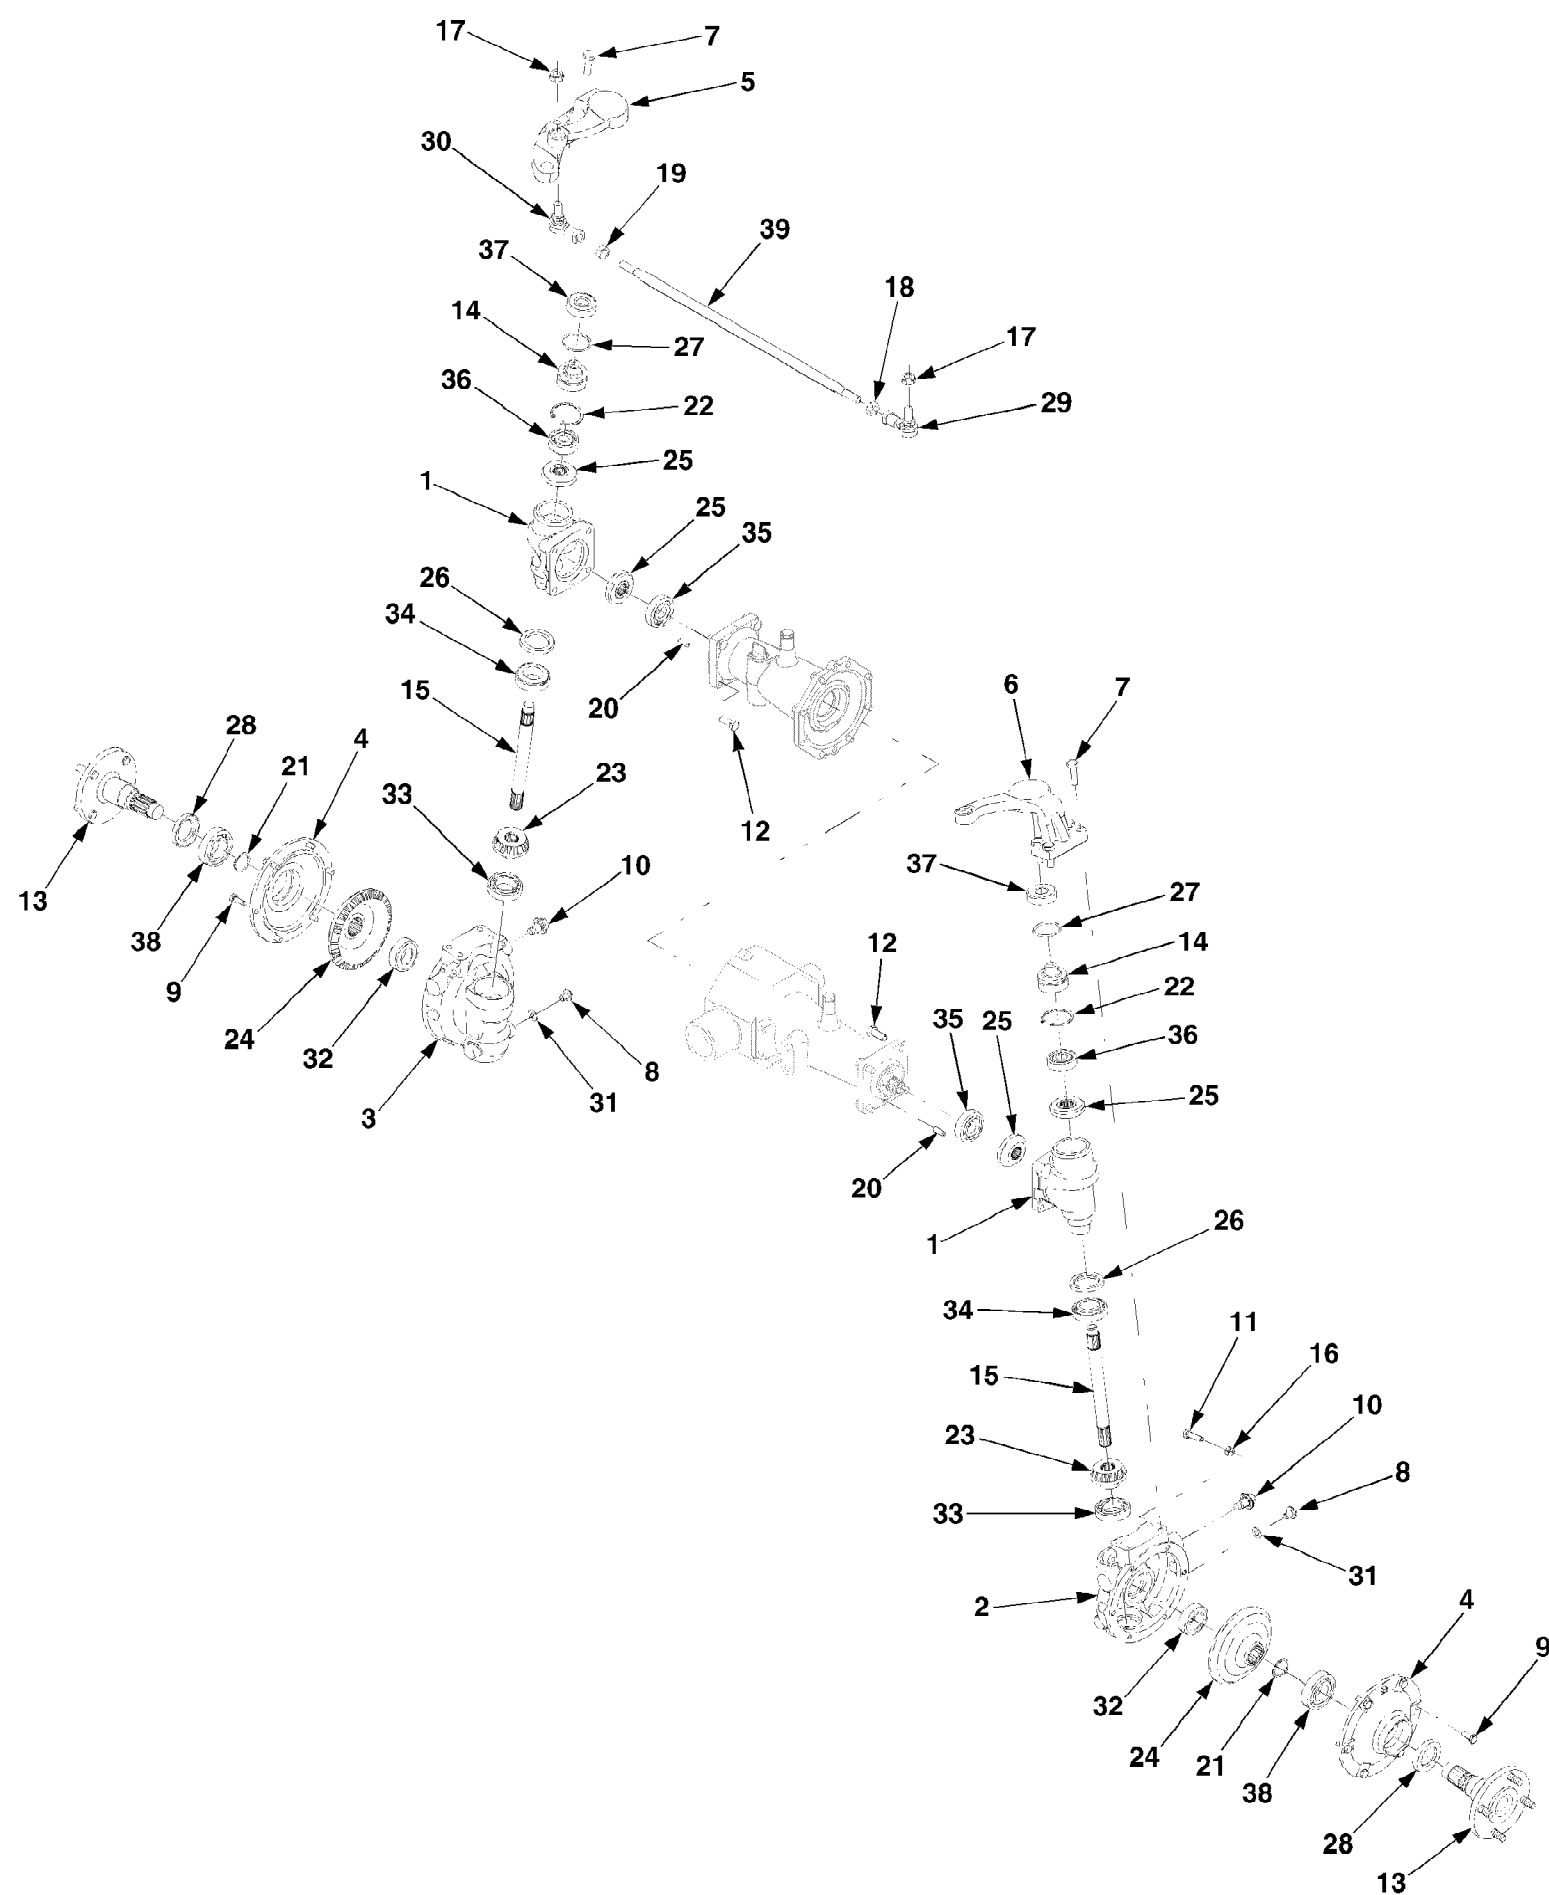


5264DL Tractor
Axle Assembly 4WD

Page 4 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	619-04017A	2	S	Housing, Kingpin
	759-3958	AR		Sealant, Loctite Black, 5.3 oz.
2	619-04020A	1	S	Housing, Axle Drop, RH
3	619-04021A	1	S	Housing, Axle Drop, LH
4	619-04024A	2	S	Cover, Axle
5	619-04027A	1	S	Arm, Steering, LH
6	619-04028A	1	S	Arm, Steering, RH
7	710-1313	8	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
8	710-1323	2		Plug, Hex, 3/8-16 x .5
9	710-1681	12	/P	Screw, Hex Cap, M8-1.25 x 20 GR8.8
10	710-1633	2		Plug, Screw, M14-1.5 x .827
11	710-1683	2	/P	Screw, Hex Cap, M8-1.25 x 30
12	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
13	711-04060	2	S	Axle, Flange
	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6
14	711-04104	2	S	Shaft, Stub
15	711-04106	2	S	Shaft, Kingpin
16	712-0690	2	/P	Nut, Hex, M8-1.25
17	712-3103	2		Nut, Hex Flange Lock, M12-1.75
18	712-3104	1		Nut, Hex, M12-1.75 RH Thrd.
19	712-3105	1		Nut, Hex, M12-1.75 LH Thrd.
20	715-04014	2	S	Pin, Dowel, 8mm x 20mm
21	716-0201	2		Ring, Retaining
22	716-0393	2		Ring, Retaining
23	717-04040	2	S	Gear, Bevel, 13T
24	717-04041	2	S	Gear, Bevel, 34T
25	717-04045	4	S	Gear, Bevel, 14T
26	721-04087	2		Seal, Oil, 38 x 55 x 7 w/Dirt Lip
27	721-04066	2	S	O-Ring, 40mm x 3mm
28	721-0497	2		Seal, Oil, 35mm x 55mm x 8mm
29	723-0462	1		Ball Joint, 12-1.75 RH
30	723-0463	1		Ball Joint, 12-1.75 LH
31	736-0567	2	/P	Washer, Flat, .39 x .75 x .062
32	741-0301	2	S	Bearing, Ball
33	741-04034	2	S	Bearing, Ball
34	741-04043	2	S	Bearing, Tapered Roller w/ Race
35	741-04044	2	S	Bearing, Ball
36	741-04068	2	S	Bearing, Ball
37	741-0919	2	S	Bearing, Ball
38	741-3033A	2	S	Bearing, Ball
39	747-04134	1	S	Rod, Tie, M12-1.75

5264DL Tractor
Axle Assembly 4WD Main

Page 5 of 77

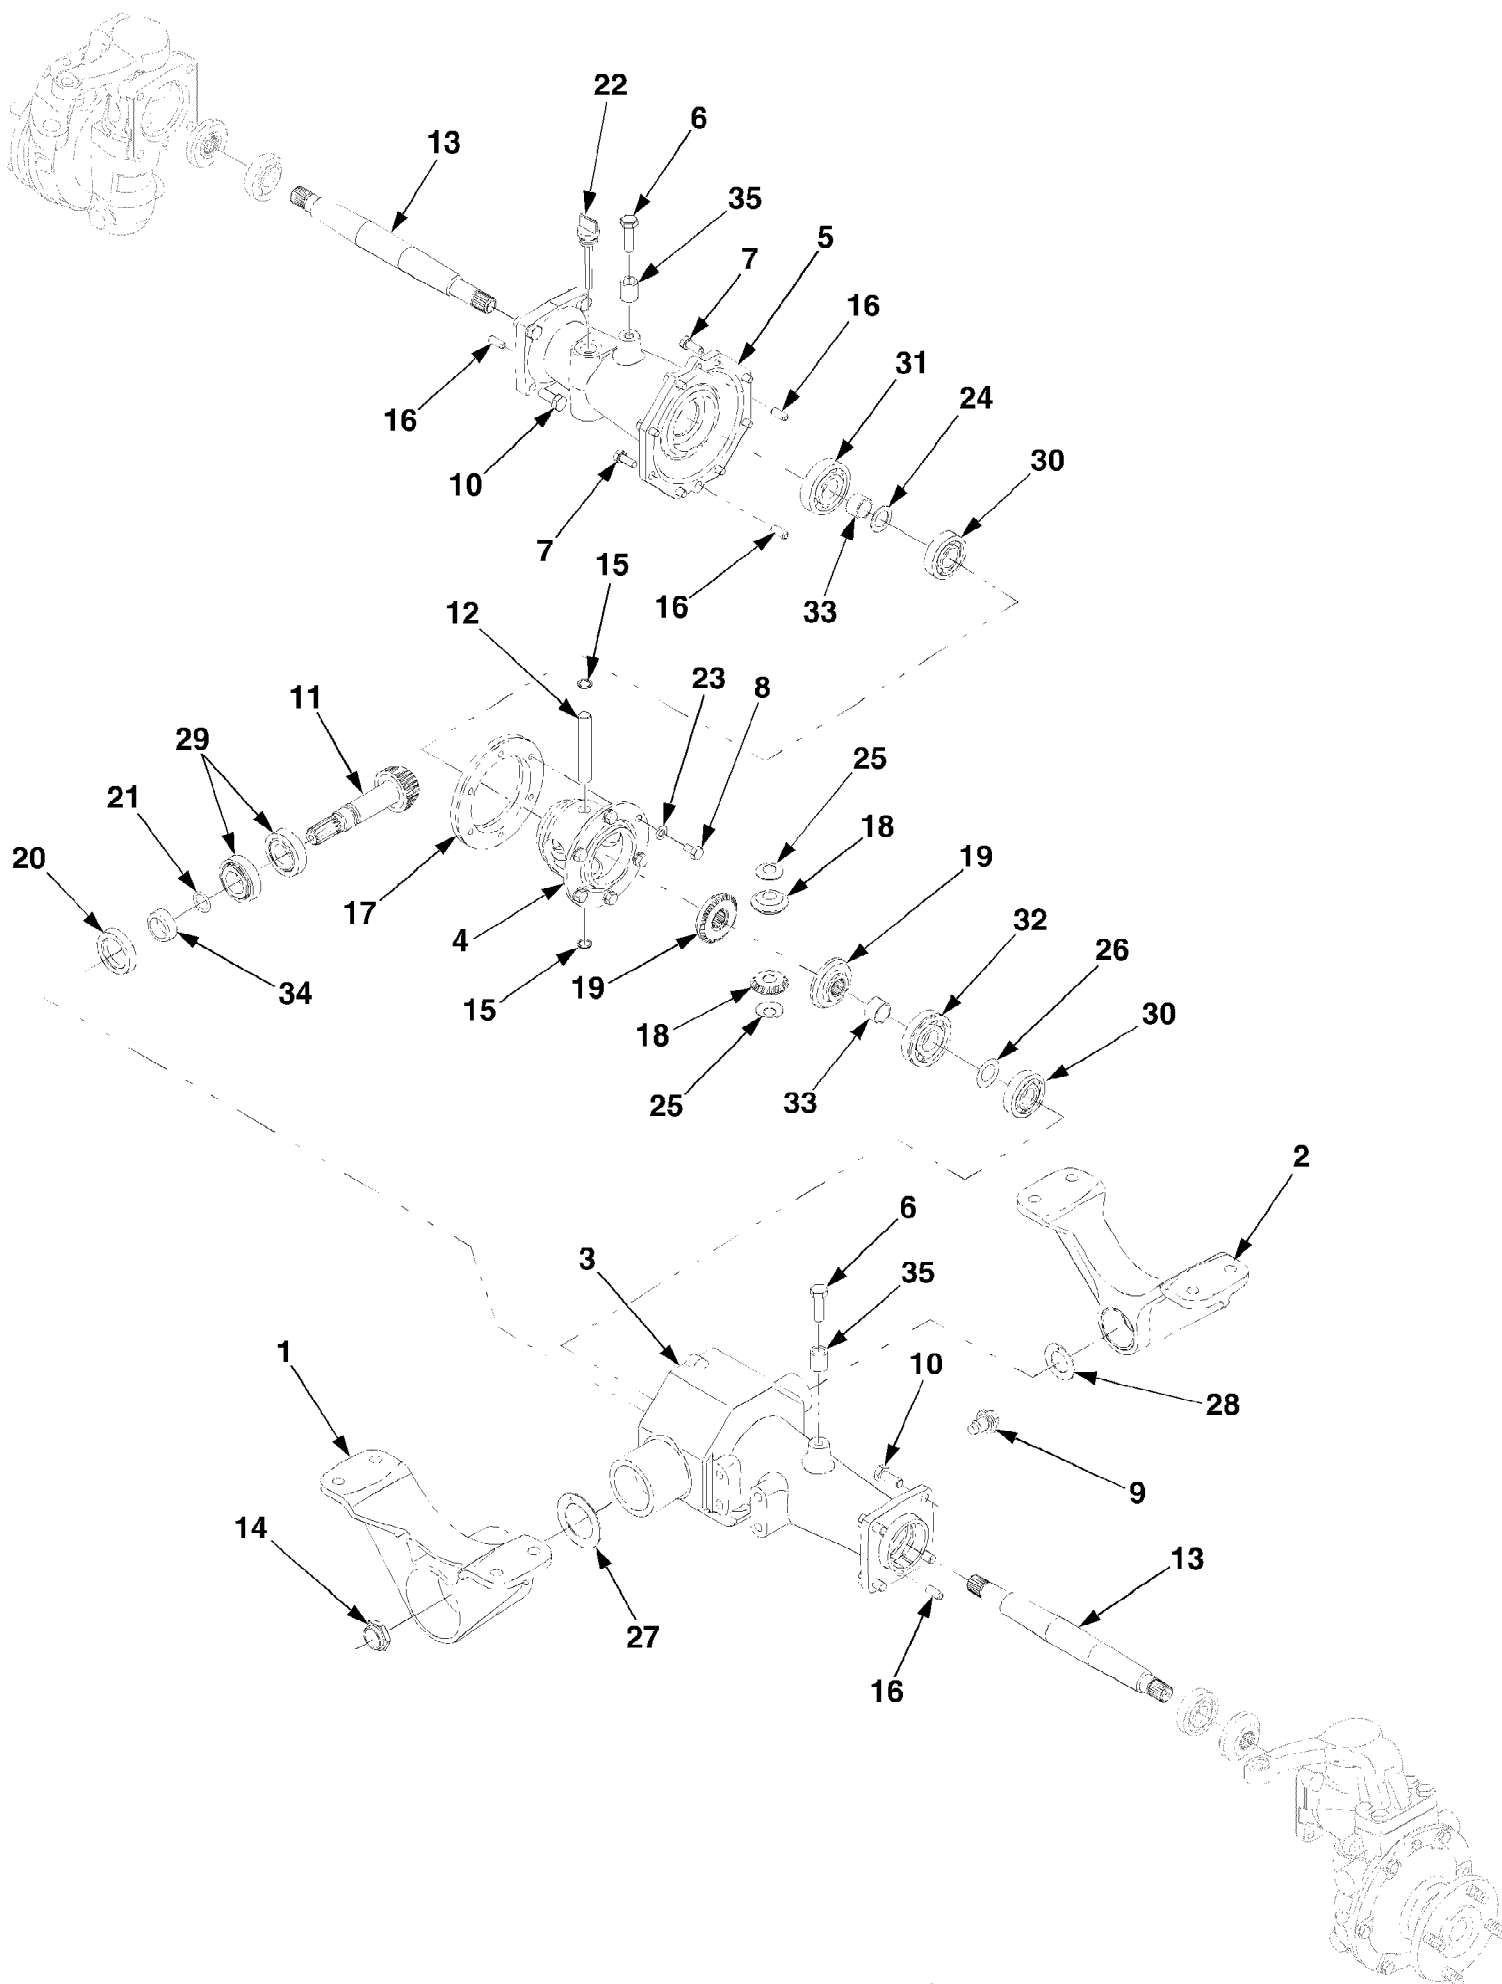


5264DL Tractor
Axle Assembly 4WD Main

Page 6 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-04050	1	S	Bracket, Front Axle Mtg. - Rear
1	737-0146	1	S	Fitting, Lube, 1/4-28
1	741-04036	1	S	Bearing, Sleeve
2	603-04051	1	S	Bracket, Front Axle Mtg. - Front
2	737-0146	1	S	Fitting, Lube, 1/4-28
2	741-04037	1	S	Bearing, Sleeve
3	619-04009A	1	S	Housing, Main Axle RH
4	619-04120	1	S	Housing, Differential
5	619-04019A	1	S	Housing, Axle LH
6	710-1313	2	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
7	710-1682	8		Screw, Hex Cap, M8-1.25 x 25 GR8.8
8	710-3175	6	/P	Screw, Hex Cap, M8-1.25 x 14 GR8.8
9	710-1633	1		Plug, Screw, M14-1.5 x .827
10	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
11	711-04051	1	S	Shaft, Input, 11T
12	711-04384	1	S	Shaft, Cross
13	711-04107	2	S	Shaft, Axle
14	712-04043	1	/P	Nut, Special, 24mm
15	716-04045	2		Ring, Retaining
16	715-04014	4	S	Pin, Dowel, 8mm x 20mm
17	717-04023	1	S	Gear, Bevel, 35T
18	717-04046	2	S	Gear, Miter, 10T
19	717-04047	2	S	Gear, Miter, 16T
20	721-04056	1	S	Seal, Oil, 52mm x 35mm x 10mm ..
21	721-04067	1	S	O-Ring, 19mm x 3mm
22	731-04336	1	S	Dipstick, Front Axle, includes:
	N/A	1		Washer, Seal
23	736-0264	6	S	Washer, Flat, .33 x .63 x .0635
24	736-0287	1	S	Washer, Flat, .793 x 1.24 x .06 Hdn.
25	736-04098	2	S	Washer, Special Spherical
26	736-0562	AR	S	Washer, Flat, .793 x 1.37 x .005
	736-0563	AR		Washer, Flat, .793 x 1.37 x .010
	736-0564	AR		Washer, Flat, .793 x 1.37 x .015
	736-0565	AR		Washer, Flat, .793 x 1.37 x .020
	736-0566	AR		Washer, Flat, .793 x 1.37 x .025
27	741-04038	1	S	Washer, Thrust, 1.66 x 2.59 x .059
28	741-04039	1	S	Washer, Thrust, 1.03 x 1.73 x .059
29	741-04042	2	S	Bearing, Tapered Roller w/ Race ...
30	741-04044	2	S	Bearing, Ball
31	741-04045	1	S	Bearing, Ball
32	741-04046	1	S	Bearing, Ball
33	750-04133	2	S	Spacer, 20 x 25 x 16mm
34	750-04164A	1	S	Spacer, 25 x 35 x 12mm
35	750-0750	2	S	Spacer, .5 x .75 x .86
	737-3065	1	/P	Oil, 85W-140 2.5 qt.

5264DL Tractor
Battery and Electrical

Page 7 of 77

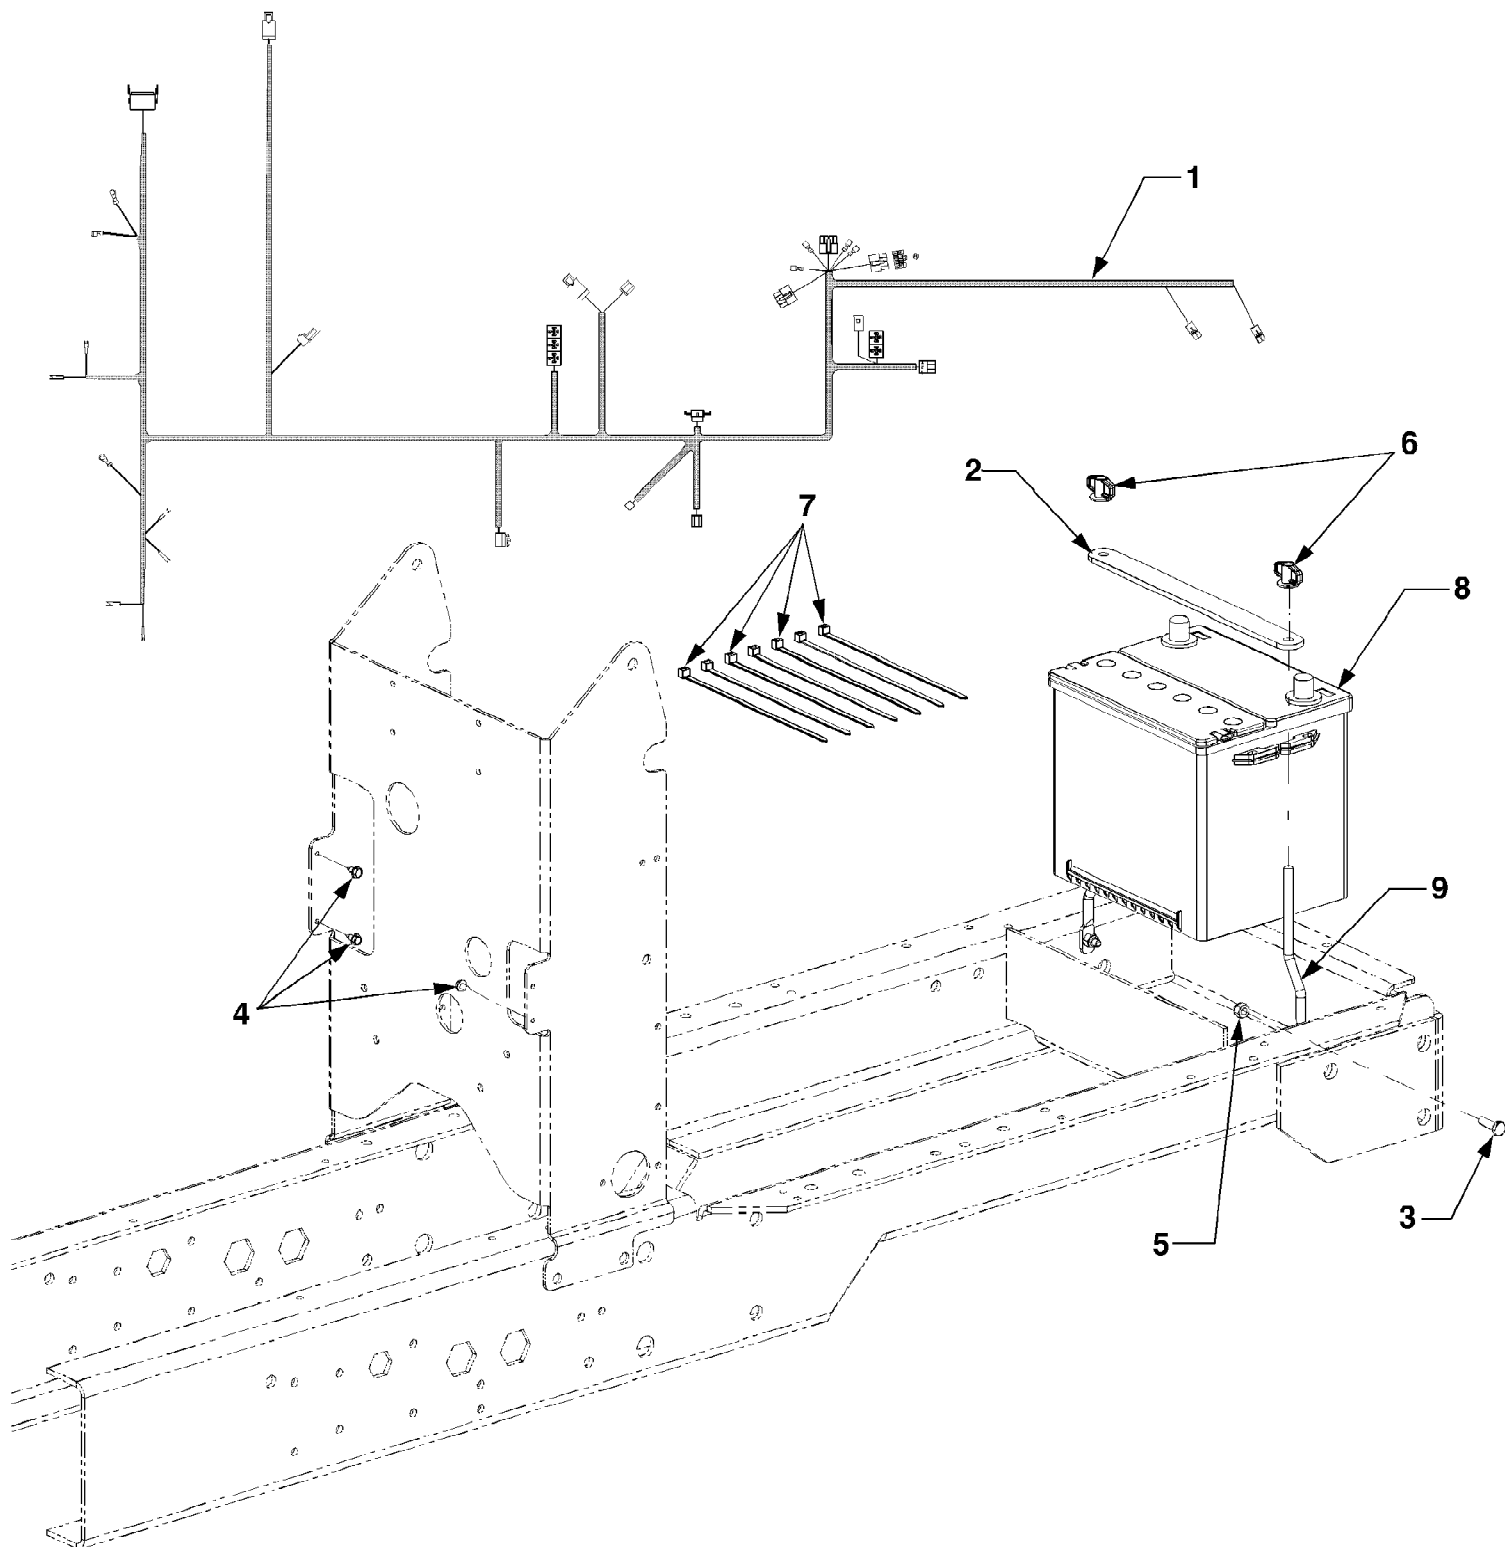


5264DL Tractor
Battery and Electrical

Page 8 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	629-04128	1		Harness, Main Wire
2	703-4104-0637	1	/P	Strap, Battery Holddown
3	710-0206	2	/P	Screw, Hex Cap, 1/4-10 x .875 GR5
4	710-0224	3	S	Screw, Hex Wash Hd. Tapp #10-16 x .5
5	712-0324	2	/P	Nut, Hex Nylon Insert Lock, 1/4-20
6	712-0421	2		Nut, Wing w/Bell Washer, 5/16-18
7	725-0157	7	/P	Tie, Cable
8	725-3174	1	S	Battery, 500 cca Dry
9	747-3433	2		Rod, Battery Holddown

5264DL Tractor
Camshaft and Valves


Page 9 of 77

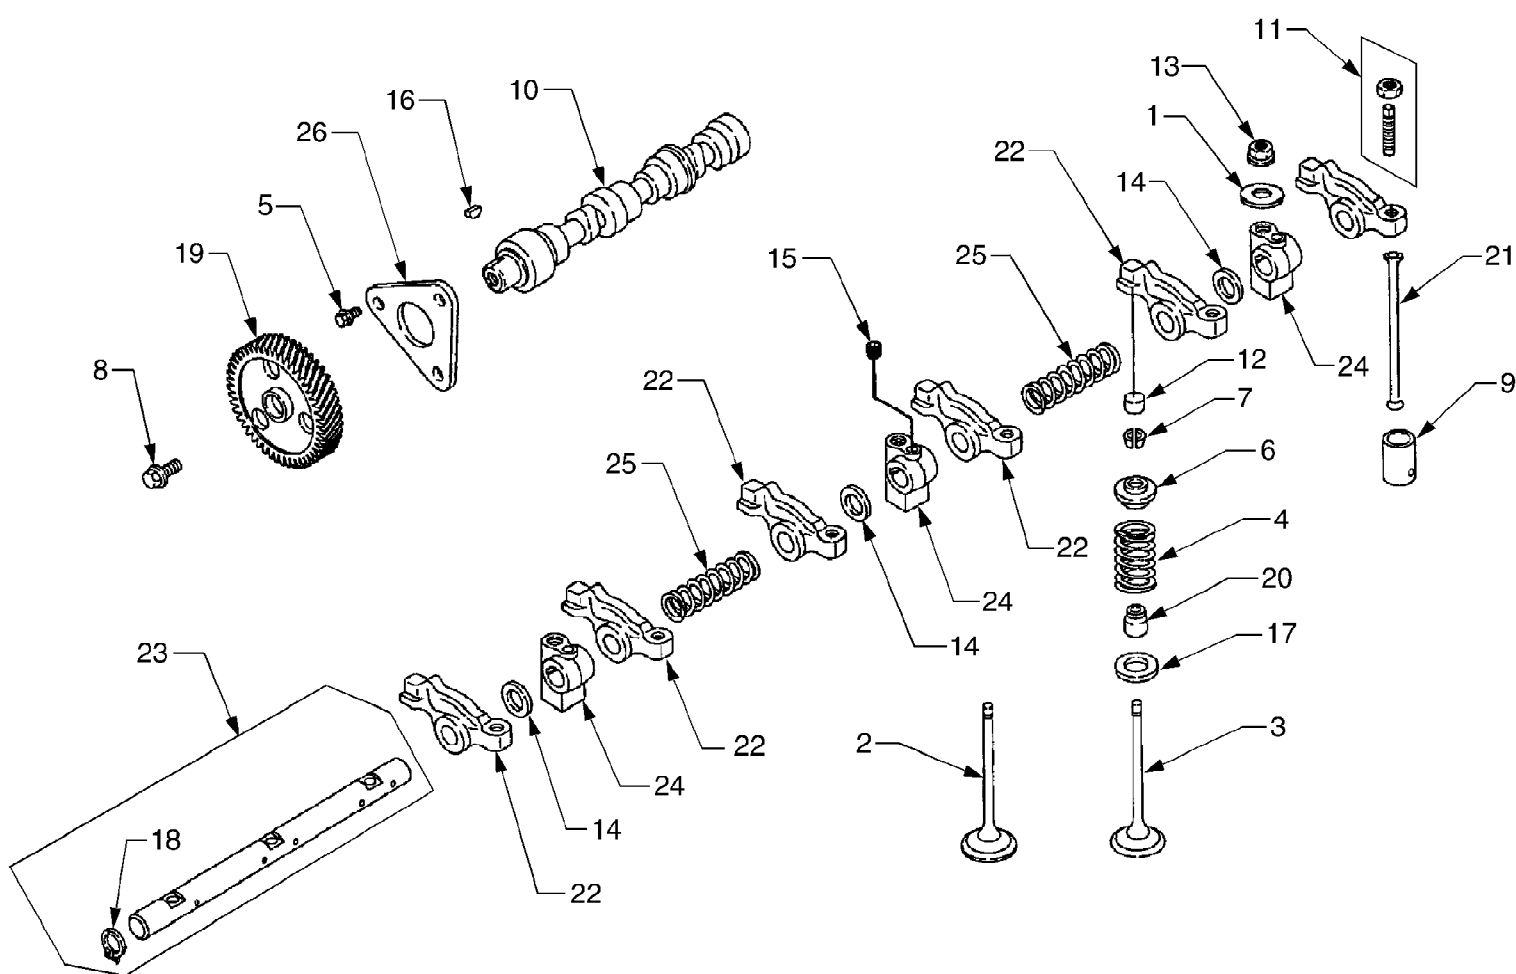

5264DL Tractor
Camshaft and Valves

Page 10 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820177	3		Washer, Flat
2	BS-820404	3		Valve, Exhaust
3	BS-820403	3		Valve, Intake
4	BS-820406	6		Spring, Valve
5	BS-820032	3		Screw, Hex, 6mm
6	BS-820111	6		Retainer, Valve
7	BS-825042	6		Keeper, Valve, Set of 2
8	BS-820075	1		Screw, Metric
9	BS-820110	6		Tappet, Valve
10	BS-820388	1		Camshaft
11	BS-825688	6		Adjuster, Rocker Arm
12	BS-821214	6		Cap, Valve
13	BS-820070	3		Nut, Hex Metric
14	BS-820065	3		Washer, Spacer
15	BS-820105	1		Screw, Metric
16	BS-691639	1		Key, Timing
17	BS-820112	6		Seat, Valve Spring
18	BS-820003	2		Retainer
19	BS-820613	1		Gear, Cam
20	BS-820405	6		Seal, Valve
21	BS-821218	6		Rod, Push
22	BS-820387	6		Arm, Rocker
23	BS-825093	1		Shaft, Rocker Arm
24	BS-820106	3		Support, Rocker Arm
25	BS-820044	2		Spring, Rocker Shaft
26	BS-820118	1		Retainer, Camshaft

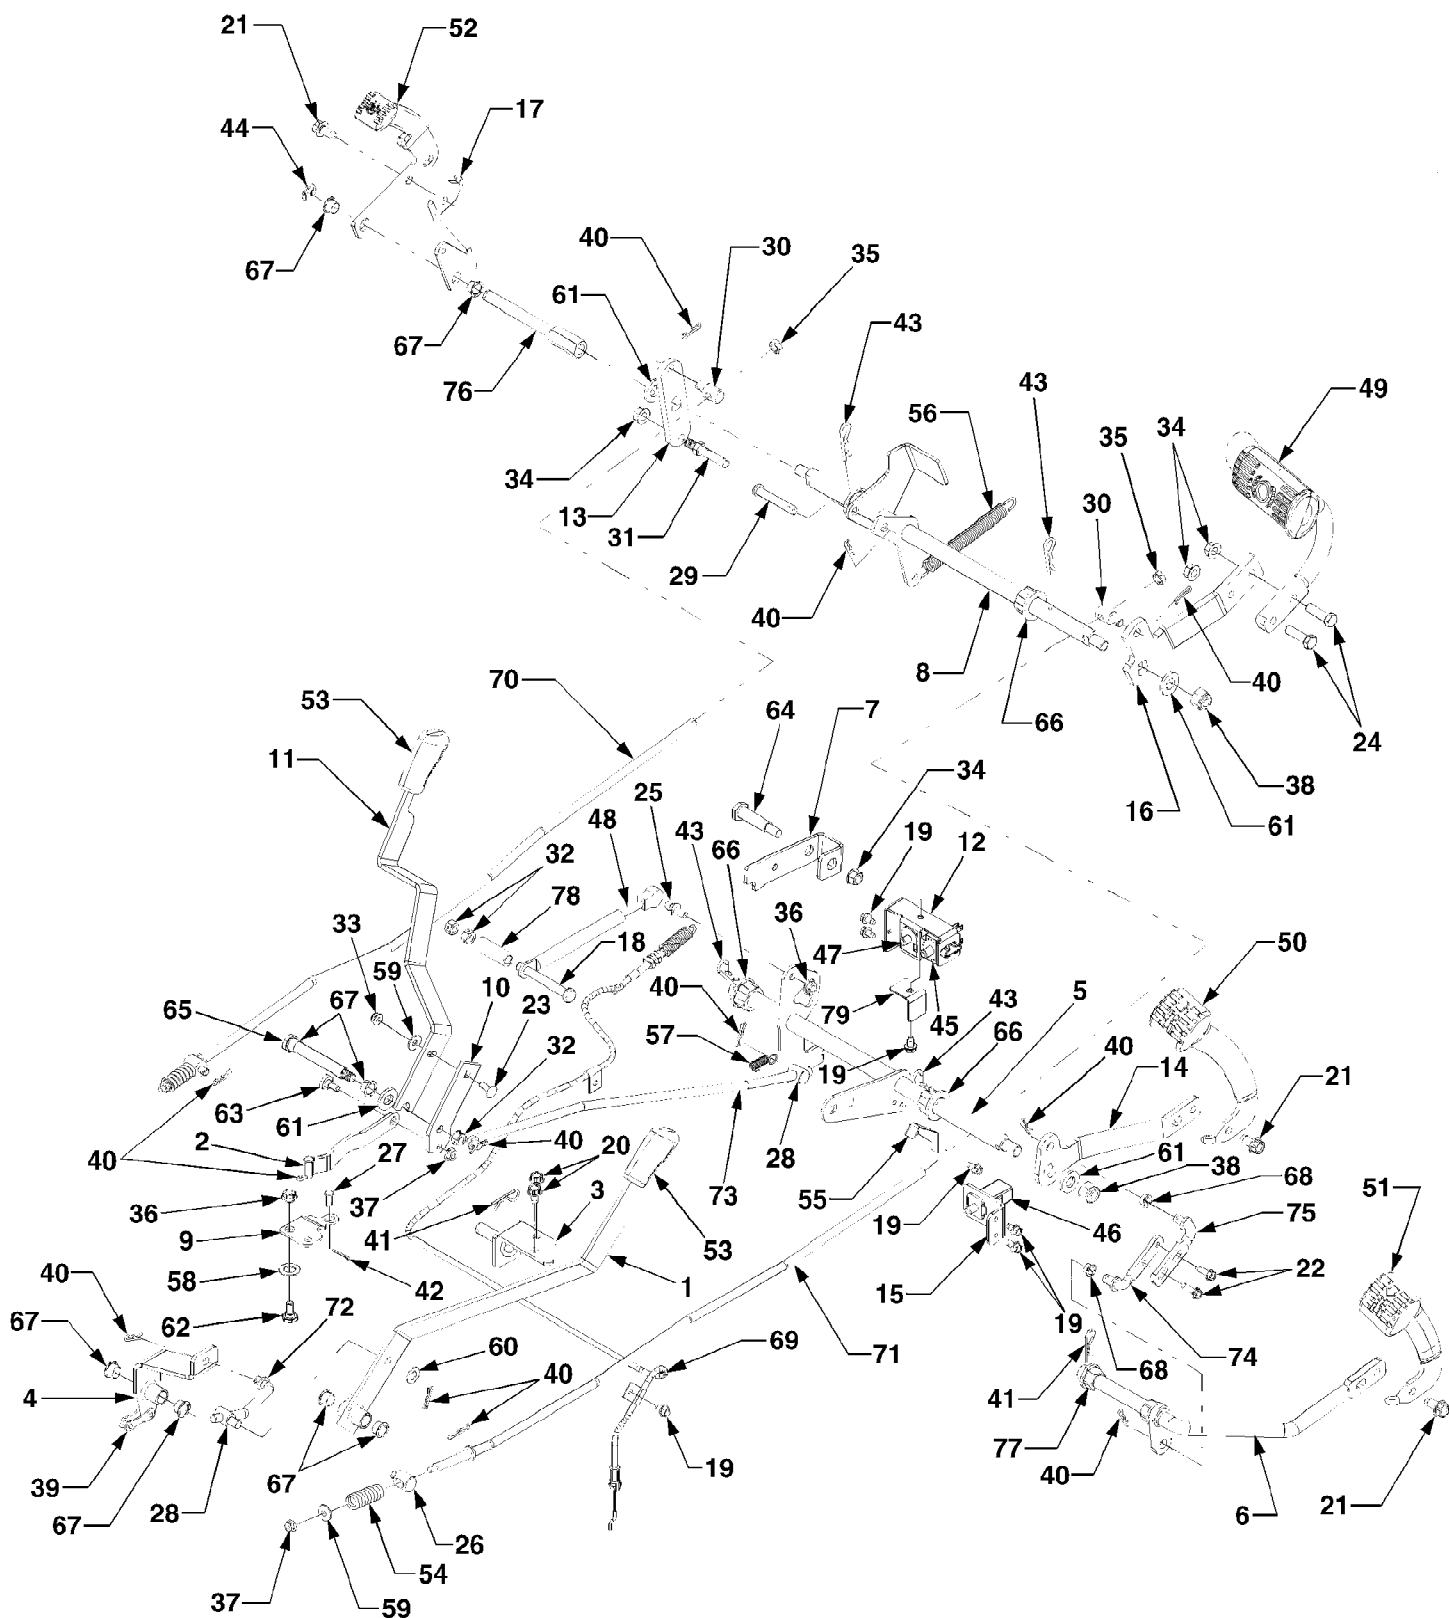

5264DL Tractor
Controls


Page 12 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-04016	1		Handle, 4WD
2	603-04018	1		Link, Hi-Lo
3	603-04019	1		Bracket, 4WD Pivot
4	603-04020	1		Link, 4WD
5	603-0945	1		Shaft Assembly, Pedal
6	603-0947	1		Shaft Assembly, Reverse
7	703-05847	1		Bracket, Parking Brake
8	603-04273	1		Shaft Assembly, Brake
9	703-05039A	1		Link, Hi-Lo Pivot
10	703-05665	1		Bracket, Hi-Lo Shifter
11	703-05666	1		Handle, Hi-Lo Shift
12	703-05674A	1	S	Bracket, Switch
13	703-4105	1		Lever, Brake
14	703-3012	1		Link, Pedal Mounting
15	703-3152	1		Bracket, Reverse Switch
16	703-3156A	1		Link, Brake Pedal
17	703-3183	1		Bracket, Pedal Brace
18	710-0521	1	/P	Screw, Hex Cap 3/8-16 x 3.0 GR8
19	710-0599	6	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
20	710-0607	2	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .5
21	710-0623	3	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
22	710-0642	2	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .75
23	710-0703	1	/P	Screw, Carriage, 1/4-20 x .75 GR5
24	710-3005	2	/P	Screw, Hex Cap 3/8-16 x 1.25 GR5
25	710-3170	1		Stud, Cylinder, 5/16-18
26	711-04038	2	S	Ferrule, Brake
27	711-0701	1	S	Pin, Clevis, .25 x .5
28	711-3397	2		Ferrule, 3/8-24 x .37
29	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
30	711-0723A	2	S	Ferrule, 3/8 - 24 x .375
31	711-1363	1		Pin, 3/8-16: 3/8 x 2.43
32	712-0375	3	/P	Nut, Hex Lock, 3/8-16
33	712-04064	1	/P	Nut, Hex Flange Nylon Lock 14-20 GRF
34	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
35	712-0711	2	/P	Nut, Hex Jam, 3/8-24
36	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
37	712-3027	3	S	Nut, Hex Flange Lock, 1/4-20
38	712-3058	2	S	Nut, Hex Insert Lock, 1/2-20
39	713-3000	1	S	Link, Chain
40	714-0104	12	S	Pin, Internal Cotter
41	714-0145	2	S	Pin, Internal Cotter
42	714-0507	1	S	Pin, Cotter, 3/32 x .750
43	714-0147	4	/P	Pin, Internal Cotter
44	716-0104	1	S	E-Ring, .5 Dia
45	725-04232	1		Switch, Plunger (Brake)
46	725-3164A	1	S	Switch, Plunger (Reverse)
47	725-3167	1	S	Switch, Plunger (Brake)
48	727-04004	1		Cylinder, Damper
49	731-3249A	1	/P	Pedal, Brake
50	731-3247	1		Pedal, Forward
51	731-3248	1		Pedal, Reverse
52	731-3250	1		Pedal, Diff. Lock
53	731-3321	2		Grip, Handle

5264DL Tractor
Controls

Page 13 of 77

Ref #	Part Number	Qty	S/P/F	Description
54	732-04009	2	S	Spring, Compression
55	732-0859A	1	/P	Spring, Rev/No Cut
56	732-0384	1	S	Spring, Extension, .62 x 6.12
57	732-3118	1		Spring, Extension, 3/8 x 1.44
58	736-0160	1	S	Washer, Flat, .53 ID x .93 x .05 .
59	736-0173	3	/P	Washer, Flat, .28 x .74 x .063 ...
60	736-0185	1	S	Washer, Flat, .375 x .74 x .063
61	736-3019	4		Washer, Flat, .53 x .1.06 x .134
62	738-0140	1	S	Screw, Shoulder, .435 x 1.78
63	738-0255	1	S	Screw, Shoulder, ..375 x .181 ...
64	738-0533	1	S	Screw, Shoulder, .498 x 1.635
65	738-0982	1		Screw, Shoulder, .498 x 3.245: 3/8-16
66	741-0598	4	S	Bearing, Hex Flange, .752 ID
67	741-0491	8		Bearing, Nylon. .50 ID x .341
68	741-3073	2	S	Bearing, Flange, .375 x .58 x .25
69	746-04017	1		Cable, Diff Lock
70	747-04021	1		Rod, Brake, LH
71	747-04022	1		Rod, Brake, RH
72	747-04034	1	S	Link, 4WD Handle
73	747-3486	1		Rod, Hydro Control
74	747-3324	1		Rod, Rear Connecting
75	747-3353	1		Rod, Front Connecting
76	747-3366	1		Shaft, Diff. Lock
77	748-0227A	2	S	Bearing, Hex Flange, .629 ID
78	750-0668	1		Spacer, .39 x .625 x 1.74
79	703-05901	1	S	Bracket, Switch Clamp

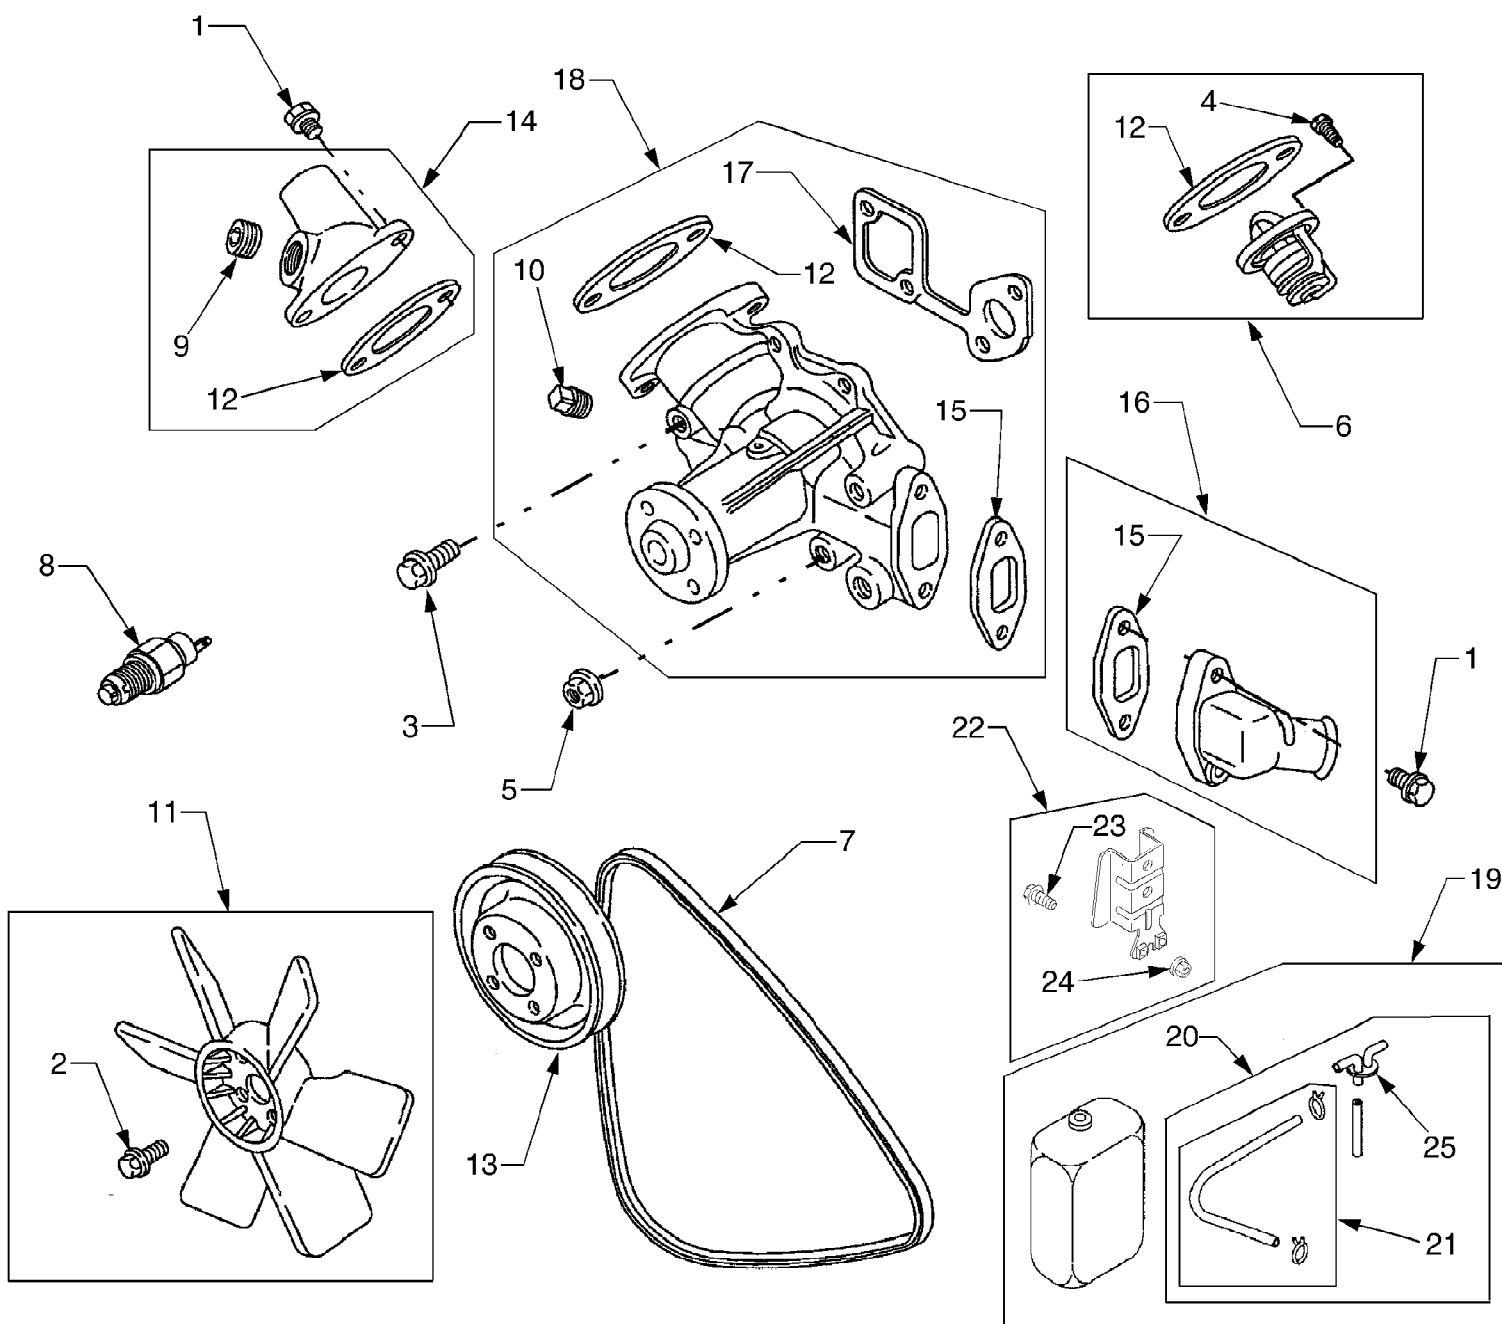


5264DL Tractor
Cooling

Page 15 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820031	4		Screw, Hex, 6mm
2	BS-820034	4		Screw, Hex,
3	BS-820022	2		Screw, Hex, 8mm
4	BS-820185	1		Screw, Metric
5	BS-820181	1		Nut, Hex Metric
6	BS-825064	1		Thermostat
7	BS-820271	1	S	Belt, V
8	BS-820208	1		Switch, Coolant Temperature
9	BS-820052	1		Plug
10	BS-820182	1		Plug
11	BS-825454	1		Fan, Radiator
12	BS-820093	1		Gasket, Outlet
13	BS-820095	1		Pulley, Pump
14	BS-825267	1		Housing, Outlet
15	BS-820098	1		Gasket, Inlet Housing
16	BS-825051	1		Housing, Inlet
17	BS-820100	1		Gasket, Water Pump
18	BS-825265	1		Pump, Water
19	BS-825462	1		Tank, Reserve
20	BS-825461	1		Cap, Reserve Tank
21	BS-824296	1		Clamp/Hose Assembly
22	BS-825296	1		Bracket, Reserve Tank Mtg.
23	BS-820034	1		Screw, Mtg. Bracket
24	BS-820011	1		Nut, Mtg. Bracket
25	N/A	1		Cap-Surge Tank FURNISH REF 20

5264DL Tractor
Crankcase Cover

Page 16 of 77

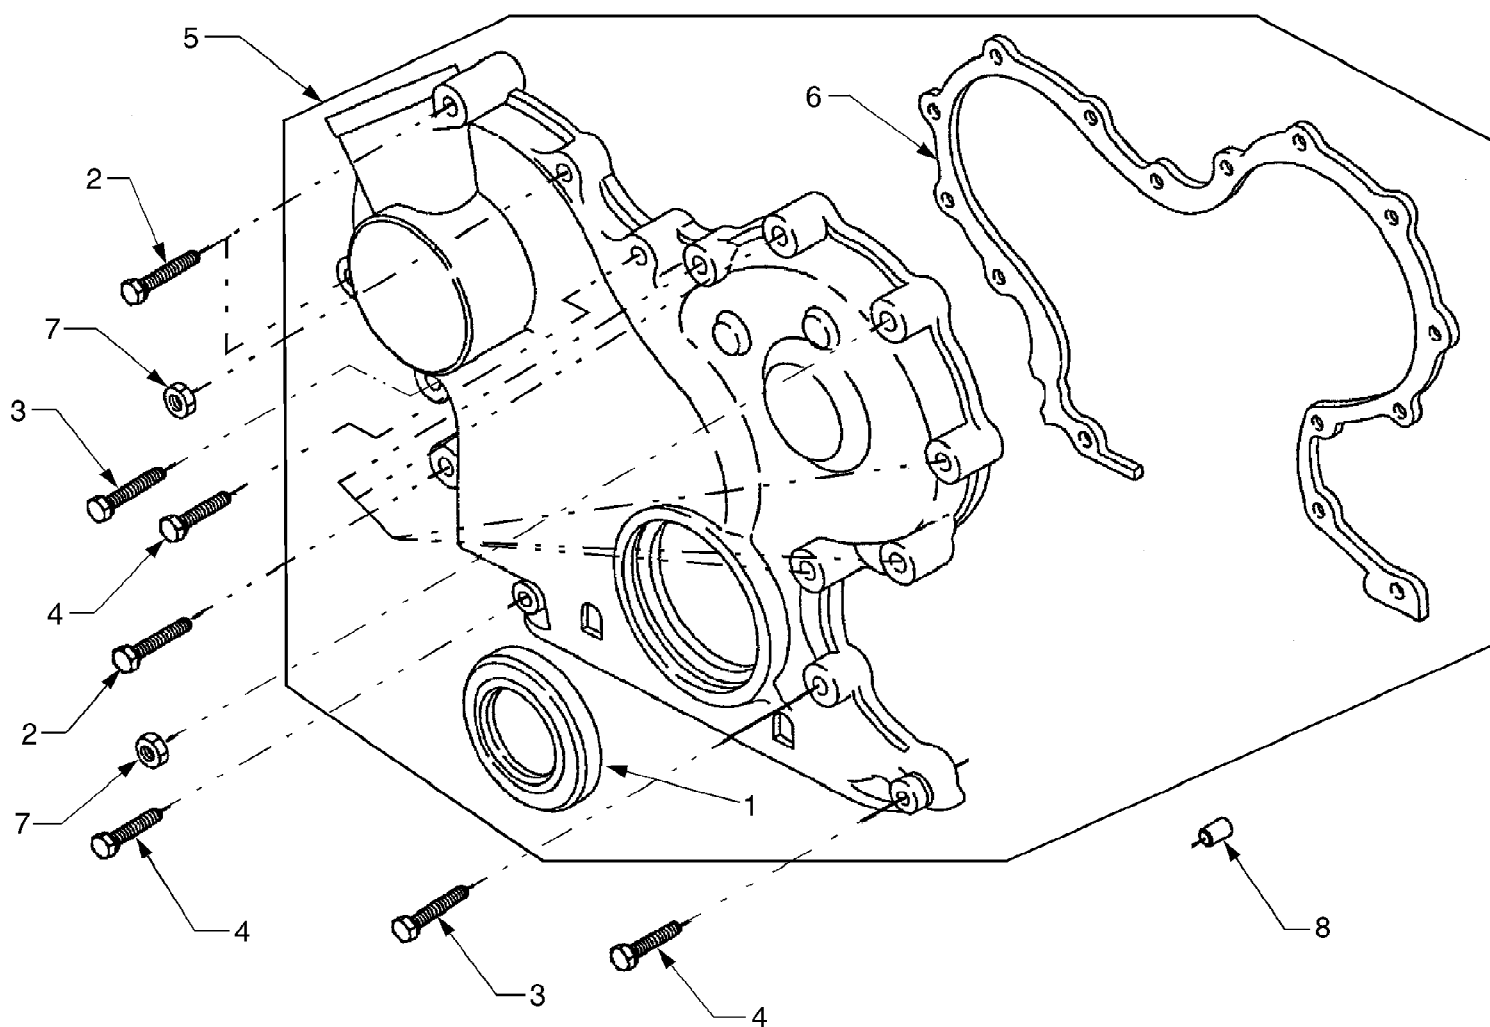

5264DL Tractor
Crankcase Cover

Page 17 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-821071	1	/P	Seal, Oil
2	BS-820425	8		Screw, Hex, 6mm
3	BS-820029	2		Screw, Hex, 6mm
4	BS-820027	3		Screw, Hex, 6mm
5	BS-825185	1		Cover Assembly, Gear
6	BS-820377	1		Gasket, Gear Cover
7	BS-820069	2		Nut, Hex Metric
8	BS-820061	2		Pin, Locating


5264DL Tractor
Crankshaft, Pistons & Flywheel

Page 19 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825552	1		Crankshaft
2	BS-825303	1		Flywheel
3	BS-825354	3		Piston Assembly, Standard
3	BS-825355	3		Piston Assembly, .010 Oversize ..
4	BS-825187	3		Ring Set, Standard
4	BS-825188	3		Ring Set, .010 Oversize
5	BS-820402	6		Lock Ring, Piston Pin
6	BS-825171	3		Rod, Connecting
7	BS-820128	6		Screw, Connecting Rod
8	BS-820080	6		Screw, Hex, 10mm
9	BS-820081	2		Screw, Hex, 8mm
10	BS-820079	1		Screw, Hex
11	BS-820073	6		Nut, Hex
12	BS-820140	1	S	Washer, Thrust, Standard
12	BS-820139	1		Washer, Thrust, .005 Oversize
13	BS-820059	1		Pin, Locating
14	BS-820611	1		Gear, Drive
15	BS-820116	1		Shaft, Gear
16	BS-820117	1		Plate, Idler Gear
17	BS-820236	1		Pulley, Crankshaft
18	BS-820142	3	S	Bearing, Rod Standard
19	BS-825019	3	S	Bearing Set, Rod Standard
19	BS-825060	3		Bearing Set, Rod, .010 Undersize
20	BS-825040	1	S	Bearing Set, Main Standard
20	BS-825039	1		Bearing Set, Main, .010 Undersize

5264DL Tractor
Cylinder Assembly

Page 20 of 77

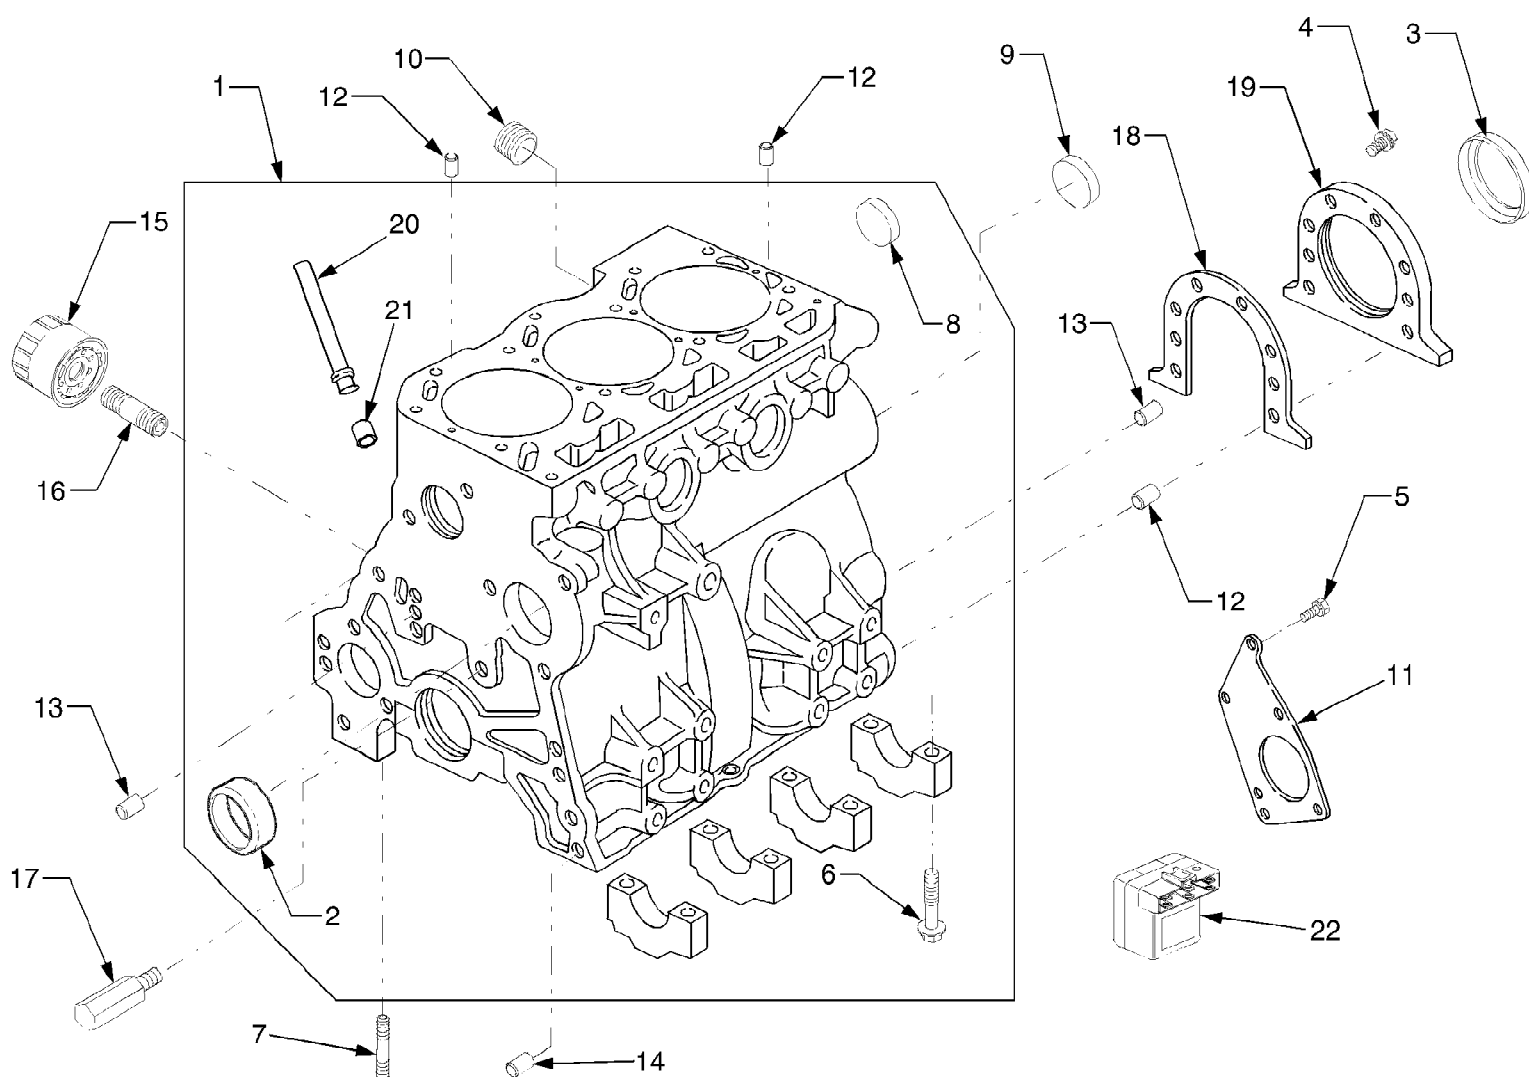


5264DL Tractor
Cylinder Assembly

Page 21 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-582447-0205	1		Service Engine
2	BS-820129	1	S	Bushing
3	BS-821073	1	S	Seal, Oil
4	BS-820031	6		Screw, Hex, 6mm
5	BS-820176	5		Screw, Hex, 10mm
6	BS-820042	8		Screw, Hex, 10mm
7	BS-820016	1		Stud, Metric
8	BS-820004	7		Plug, Welch
9	BS-821069	1		Plug, Welch Camshaft
10	BS-820052	1		Plug, Cylinder Block
11	BS-820147	1		Bracket, Mounting
12	BS-820063	4		Pin, Locating
13	BS-820062	3		Pin, Locating
14	BS-820061	2		Pin, Locating
15	BS-820314	1	/P	Filter, Oil
16	BS-820851	1		Adapter, Oil Filter
17	BS-820102	1		Nozzle, Oil
18	BS-820145	1		Gasket, Retainer
19	BS-820146	1		Seal, Retainer
20	BS-820144	1		Tube, Dipstick
21	BS-820662	1		Collar, Dipstick Tube
22	BS-820373	1		Module-Pre Heat

5264DL Tractor
Cylinder Head and Manifolds

Page 22 of 77

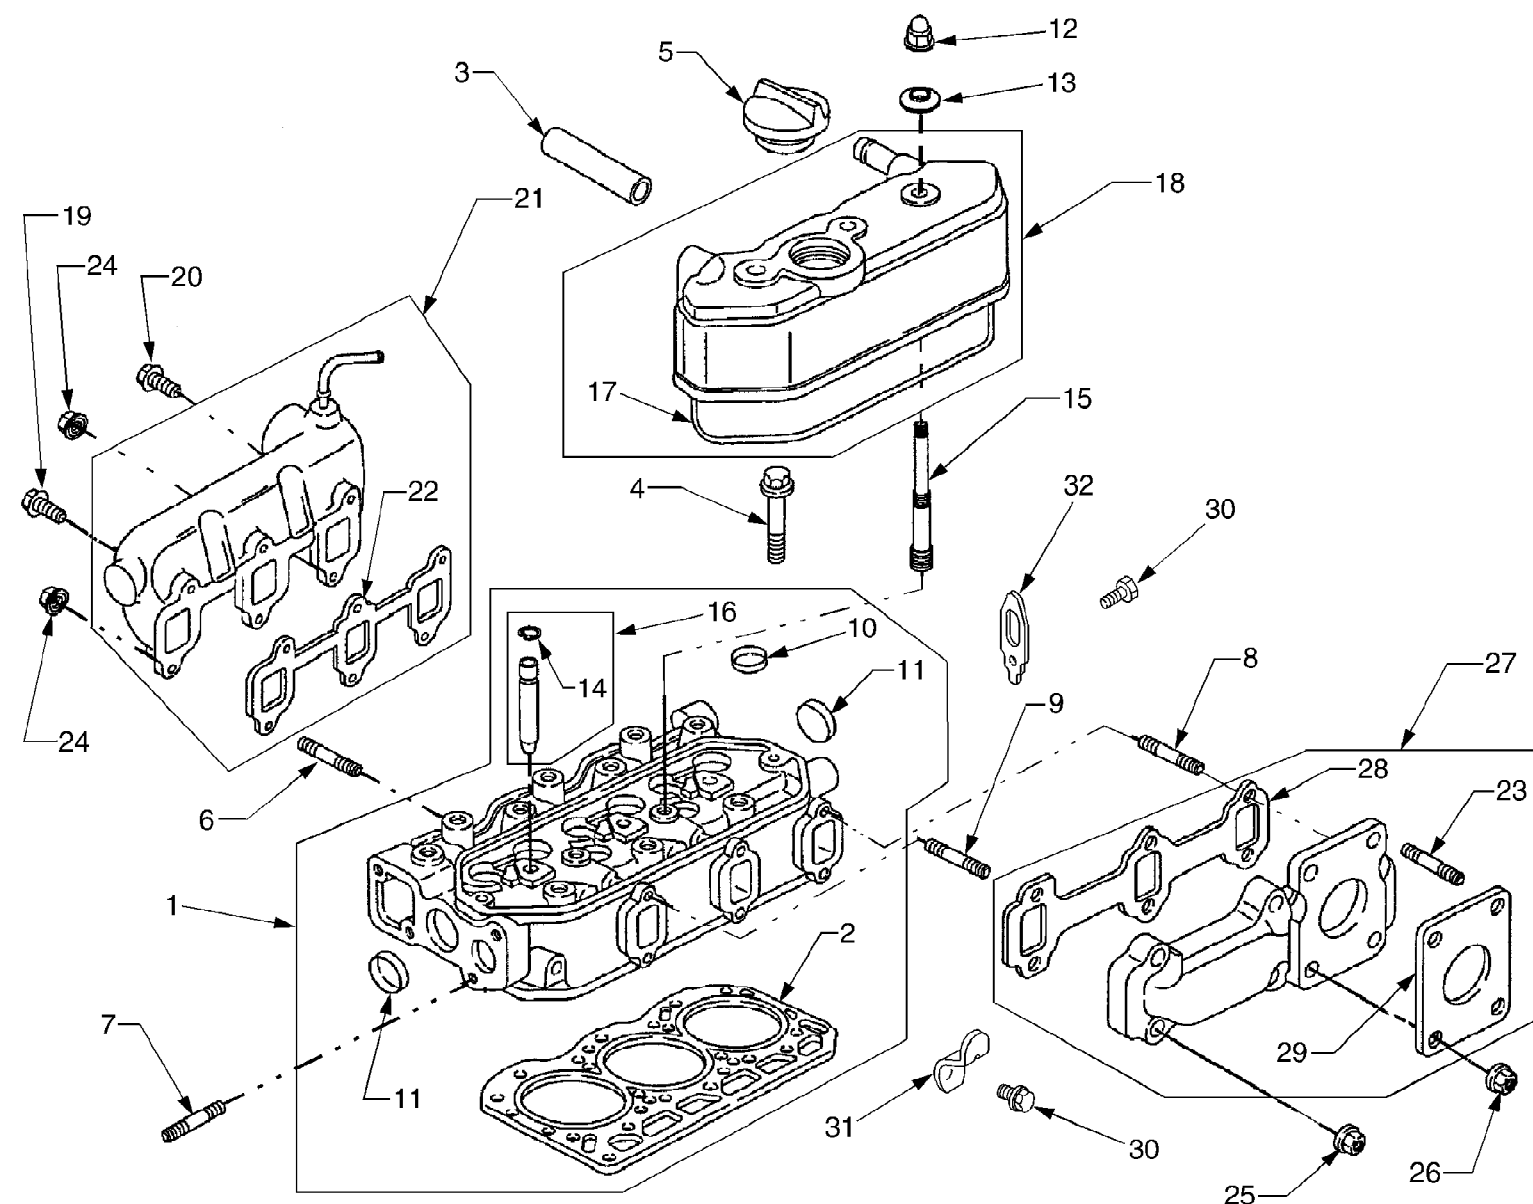


5264DL Tractor
Cylinder Head and Manifolds

Page 23 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825347	1	S	Head, Cylinder
2	BS-820660	1		Gasket, Cylinder Head
3	BS-821003	1		Tube, Breather
4	BS-820623	14		Screw, Metric
5	BS-825024	1		Cap, Oil Fill
6	BS-820015	2		Stud, Metric
7	BS-820078	2		Stud, Metric
8	BS-820014	5		Stud, Metric
9	BS-820466	1		Stud, Metric
10	BS-820004	2		Plug, Welch
11	BS-820005	2		Plug, Welch
12	BS-820071	3		Nut, Hex Metric
13	BS-820064	3		Washer, Sealing
14	BS-820130	6		Ring, Retainer
15	BS-820076	3		Stud, Rocker Arm
16	BS-825030	6		Bushing, Guide
17	BS-820150	1		Gasket, Rocker Cover
18	BS-825088	1		Cover, Rocker
19	BS-820031	1		Screw, Hex, 6mm
20	BS-820408	3		Screw, Hex, 6mm
21	BS-825175	1		Manifold, Intake
22	BS-820407	1		Gasket, Intake Manifold
23	BS-820553	4		Stud, Exhaust Manifold
24	BS-820069	6		Nut, Hex Metric (Intake Manifold)..
25	BS-820010	6		Nut, Hex Metric (Exhaust Manifold)
26	BS-820178	4		Nut, Hex Metric
27	BS-825055	1		Manifold, Exhaust
28	BS-820817	1		Gasket, Exhaust Manifold
29	BS-820670	1	S	Gasket, Muffler
30	BS-820212	2		Screw, Lifting Brkt
31	N/A	1		Bracket, Lift
32	N/A	1		Bracket, Lift

5264DL Tractor
Dash Panel and Steering Wheel


Page 24 of 77

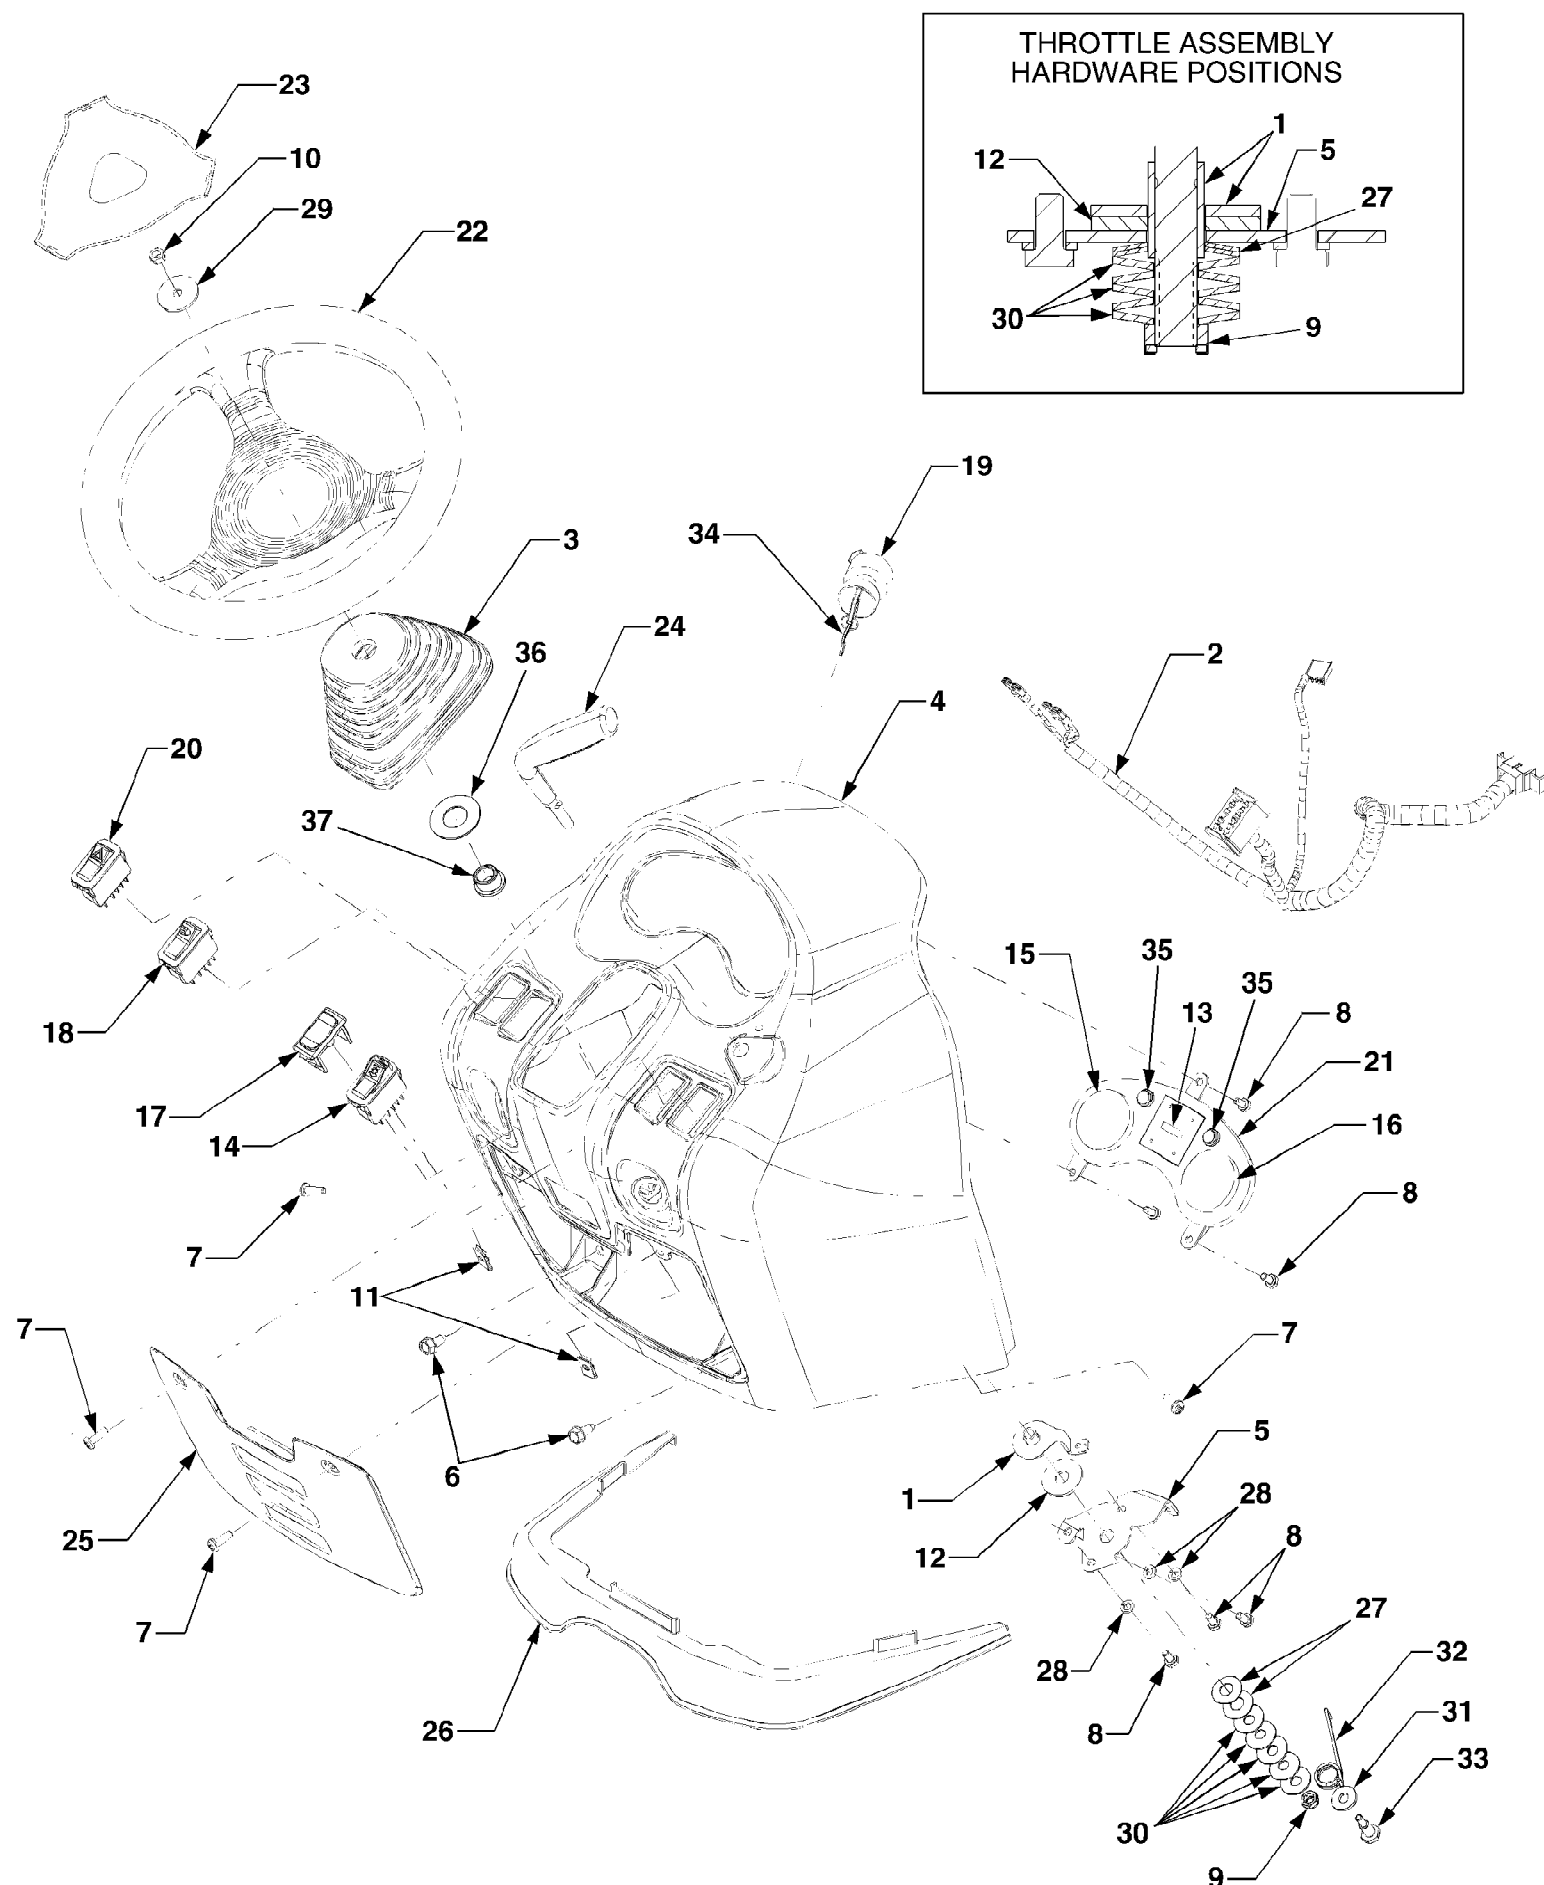

5264DL Tractor
Dash Panel and Steering Wheel

Page 25 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-04305	1	/P	Bracket, Throttle Cable
2	629-04112	1		Wire Harness, Dash
3	631-0076	1		Boot, Steering Shaft
4	631-04007B	1	S	Dash
5	703-05132A	1	/P	Bracket, Throttle Mtg.
6	710-0604A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
7	710-0924	4	/P	Screw, Pan Hd., 1/4-20 x .75
8	710-3013	5	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
9	712-0116	1	S	Nut, Hex Insert Jam Lock, 3/8-24
10	712-0237	1	S	Nut, Hex Lock, 5/16-24
11	712-0292	2	/P	Nut, Speed, 1/4-20
12	723-3013	1	S	Washer, Friction, .515 x 1.5 x .12
13	725-04022	1	S	Meter, Hour/Indicator
14	725-04076	1	S	Switch, PTO
15	725-04241	1		Gauge, Fuel
16	725-04242	1		Gauge, RPM
17	725-2017	1		Plug
18	725-3274	1		Switch, Headlight
19	725-3277	1	S	Switch, Ignition
20	725-3279B	1	/P	Switch, Hazard
21	731-05066	1		Panel, Meter
	777I22460	1		Graphic, Panel
22	731-3209	1		Steering Wheel, Soft Grip
23	731-3210	1		Cover, Steering Wheel
24	731-3298	1		Handle, Throttle
25	731-3344	1		Panel, Dash Insert
26	731-3372	1	S	Extension, Dash
27	736-0255	2	S	Washer, Belleville, .51 x 1.14 x .04
28	736-0329	2	S	Washer, Lock, 1/4
29	736-04062	1	S	Washer, Flat, .344 x 1.5 x .1
30	736-0331	5	/P	Washer, Belleville, .39 x 1.13 x .062
31	736-3072	1	/P	Washer, Flat, .38 x .93 x .110 Hdn
32	732-04288	1		Spring, Torsion
33	738-04170	1		Screw, Shoulder, .374 x .56
34	759-3950	1	S	Key Set, Ignition
35	725-04288	2	S	Lamp, Yellow Panel
36	736-0514	1	S	Washer, Flat, .885 x 1.85 x .06
37	748-0176	1		Bearing, Flange, .63 ID x .62 LG .

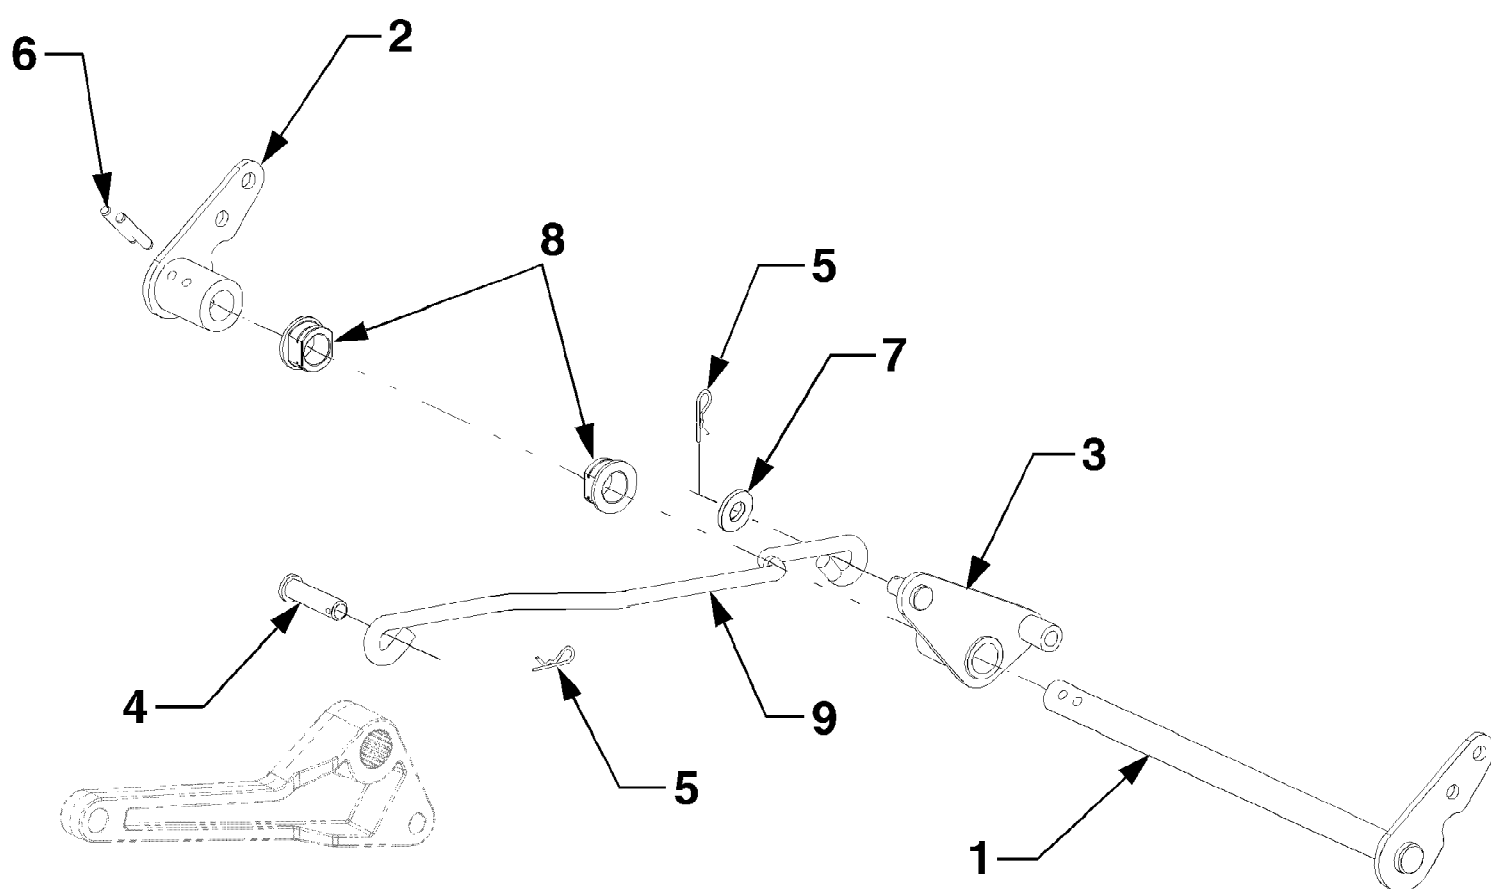


5264DL Tractor
Deck Lift

Page 27 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-0959	1	S	Shaft. Lift
2	603-0960-0637	1	/P	Arm, Lift
3	603-0979	1		Plate, Lift Crank
4	711-04343	1		Pin, Clevis, .625 x 2.18
5	714-0145	2	S	Pin, Internal Cotter
6	715-0118	2	S	Pin, Spirol, 5/16 x 1.75
7	736-0531	1	S	Washer, Flat, .635 x 1.24 x .181
8	741-0170	2	S	Bearing, Flange w/Flats
9	747-3484A	1	/P	Rod, Crank Lift

5264DL Tractor
Engine and Drive Shaft

Page 28 of 77

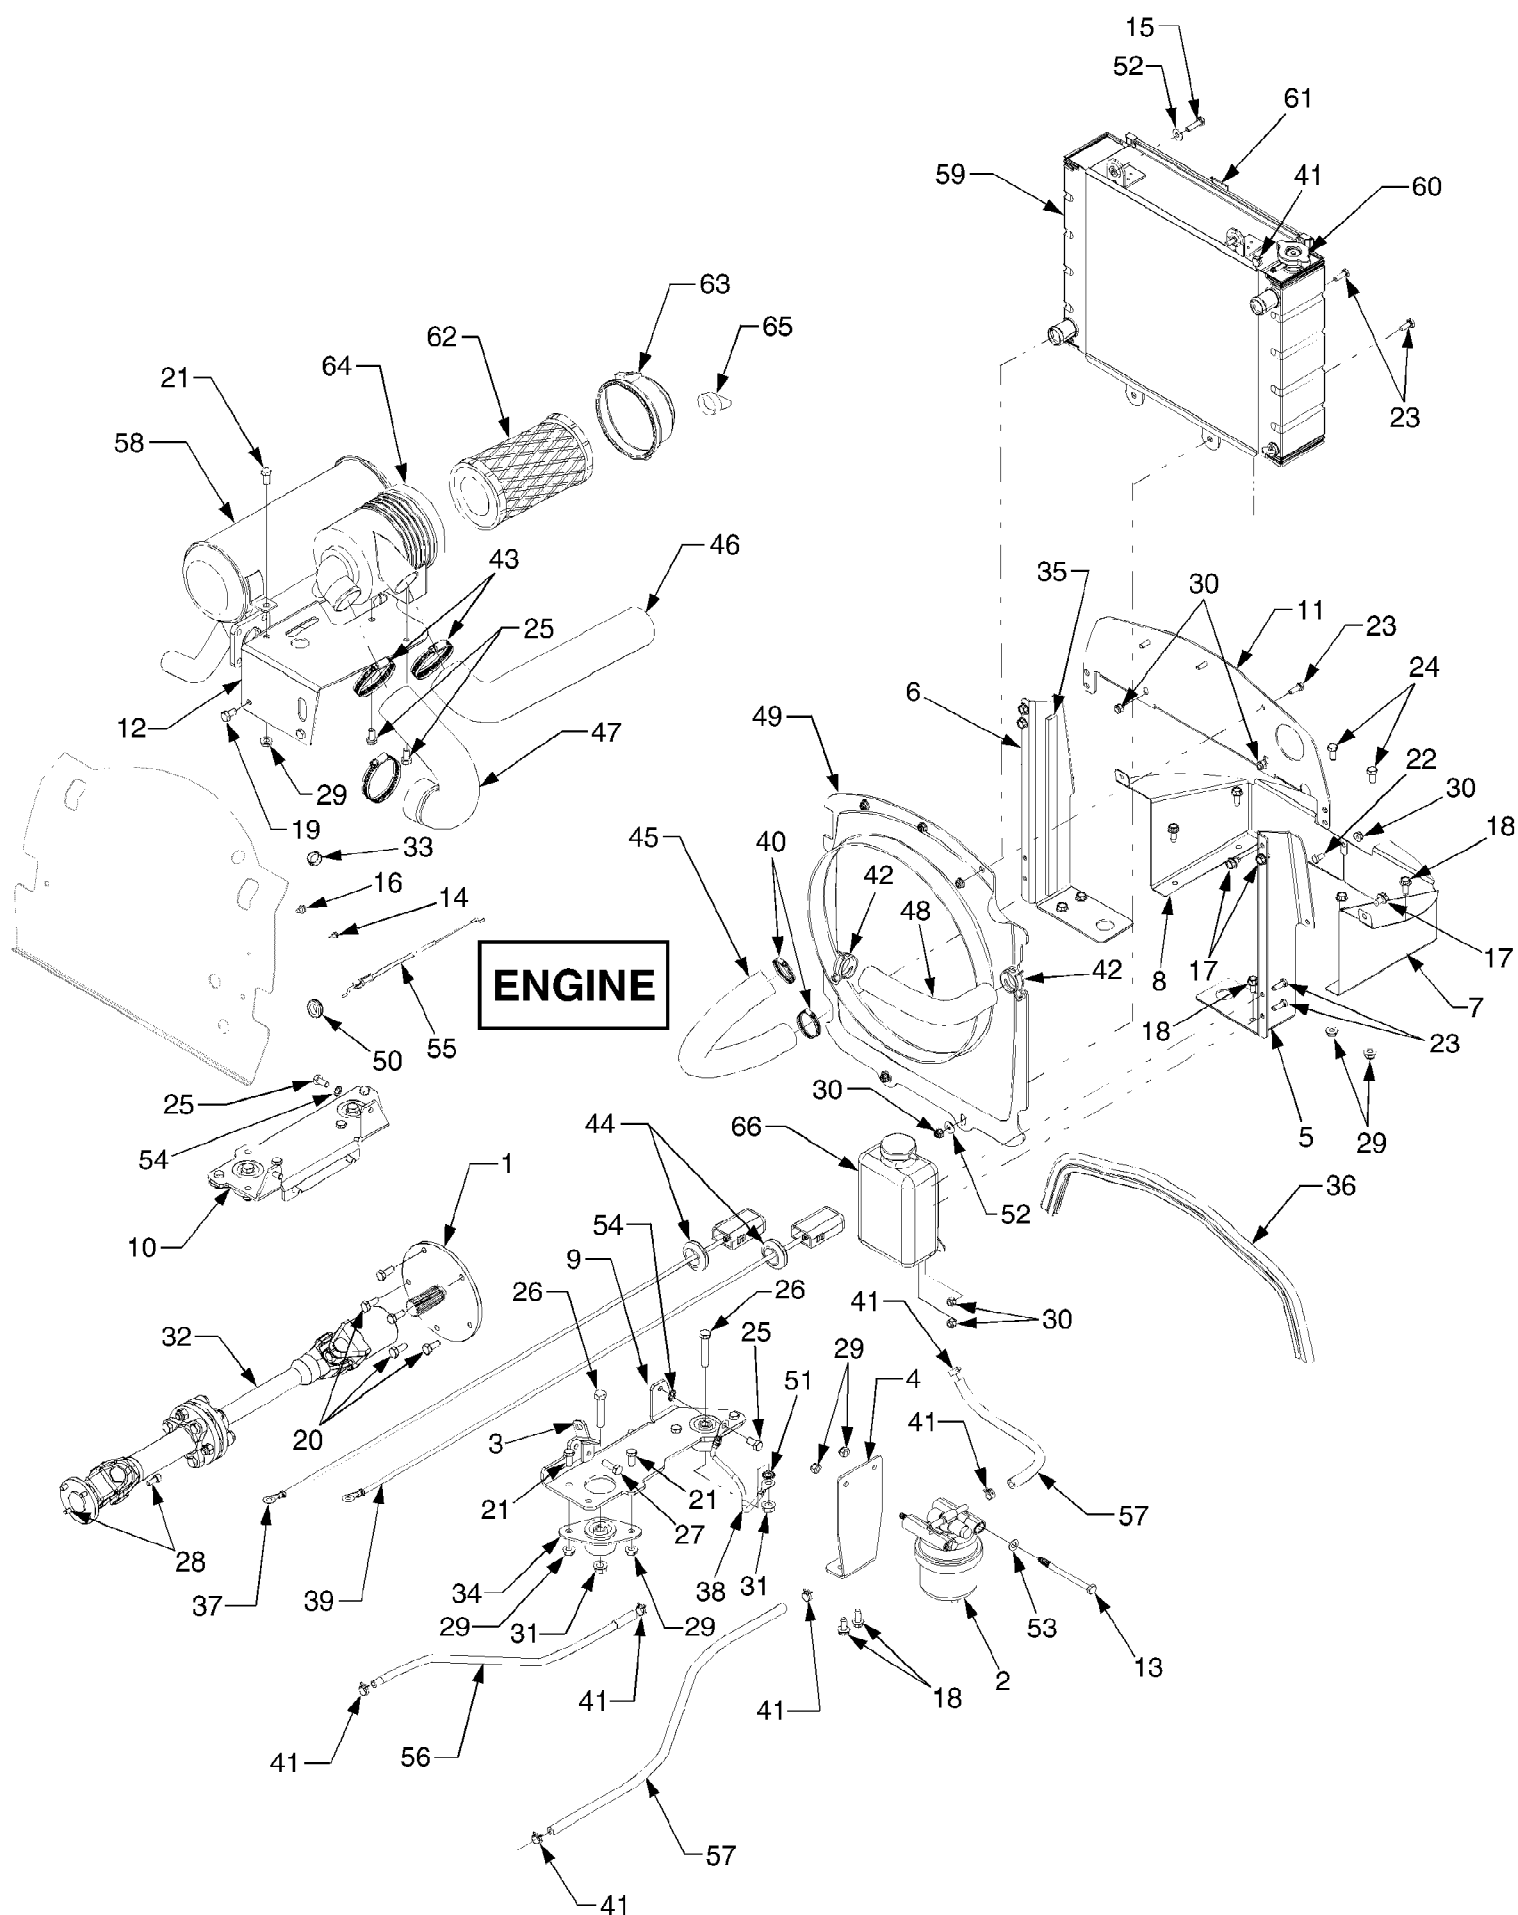

5264DL Tractor
Engine and Drive Shaft


Page 29 of 77

Ref #	Part Number	Qty	S/P/F	Description
	629-3062B	1	S	Harness, Engine Wire not shown
1	603-04294	1	S	Plate, Flywheel
2	651-04044	1	S	Filter Assembly, Fuel
2	759-04027	1		Filter Element
3	703-05200	1		Bracket, Pump Mtg.
4	703-05454	1	S	Bracket, Fuel Filter Mtg.
5	703-05834	1		Bracket, Radiator Supt. RH
	777S30632	1		Graphic, Warning
6	703-05835	1		Bracket, Radiator Supt. LH
	777S30632	1		Graphic, Warning
7	703-05836	1		Plate, Baffle RH
8	703-05837	1		Plate, Baffle, LH
9	703-05841-0637	1	/P	Bracket, Engine RH
10	703-05842	1		Bracket, Engine LH
11	703-3483A	1		Plate, Radiator Baffle
	777S30631	1		Graphic, Fan Warning
	777S30633	1		Graphic, Warning
12	703-3486	1		Bracket, Muffler Mtg.
13	710-0190	2	/P	Screw, Hex Cap, 5/16-18 x 4.0 GR5
14	710-0224	1	S	Screw, Hex Wash Hd Tapp 10-16 x .5
15	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
16	710-0599	1	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
17	710-0607	6	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
17	710-0623	4	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
18	710-1260A	10	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .75
19	710-1376	3	/P	Screw, Hex Cap, M8-1.25 x 16
20	710-1681	5	/P	Screw, Hex Cap, M8-1.25 x 20
21	710-3008	10	/P	Screw, Hex Cap 5/16-18 x .75 GR5
22	710-3013	1	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
23	710-3015	7	/P	Screw, Hex Cap 1/4-20 x .75 GR5
24	710-3025	2	/P	Screw, Hex Cap, 5/16-18 x .625 GR5
25	710-3138	17	/P	Screw, Hex Cap, M8-1.25 x 16
26	710-3144	4	/P	Screw, Hex Cap 3/8-16 x 2/0 GR5
27	710-3206A	1	/P	Screw, Hx Cap, M8-1.25:25 GR8
28	710-3218	4		Screw, Socket Hd. Cap, 1/4-20 x .62 GR8
29	712-04063	14	/P	Nut, Hex Flange Lock, 5/16-18
30	712-04064	10	/P	Nut, Hex Flange Lock, 1/4-20 ..
31	712-04065	4	/P	Nut, Hex Flange Lock, 3/8-16 ..
32	717-04193	1	S	Shaft, Drive
33	720-0425	1		Plug, Cap
34	722-0262	4		Mount, Neoprene Engine
35	722-3022	1	S	Tape, Foam, .625 wide 42in.
36	723-3061	1		Seal, Heat Baffle 25in.
37	725-3281	1		Wire, Battery Pos.
38	725-3283	1		Wire, Ground
39	725-3287	1		Wire, Battery Neg.
40	726-0132	2	/P	Clamp, Hose
41	726-0205	7	/P	Clamp, Hose
42	726-04026	2		Clamp, Hose
43	726-0476	3		Clamp, Adjustable Hose
44	731-04018	2		Grommet, Hose Guard
45	731-3304A	1		Hose, Radiator to Engine
46	731-3348	1		Hose, Air Filter

5264DL Tractor
Engine and Drive Shaft

Page 30 of 77


Ref #	Part Number	Qty	S/P/F	Description
47	731-3349	1		Hose, Air Inlet
48	731-3350	1		Hose, Engine to Radiator
49	731-3363	1		Shroud, Fan
50	735-0226	1		Grommet, Rubber
51	736-0148	1	/P	Washer, External Lock, 3/8
52	736-0173	4	/P	Washer, Flat, .28 x .74 x .063 ..
53	736-0275	2	S	Washer, Flat, .344 x .688 x .065
54	736-0607	2	/P	Washer, External Lock, 5/16
55	746-3086A	1		Cable, Throttle
56	751-0535	1		Hose, Fuel Line 77in.
57	751-3130	1		Fuel Line, 5/16 ID 92in.
58	751-3163	1		Muffler, Engine
59	751-3165	1		Radiator
59	722-0268	2		Grommet, Rubber Mtg.
60	751-3192	1	S	Cap, Radiator, 13psi
61	751-3193	1		Screen, Debris
62	751-3194	1	/P	Element, Air Cleaner
63	751-3195	1		Cap, Air Cleaner
64	751-3196	1		Cannister, Air Cleaner
65	751-3197	1		Nozzle, Air Cleaner
66	BS-825462	1		Bottle, Overflow

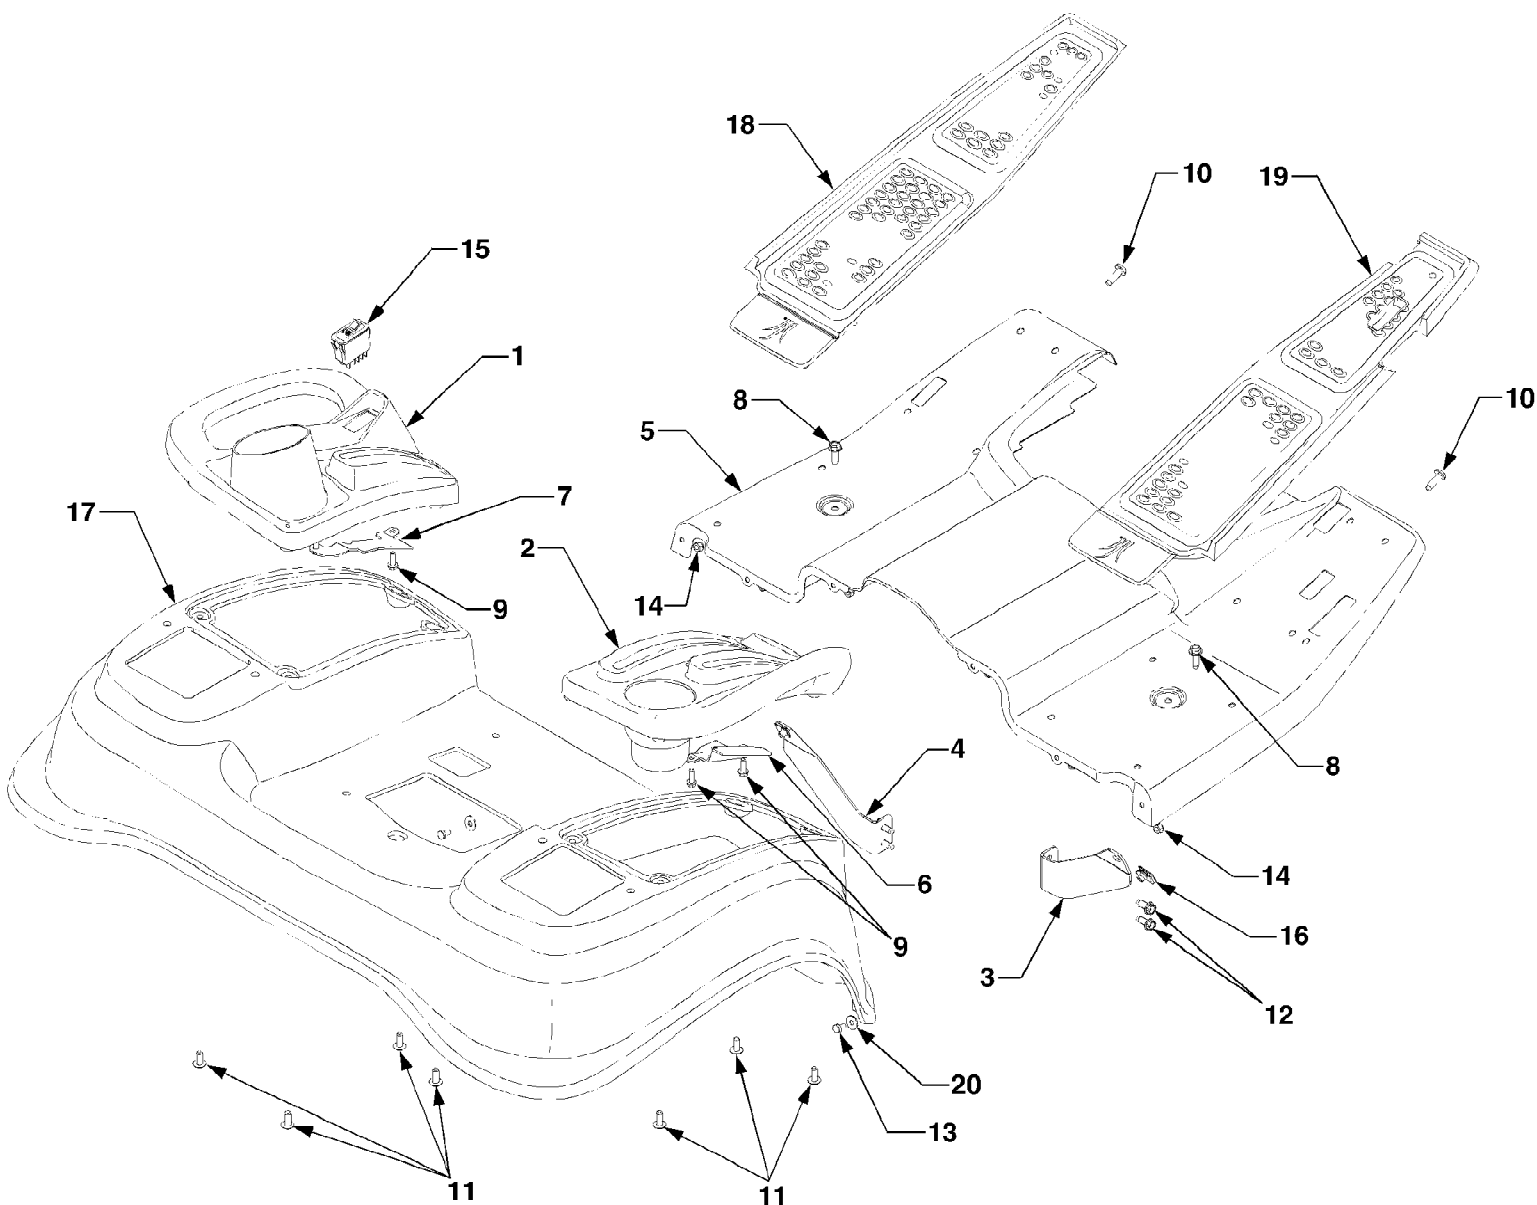

5264DL Tractor
Fender and Running Board

Page 32 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	631-04031	1	S	Cover, Fender, LH
2	631-04032	1	S	Cover, Fender, RH
3	703-05105-0637	1	/P	Bracket, Running Brd Mtg. RH
4	703-05113-0637	1	/P	Bracket, Running Brd Mtg. LH
5	703-05199-0716	1		Running Board
	777S32332	1		Graphic, Instruction
	777S32274	1		Graphic, Warning
6	703-05306A	1	S	Bracket, Lift Float Gate
7	703-05307A	1		Bracket, Shift Gate, Hi-Lo
8	710-0602	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
9	710-0895	4		Screw, Hex Wash. Hd, Tapp 1/4-15 x .75
10	710-0971	2		Screw, Pan Hd. 5/16-18 x 1.0 ..
11	710-1242	8	/P	Screw, Truss Phillips Hd. 5/16-14 x .75
12	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
13	710-3013	6	/P	Screw, Hx. Cap, 1/4-20 x .5 GR5
14	712-0324	6	/P	Nut, Hx. Insert Lck, 1/4-20 GR8
15	725-3273	1		Switch, PTO Reverse
16	726-0211	2	S	Nut, Speed, 5/16-18
17	731-05089	1	S	Fender
17	777D07729	1	/P	Graphic, Power Shaft
17	777S32286	1		Graphic, Warning
17	777D09641	2		Graphic, 4WD
18	735-0275	1		Pad, Floor - LH
19	735-0276	1		Pad, Floor - RH
20	736-3090	6	/P	Washer, Flat, .26 x .72 x .06

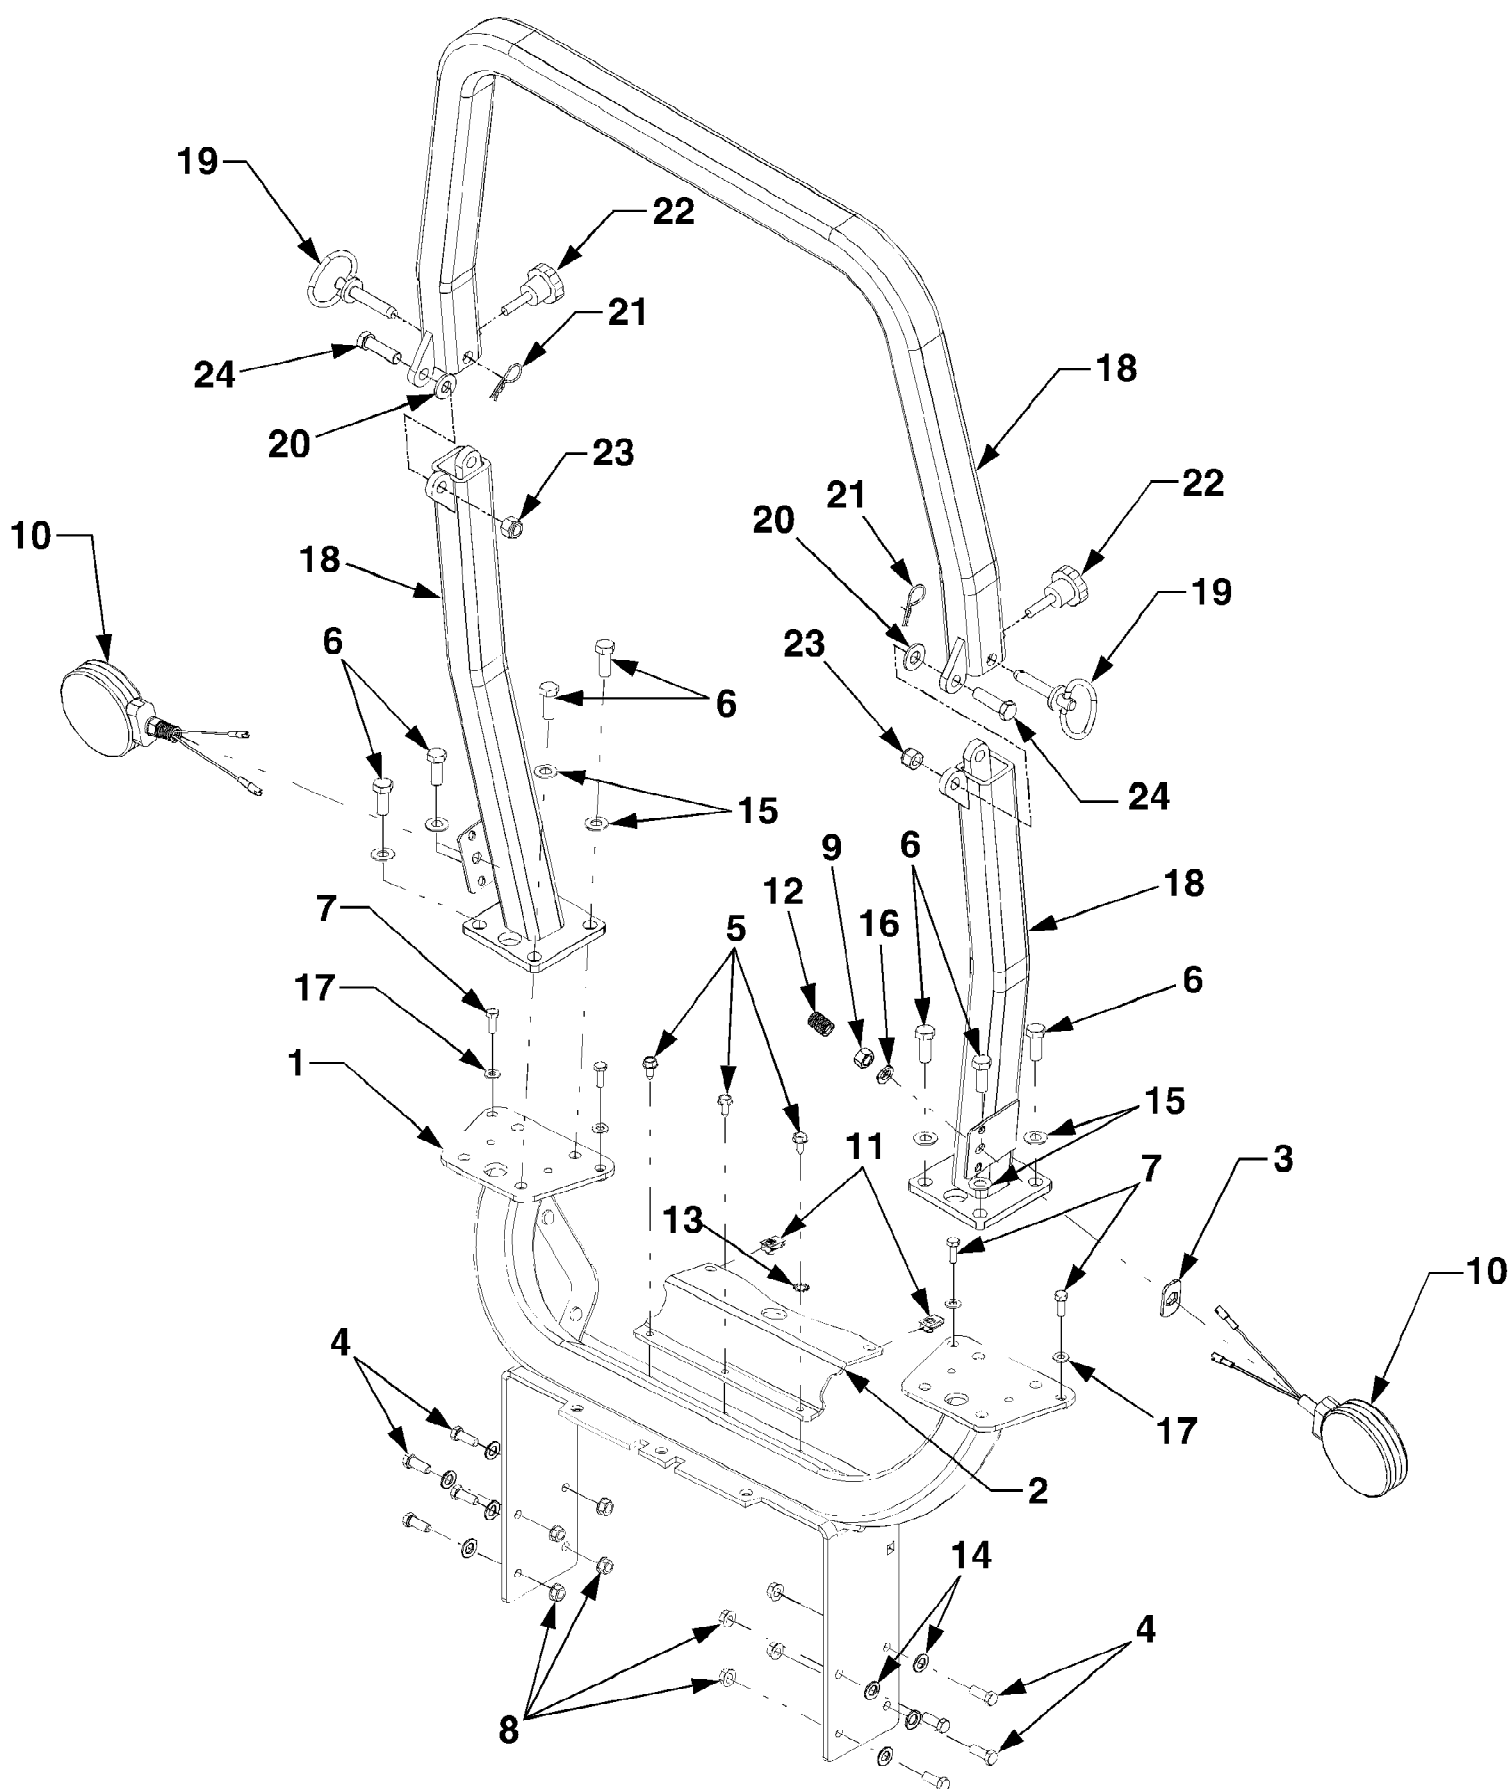

5264DL Tractor
Foldable ROPS

Page 34 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	603-04012	1		Rops, Lower
2	703-05032-0637	1	/P	Bracket, Rear Seat Mounting
3	703-05770-0637	2		Plate, Spacer
4	710-0514	8	/P	Screw, HHC, 3/8-16 x 1.0 GR5
5	710-1260A	3	/P	Screw, Hex Wash. Hd. Tapp 5/16-18-.75
6	710-04186	8	/P	Scrw, Hx Lk, 1/2-13 x 1.25 GR5
7	710-3038	4	/P	Scrw, HHC, 5/16-18 x .87 GR5
8	712-04065	8	/P	Nut, Hx. Insert Flage Lock, 3/8-16 GRF
9	712-3066	2	S	Nut, Hex, 1/2-20 GR5
10	725-04266	2	S	Light, Hazard
11	726-0211	2	S	Nut, Speed, 5/16-18
12	731-0757	1		Conduit 12in.
13	736-0148	1	/P	Washer, Ext. Tth Lock, 3/8 ...
14	736-0185	8	S	Washer, Flat, .375 x .74 x .063
15	736-0272	8	S	Washer, Flat, .51 x 1.0 x .060
16	736-0921	2	S	Washer, Lock, 1/2
17	736-3089	4	/P	Washer, Flat, .345 x 1.0 x .10
18	759-04038	1		Assembly, ROPS (Includes Ref . Nos. 19 thru 24)
	777X41480	2		Decal, Reflective
19	711-04393	2		Pin, Pull
20	736-0600	2		Washer, Flat
21	714-3003	2	S	Pin, Internal Cotter
22	731-05131	2		Knob Assembly
23	712-3083	2	/P	Nut, Hex Insert Lock, 1/2-13
24	710-3067	2	/P	Scrw, HHC, 1/2-13 x 1.75 GR5

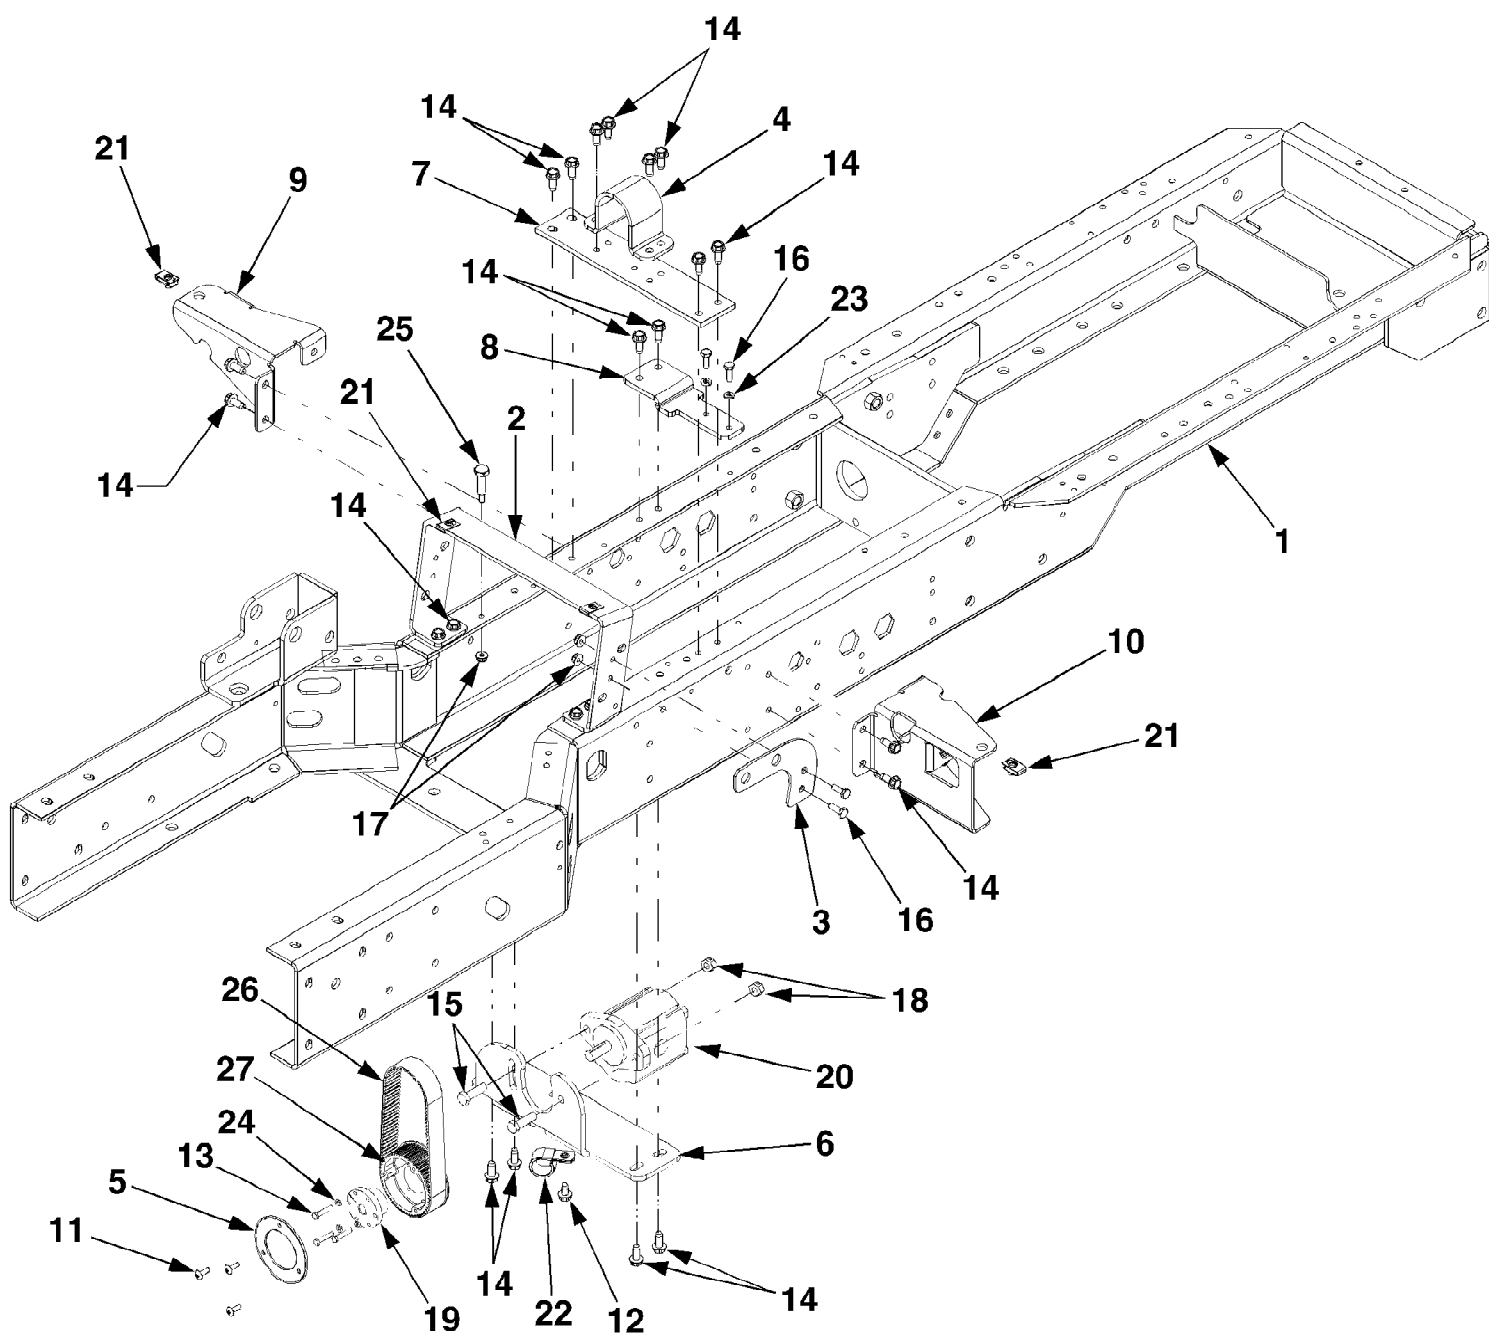

5264DL Tractor
Frame

Page 36 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	603-0961B-0637	1		Frame
2	703-05031-0637	1	/P	Bracket, Front Seat Mount
3	703-05714-0637	1		Bracket, Fitting Mtg.
4	703-05737-0637	1		Shield, Drive Shaft
5	703-05741	1		Keeper, Belt
6	703-05743-0637	1		Bracket, Aux. Pump Mtg.
7	703-05748-0637	1		Shield Lower Drive Shaft
8	703-05771A-0637	1	/P	Plate, Filter Mounting
9	703-4124A-0637	1		Bracket, Running Board Mtg.
10	703-4125A-0637	1		Bracket, Running Board Mtg.
11	710-0473	3	/P	Screw, Truss Hd. Mach. #10-24 x .5
12	710-0607	1	/P	Screw, Hex Wash. Hd Tapp 5/16-18 x .5
13	710-1194	3		Screw, Hex Mach. #10-24 x 1.0 GR5
14	710-1260A	25	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .75
15	710-3005	2	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
16	710-3015	4	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
17	712-04064	3	/P	Nut, Hex Nylon Flange Lock, 1/4-20 GRF
18	712-03000	2		Nut, Hex Lock, 3/8-20 GrB
19	718-04129	1	S	Bushing, Tapered
20	718-04130	1	S	Pump, Aux. Hydraulic
21	726-0211	4	S	Nut, U Speed, 5/16-18
22	726-0475	1		Clamp
23	736-0329	2	S	Washer, Lock, 1/4
24	736-0722	3	S	Washer, Lock, #10
25	738-0572	1	S	Screw, Shoulder, .374 x 1.16
26	754-04086	1	S	Belt, HTS, 5 x 25 x 500
27	756-04176	1	S	Pulley, 52T Cog

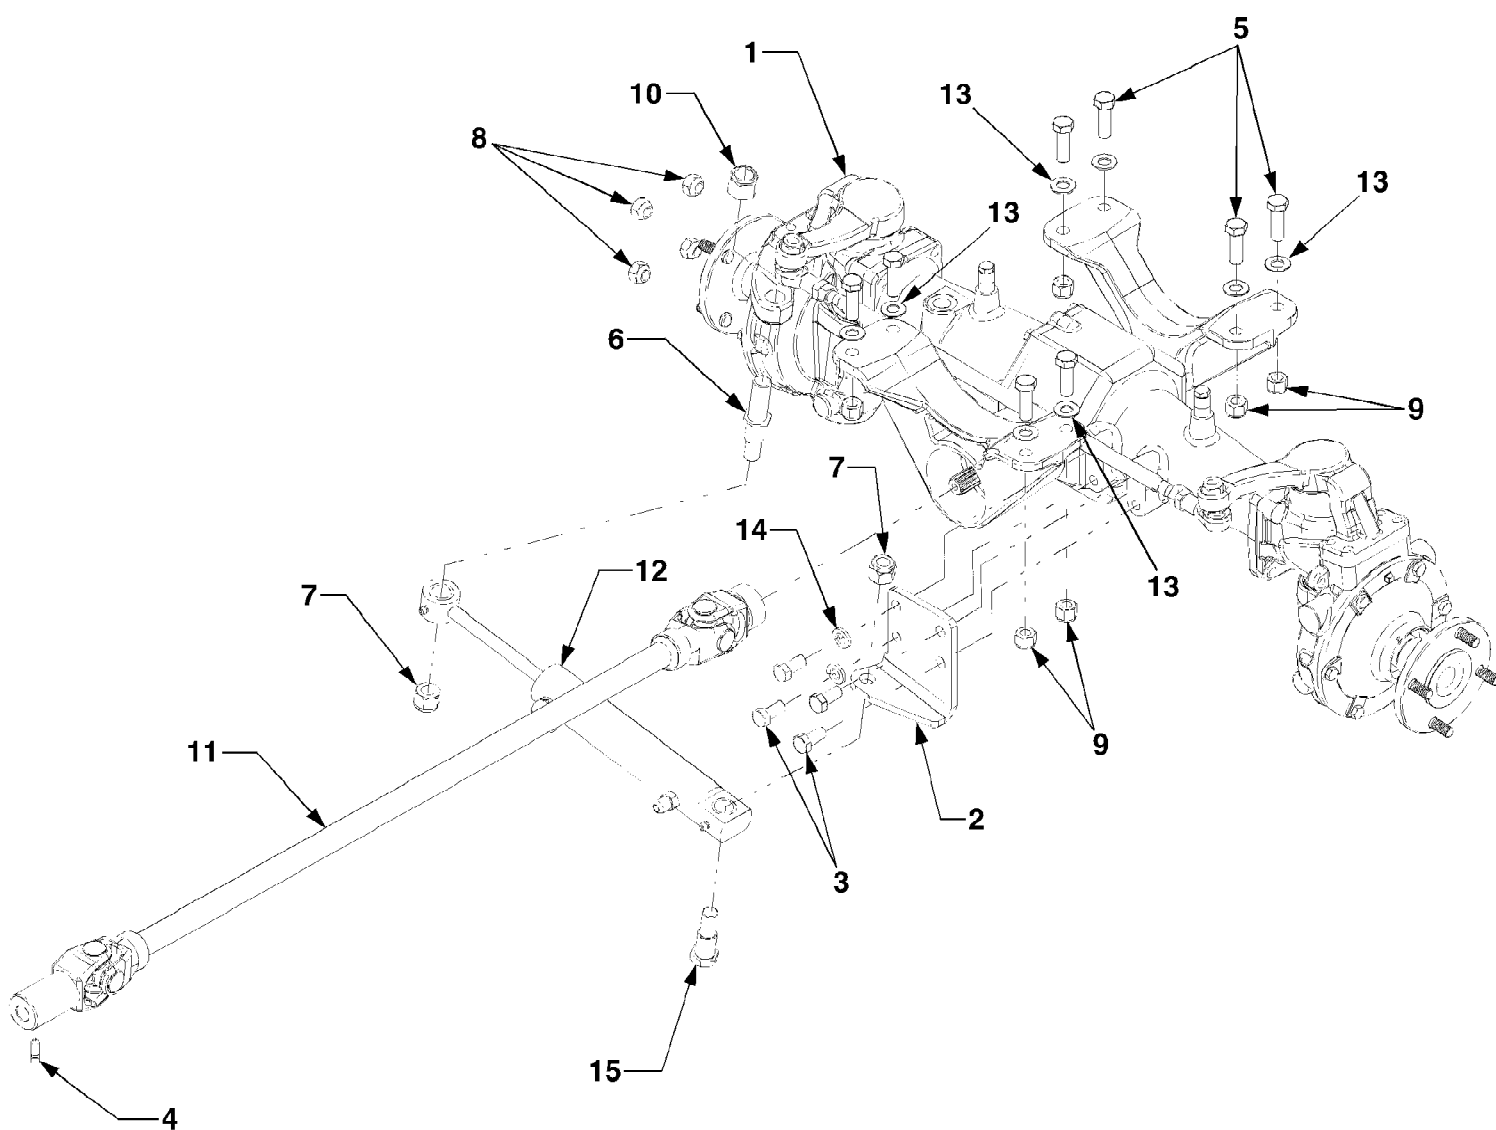

5264DL Tractor
Front Axle

Page 38 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	618-04028A	1	S	Axle, 4WD Front
2	703-05357	1	S	Bracket, Cylinder Mounting
3	710-04208	4		Screw, Hex Cap, w/Patch M12-1.75 x 25 GR8
4	710-04214	1		Screw, Sq. Hd Lock. 5/16-18
5	710-3181	8	/P	Screw, Hex Cap 1/2-13 x 1.5 GR5
6	711-1410	1		Stud, Cylinder Mounting
7	712-3016	2	/P	Nut, Hex Insert Lock 5/8-11 GR5
8	712-3050	8	/P	Nut, Lug, 7/16-14
9	712-3083	8	/P	Nut, Hex Insert Lock, 1/2-13 GR8
10	712-3107	1	/P	Nut, Hex Lock, 3/4-10 GRC
11	717-04010	1	S	Shaft, 4WD Drive
12	717-04119	1	S	Cylinder, Steering
12	727-3012	1	/P	Fitting, 90 Deg Hyd 3/8 x 3/8 Not shown
12	927-3002	1	/P	Connector - Swivel Tube 37 Degree Fl Not shown
13	736-0272	8	S	Washer, Flat, .51 x 1.0 x .06
14	736-0921	2	S	Washer, Lock, 1/2
15	738-04049	1	S	Screw, Shoulder, .75 x 1.03

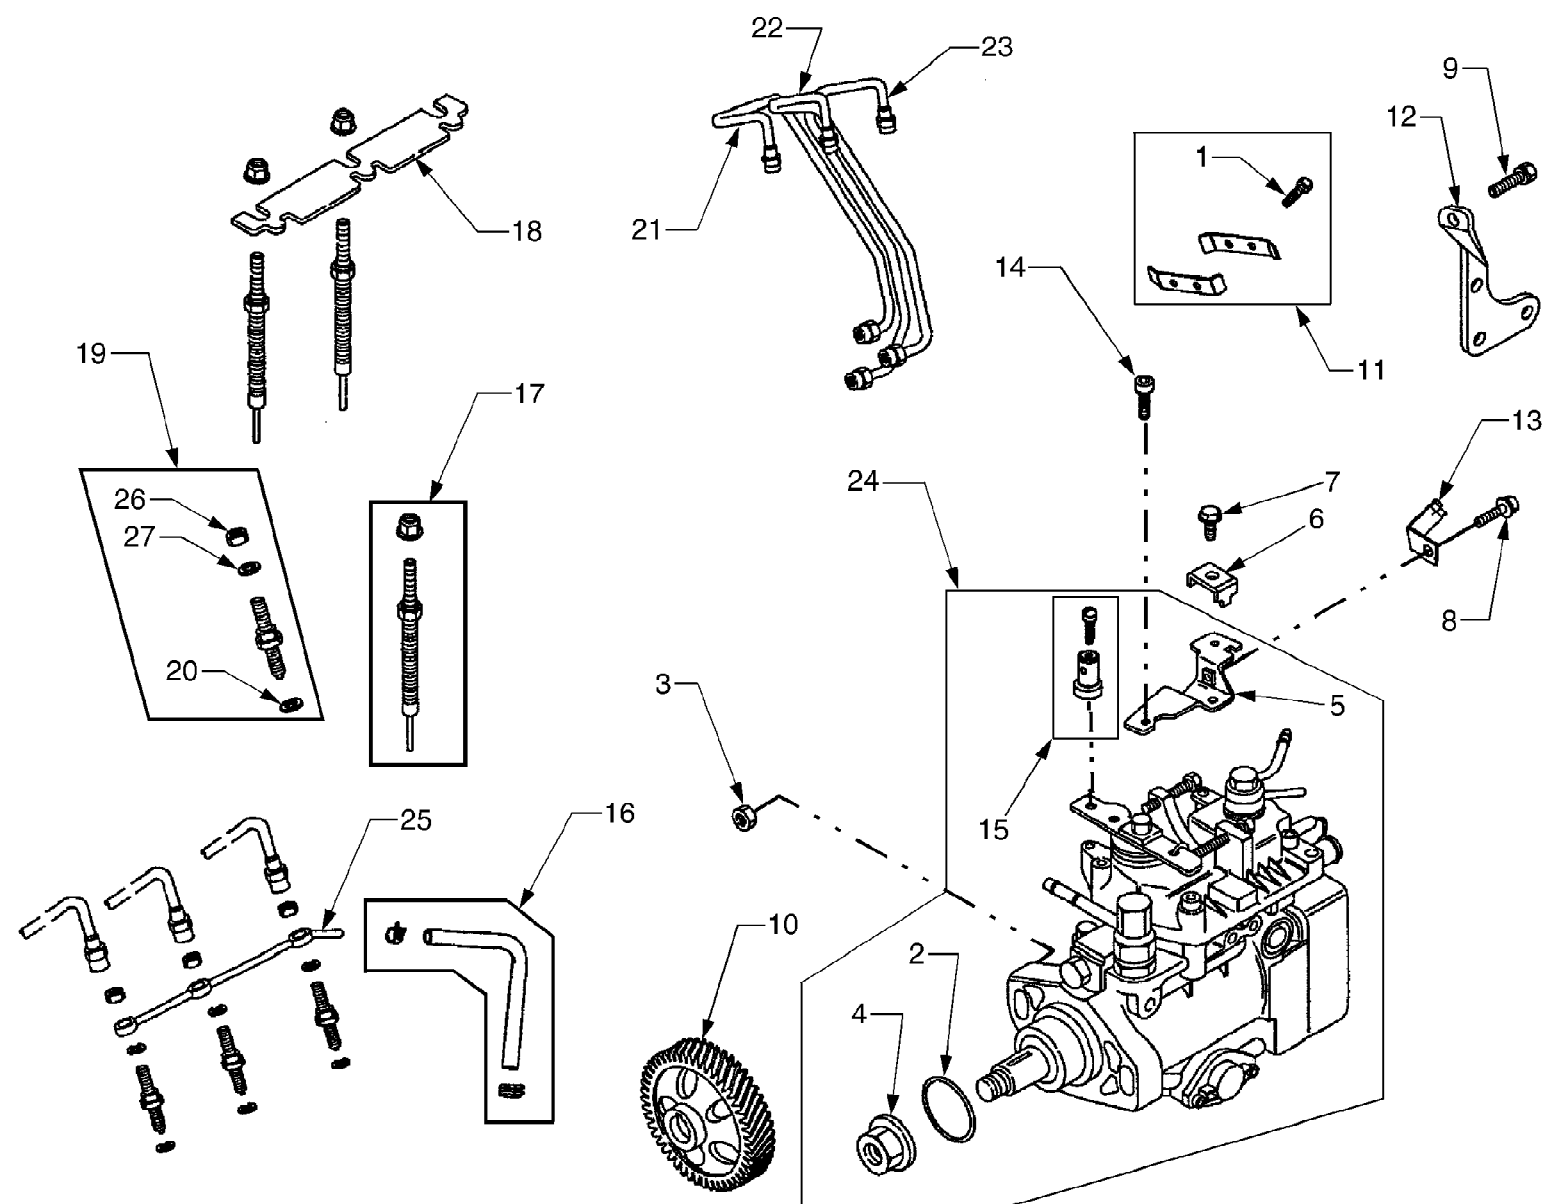

5264DL Tractor
Fuel Injection System

Page 40 of 77



Ref #	Part Number	Qty	S/P/F	Description
1	BS-820031	2		Screw, Hex, 6mm
2	BS-820414	1		Seal, O-Ring
3	BS-820417	2		Nut, Hex Metric
4	BS-820419	1		Nut, Hex Metric
5	BS-820634	1		Bracket, Casing Clamp
6	BS-820225	1		Clamp, Casing
7	BS-820012	1		Screw, Casing Clamp
8	BS-820593	1		Screw, Support Bracket
9	BS-820272	4		Screw, Support Bracket
10	BS-820619	1		Gear, Drive
11	BS-825197	1		Clamp
12	BS-820415	1		Bracket, Support
13	BS-820479	1		Bracket, Support
14	BS-820640	1		Screw, Casing Clamp Bracket
15	BS-820467	1		Clamp, Swivel
16	BS-825179	1		Hose/Clamp Ass'y., Fuel Return
17	BS-825176	3	S	Plug, Glow
18	BS-820409	1		Strap, Glow Plug
19	BS-825178	3		Nozzle, Injector
20	BS-820411	3		Seat, Injector
21	BS-825194	1		Pipe, Injector #1
22	BS-825195	1		Pipe, Injector #2
23	BS-825196	1		Pipe, Injector #3
24	BS-825300	1		Pump, Injection
25	BS-820412	1		Pipe, Fuel Return
26	BS-820829	3		Nut, Hex Injector Nozzle
27	BS-820831	3		Washer, Injector Nozzle

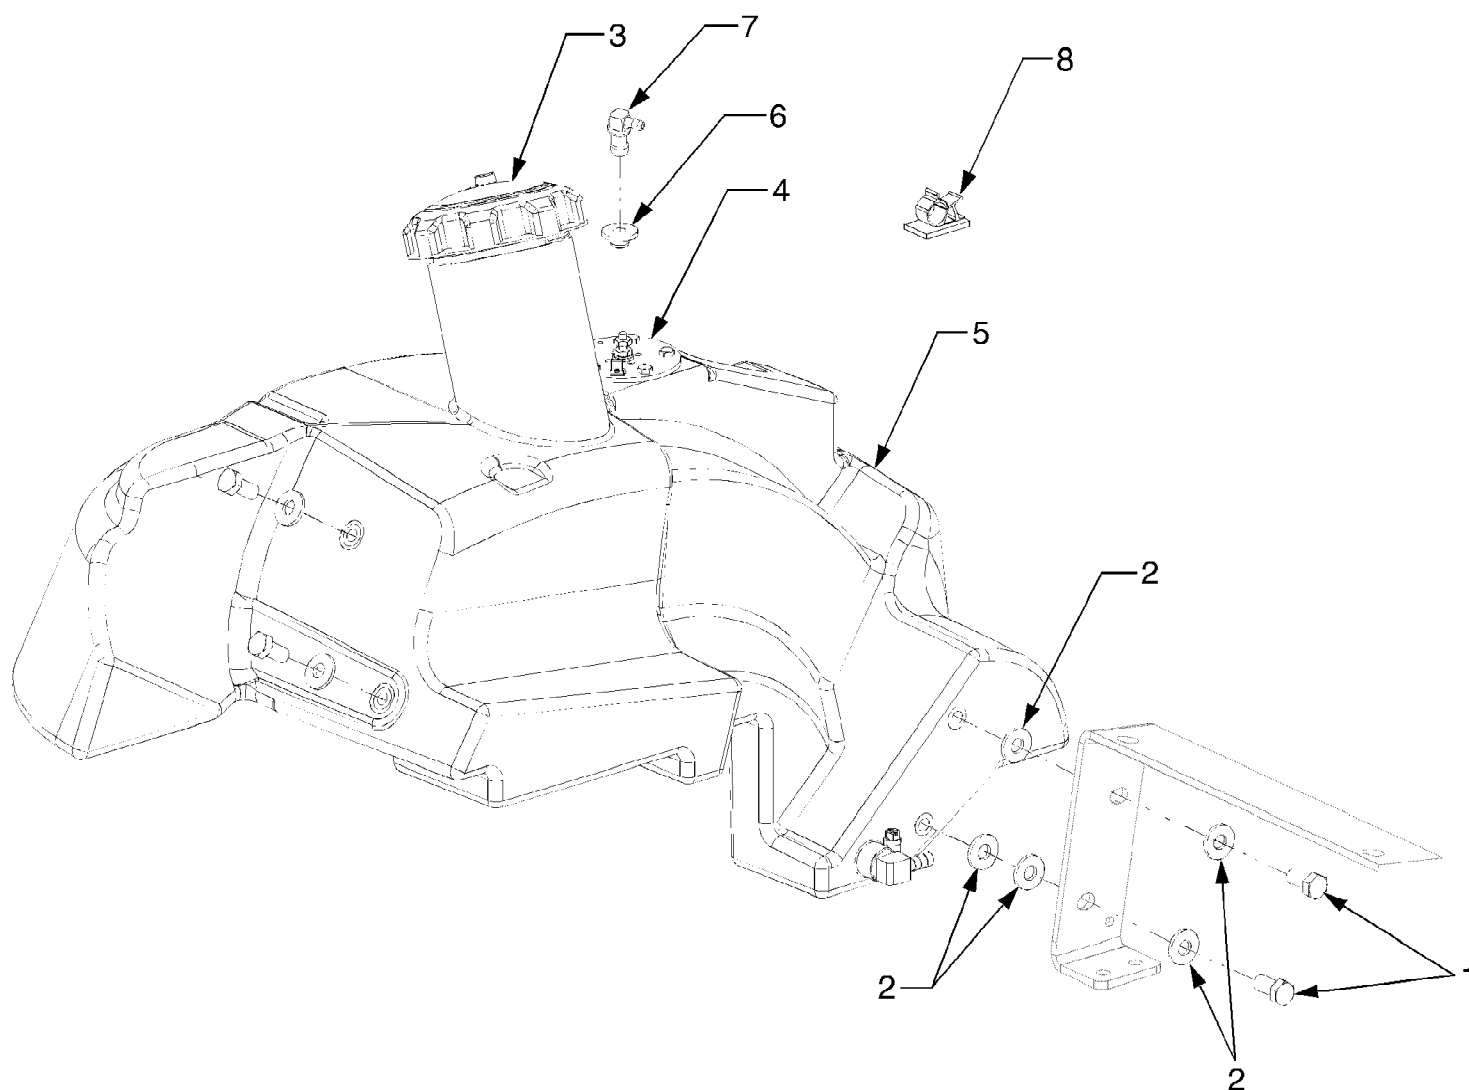

5264DL Tractor
Fuel Tank

Page 42 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	710-3119	4	/P	Screw, Hex Cap, Lock 3/8-16 x .75 GR5
2	736-0262	7	/P	Washer, Flat, .385 x .87 x .092
3	751-3188	1	/P	Cap, Fuel
4	751-10099	1	S	Sensor, Fuel Level
5	751-3211	1		Tank, Fuel
6	735-0149	1	S	Bushing, Rubber
7	751-3174	1		Fitting, Fuel Return
8	726-04010	1		Clip, Retainer

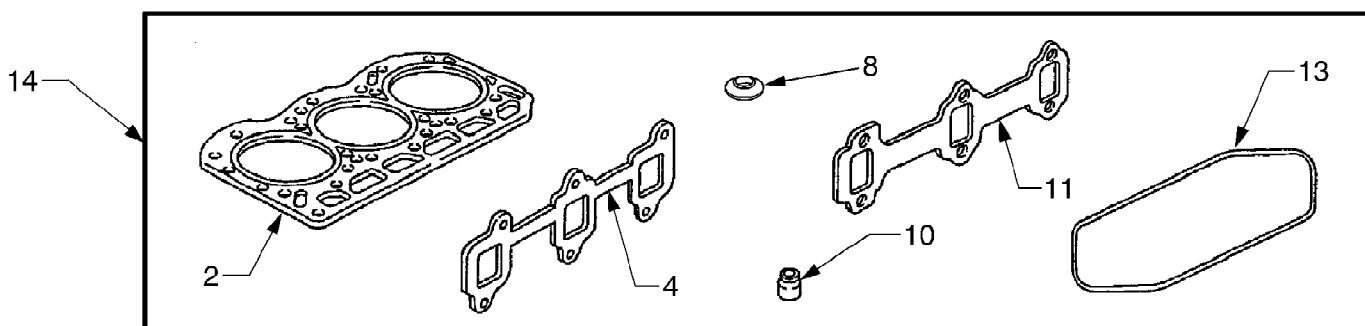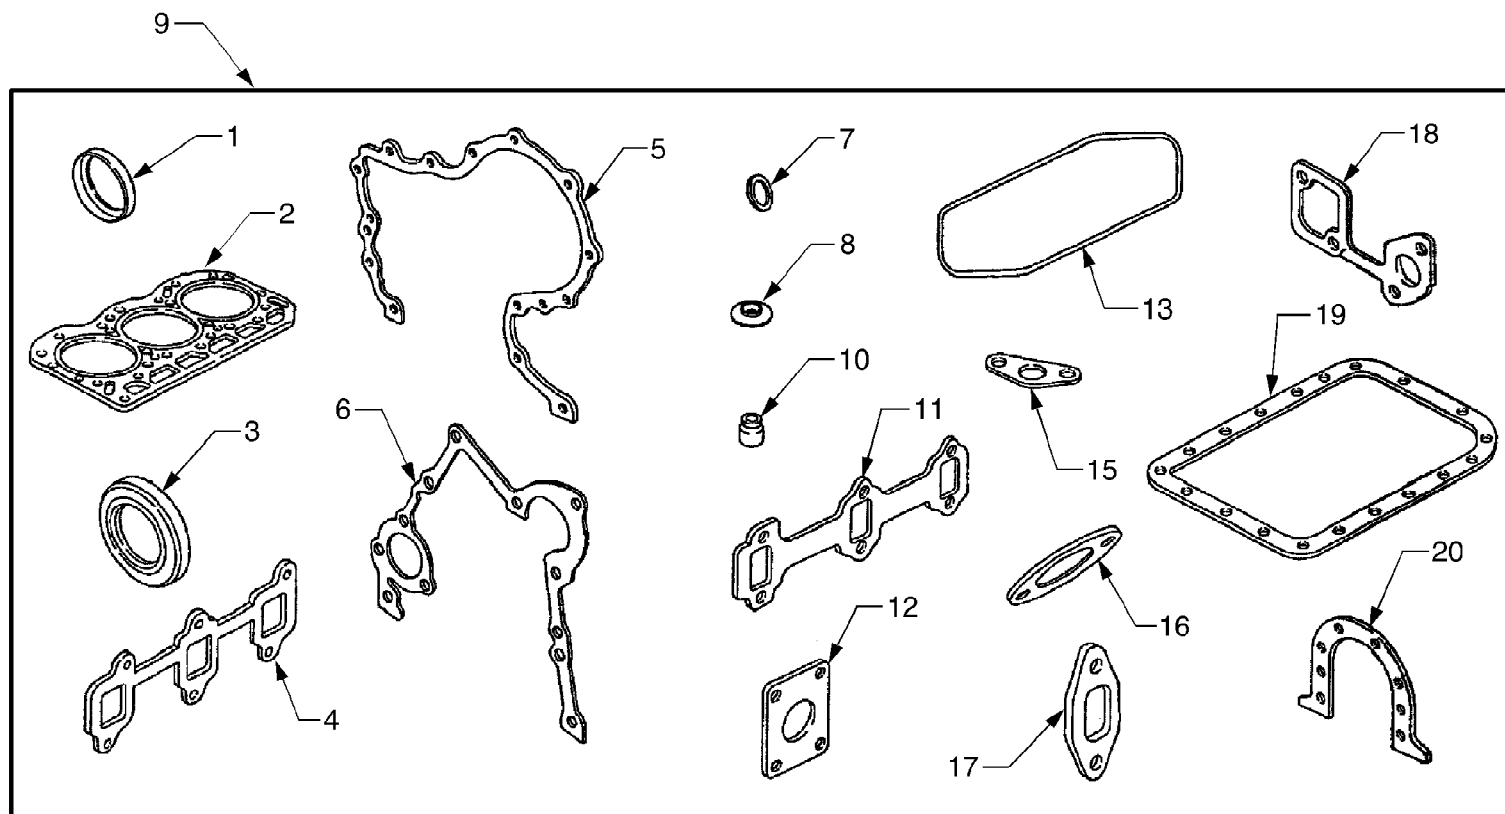


5264DL Tractor
Gasket Sets

Page 44 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-821071	1	/P	Seal, Oil
2	BS-820660	1		Gasket, Cylinder Head
3	BS-821073	1	S	Seal, Oil
4	BS-820407	1		Gasket, Intake
5	BS-820377	1		Gasket, Gear Cover
6	BS-820155	1		Gasket, Gear Cover
7	BS-820582	2		Washer, Sealing
8	BS-820064	3		Washer, Sealing
9	BS-825380	1		Gasket Set - Engine
10	BS-820405	1		Seal, Valve
11	BS-820817	1		Gasket, Exhaust
12	BS-820670	1	S	Gasket, Exhaust
13	BS-820150	1		Gasket, Rocker Cover
14	BS-825381	1		Gasket Set - Valve
15	BS-820104	1		Gasket, Oil Pump Screen
16	BS-820093	1		Gasket, Outlet
17	BS-820098	1		Gasket, Inlet Housing
18	BS-820100	1		Gasket, Water Pump
19	BS-820137	1		Gasket, Oil Pan
20	BS-820145	1		Gasket, Retainer

5264DL Tractor
Gear Housing

Page 45 of 77

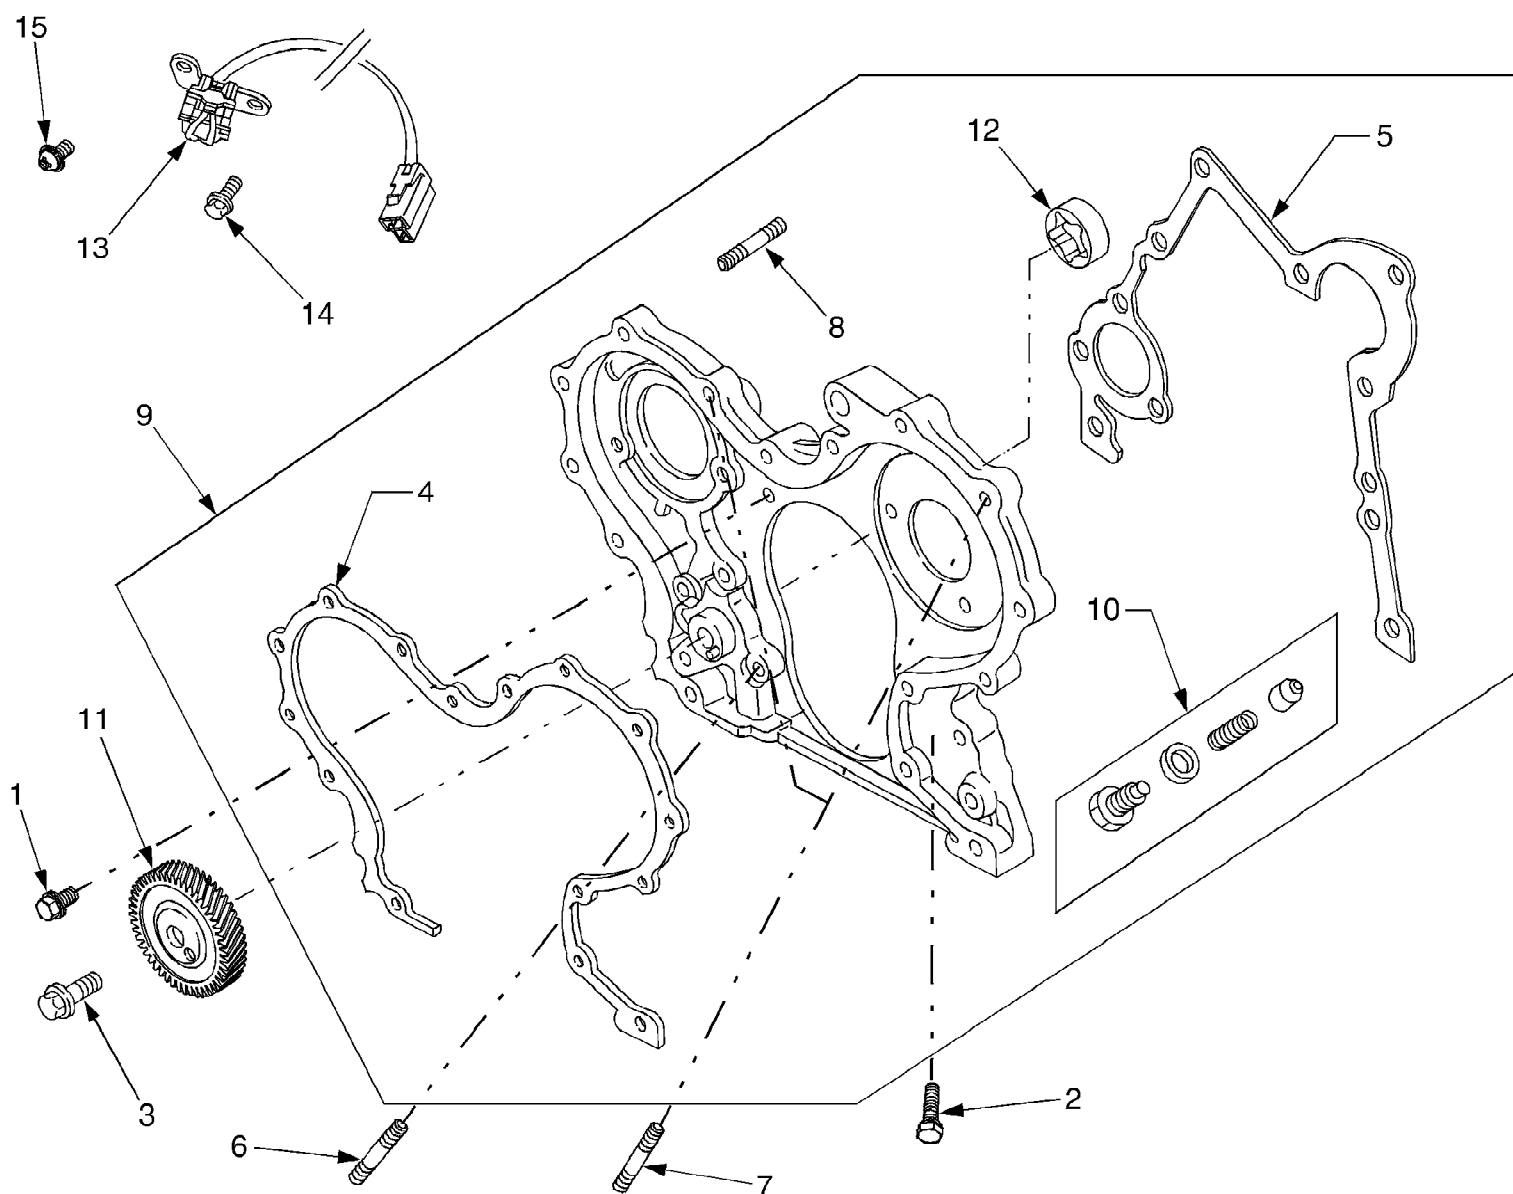


5264DL Tractor
Gear Housing

Page 46 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820033	1		Screw, Hex, 6mm
2	BS-820030	4		Screw, Hex, 6mm
3	BS-820180	1		Screw, Hex, 8mm
4	BS-820377	1		Gasket, Gear Cover
5	BS-820155	1		Gasket, Gear Cover
6	BS-820016	1		Stud, Metric
7	BS-820156	2		Stud, Metric
8	BS-820426	2		Stud, Metric
9	BS-825186	1		Housing, Gear
10	BS-825032	1		Valve, Oil Relief
11	BS-820615	1		Gear, Oil Pump Drive
12	N/A	1		Pump. Oil - Sold ONLY in Gear Housing (Ref. 9)
13	BS-825009	1		Trigger - Ignition
14	BS-820029	1		Screw (Trigger Ignition)
15	BS-820013	1		Screw (Trigger Ignition)

5264DL Tractor
Hood, Grille and Side Panels

Page 47 of 77

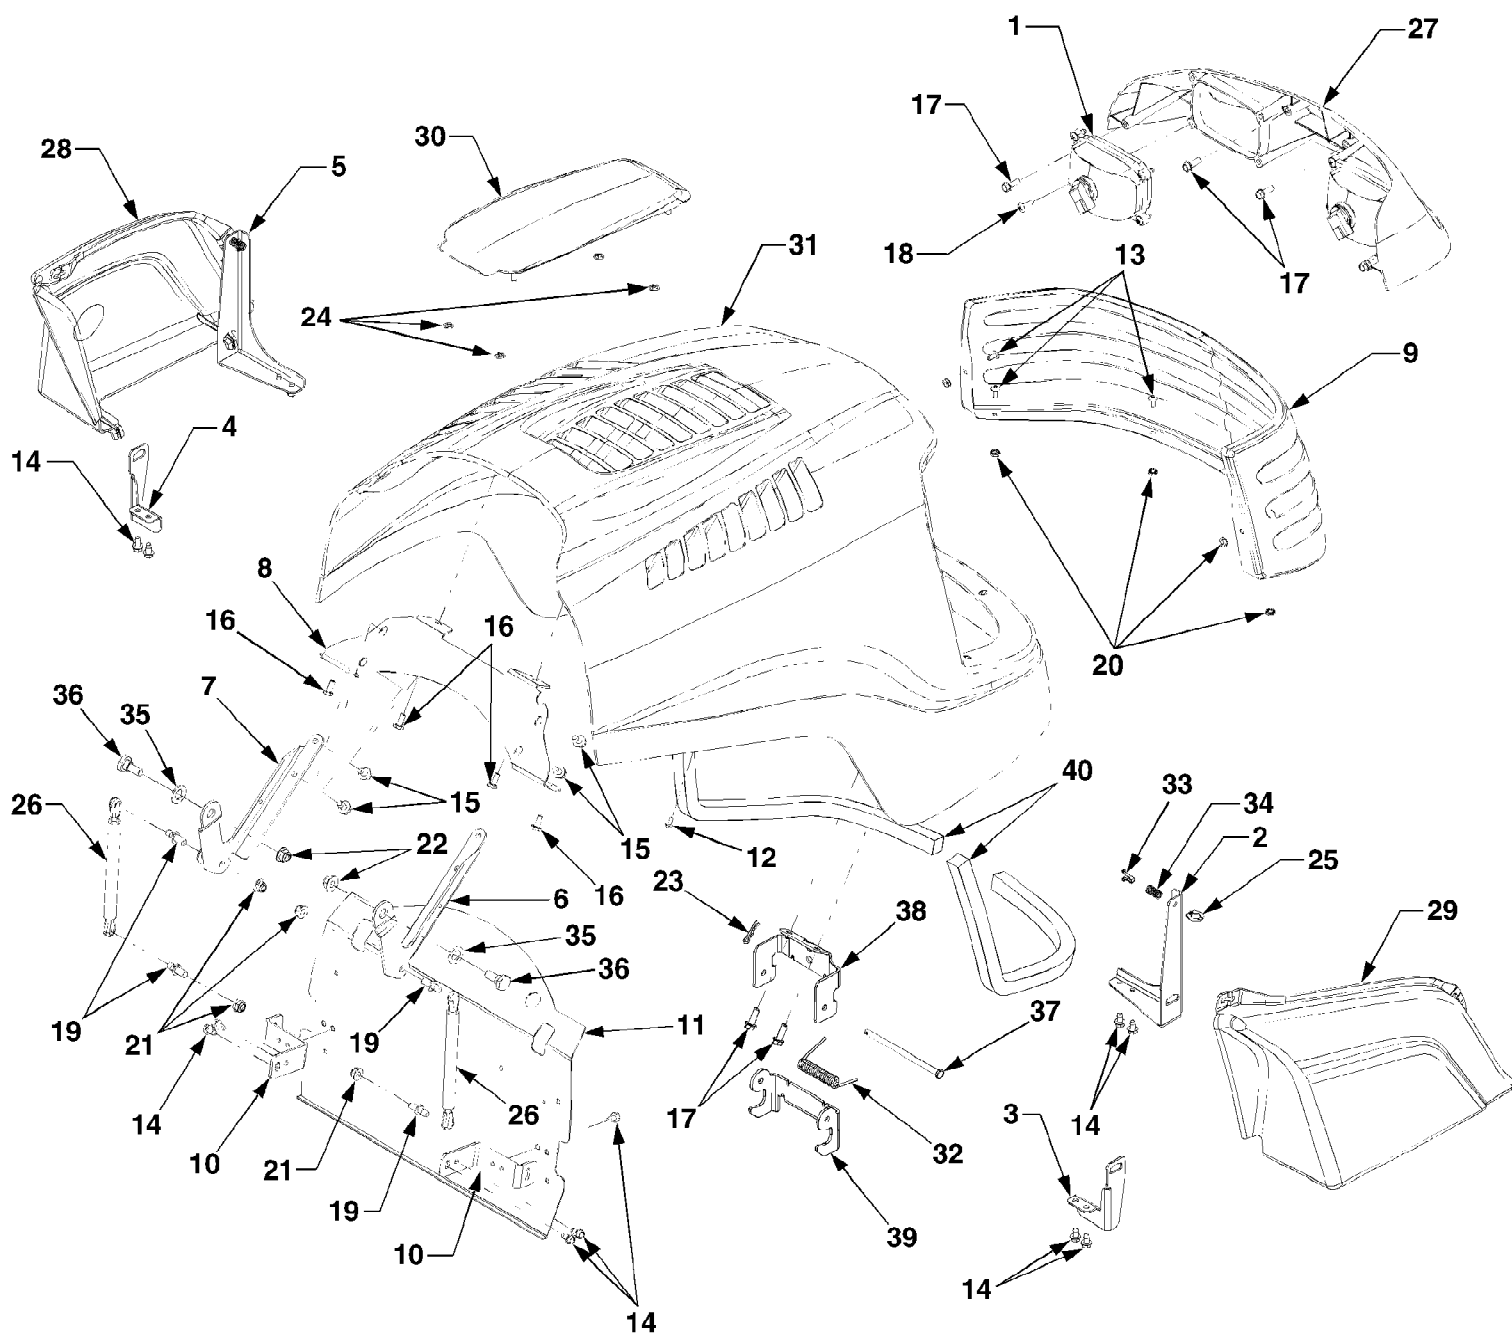

5264DL Tractor
Hood, Grille and Side Panels

Page 48 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	625-04004	1	S	Headlight Assembly
1	725-04084	2	S	Bulb Assembly, Headlight not shown
2	703-05281-0637	1	/P	Brkt, Side Pnl. Mtg. RH
3	703-05284-0637	1	/P	Brkt, Side Pnl. Mtg. RH Rear
4	703-05293-0637	1	/P	Brkt, Side Pnl. Mtg. LH Rear
5	703-05295-0637	1	/P	Brkt, Side Panel Mtg. LH
6	703-05652-0637	1		Bracket, Hinge, RH
7	703-05653-0637	1		Bracket, Hinge, LH
8	703-05655-0637	1		Bracket, Hood Mounting
9	703-3394	1	S	Screen, Intake
10	703-3764	2		Bracket, Panel Mtg.
11	703-3765	1		Shield, Lower Heat
12	710-04164	1	/P	Screw, Hex Wash Hd, #8-18 x .375
13	710-0473	6	/P	Screw, Truss Hd, 10-24 x .5
14	710-0599	14	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
15	710-0607	4	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
16	710-0751	4	/P	Screw, Hex Cap 1/4-20 x .62 GR5
17	710-0895	6		Screw, Hex Wash. Hd. 1/4-20 x .75
18	710-1220	8	/P	Screw, Truss Phil. Hd. 12-16 x .75
19	710-3170	4		Stud, Cylinder, 5/16-18 Thrd
20	712-0272	6	/P	Nut, Hex Sems, 10-24
21	712-04063	4	/P	Nut, Hex Insert Flange Lock, 5/16-18
22	712-04065	2	/P	Nut, Hex Insert Flange Lock, 3/8-16
23	714-0104	1	S	Pin, Internal Cotter
24	726-0233	4	/P	Nut, Push, .25 ID
25	726-3056	4		Latch, 1/4 Turn Panel
26	727-04142	2		Cylinder, Gas Spring
27	731-04211	1	S	Bezel, Headlight
28	731-04540	1	S	Panel, Side LH
29	731-04541	1	S	Panel, Side RH
30	731-05161	1	S	Cover, Hood
31	759-04210	1	/P	Hood Service Kit (contains 931-06889, 726-0233, 710-1242, 721-04162 and installation instructions)
31	931-06889	1		Hood Replaces 731-05301
31	726-0233	4	/P	Push Nut .25 x .50 not shown
31	710-1242	4	/P	Screw, Hi Low 5/16-14 x .75 not shown
31	721-04162	2		Foam Strip not shown
31	777D09638	1		Graphic, Hood RH not shown
31	777D09639	1		Graphic, Hood LH not shown
31	777D09642	1		Graphic, Model 5264D LH not shown
31	777D09643	1		Graphic, Model 5264D RH not shown
32	732-04281A	1	/P	Spring, Torsion
33	732-0936	4		Clip, Spring
34	732-0937	4		Spring, Compression
35	736-0272	2	S	Washer, Flat, .51 x 1.0 x .060
36	738-0380	2	S	Screw, Shoulder, .5 x .27 Lg 3/8-16
37	747-1323A	1		Rod, .25 x 4.55
38	783-04714	1	S	Plate, Latch
39	783-4717A	1		Bracket, Latch Pivot
40	721-04162	2		Seal, Foam, 3/4 x 3/4 x 20



5264DL Tractor
Hydraulics

Page 50 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	710-0607	1	/P	Screw, Hex Wash Hd Tapp, 5/16-18 x .5
2	712-3035	2	/P	Nut, Hex Jam, 9/16-18 GR5
3	725-0157	7	/P	Tie, Cable
4	726-04004	1		Clamp, Hose
5	726-0132	1	/P	Clamp, Adjustable Hose
6	727-04014	1		Hose, Lift Cylinder
7	727-04015	1		Tube, Cylinder Return
8	727-04079	1		Tube, U Return
9	727-04082	1		Tube, Return Tank
10	727-04083	1		Tube, Return
11	727-04096	1	S	Hose, Steering Pressure
12	727-04127	1		Hose, Aux. Pump-Filter
13	727-04129	2		Hose, Steering
14	727-04146	1		Hose, Steering - Tank
15	727-04149	1		Hose, Lift Inlet - w/45 degree Hydraulic Fitting at Steering Pump
15	727-04150	1		Hose, Lift Inlet - w/Straight Hydraulic Fitting at Steering Pump
16	727-3012	2	/P	Fitting, 90 Degree
17	737-04033	3	S	Fitting, 90 Degree Swivel
18	737-3111	1		Fitting, 90 Degree
19	737-04087	2		Fitting, Bulkhead
20	737-04101	1		Fitting, 90 Degree
21	737-04114	1		Fitting, 10 Orb:5/8 tube
22	737-04139	1		Fitting, 90Degree
23	737-3127	1		Fitting, 90 Degree

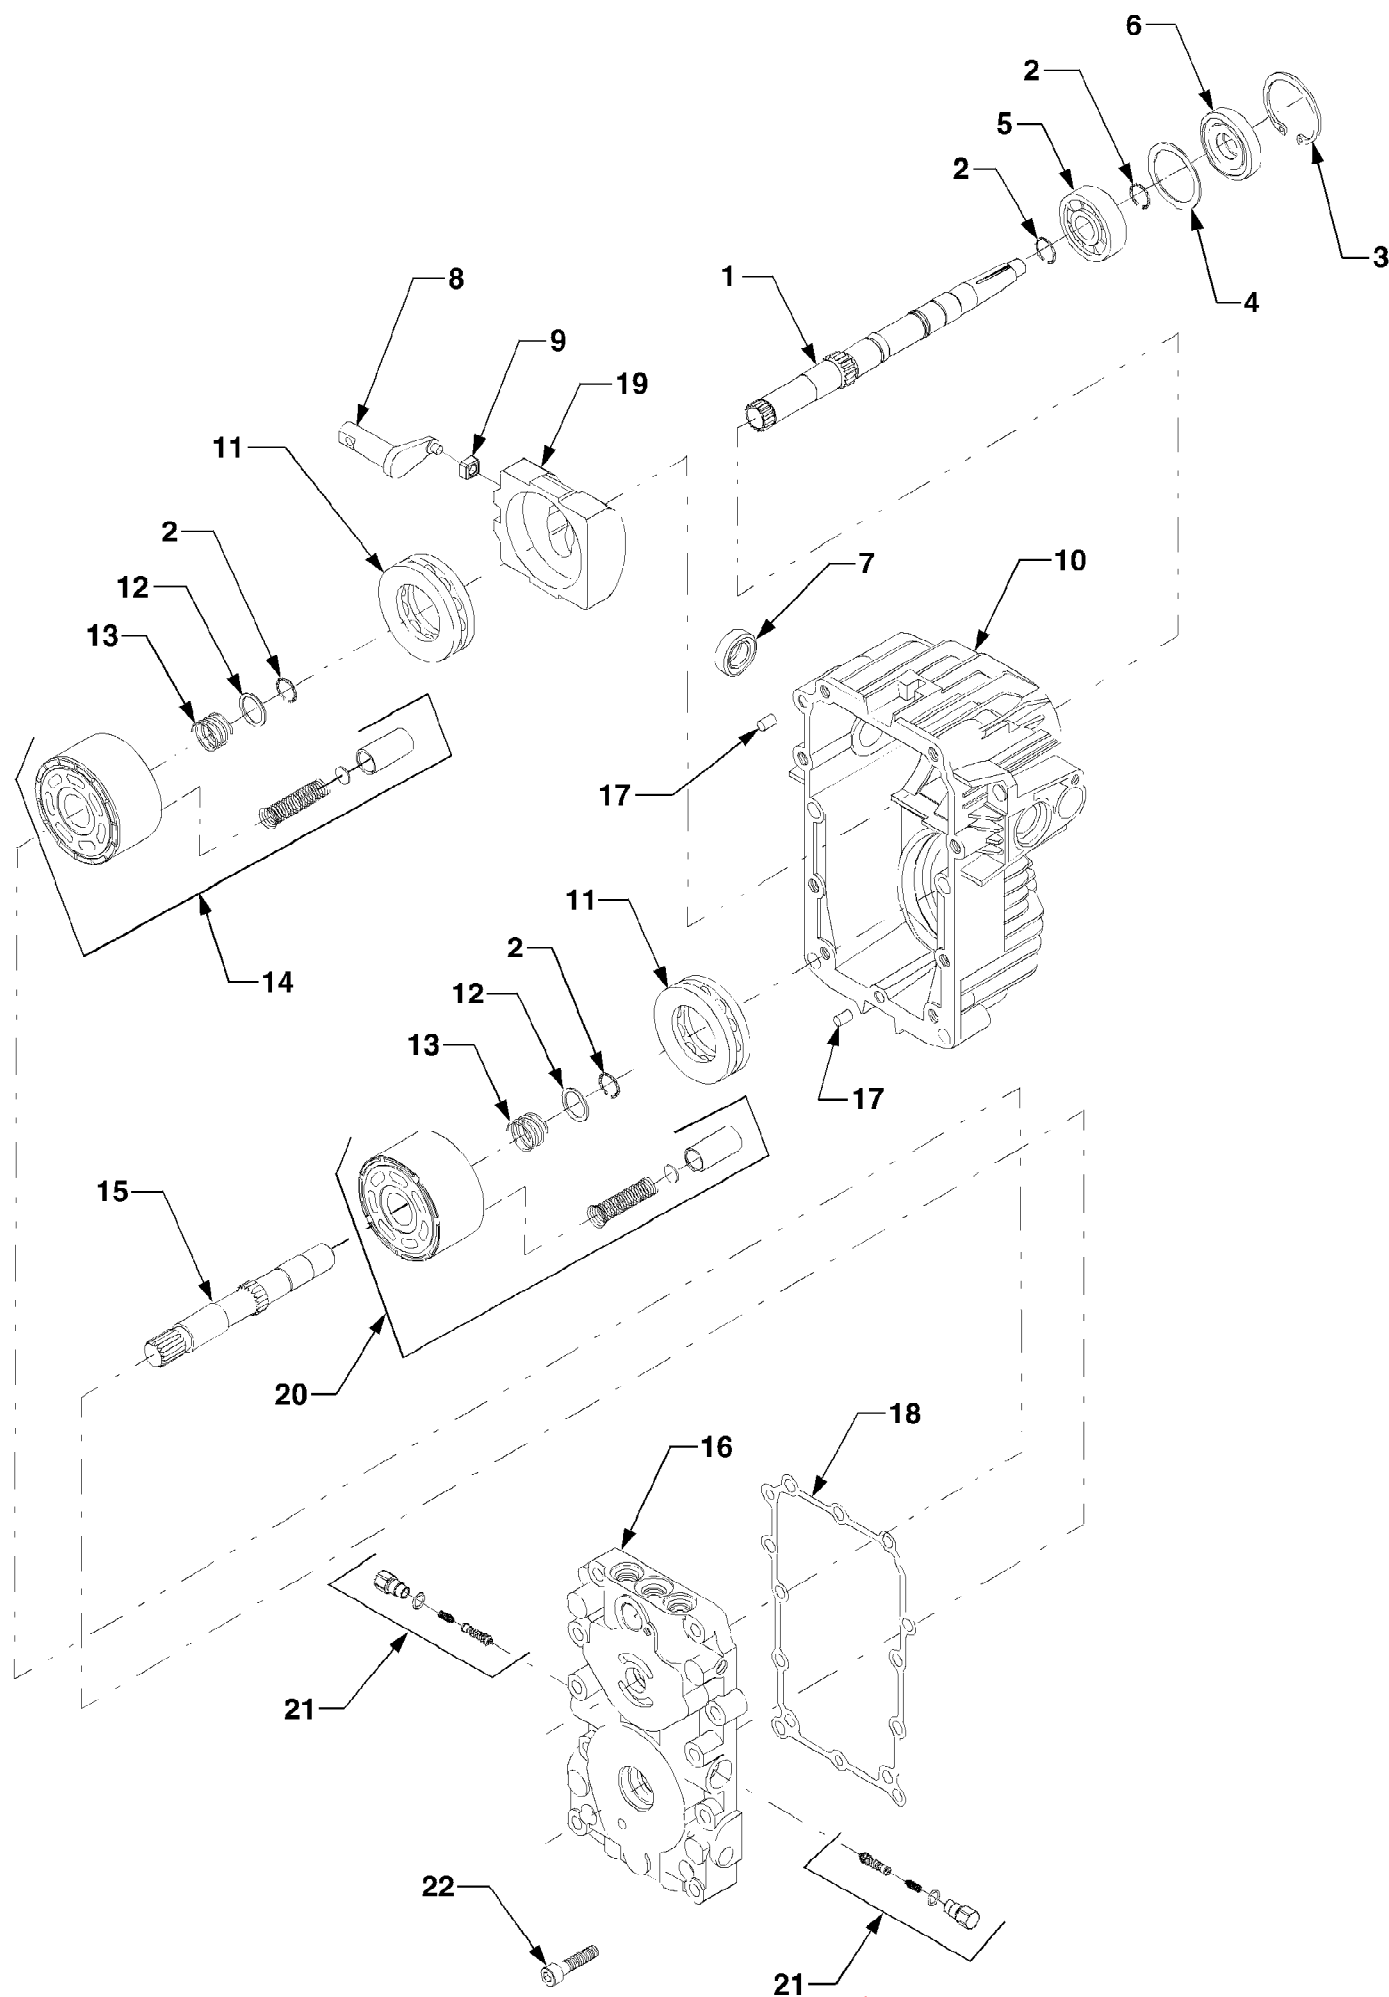

5264DL Tractor
Hydrostatic Transmission

Page 52 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	HG-52224	1	/P	Shaft, Pump Input
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-51092	1	/P	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510096	1	/P	Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	HG-70973	1		Kit, Center Section
17	HG-50641	2		Pin
18	HG-2000061	1	/P	Gasket, Center Section
19	HG-50203	1		Swashplate, Variable
20	HG-2510013	1	/P	Kit, Motor Cylinder Block
21	HG-70743	2	/P	Shock Valve
22	HG-9007314-0808	8	/P	Screw, Socket Head Cap
	HG-2510010	1	/P	Kit, Overhaul Seal

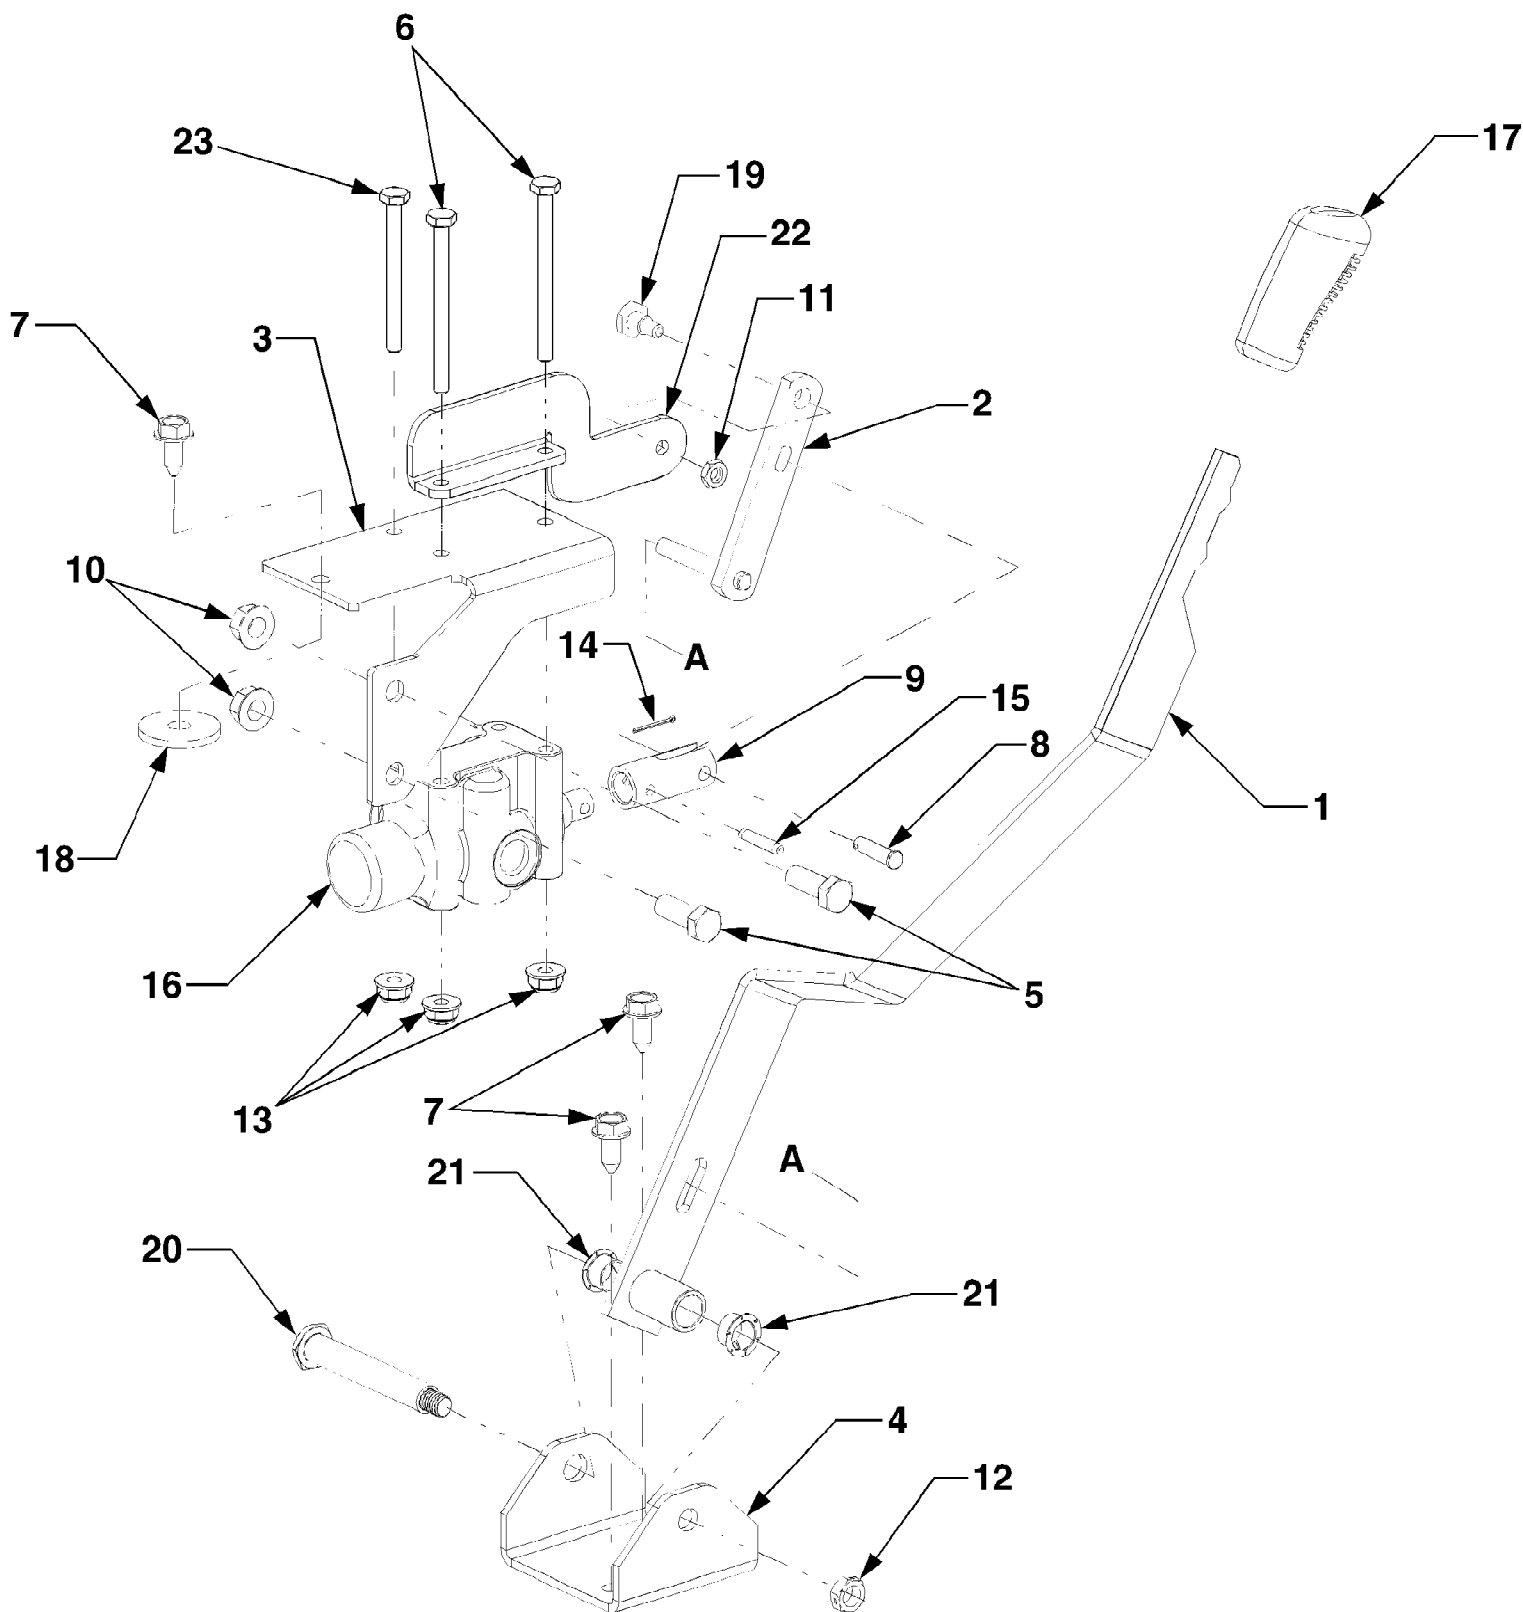

5264DL Tractor
Lift Valve

Page 54 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	603-04032	1	S	Handle, Lift
2	603-04033	1	S	Link, Valve
3	703-05090-0637	1		Bracket, Lift Valve Mounting
4	703-05038	1	S	Bracket, Handle Pivot
5	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
6	710-04370	2		Screw, Hex Cap 1/4-20 x 3.0 GR5
7	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x .75
8	711-04214	1		Pin, Clevis, .25 x .9375
9	711-1614	1		Link, Valve
10	712-4065	2		Nut, Hex Flange Nylon Lock, 3/8-16 GRF
11	712-0298	1	S	Nut, Hex Jam, 1/4-20
12	712-0266	1	S	Nut, Hex Ctr Lock Jam, 3/8-16 ..
13	712-04064	3	/P	Nut, Hex Flange Nylon Lock 1/4-20 GRF
14	714-0127	1	/P	Pin, Cotter, 1/16 x .75
15	715-0120	1	S	Pin, Spirol, 3/16 x 1.0
16	718-3130	1		Valve, Hydraulic Lift
17	731-3321	1		Grip, Handle
18	736-0258	1	/P	Washer, Flat, .385 x 1.0 x .135
19	738-0137A	1	S	Screw, Shoulder, .34 x .285
20	738-0215A	1	/P	Screw, Shoulder, .498 x 2.99
21	741-0491	2		Bearing, Nylon Flange .5 ID
22	703-05545-0637	1		Link, Lift Valve Mounting
23	710-0564	1	/P	Screw, Hex Cap, 1/4-20 x 2.75 GR5

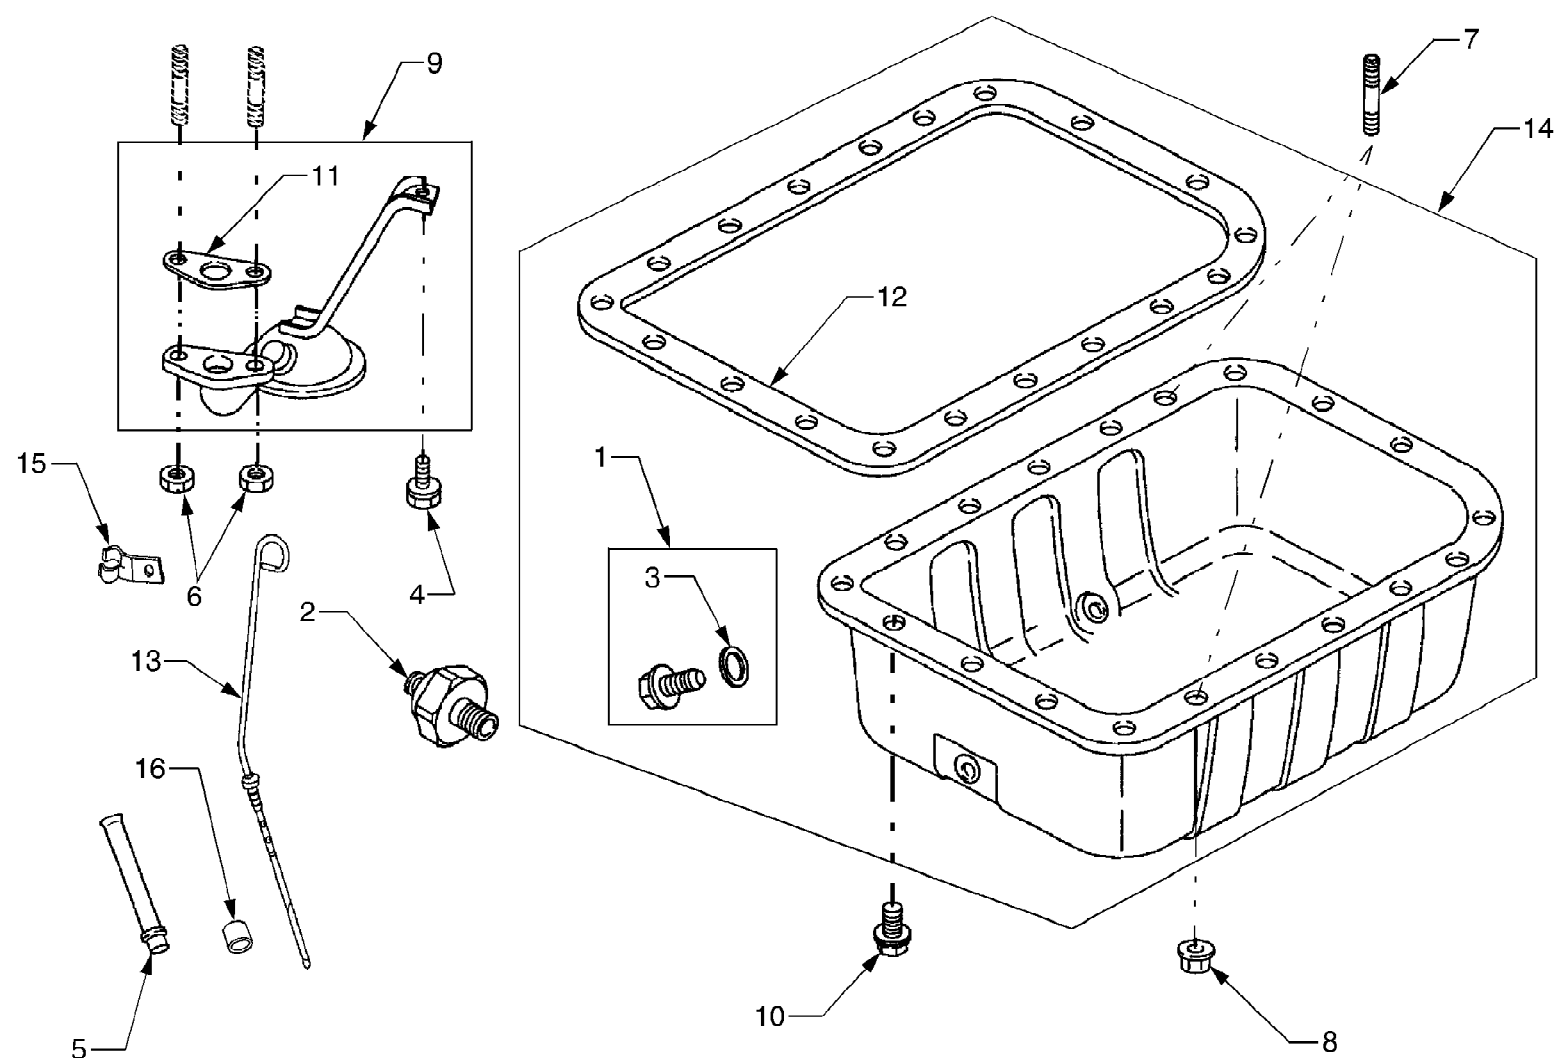

5264DL Tractor
Lubrication

Page 56 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	BS-825278	2		Plug, Oil Drain 16mm
2	BS-825000	1		Switch, Oil Pressure
3	BS-820582	2		Washer, Sealing
4	BS-820034	1		Screw, Oil Pump Screen
5	BS-820144	1		Tube, Dipstick
6	BS-820069	2		Nut, Oil Pump Screen
7	BS-820017	2		Stud, Oil Pan
8	BS-820068	2		Nut, Oil Pan
9	BS-825089	1		Oil Pump Screen
10	BS-820034	17		Screw, Oil Pan
11	BS-820104	1		Gasket, Oil Pump Screen
12	BS-820137	1		Gasket, Oil Pan
13	BS-820572	1		Dipstick
14	BS-825285	1		Pan, Oil
15	BS-820238	1		Bracket, Support
16	BS-820662	1		Collar, Dipstick Tube

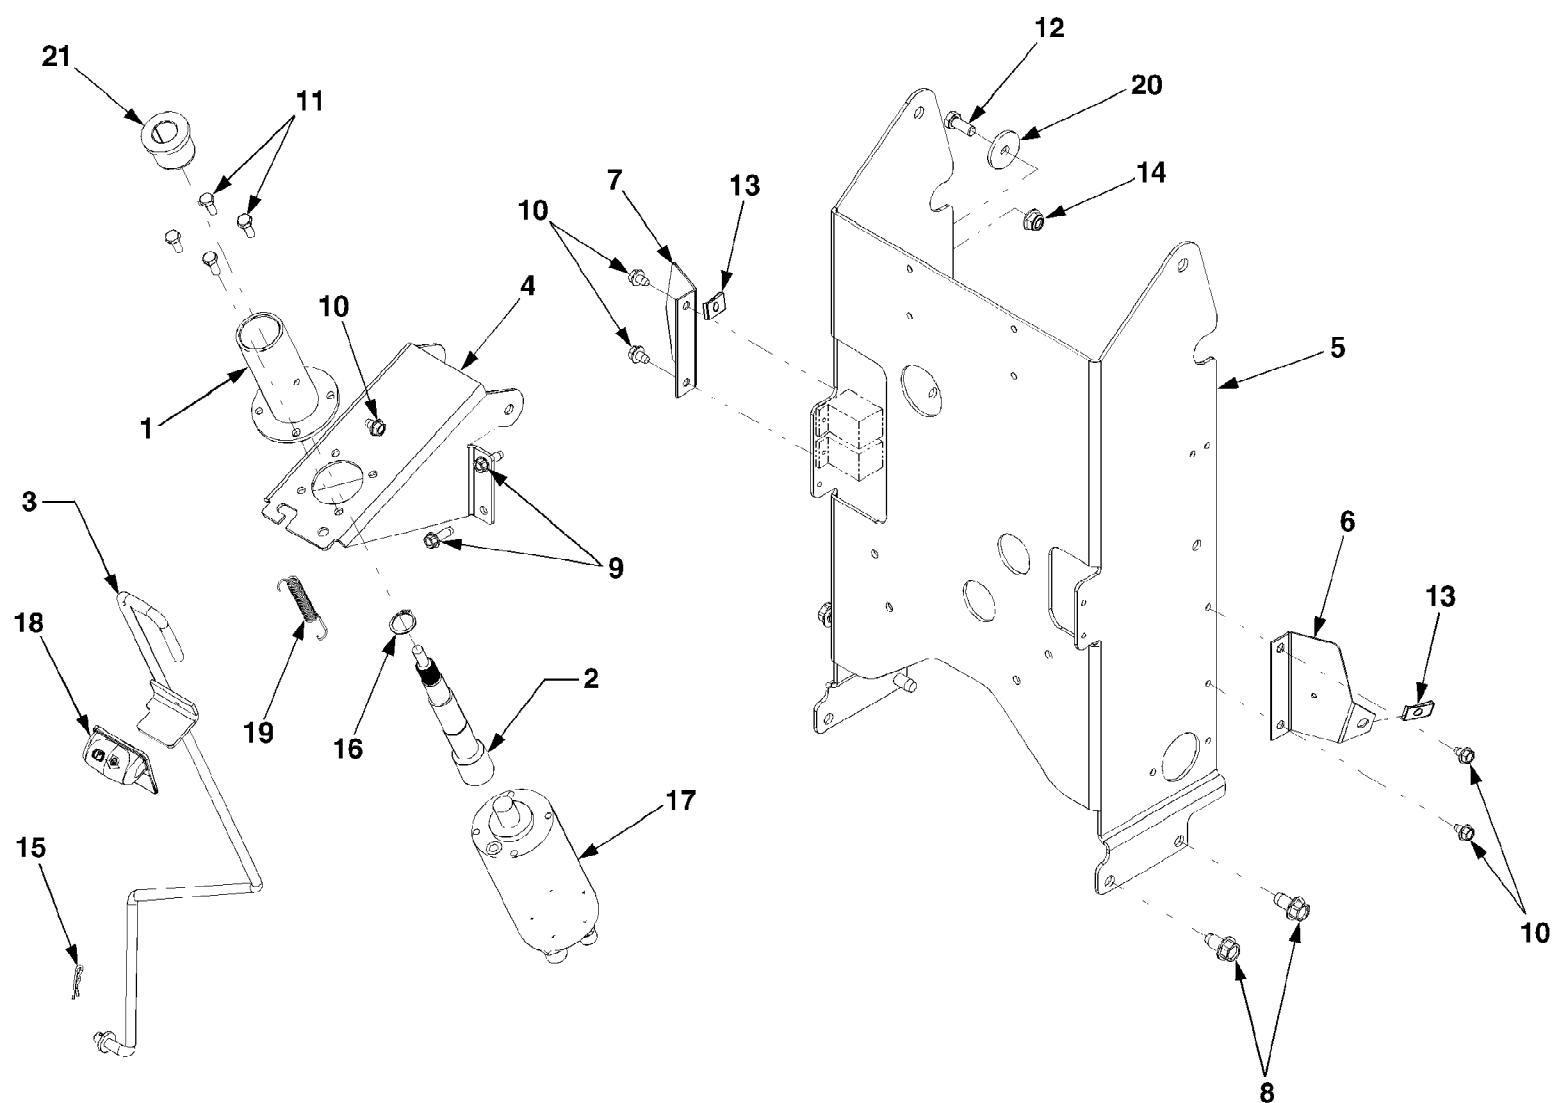

5264DL Tractor
Pedestal

Page 58 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-04320	1	S	Tube Assy. Steering Column
2	603-04321	1	S	Shaft, Steering
3	603-04330	1		Rod, Parking Brake
4	703-05818	1		Bracket, Steering Mounting
5	703-05828-0637	1		Pedestal
6	703-3717	1		Bracket, Dash Mtg. RH
7	703-3721	1		Bracket, Dash Mtg. LH
8	710-0623	4	/P	Screw, Hex Wash, Hd Tapp 3/8-16 x .75
9	710-0642	4	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .75
10	710-0653	5	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .375
11	710-1690	4		Screw, Hex, M6-1 x 16 Hardened
12	710-3008	2	/P	Screw, Hex Cap 5/16-18 x .75 GR5
13	712-0292	2	/P	Nut, Speed, 1/4-20
14	710-04063	2	/P	Nut, Hex Insert Flange Lock, 5/16-18 GrF
15	714-0104	1	S	Pin, Internal Cotter
16	716-0101	1	S	Ring, Snap, .75 Dia
17	718-3155	1	S	Pump, Hydraulic Steering
18	731-3359	1		Lever, Parking Brake
19	732-0320	1	S	Spring, Extension
20	736-0343	2	/P	Washer, Flat, .33 x 1.25 x .12
21	741-0312	1	S	Bearing, Flg, .75 ID x 1.25 OD

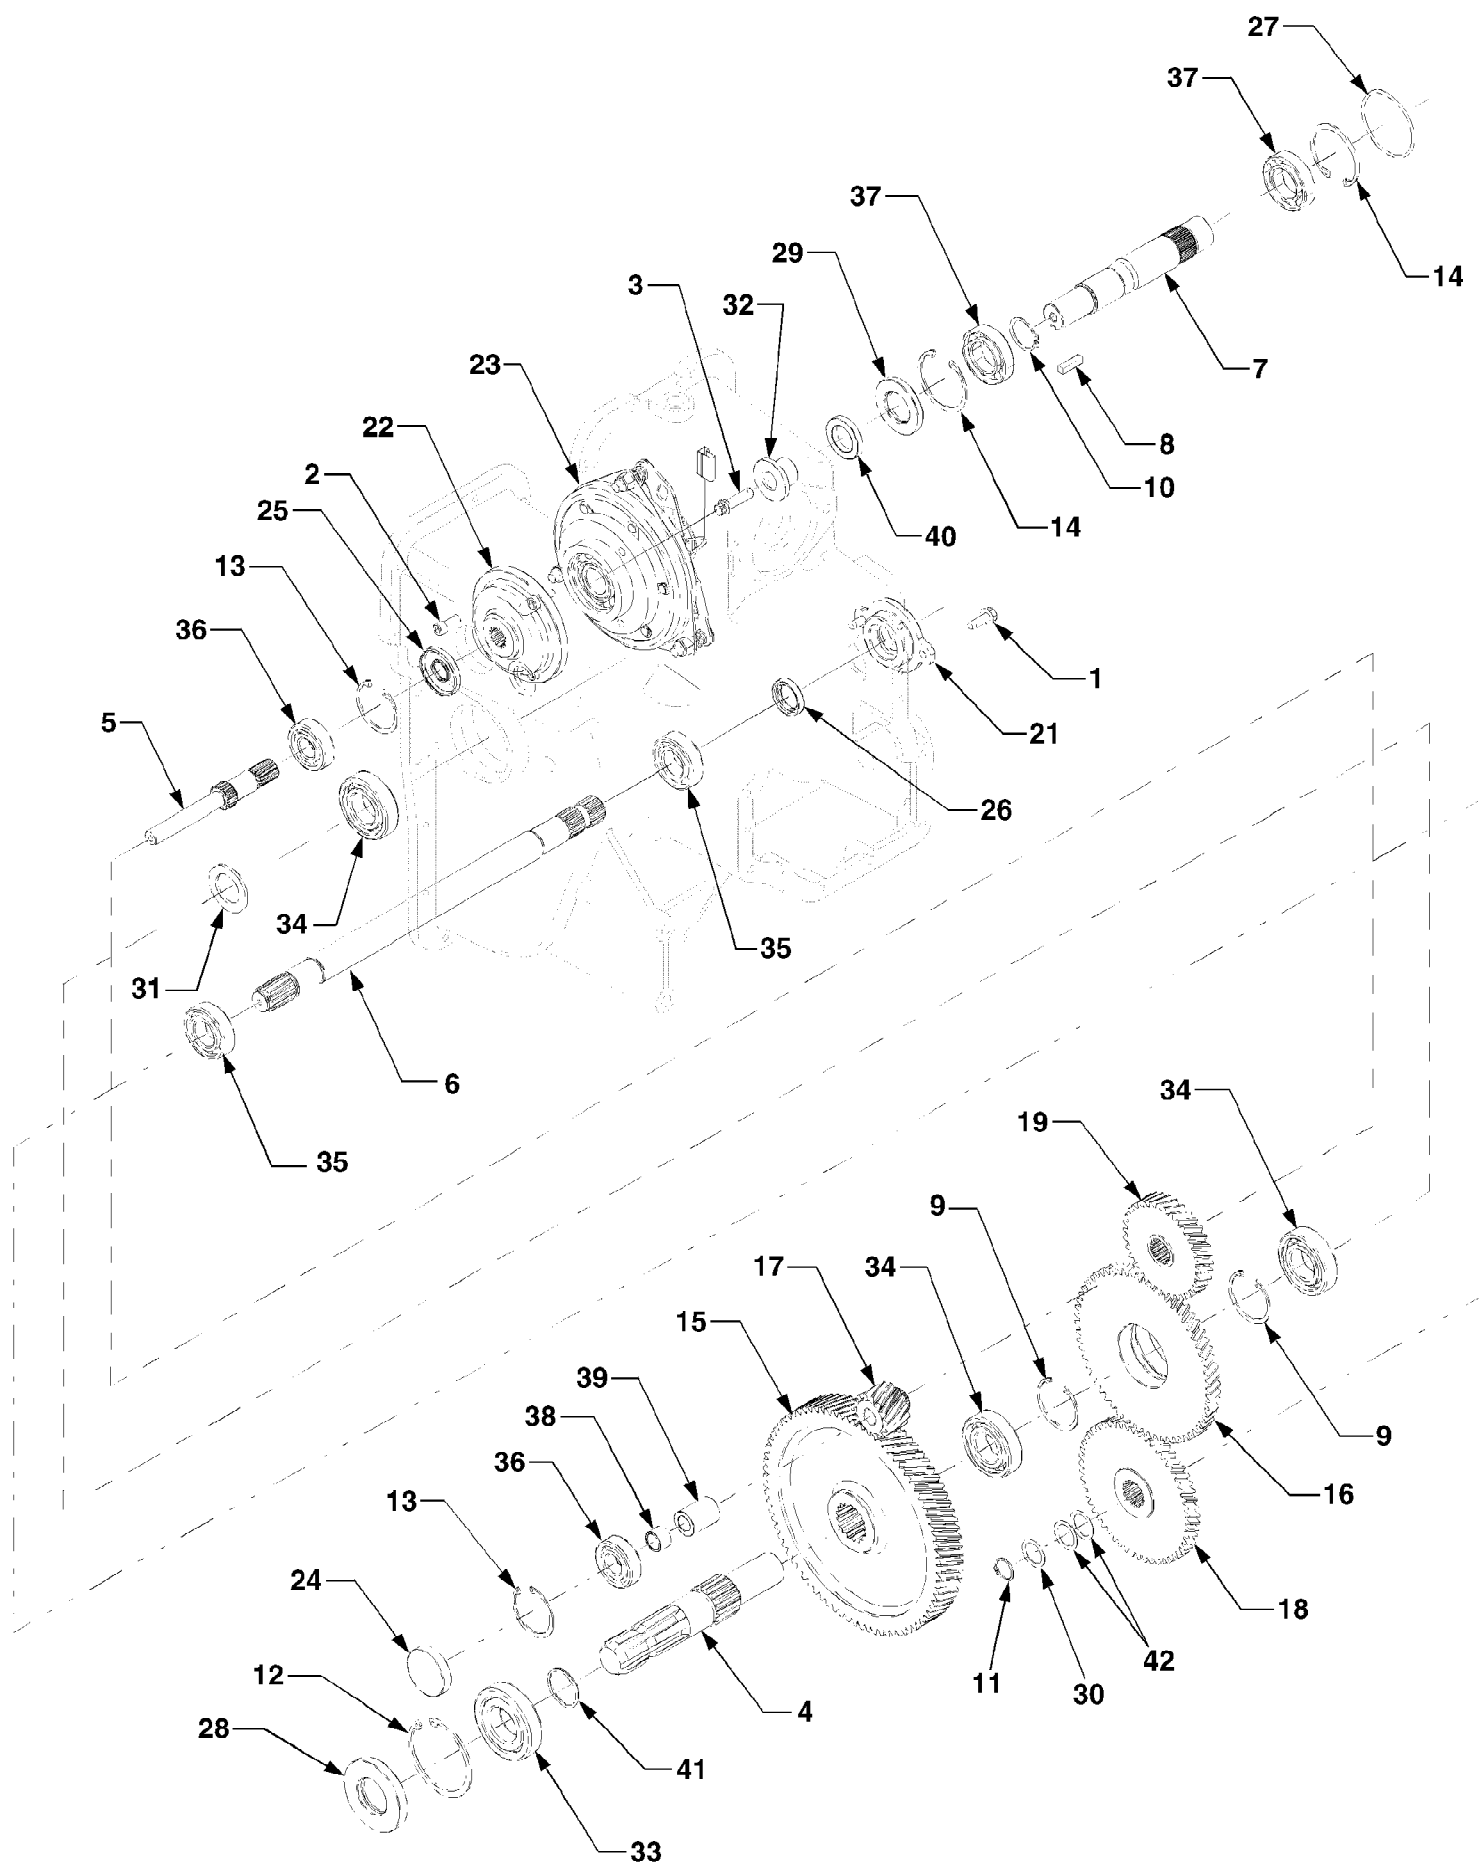


5264DL Tractor
PTO Drive

Page 60 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	710-0650	2	/P	Screw, Hex Wash. Hd. Tapp. 5/16-18 x .875
2	710-1177	3	/P	Screw, Socket Hd.5/16-18 x .75
3	710-04116	1	/P	Screw, 12 Pt. Wash. Hd. w/Patch 3/8-16 x 1.25
4	711-1325A	1	S	Shaft, 540 PTO
5	711-1683A	1	S	Shaft, Clutch Back
6	711-1684	1	S	Shaft, 2000 PTO
7	711-04420	1	S	Shaft, Input PTO
8	714-0128	1	/P	Key, Square, 1/4 x 1. 0
9	716-0180	2		Ring, Retaining
10	716-0181	1	/P	Ring, Retaining
11	716-0384	1		Ring, Retaining
12	716-0387	1		Ring, Retaining
13	716-0393	2		Ring, Retaining
14	716-04000	2	S	Ring, Retaining
15	717-3469	1		Gear, 540 PTO, 81T
16	717-3487	1		Gear, 2000 PTO , 61T
17	717-3492	1		Gear, Pinion, 540 PTO:14T
18	717-3494C	1	/P	Gear, Pinion, 2000 PTO:54T
19	717-3551	1	S	Gear, Pinion, 2000 PTO:34T
21	718-0681	1		Cover, 2000 PTO
22	718-04000	1	S	Adapter, PTO Output
23	718-04009	1	S	Clutch Assy. PTO
24	721-0504	1		Plug, Oil, 1.875 x .375
25	721-04094	1		Seal, Oil
26	721-0509	1		Seal, Oil
27	721-04002	1	S	O-Ring, 2.425 ID x .103
28	721-04124	1	S	Seal, Oil
29	721-04005	1	S	Seal, Oil
30	736-0570	1	S	Washer, Flat, .865 x 1.145 x .030 ..
31	736-04001	1	S	Washer, Thrust
32	738-04003	1	S	Spacer, Shoulder
33	741-1100	1		Bearing, Ball
34	741-3033A	3	S	Bearing, Ball
35	741-3037	2	S	Bearing, Ball
36	741-3057	2	S	Bearing, Ball
37	741-04034	2	S	Bearing, Ball
38	750-3365	1	S	Spacer, 15mm x 20mm x 14mm
39	750-04013	1	S	Spacer, .6 x 1.0 x 1.345
40	750-04020	1	S	Spacer, 1.004 x 1.375 x .25
41	716-04049	1	S	Ring, Retaining
42	736-0454	2	S	Washer, Flat, .915 x 1.37 x .010




Ref #	Part Number	Qty	S/P/F	Description
	751-3194	1	/P	Air Filter
	BS-820314	1	/P	Oil Filter
	759-04027	1		Fuel Filter
	BS-825388	1		Voltage Regulator
	723-3014	1	S	Hydraulic Filter
	BS-492932S	1	/P	Hydro Filter
	754-04086	1	S	Aux. Pump Belt
	BS-821075	1	/P	Fan Belt
	751-3188	1	/P	Fuel Cap
	759-3950	1	S	Ignition Keys
	725-3277	1	S	Ignition Switch Module
	725-04076	1	S	P.T.O. Switch
	725-3273	1		P.T.O. Reverse Switch
	725-3274	1		Headlight Switch
	725-04232	1		Brake Switch
	725-3167	1	S	Brake Switch
	725-3164A	1	S	Reverse Switch
	725-3167	1	S	Seat Switch
	725-3279B	1	/P	Hazard Switch
	725-1648	1	S	Starter Relay
	725-1648	1	S	P.T.O. Relay
	721-0342	1	S	Gasket use with 725-1648
	BS-820455	1		Glow Relay
	BS-820373	1		Glow Plug Timer
	718-04009	1	S	P.T.O. Clutch
	737-3032	1	/P	Engine Oil
	737-3121	1	/P	Transmission Fluid
	737-3065	1	/P	Front Axle Fluid

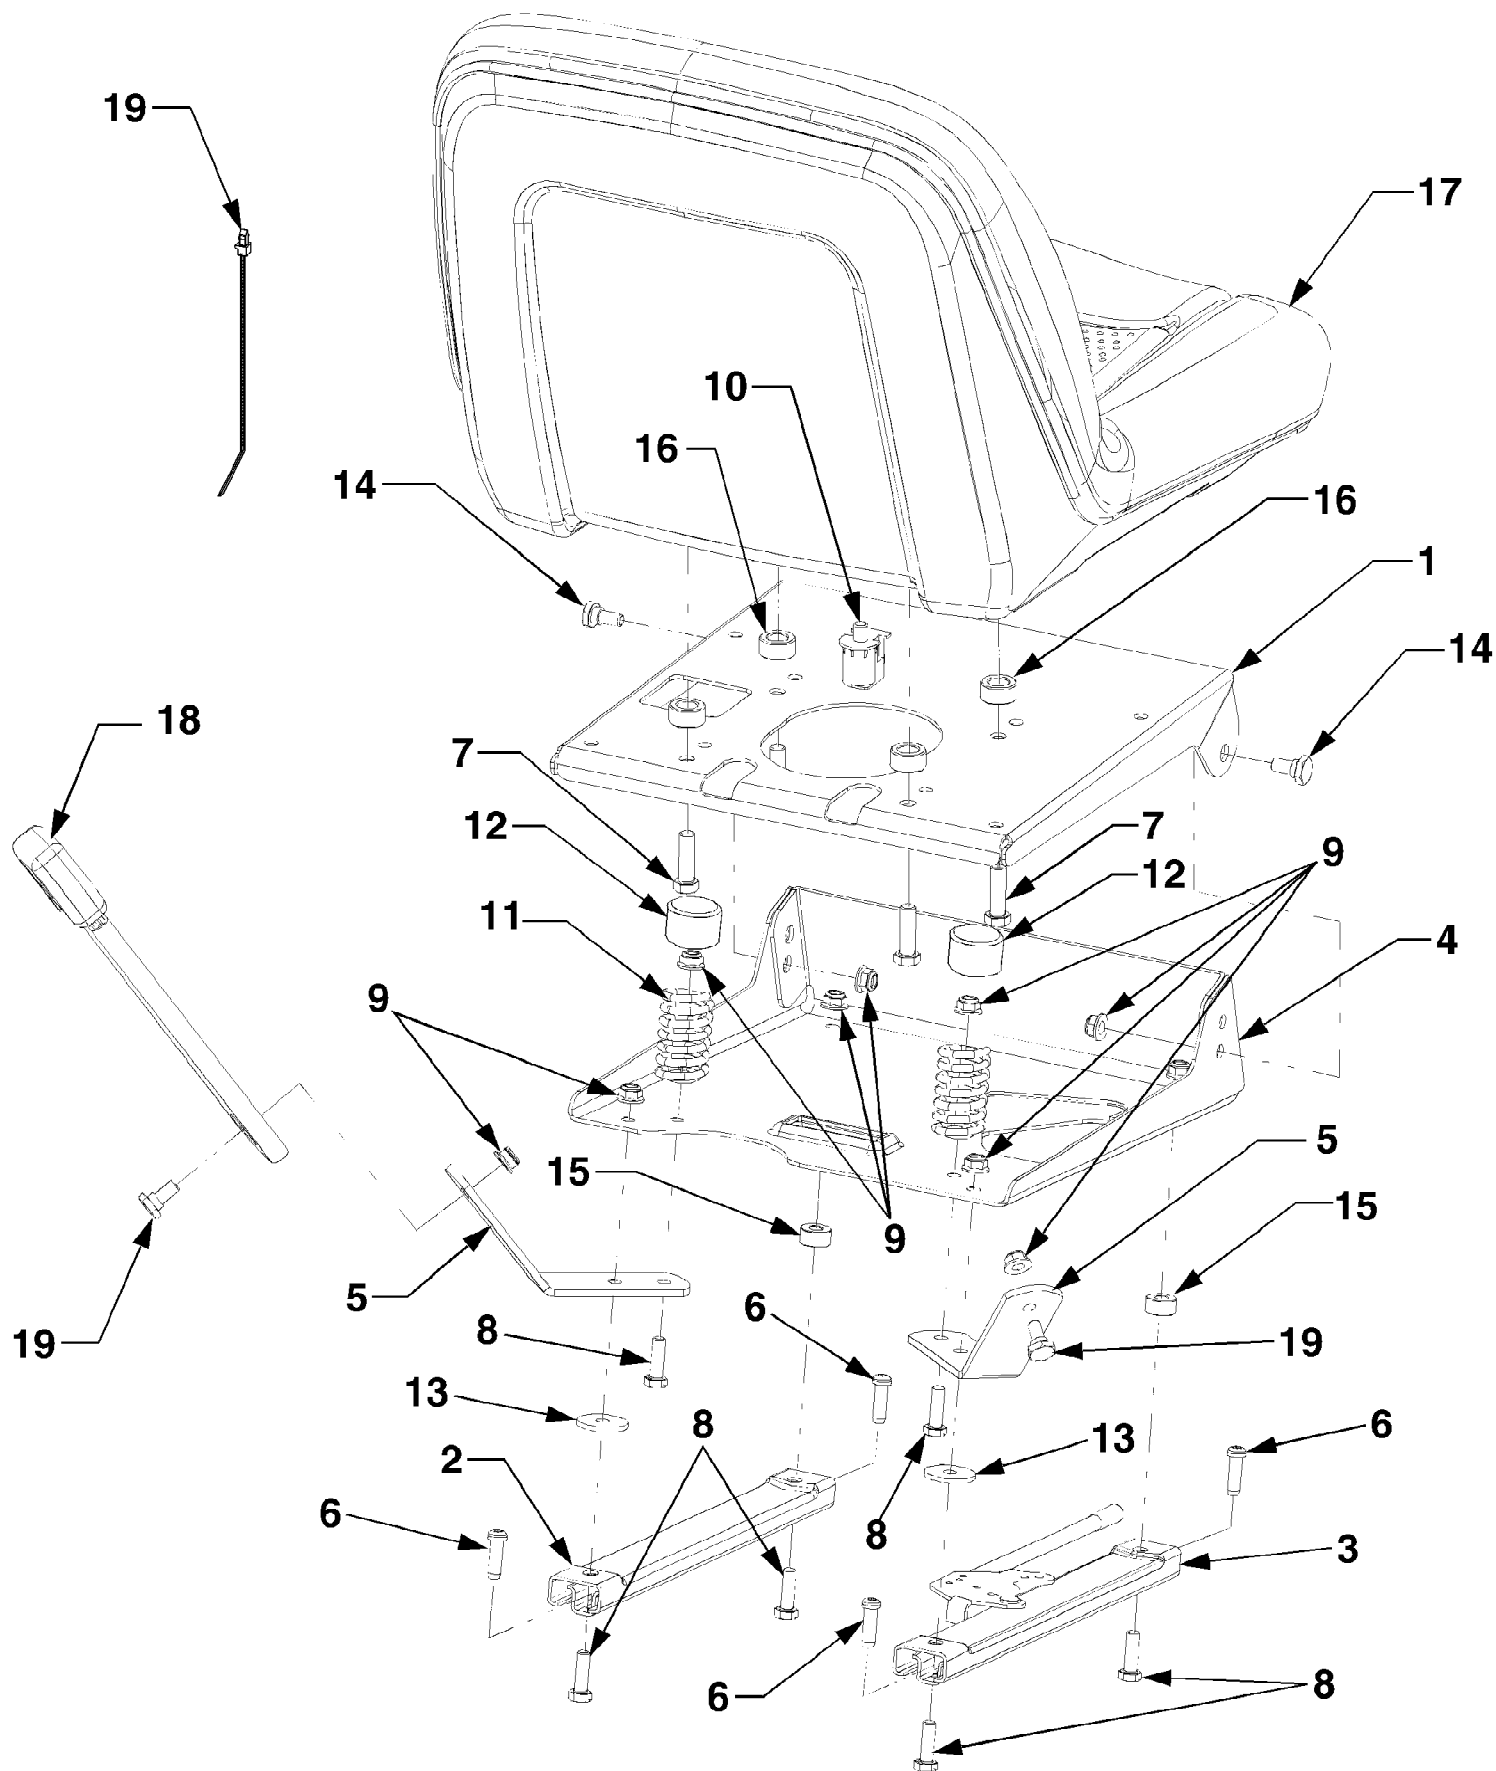

5264DL Tractor
Seat

Page 64 of 77


Ref #	Part Number	Qty	S/P/F	Description
1	703-1812A-0716	1	/P	Bracket, Seat Pivot
2	703-3208	1		Track, Seat - w/o Latch
3	703-3431	1	/P	Track, Seat - w/Latch
4	703-4149-0716	1	/P	Bracket, Seat Support
5	703-4151-0637	2	/P	Bracket, Seat Belt
6	710-1669	4		Screw, Pan Hd. Mach. 5/16-18 x 1.0
7	710-3005	4	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
8	710-0376	6	/P	Screw, Hex Cap, 5/16-18 x 1.0 GR5
9	712-04063	10	/P	Nut, Hex Insert Flange Lock 5/16-18 GR5
10	725-3167	1	S	Switch, Seat, N/O
11	732-0735	2	/P	Spring, Compression
12	735-04039	2		Cap, Spring
13	736-0343	2	/P	Washer, Flat, .33 x 1.25 x 12
14	738-0140	4	S	Screw, Shoulder, .435 x .178:5/16-18
15	750-0258	2	/P	Spacer, .315 x .75 x .375
16	750-04247	4		Spacer, .505 x .88 x .44
17	757-04005	1	S	Seat, High Back
	777D09646	1		Graphic, CubCadet, USA
18	757-3013	1		Belt Assembly, Seat
19	726-0154	1	S	Tie, Push Mnt. Cable

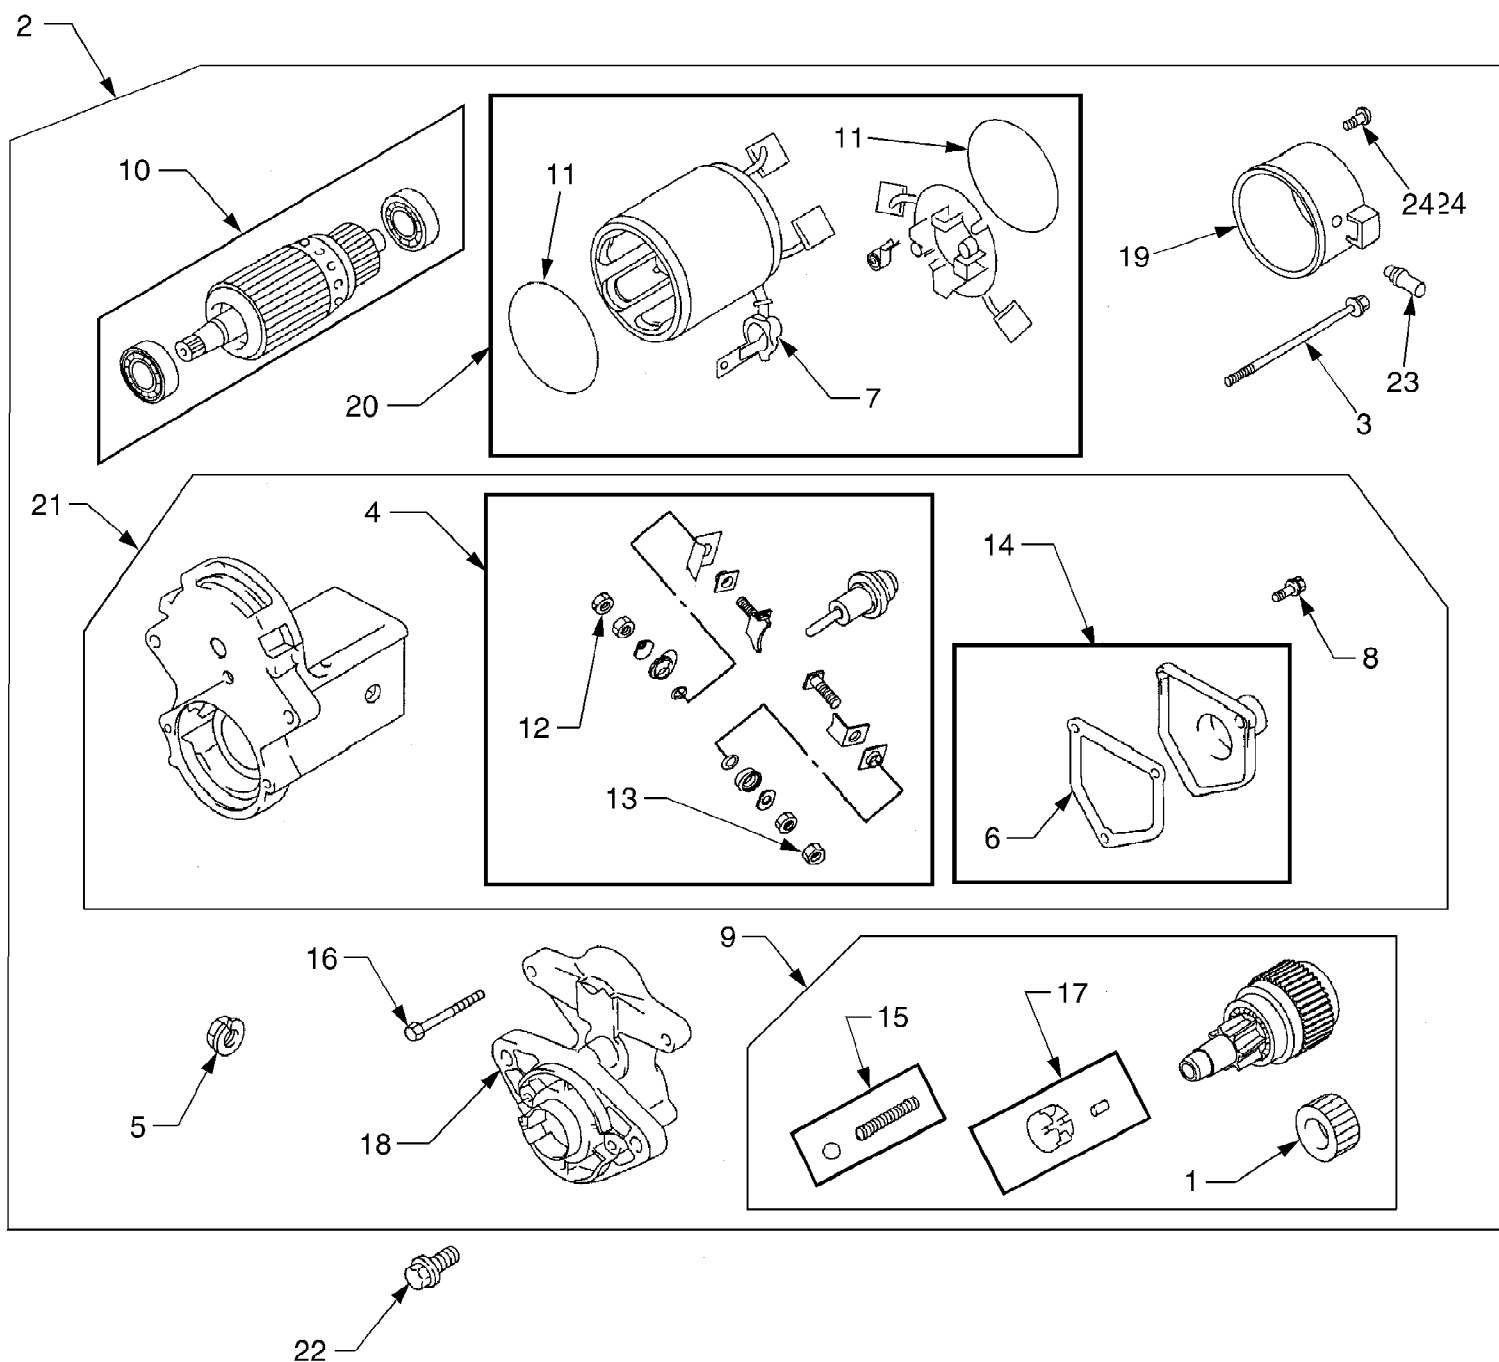

5264DL Tractor
Starter

Page 66 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820767	1		Gear, Starter Drive
2	BS-825222	1	S	Motor, Starter
3	BS-820773	2		Screw, Starter Motor
4	BS-825437	1		Plunger-Solenoid
5	BS-820067	1		Nut, Starter Motor Terminal
6	BS-820719	1		Gasket, Solenoid Cover
7	BS-820725	1		Boot, Terminal
8	BS-820763	1		Screw, Solenoid Cover
9	BS-825406	1		Drive, Starter
10	BS-825404	1		Armature
11	BS-820769	2		Seal, O-Ring
12	BS-820723	1		Nut, Solenoid Terminal
13	BS-820721	1		Nut, Solenoid Terminal
14	BS-825422	1		Cover, Solenoid
15	BS-825402	1		Spring, Detent
16	BS-820777	1		Screw, Drive Cap
17	BS-825401	1		Clutch Roller
18	BS-825408	1		Cap, Drive
19	BS-820771	1		Cap, End
20	BS-825423	1		Housing, Starter (Includes 2 Brushes)
21	BS-825410	1		Solenoid, Starter
22	BS-820019	1		Screw, Starter Motor
23	BS-820779	1		Plug, Vent
24	BS-820775	1		Screw, End Cap

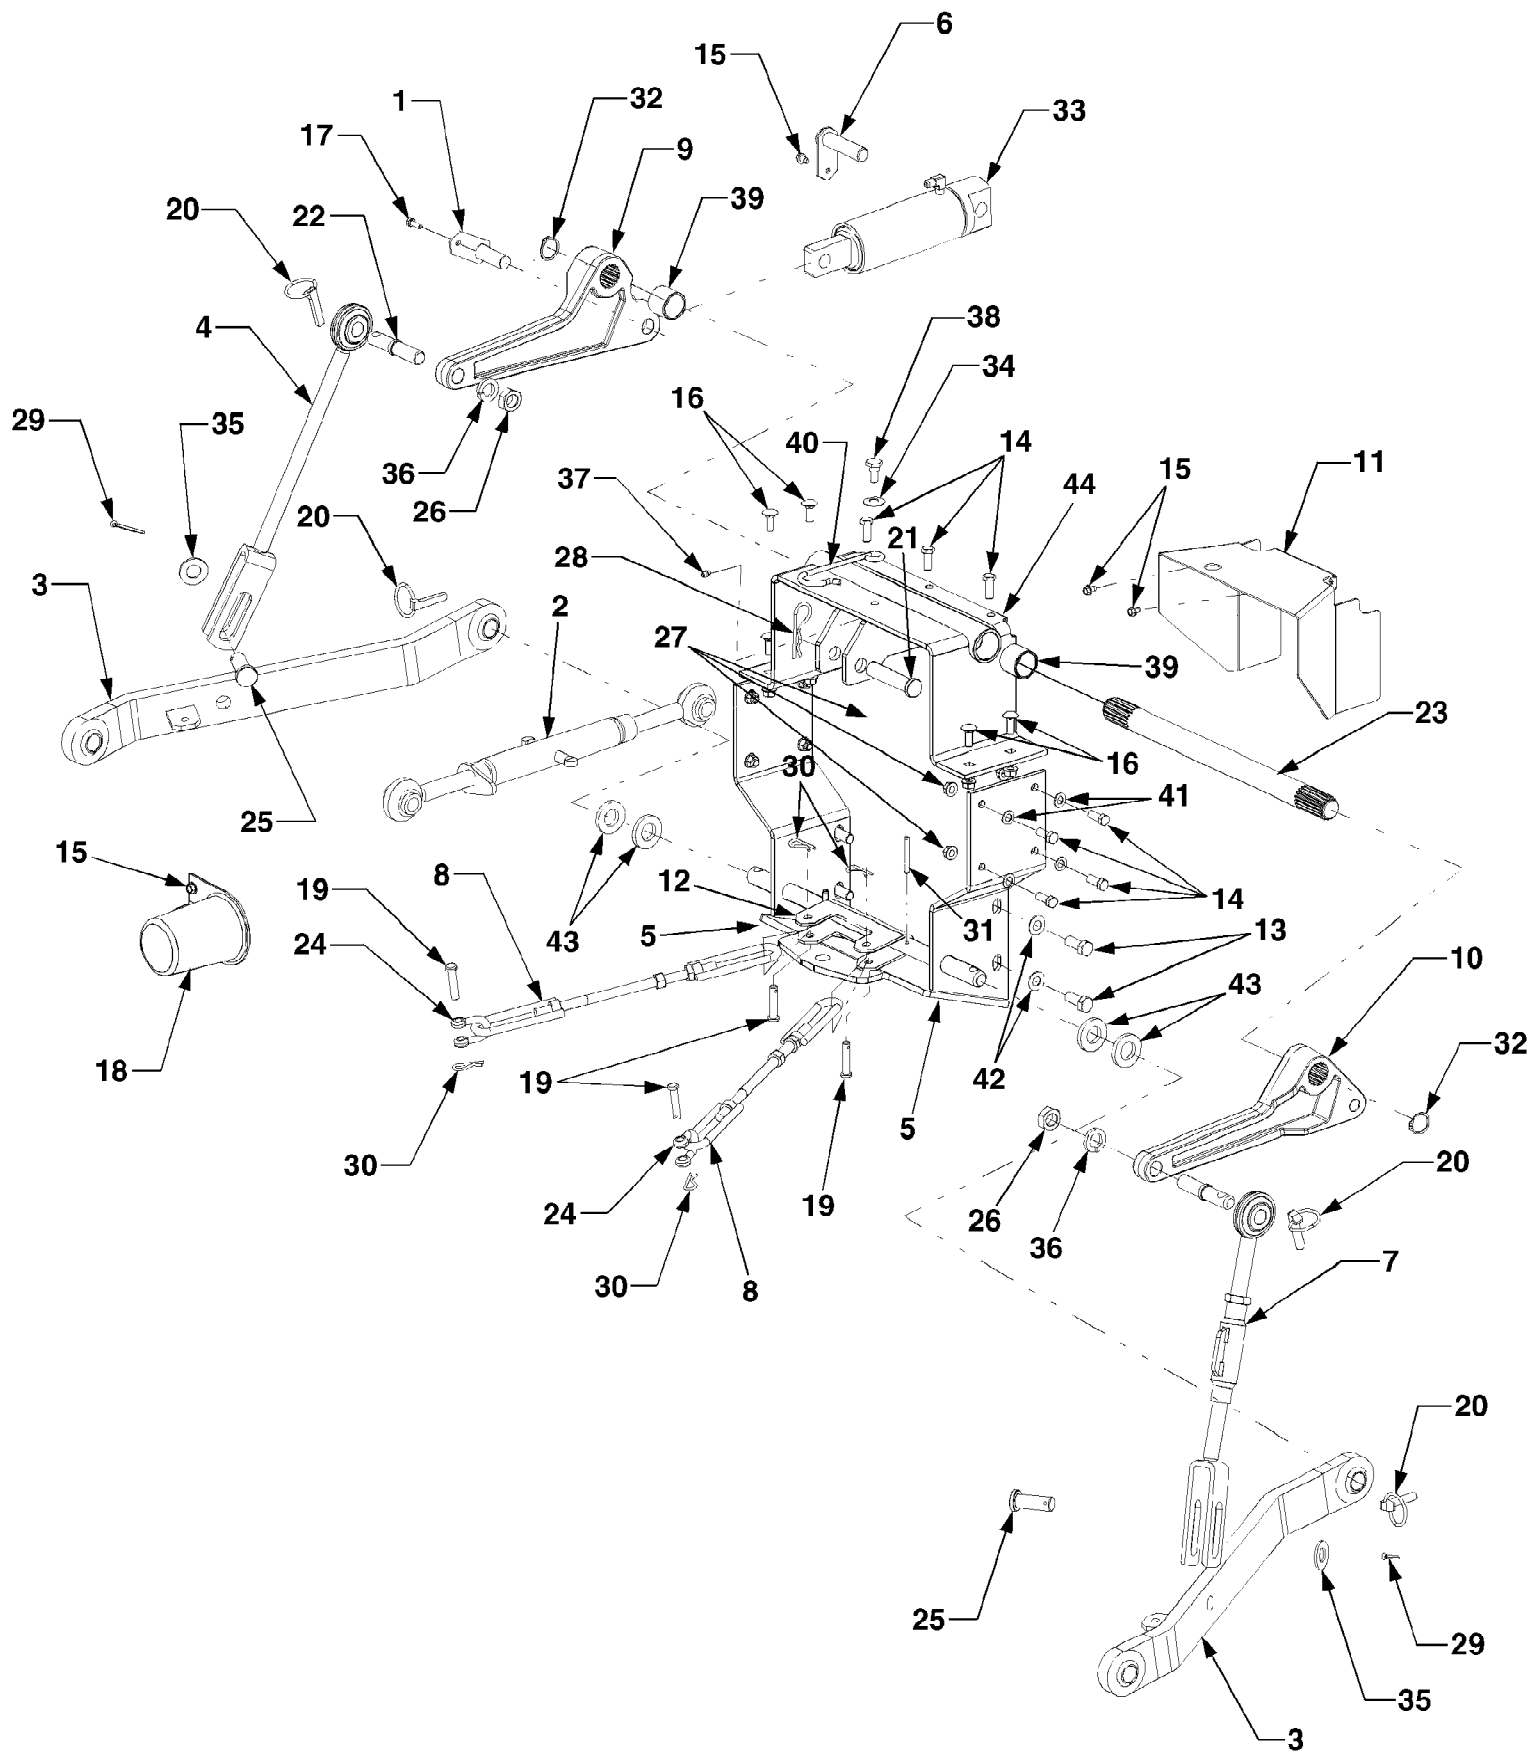


5264DL Tractor
Three Point Hitch

Page 68 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	603-04062-0637	1	/P	Plate, Cylinder Mounting
2	603-0964	1	S	Link Assembly, Upper
3	603-0965	2	S	Link, Lower
4	603-0970	1	S	Link, Fixed Lift
5	603-04333-0637	1		Bracket Ass'y., Lower Hitch
6	603-0972-0637	1	/P	Plate, Cylinder Mounting
7	603-0973	1	S	Link, Adjustable Lift
	603-0968	1	S	Link Rod RH Thrd.
	603-0969	1	S	Link Rod LH Thrd.
	711-1744	1		Turnbuckle
	712-04051	1		Jam Nut, M20 x 2.5 RH
8	603-0977	1		Chain Assembly, Check
	603-0974	1	S	Chain Link RH Thrd.
	603-0975	1	S	Chain Link Lh Thrd.
	603- 0976	1		Chain Rod, Adjust.
9	619-3095	1	S	Arm, Hitch Lift - LH
10	619-3096	1	S	Arm, Hitch Lift - RH
11	703-4137-0637	1	/P	Shield, PTO Shaft
11	777S30634	1		Graphic, Warning
12	703-4143-0637	1	/P	Bracket, Chain Mounting
13	710-04186	4	/P	Screw, Hex Cap Lock, 1/2-13 x 1.25 GR5
14	710-0514	11	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
15	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
16	710-3168	4	/P	Screw, Carriage, 3/8-16 x 1.0
17	710-3296	1		Screw, Hex Cap, 1/4-20 x .75 GR5
18	731-04114	1		Cover, PTO Shaft
19	711-0599	4	S	Pin, Clevis, .372 x 1.79
20	711-1105	4	/P	Pin, Klik
21	711-1733	1		Pin, Clevis, 19mm x 84mm
22	711-1743	2	S	Pin, Hitch, .75 OD
23	711-1750	1	S	Shaft, Hitch Rock
24	711-1753	2	S	Clevis, Chain
25	711-1761	2	S	Pin, Clevis, .75 x 1.938
26	712-0301	2	/P	Nut, Hex Jam, 3/4-10 GR5
27	712-0431	13	S	Nut, Hex Flange Lock, 3/8-16 GRF
28	714-0117	1	/P	Pin, Internal Cotter
29	714-0142	2	/P	Pin, Cotter, 3/16 x 1.5
30	714-0149B	4	S	Pin, Internal Cotter
31	715-0121	2	/P	Pin, Spirol, 1/4 x 2.0
32	716-04004	2	S	Ring, Retaining
33	717-3532A	1	S	Cylinder, Lift
34	736-0255	1	S	Washer, Belleville, .51 x 1.14 x .04
35	736-0315	2	/P	Washer, Flat, .76 x 1.5 x .12
36	736-0364	2	S	Washer, Lock, 3/4
37	737-3000	1	S	Fitting, Lube, 3/16 Drive
38	738-0143	1	/P	Screw, Shoulder, 3/8-16
39	741-04084	2	S	Bearing, Sleeve, 1.25 x 1.50 x 1.25
40	747-04122	1	S	Rod, Top Link Hanger
41	736-0185	8	S	Washer, Flat, .375 x .738 x .063
42	736-0272	4	S	Washer, Flat, .51 x 1.0 x .06
43	736-04177	4		Washer, Flat, .938 x 1.75 x .235
44	603-04332-0637	1		Bracket, Ass'y., Upper Hitch

5264DL Tractor
Transmission Connections

Page 69 of 77

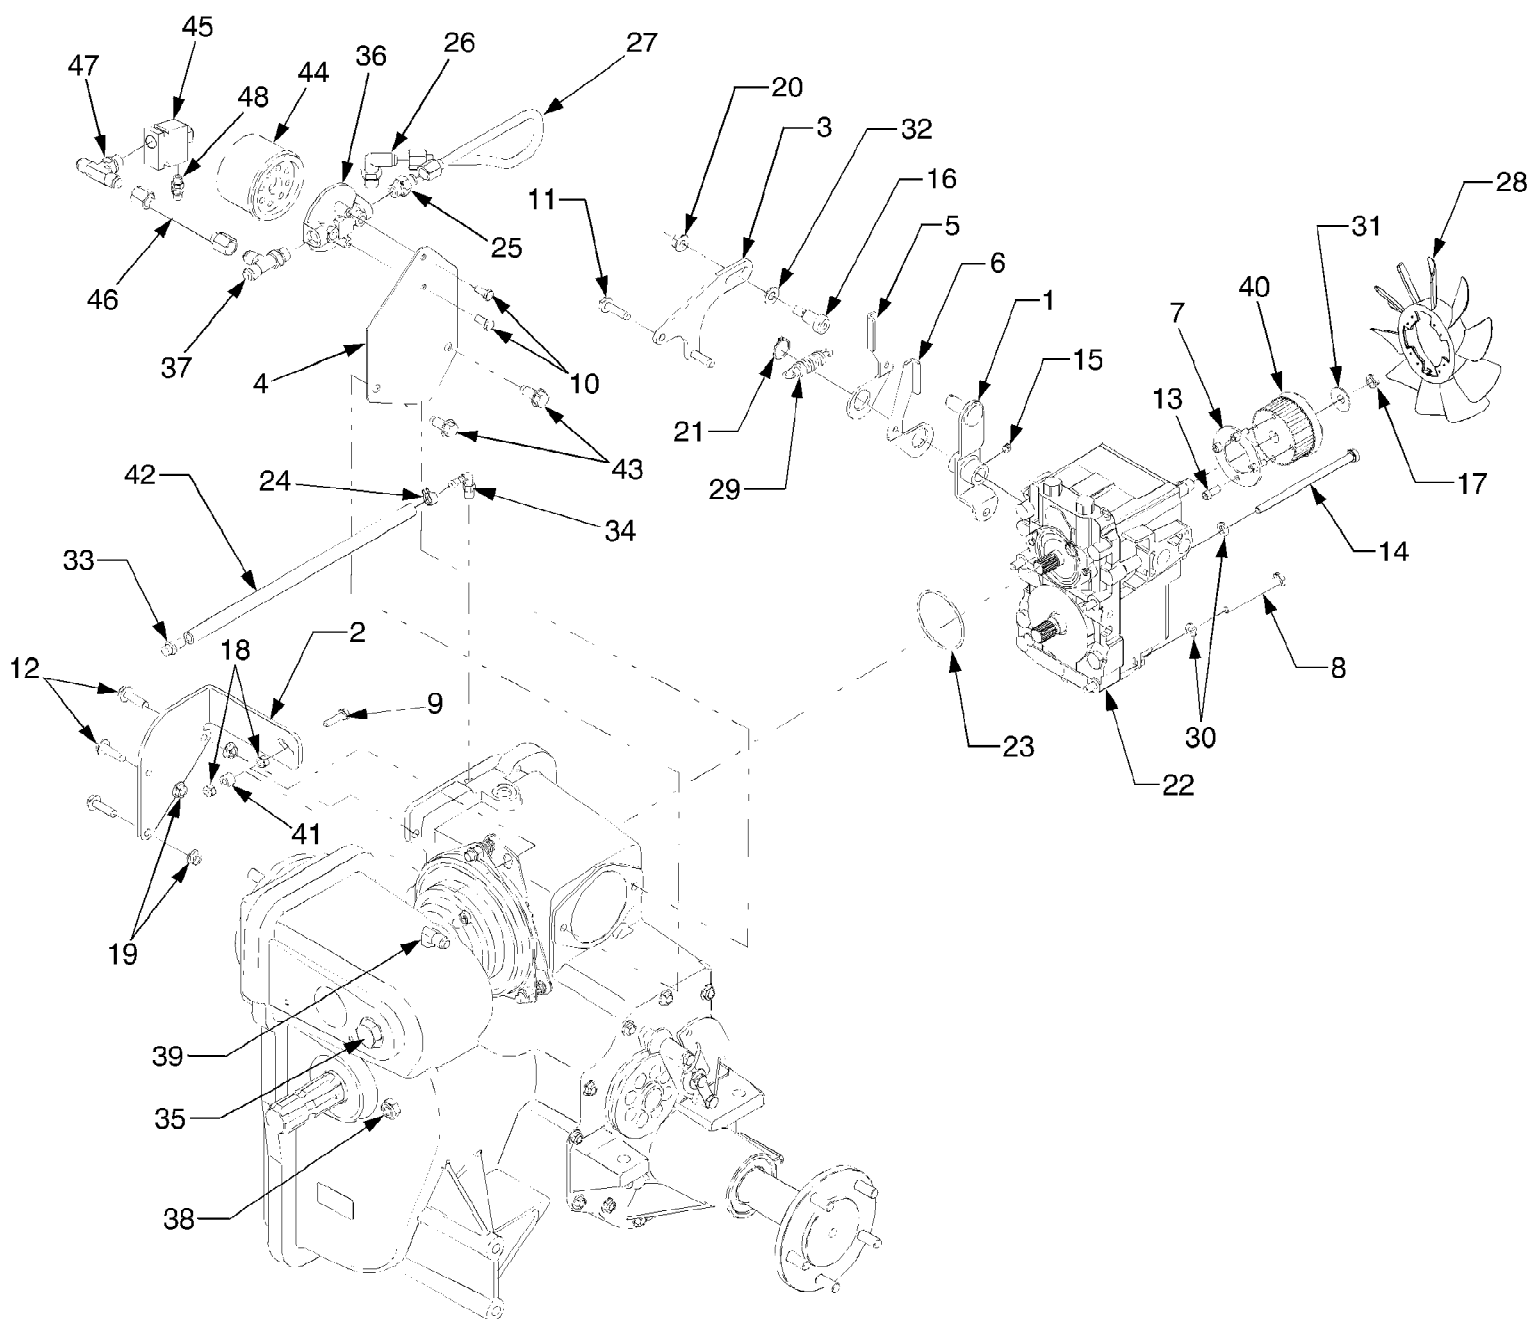


5264DL Tractor
Transmission Connections

Page 70 of 77

Ref #	Part Number	Qty	S/P/F	Description
	737-3120	1	/P	Transmission Oil, 1 Qt. 5 gal.
	737-3121	1	/P	Transmission Oil, 1 Gal.
	759-3958	AR		Sealant, Loctite Black, 5.3 oz.
1	603-0980	1	S	Arm, Hydro
2	603-04192	1		Bracket, Clutch Torque
3	603-04195	1		Bracket, Return
4	603-04298	1		Bracket, Filter Mounting
5	703-05041	1		Arm, Neutral - RH
6	703-05042	1		Arm, Neutral - LH
7	703-05742	1		Keeper, Belt
8	710-0189	2	/P	Screw, Hex Cap, 5/16-18 x 3.0 GR5
9	710-0299	1		Screw, Hex Cap, 1/4-28 x 1.0 GR5
10	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
11	710-0817	2		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25 GR5
12	710-1882	3		Screw, Hex Flange, 5/16-18 x 1.5 GR5
13	710-3218	4		Screw, Socket Hd. Cap 1/4-20 x .62 GR8
14	710-3226	2		Screw, Hex Cap Lock, 5/16-18 x 5.5 GR5
15	710-3242	1		Screw, Set - Lock 5/16 x .5 GR5
16	710-04040	1	/P	Screw, Shoulder, .497 x .750: 3/8-16
17	712-0262	1	/P	Nut, Hex Jam Lock, 3/8-24
18	712-0896	2		Nut, Hex Nylon Lock, 1/4-28
19	712-3004A	3	/P	Nut, Hex Flange Lock, 5/16-18 GR5
20	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16
21	716-0111	1	/P	Ring, Retaining
22	718-04141	1	S	Pump, Hydrostatic Transmission
23	721-04002	1	S	O-Ring, 2.425 ID x .103
24	726-0205	1	/P	Clamp, Hose
25	727-3002	1	S	Fitting, Straight
26	727-3012	1	/P	Fitting, 90 Degree
27	727-04095	1	S	Tube, Hydro Inlet
28	731-05247	1	S	Fan, Transmission Cooling
29	732-3119	1	S	Spring, Extension, .50 x 1.975 x .072
30	736-0119	4	S	Washer, Lock, 5/16
31	736-0331	1	/P	Washer, Belleville
32	736-0864	1	S	Washer, Thrust, .375 x .812 x .06
33	737-0296	1	/P	Vent, 3/8 Dia
34	737-0299	1		Fitting, Elbow
35	737-0349	2		Fitting, Plug
36	737-04011	1	S	Adapter, Oil Filter
37	737-04026	1	S	Fitting, Run Tee
38	737-04032	1	S	Indicator, Oil Level Sight
39	737-04047	1	S	Fitting, Elbow
40	748-04086	1	S	Adapter. Cog Pump
41	751-10234	1		Tube, Rubber, .25 .375 x .38
42	751-3130	1		Hose, Vent 13 in.
43	GW-90064	2		Screw, Hex Wash Hd Tapp 3/8-16 x .62
44	BS-492932S	1	/P	Filter, Hydro Pump
45	718-04001	1	S	Valve, Check, 30 PSI
46	727-04111	1	S	Tube, Inlet Filter
47	737-04016	1	S	Fitting, Branch Tee
48	737-04020	1	S	Fitting, Adapter

5264DL Tractor
Transmission Drive

Page 71 of 77

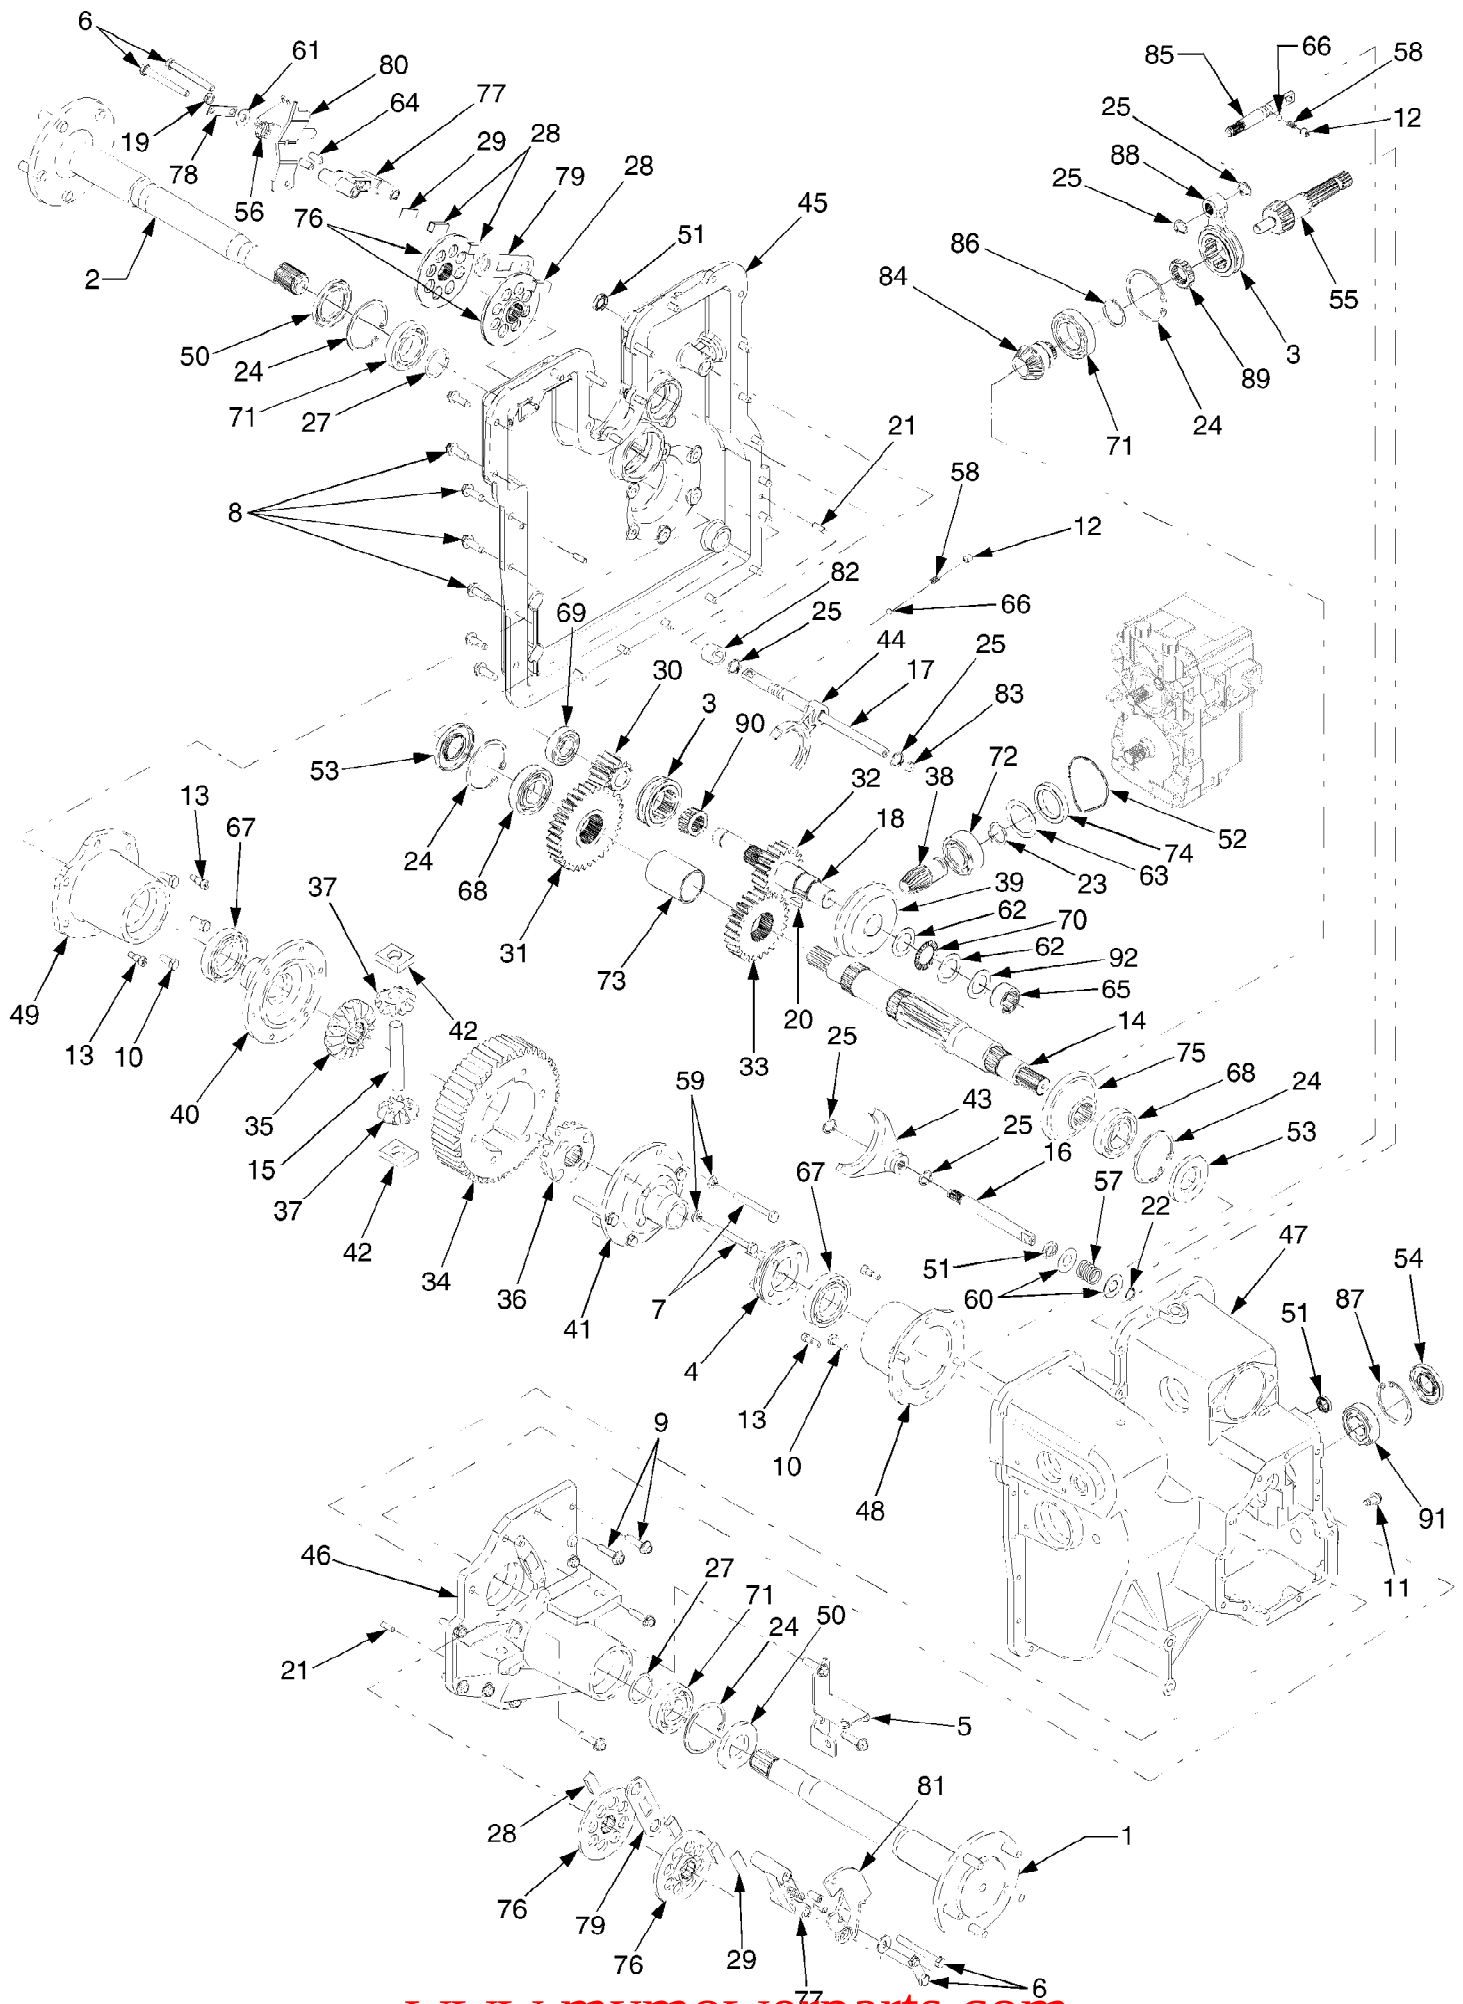

5264DL Tractor
Transmission Drive

Page 72 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	611-3033	1	S	Shaft, Axle RH
2	611-3034	1	S	Shaft, Axle LH
3	718-3116	2		Collar, Shift
4	618-3183	1	S	Collar Assembly, Diff Lock
5	703-05045	1	S	Bracket, Diff. Lock
6	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
7	710-0378	6	/P	Screw, Hex Cap, 5/16-18 x 2.5 GR5
8	710-0602	21	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.0
9	710-0817	12		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25
10	710-1880	8	/P	Screw, Hex Cap, w/Patch 5/16-18 x .75GR5
11	710-1633	1		Screw, Plug, M14 x 1.5 x .827
12	710-3006	2	/P	Screw, Set, 5/16-18 x .375
13	710-04035	4	/P	Screw, Shoulder .309 x .375: 1/4-20
14	711-1675	1	S	Shaft, Output, 11T
15	711-1676	1	S	Shaft, Cross, .625 x 3.95
16	711-04302	1	S	Shaft, Diff. Lock Actuator
17	711-04300	1	S	Shaft, Hi-Lo Actuator
18	711-04522	1	S	Shaft, Drive
19	712-0273	2	S	Nut, Hex Insert Lock, 5/16-24
20	714-0135	1	S	Key, Woodruff, 1/4 x 3/4
21	715-3010	4	/P	Pin, Dowel, .25 x .75
22	716-0114	1	S	Ring, Retaining
23	716-0127	1	/P	Ring, Snap
24	716-0180	5		Ring, Retaining
25	716-0194	6	/P	Clip, Rotor
27	716-04030	2	S	Ring, Retaining
28	717-0678	6	S	Pad, Brake
29	717-0682	2	S	Plate, Brake Puck
30	717-04271	1	S	Gear, Spur, 12T : Low
31	717-3535	1	S	Gear, Spur, 34T
32	717-04270	1	S	Gear, Spur, 19T
33	717-3537	1	S	Gear, Spur, 27T
34	717-3538	1	S	Gear, Spur, 56T
35	717-3541	1	S	Gear, Bevel, 16T
36	717-3542	1	S	Gear, Bevel, 16T Lock
37	717-3545A	2	S	Gear, Bevel, 10T Diff.
38	717-04132	1	S	Gear, Spiral Bevel, 13T
39	717-04133	1	S	Gear, Spiral Bevel, 54T
40	718-3148A	1	S	Cover, Differential
41	718-3149A	1	S	Cover, Differential Lock
42	718-3150	2	S	Block, Thrust
43	718-04080	1	S	Yoke, Diff. Lock Actuator
44	718-04185	1	S	Yoke, Shift, Hi-Lo
45	719-04001	1	S	Cover, Trans. Large
46	719-04002	1	S	Cover, Trans. Small
47	719-04153	1		Housing, Trans.
48	719-04004	1	S	Housing, Axle Inner - RH
49	719-04005	1	S	Housing, Axle Inner - LH
50	721-0381	2	S	Seal, Oil
51	721-0496	3		Seal, Oil
52	721-0519	1		Seal, Gland
53	721-3020A	2	S	Seal, Oil
54	721-04004	1	S	Seal, Oil


5264DL Tractor
Transmission Drive

Page 73 of 77

Ref #	Part Number	Qty	S/P/F	Description
55	711-1680	1	S	Shaft, 4WD
56	732-04003	2	S	Spring, Torsion
57	732-04010	1	S	Spring, Compression, .845 x 1.0
58	732-04101	2	S	Spring, Compression, .24 x .563
59	736-0119	6	S	Washer, Lock, 5/16
60	736-04126	2		Washer, Flat, .597 x 1.0 x .04 ..
61	736-0371	2	/P	Washer, Flat, .343 x .88 x .062
62	736-0615	2		Washer, Thrust
63	736-0266	AR	S	Washer, Flat, 1.52 x 2.0 x .030
	736-04095	AR	S	Washer, Flat, 1.52 x 2.0 x .005
	736-04096	AR	S	Washer, Flat, 1.52 x 2.0 x .015
64	741-0343	4	S	Pin, Brake Actuating
65	741-0363	1	S	Bearing, Needle
66	741-0862	2	/P	Ball, Detent
67	741-1104	2	/P	Bearing, Ball
68	741-3033A	2	S	Bearing, Ball
69	741-3057	1	S	Bearing, Ball
70	741-3083	1		Bearing, Needle Thrust
71	741-04014	3	S	Bearing, Ball
72	741-04066	1	S	Bearing, Ball
73	750-3364	1	S	Spacer, 1.51 x 1.75 x 2.41
74	750-04024	1	S	Spacer, 1.515 x 2.039 x .335 ...
75	717-04043	1	S	Gear, Spiral Bevel, 36T
76	761-0215	4		Disc, Brake
77	761-04000	2	S	Yoke, Brake
78	761-04001	2	S	Bracket, Brake Anti Rotation
79	761-04002	2	S	Plate, Puck Retainer
80	761-04003	1	S	Arm, Brake Actuator - LH
81	761-04004A	1	S	Arm, Brake Actuator - RH
82	750-04413	1		Spacer, .573 x .938 x .832
83	750-04416	1		Plug, .437 x .16
84	617-04004	1	S	Gear Assembly w/Bearings
84	741-0991	2		Bearing, Sleeve, 13 x 15 x 10
85	711-04301	1	S	Shaft, 4WD Actuator
86	716-0185	1		Ring, Retaining
87	716-0204	1		Ring, Retaining
88	718-04079	1	S	Yoke, 4WD
89	718-0668	1		Gear, Spline Coupling
90	718-04186	1		Gear, Hi-Lo Spline Coupling
91	741-3037	1	S	Bearing, Ball
92	736-0423	AR		Washer, Flat, 1.0 x 1.56 x .010 .
	736-0424	AR	S	Washer, Flat, 1.0 x 1.56 x .020
	736-0431	AR	S	Washer, Flat, 1.0 x 1.56 x .015

5264DL Tractor
Transmission Mounting

Page 74 of 77

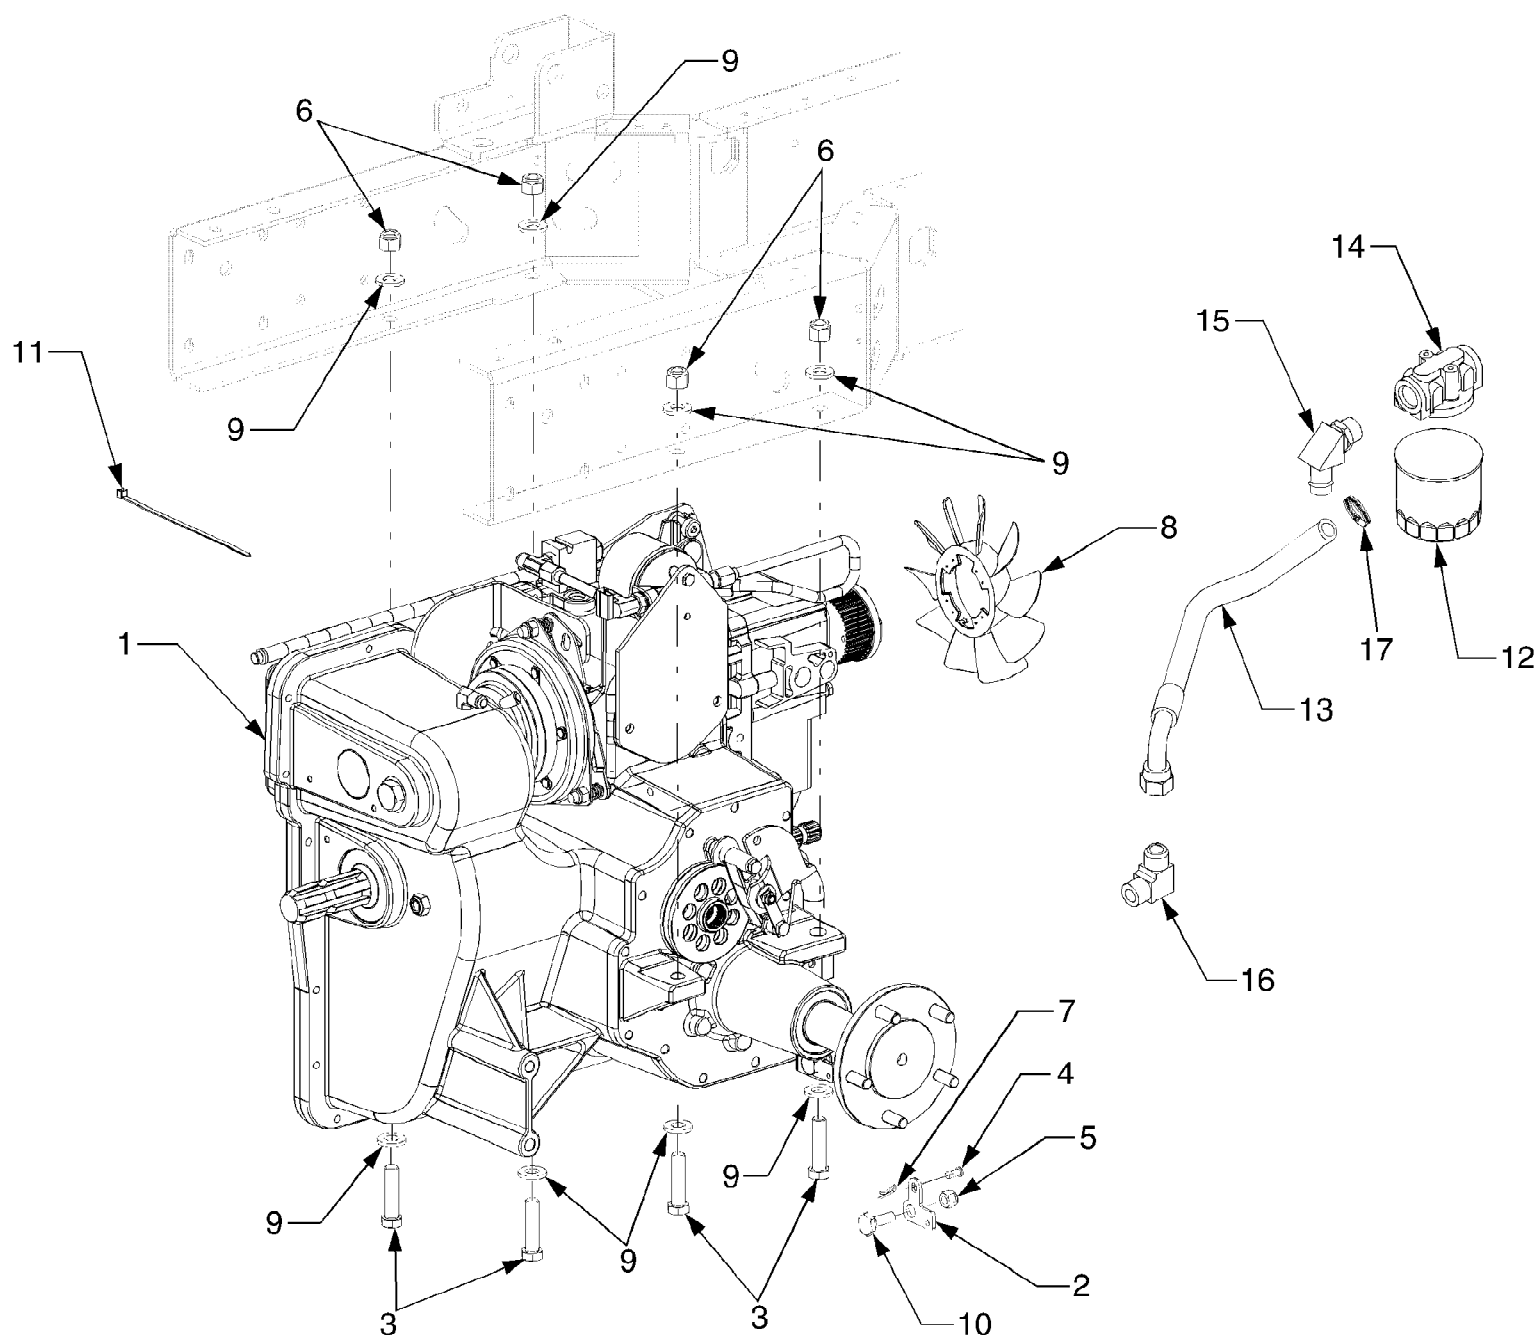


5264DL Tractor
Transmission Mounting

Page 75 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Transmission Assembly
2	603-04193	1		Link, Diff Lock Actuator
3	710-3071	4		Screw, Hex Cap 1/2-13 x 2.0 GR8
4	711-0701	1	S	Pin, Clevis, .25 x .50
5	712-3061	1	S	Nut, Hex Insert Lock, 3/8-24
6	712-3083	4	/P	Nut, Hex Insert Lock, 1/2-13
7	714-0104	1	S	Pin, Internal Cotter
8	731-05247	1	S	Fan, Transmission Cooling
9	736-3019	8		Washer, Flat, .531 x .1062 x .134 .
10	738-0689	1	S	Screw, Shoulder, 1/2 Dia. x .180 ..
11	725-0157	1	/P	Tie, Cable
12	723-3014	1	S	Filter, Oil
13	727-04128	1		Hose, Filter
14	618-04295	1	/P	Adapter, Oil Filter
15	737-04131	1		Fitting, 45° Elbow
16	737-04102	1		Fitting, 90° Elbow
17	726-0132	1	/P	Clamp, Adjustable Hose

5264DL Tractor
Wheels

Page 76 of 77

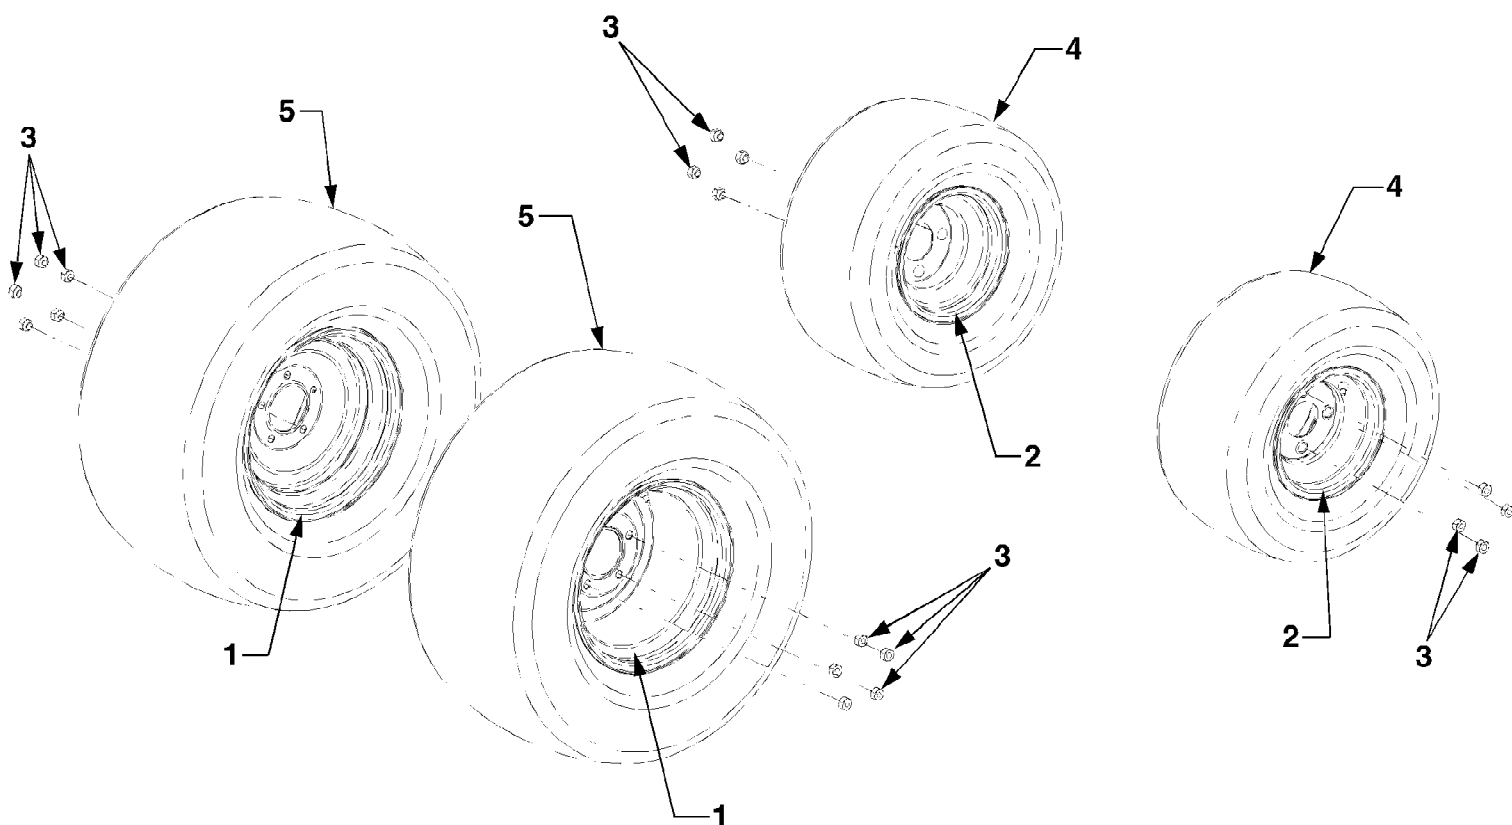

5264DL Tractor
Wheels

Page 77 of 77

Ref #	Part Number	Qty	S/P/F	Description
1	634-04004	2		Rim Assembly
1	734-0255	2	S	Valve Stem
2	634-04111	2		Rim Assembly, Turf Tire
2	634-04118	2		Rim Assembly, Ag Tire
2	734-0255	1	S	Valve Stem
3	712-3050	18	/P	Nut, Lug, 7/16-14
4	734-04002	2	S	Tire, Turf, 18 x 8.5 x 8
4	734-04044	2		Tire, Ag, 18 x 9.5 x 8
5	734-04080	2		Tire, Turf, 26 x 12.0 x 12
5	734-04043	2	/P	Tire, Ag, 26 x 12 x 12