



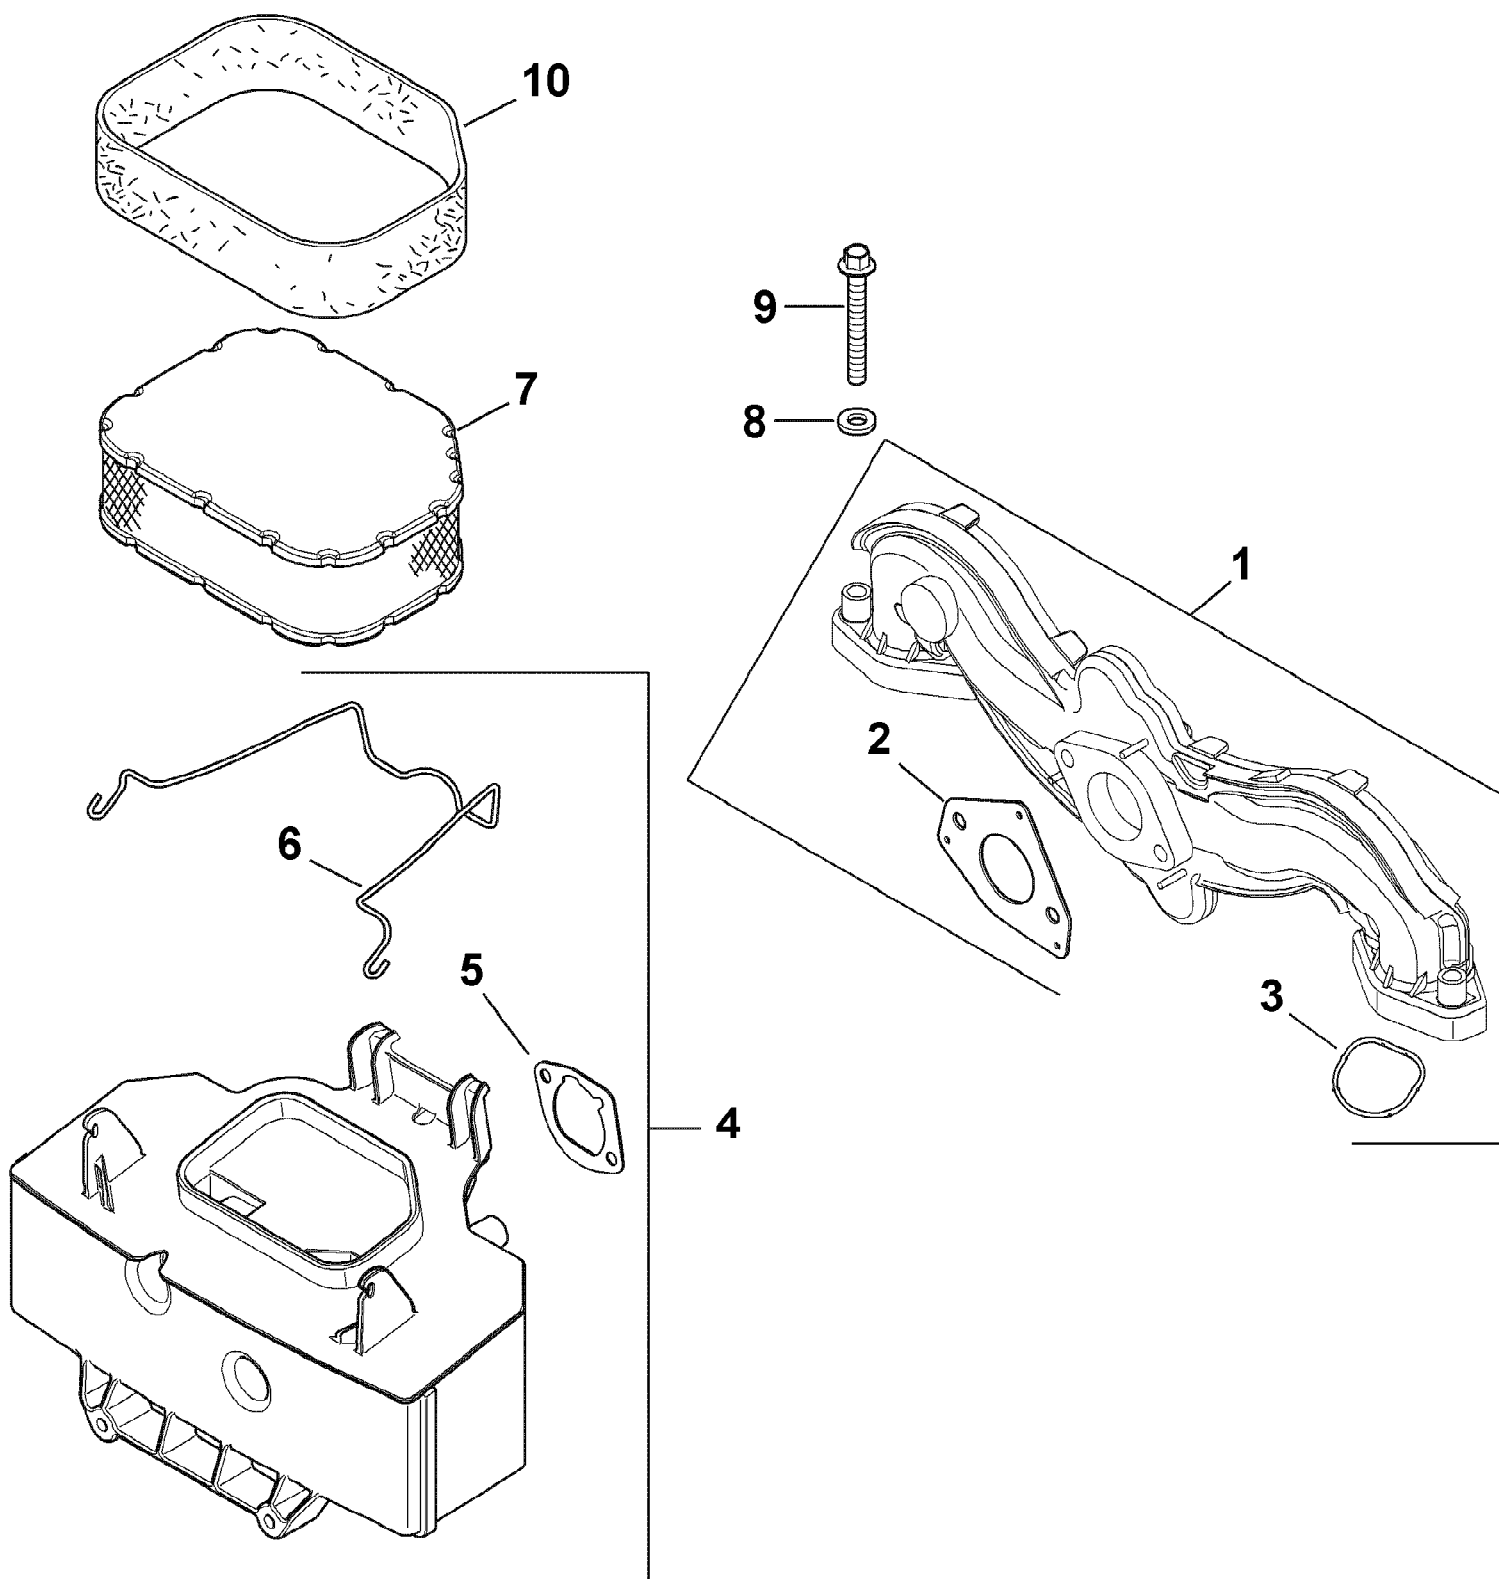

i1046 Tractor 2007 & Before
Air Filter Intake Manifold

Page 2 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-164-51-S	1	S	Manifold, Intake
2	KH-24-041-52-S	1	/P	Gasket, Carburetor
3	KH-24-153-27-S	1	/P	O-Ring, Intake Port
4	KH-32-094-04-S	1	/P	Base, Air Cleaner w/Gasket, Latch
5	KH-24-041-14	1	/P	Gasket, Air Cleaner Base
6	KH-32-344-02-S	1		Latch, Air Cleaner Element
7	KH-32-083-03-S	1	S	Element, Air Filter
8	KH-X-25-63	1	/P	Washer, Flat, 1/4
9	KH-M-651040-S	1		Screw, Flange, M6 x 1.0 x 40
10	KH-32-083-05-S	1	S	Pre-Cleaner, Element

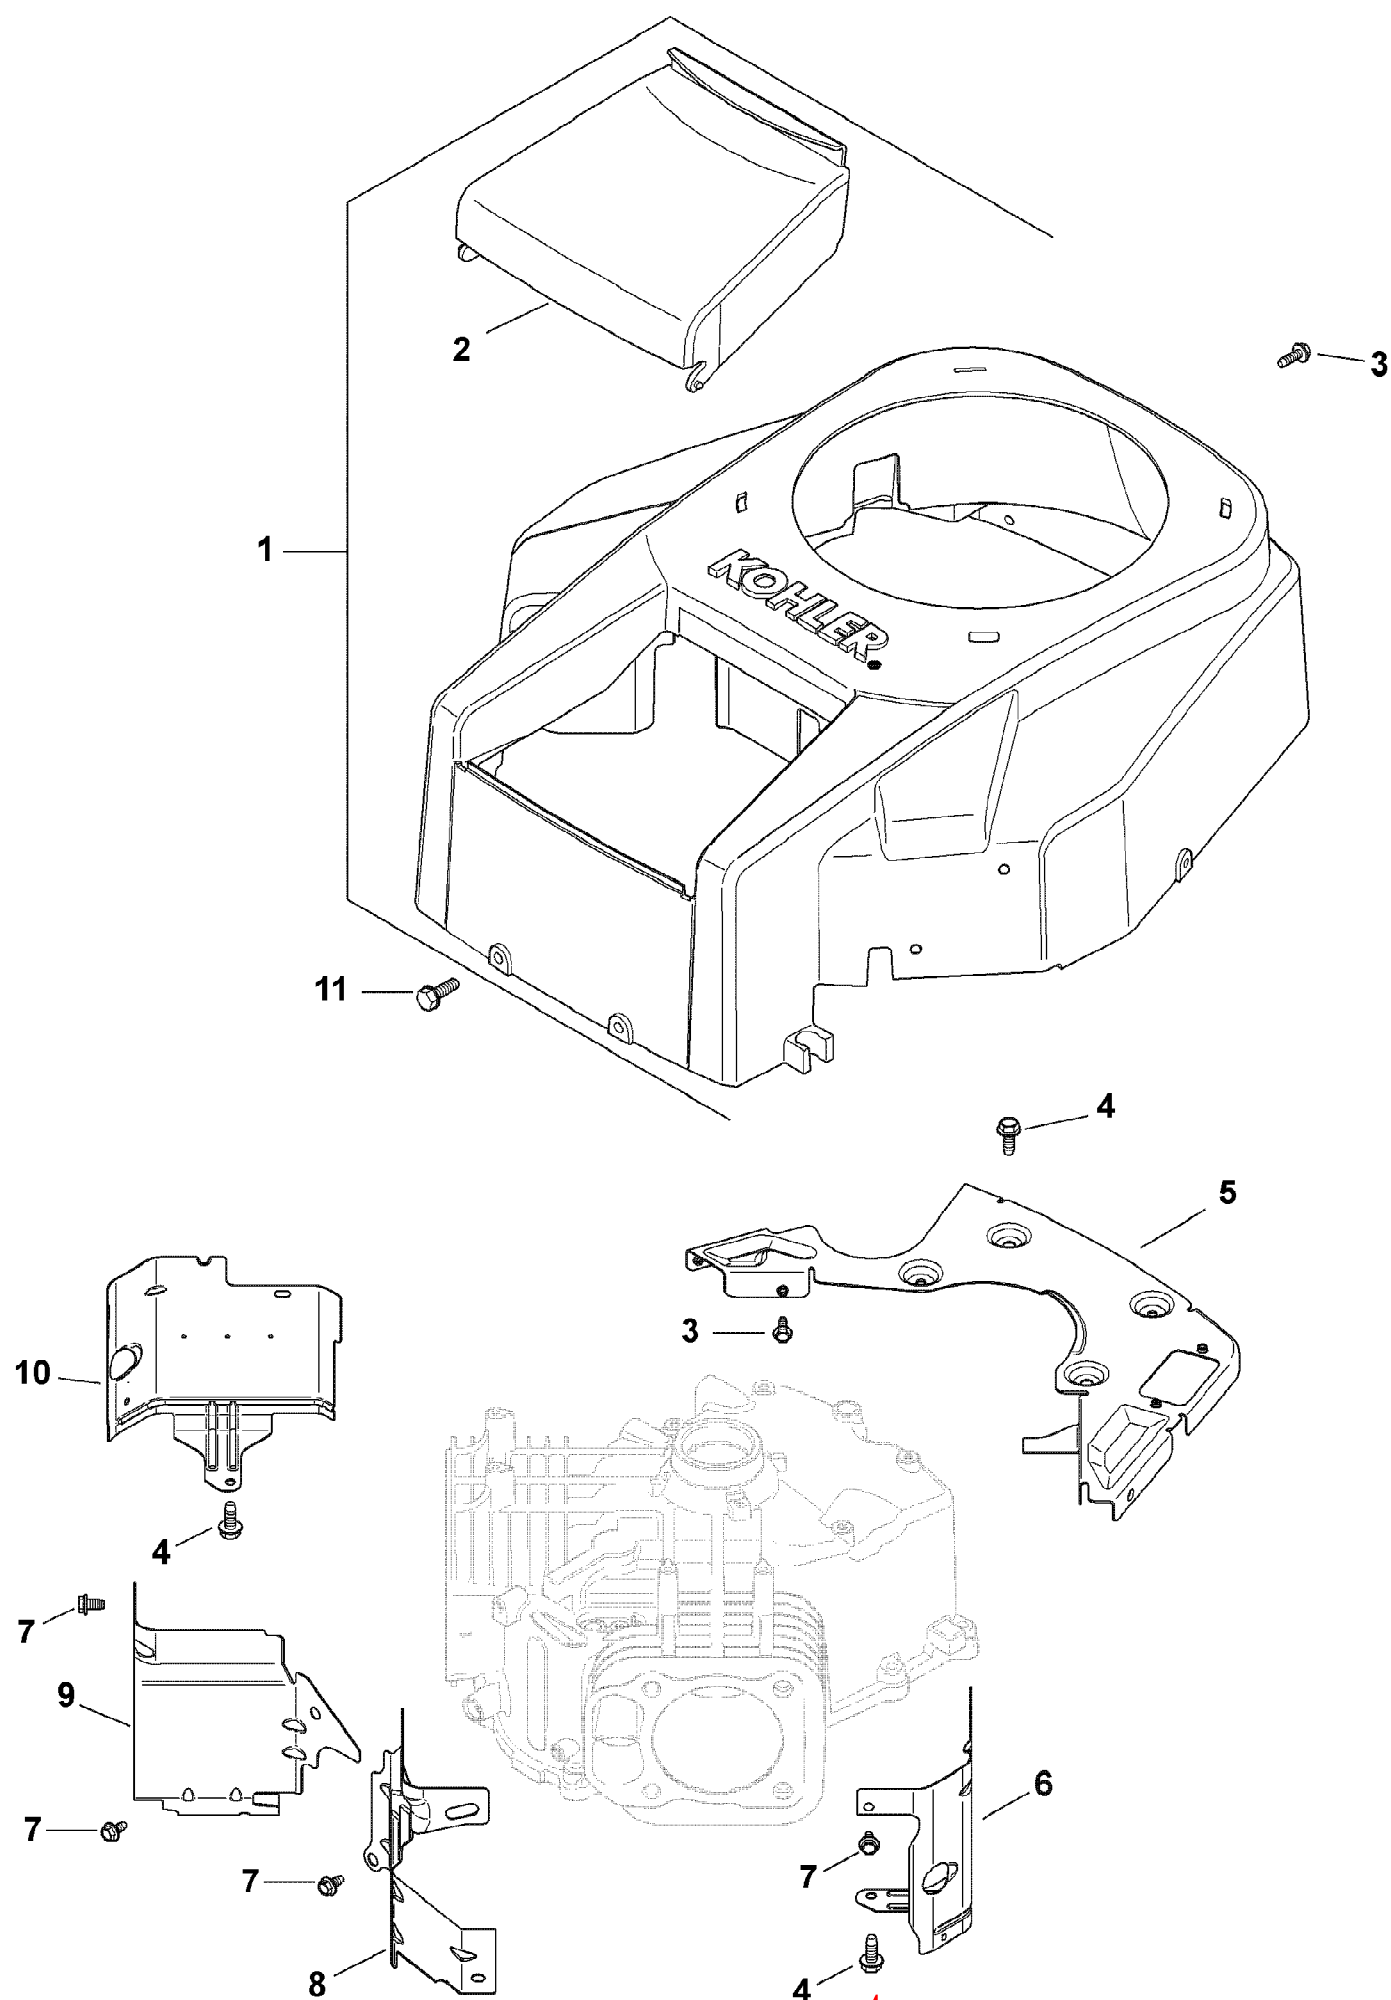

i1046 Tractor 2007 & Before
Blower Housing Baffles

Page 4 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-027-03-S	1		Kit, Blower Hsng (Incl. Ref.2 & KH-41-037-10-S)
2	KH-32-096-08-S	1		Cover, Air Cleaner
3	KH-M-545016-S	1	/P	Screw, Flnge Thrd. Frmng M5 x 0.8x 16
4	KH-M-645016-S	1	/P	Screw, Flnge Thrd. Frmng M6 x 1.0 x 16
5	KH-32-146-05-S	1		Plate, Backing
6	KH-32-063-05-S	1		Baffle, Cyl. Barrel - #2 Side
7	KH-M-545010	1	S	Screw, Flnge Thrd. Frmng M5 x 0.8x 10
8	KH-32-063-02-S	1		Baffle, Valley #2 Side
9	KH-32-063-03-S	1		Baffle, Valley #1 Side
10	KH-32-063-06-S	1		Baffle, Cylinder Barrel - #1 Side
11	KH-24-086-12	1		Screw, Tap, M6 x 1.7 x 18
	KH-41-037-10-S	1		Nameplate, Service Not Illustrated
	KH-32-113-20-S	1		Decal, Cub Not Illustrated

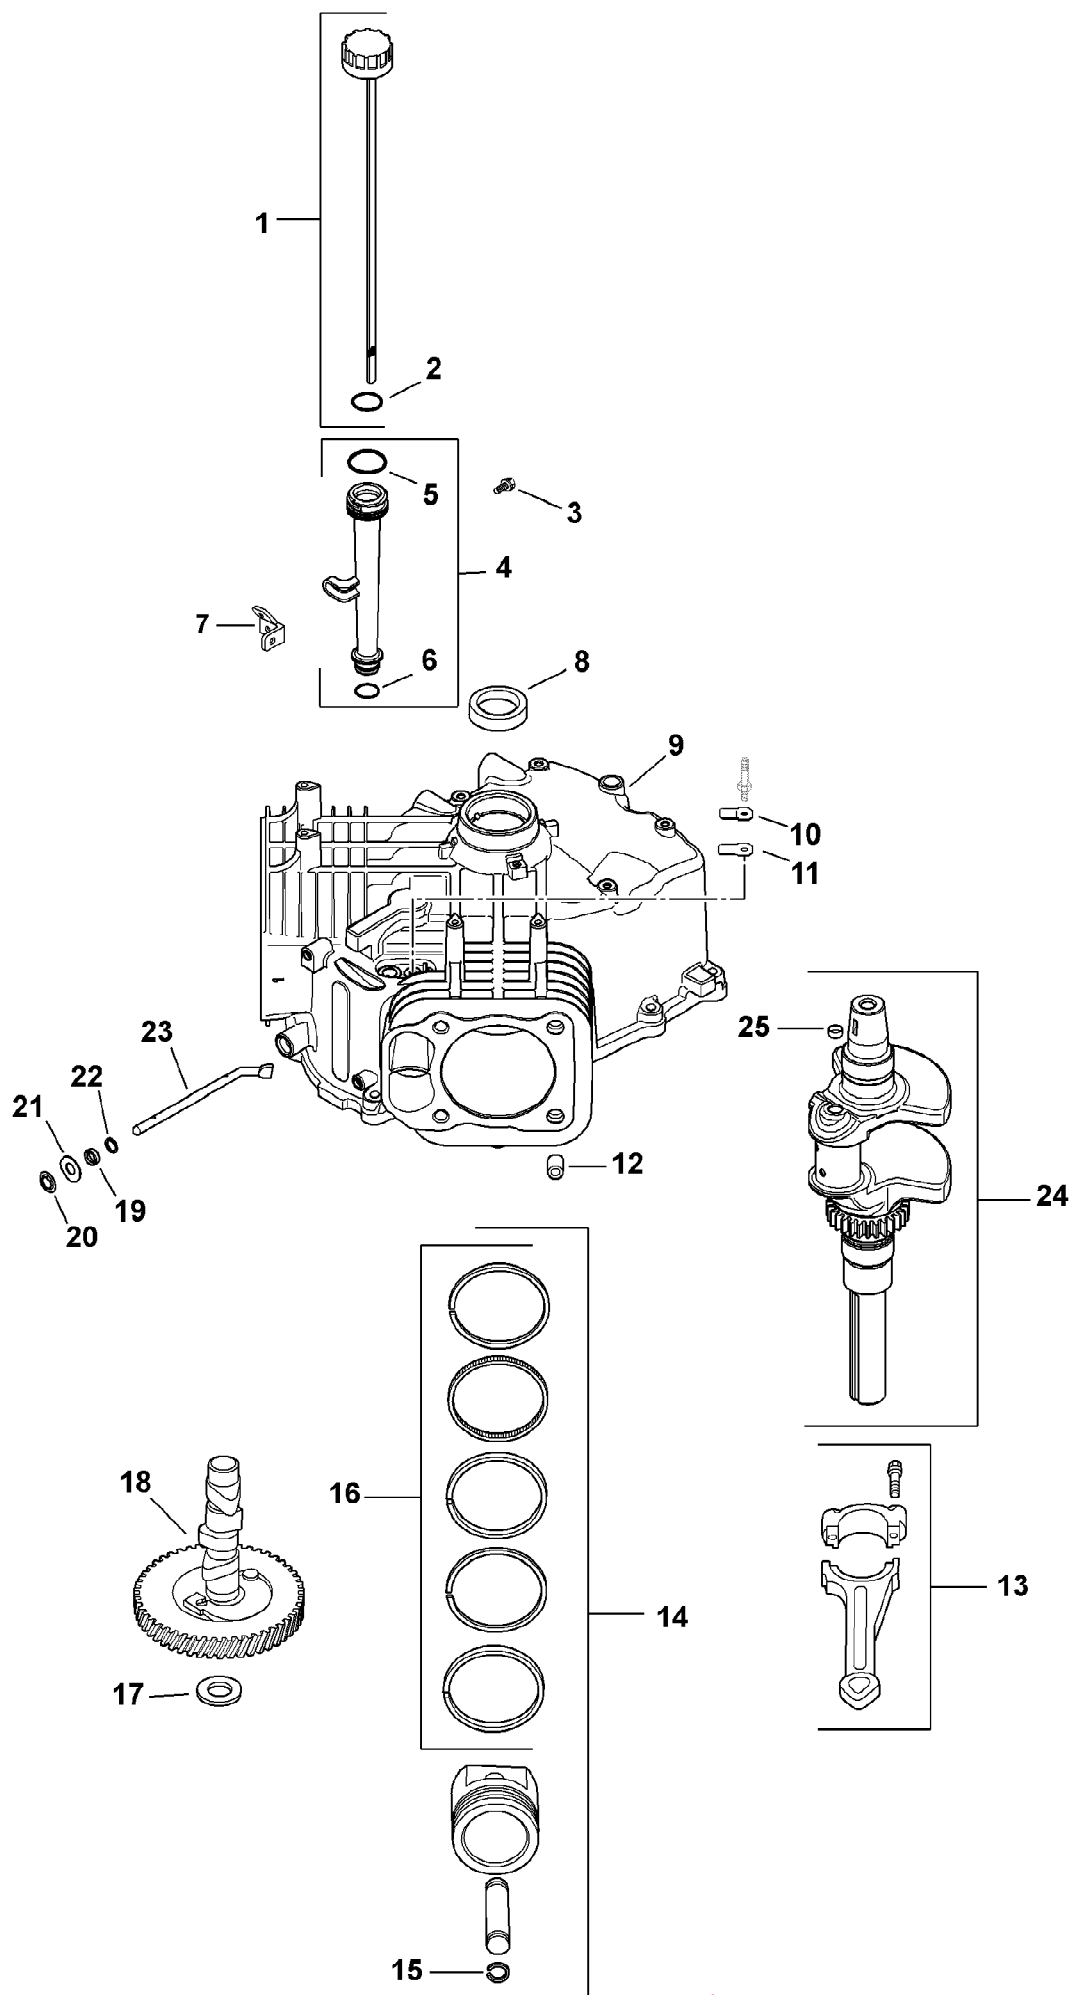

i1046 Tractor 2007 & Before
Crankcase Crankshaft & Dipstick

Page 6 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-038-01-S	1	S	Dipstick Assembly (Incl. Ref.2)
2	KH-25-153-02-S	1		O-Ring, Dipstick
3	KH-M-545013-S	1		Screw, Flnge Thrd. Frmng M5 x .8 x 13
4	KH-12-123-04	1	S	Kit, Oil Fill Tube (Incl. Ref. 5,6)
5	KH-12-153-02-S	1	/P	O-ring, Upper Fill Tube
6	KH-12-153-01-S	1	/P	O-ring, Lower Fill Tube
7	KH-24-126-19	1		Bracket, Fill Tube
8	KH-24-032-01-S	1	S	Seal, Oil
9	N/A	1		Crankcase - Use Short Block
9	KH-32-522-03	1		Short Block
10	KH-24-018-04	1		Retainer, Breather Reed
11	KH-12-402-02	1		Reed, Breather
12	KH-24-380-16-S	1	/P	Pin, Locating
13	KH-24-067-24-S	1	S	Connecting Rod (Std.)
14	KH-32-874-06-S	1		Kit, Piston w/Ring Set (Std.)
14	KH-32-874-28-S	1		Kit, Piston w/Ring Set (.25)
14	KH-32-874-09-S	1		Kit, Piston w/Ring Set (.08)
15	KH-24-018-01-S	1	/P	Retainer, Piston Pin
16	KH-24-108-11-S	1	S	Ring Set (Std. & .08)
16	KH-24-108-06-S	1	S	Ring Set (.25)
17	KH-12-422-07-S	1	/P	Shim, Camshaft (White .028)
17	KH-12-422-08-S	1	/P	Shim, Camshaft (Blue .03)
17	KH-12-422-09-S	1	/P	Shim, Camshaft (Red .032)
17	KH-12-422-10-S	1	/P	Shim, Camshaft (Yellow .034)
17	KH-12-422-11-S	1	/P	Shim, Camshaft (Green .036)
17	KH-12-422-12-S	1	/P	Shim, Camshaft (Gray .038)
17	KH-12-422-13-S	1	/P	Shim, Camshaft (Black .04)
18	KH-32-012-01-S	1		Kit, Camshaft
19	KH-28-032-09-S	1		Seal, Governor Cross Shaft
20	KH-24-018-09-S	1		Retaining Ring
21	KH-M-931010-S	1		Washer, Flat, 9mm
22	KH-24-468-15-S	1		Washer, Flat, 11/32
23	KH-24-144-38-S	1	/P	Shaft, Governor Cross
24	KH-32-014-04-S	1	S	Crankshaft (Incl. Ref. 25)
25	KH-52-139-09-S	1	/P	Plug, Cup
	KH-SV710-0019	1		Engine, Complete Twin Not Shown i1046 2008 & Before
	KH-SV730-0011	1		Engine, Complete 25 HP Not Shown i1050

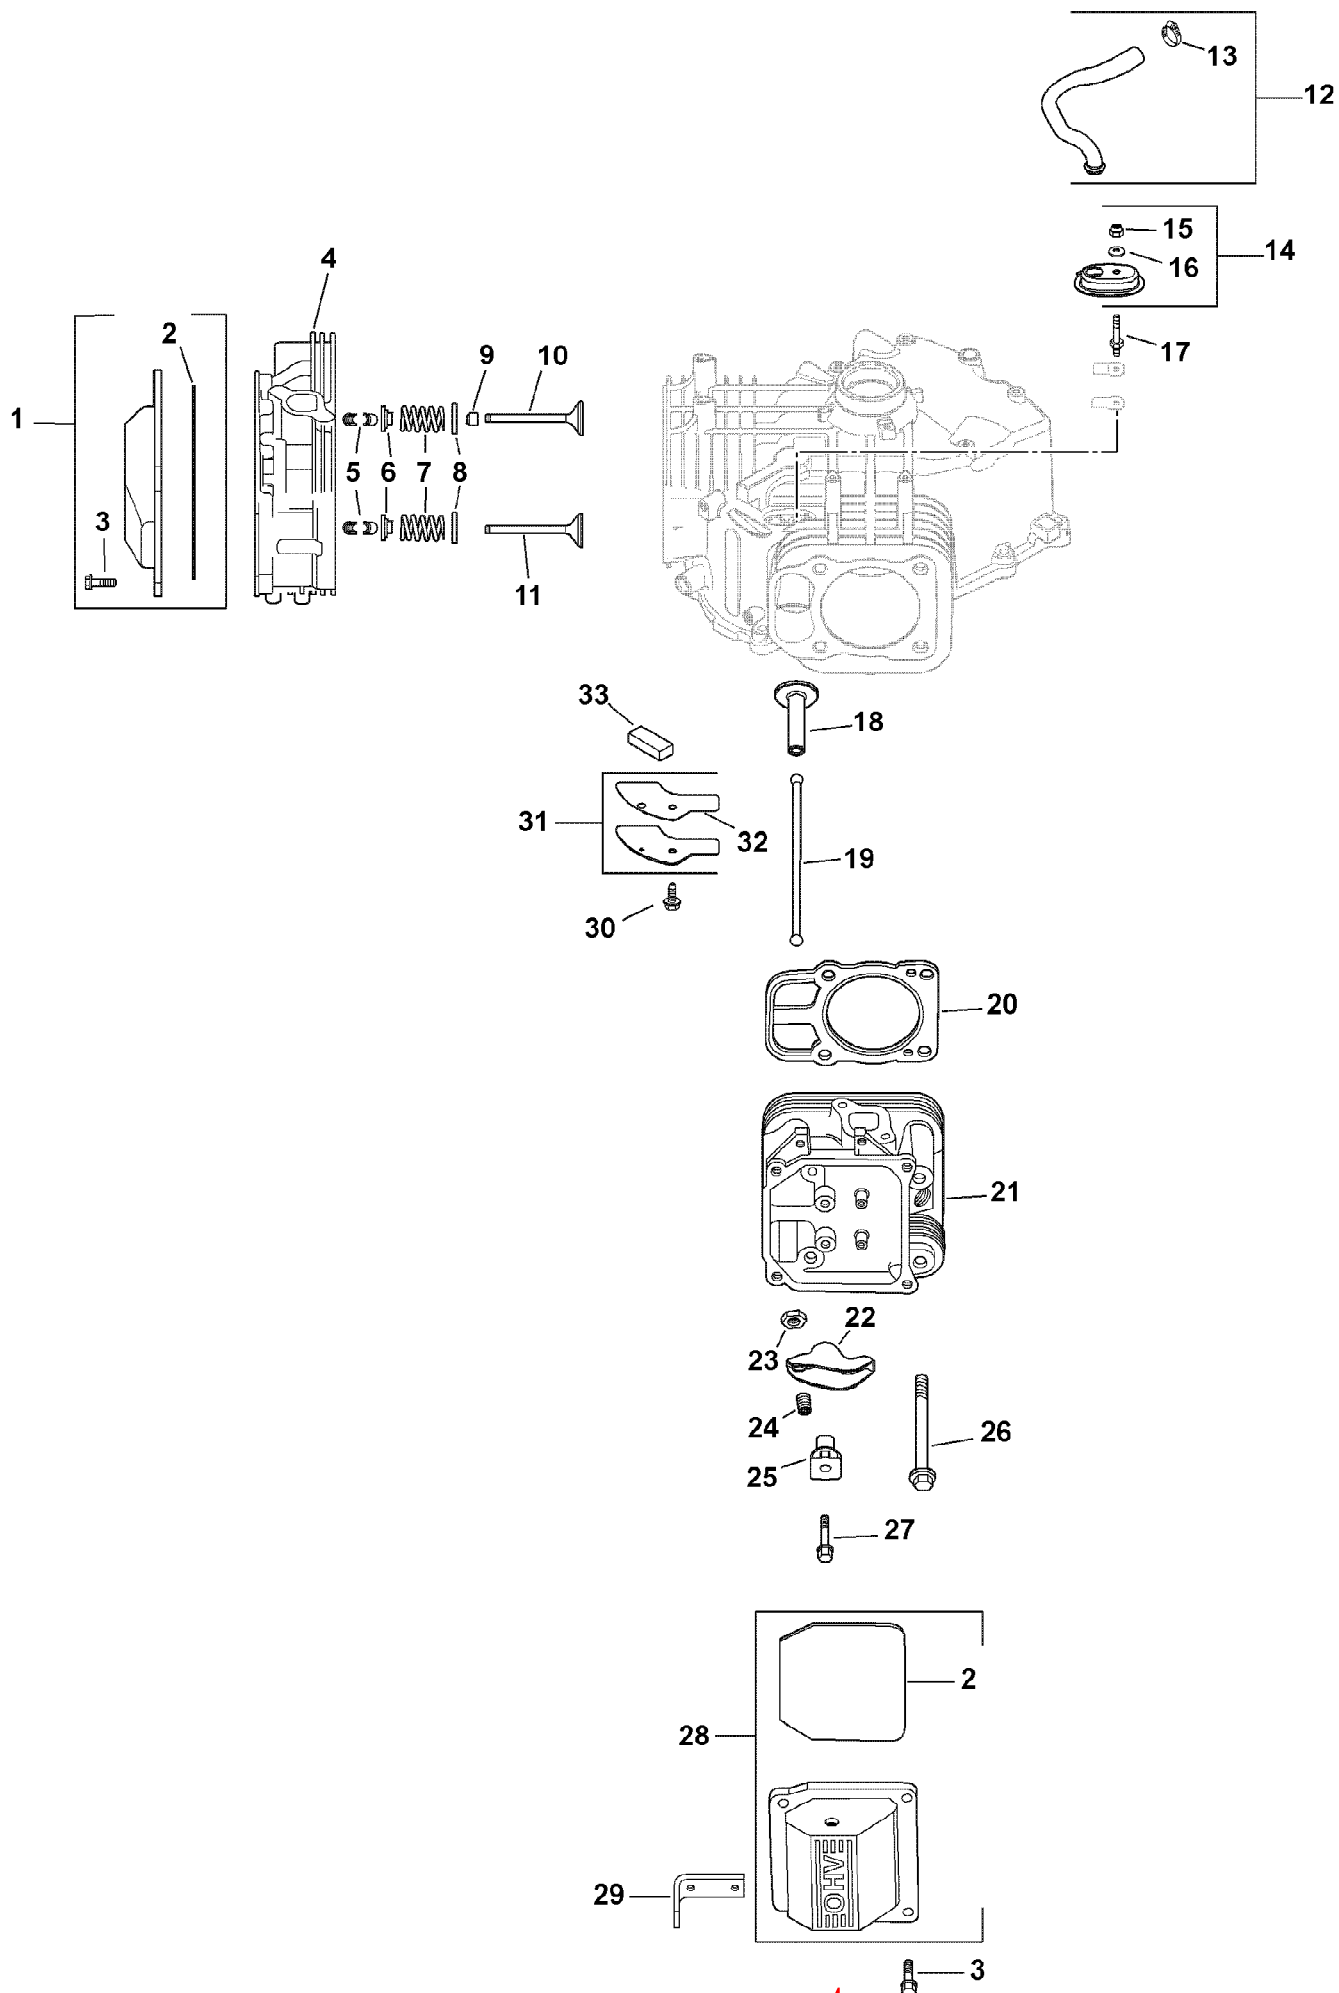


i1046 Tractor 2007 & Before
Cylinder Head Valve Breather

Page 8 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-141-S	1	/P	Kit, Rocker Cover Incl. Ref.2 & 4pc Ref. 3
2	KH-24-153-28-S	1	S	O-Ring, Valve Cover
3	KH-M-651030-S	1		Screw, Flnge M6 x 1.0 x 30
4	KH-32-318-01-S	1	S	Kit, #1 Cylinder Head Incl. 4pc Ref. 26 and KH-24-841-03-S
5	KH-12-755-03	1	/P	Kit, Retainer
6	KH-12-173-01	1	/P	Cap, Valve Spring
7	KH-24-089-02	1	/P	Spring, Valve
8	KH-235011-S	1	/P	Retainer, Spring
9	KH-66-032-05-S	1	/P	Seal, Valve Stem
10	KH-24-017-01	1	/P	Valve, Intake (Std.)
11	KH-24-016-01	1	/P	Valve, Exhaust (Std.)
12	KH-32-326-04-S	1		Kit, Breather Hose, (Incl. 1pc Ref. 13)
13	KH-25-237-14-S	1	/P	Clamp, Hose
14	KH-32-081-02-S	1		Kit, Breather Housing (Incl. 15,16)
15	KH-M-547050-S	1		Nut, Lock, M5 x 0.8
16	KH-32-468-01-S	1		Washer, Sealing
17	KH-32-072-02-S	1		Stud, Breather Cover
18	KH-32-019-01-S	1	S	Kit, Tappet
19	KH-32-411-02-S	1	/P	Rod, Push Serial No. 3633510943 & Before
19	KH-32-411-04-S	1	/P	Rod, Push Serial No. 3633510943 & After
20	KH-24-841-03-S	1	/P	Kit, Cylinder Head Gasket Incl. Head Mtg.Hardware and KH-24-041-49-S and KH-24-153-27-S
21	KH-32-318-02-S	1	S	Kit, #2 Cylindre Head Incl. 4pc Ref. 26 and KH-24-841-03-S
22	KH-32-186-02-S	1	S	Arm, Rocker
23	KH-32-100-04-S	1		Nut, M10 x 0.75
24	KH-32-086-03-S	1		Screw, Set
25	KH-24-599-02-S	1	/P	Pivot, Rocker Arm
26	KH-12-086-16	1	S	Screw, Flange, M10 x 1.5 x 90
27	KH-32-086-04-S	1	/P	Screw, Flange, M6 x 1.0 x 45
28	KH-32-096-06-S	1		Kit, Breather Valve Cover (Incl. 1pc Ref.2)
29	KH-24-445-01	1	S	Strap, Lifting
30	KH-M-645016-S	1	/P	Screw, Flnge Thrd. Frmng M6 x 1.0 x 16
31	KH-32-096-04-S	1		Kit, Breather Cover (Incl. Ref. 32)
32	KH-32-041-01-S	1		Gasket, Breather Cover
33	KH-32-050-01-S	1		Filter, Breather
	KH-24-041-49-S	1	/P	Gasket, Exhaust Not Illustrated
	KH-24-153-27-S	1	/P	O-Ring Not Illustrated

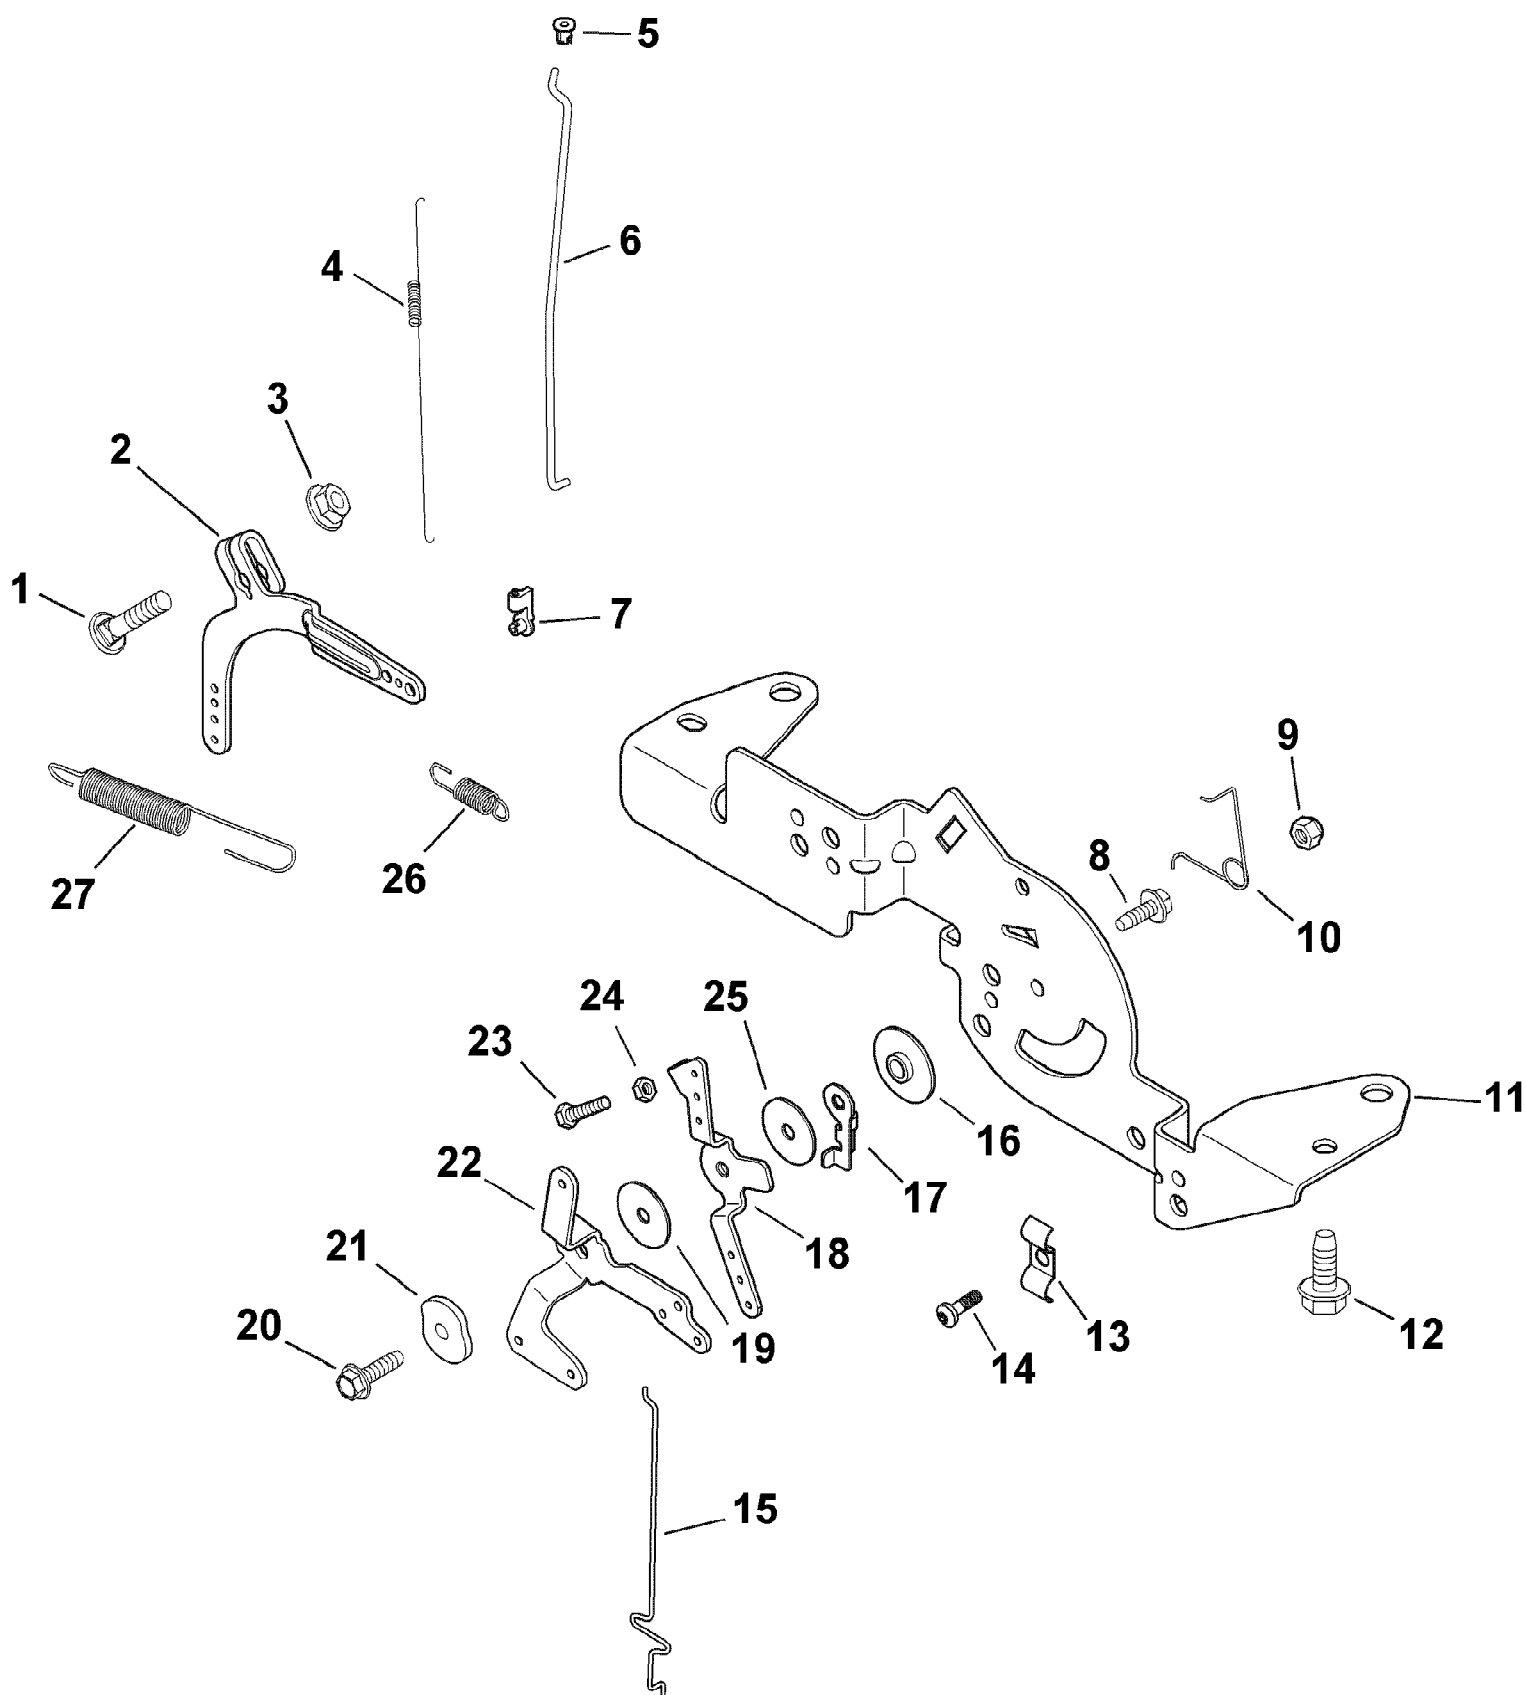

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-211-03-S	1		Bolt, Carriage, M6 X 1.0 X 25
2	KH-24-090-33-S	1	S	Lever, Governor
3	KH-M-641060-S	1	/P	Nut, Flange, M6 x 1.0
4	KH-24-089-01	1		Spring, Linkage
5	KH-25-158-08	1	/P	Bushing, Linkage Retainer
6	KH-24-079-04	1		Linkage, Throttle
7	KH-25-158-11	1	/P	Bushing, Throttle Linkage
8	KH-M-545016-S	1	/P	Screw, Flng. Thrd. Frmng, M5 x 0.8 x 16
9	KH-M-547050-S	1		Nut, Lock, M5 x 0.8
10	KH-24-089-03	1		Spring, Choke Return
11	KH-24-126-161-S	1	S	Bracket, Control
12	KH-M-645016-S	1	/P	Screw, Flnge Thrd. Frmng M6 x 1.0 x 16
13	KH-47-237-02	1	S	Clamp, Dual Conduit
14	KH-24-086-43-S	1		Screw, Torx Hd. Ctsk, M5 x 0.8 x 16
15	KH-24-079-22-S	1		Linkage, Choke
16	KH-24-112-27-S	1		Spacer, Control Assembly
17	KH-24-090-47-S	1		Lever, Throttle Actuator
18	KH-24-090-13	1		Lever, Throttle Control
19	KH-24-468-01	1		Washer, Flat, 5.5mm
20	KH-M-545020-S	1		Screw, Flng. Thrd. Frmng, M5 x 0.8 x 20
21	KH-41-468-03	1		Washer, Spring, 1/4
22	KH-24-090-05	1		Lever, Choke
23	KH-M-403025	1		Screw, Hex Cap, M4 x 0.7 x 25
24	KH-M-446030-S	1	/P	Nut, M4 x 0.7
25	KH-24-468-20-S	1		Washer, Flat, 5mm
26	KH-24-089-55-S	1		Spring, Governor
27	KH-24-089-18	1	/P	Spring, Governor, Model i1046 ONLY
27	KH-24-089-25-S	1	/P	Spring, Governor, Model i1050 ONLY

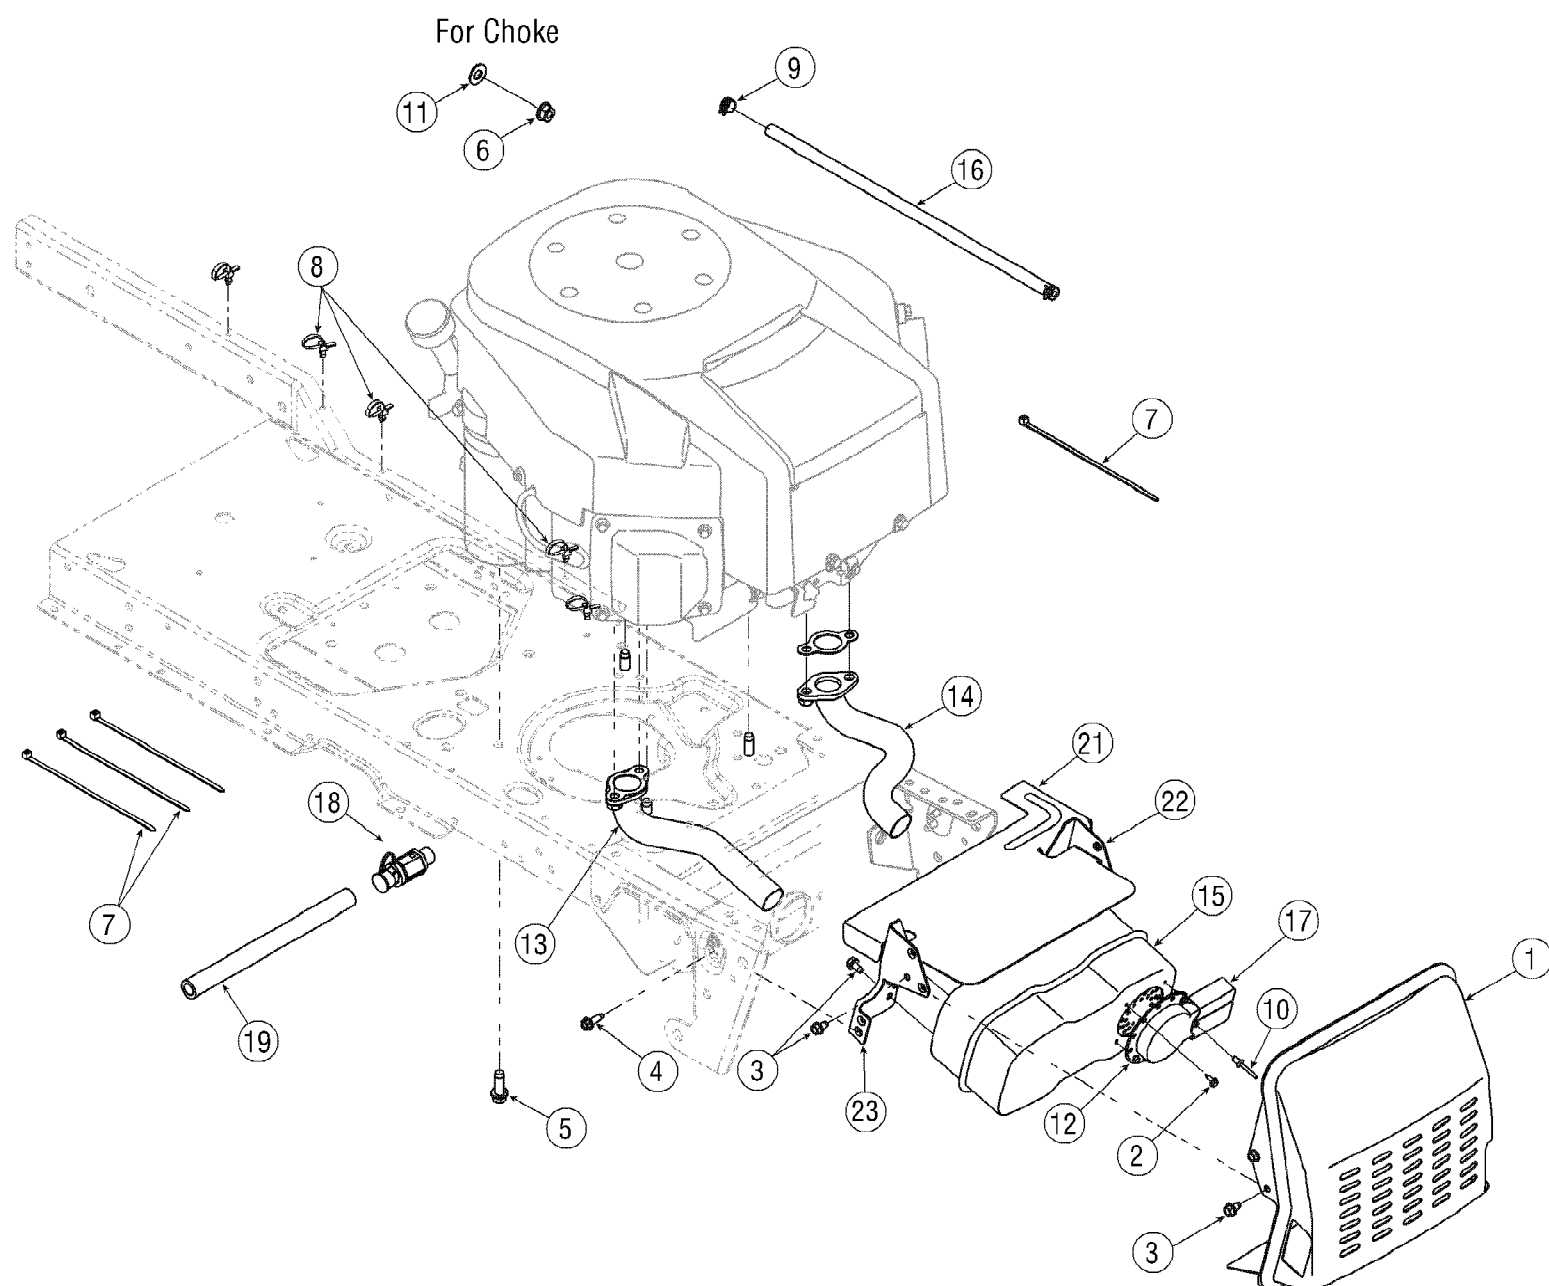


Ref #	Part Number	Qty	S/P/F	Description
1	683-04256	1	S	Shield, Muffler
2	710-0227	1	/P	Screw, Hex Wash Hd. Tapp, #8-18 x .5
3	710-0599	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .5
4	710-0642	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .75
5	710-0654A	1	/P	Screw, Hex Sems Tapp, 3/8-16 x 1.0
6	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16 Gr5
7	725-0157	1	/P	Tie, Cable
8	726-0154	1	S	Tie, Push Mount Cable
9	726-0205	1	/P	Clamp, Hose
10	728-04000	1		Rivet, Pop, .188 x .3
11	736-0300	1	S	Washer, Flat, .406 x .875 x .059
12	751-0564B	1	/P	Deflector, Muffler
13	751-10006	1		Pipe, Exhaust RH
14	751-10007	1		Pipe Exhaust LH
15	751-10161	1		Muffler, Dual Inlet
16	751-10349	1		Hose, Fuel ; Low Permeation, 51 inches
17	751-10353	1		Deflector, Muffler
18	751-10517	1	S	Oil Drain
19	751-3141	1	S	Hose, Oil Drain Extension
21	783-04783A	1	/P	Shield, Heat
22	783-04870	1	S	Bracket, Muffler LH
23	783-04872	1	S	Bracket, Muffler RH
	737-3030A	1	/P	Oil, 10W30 Engine not shown

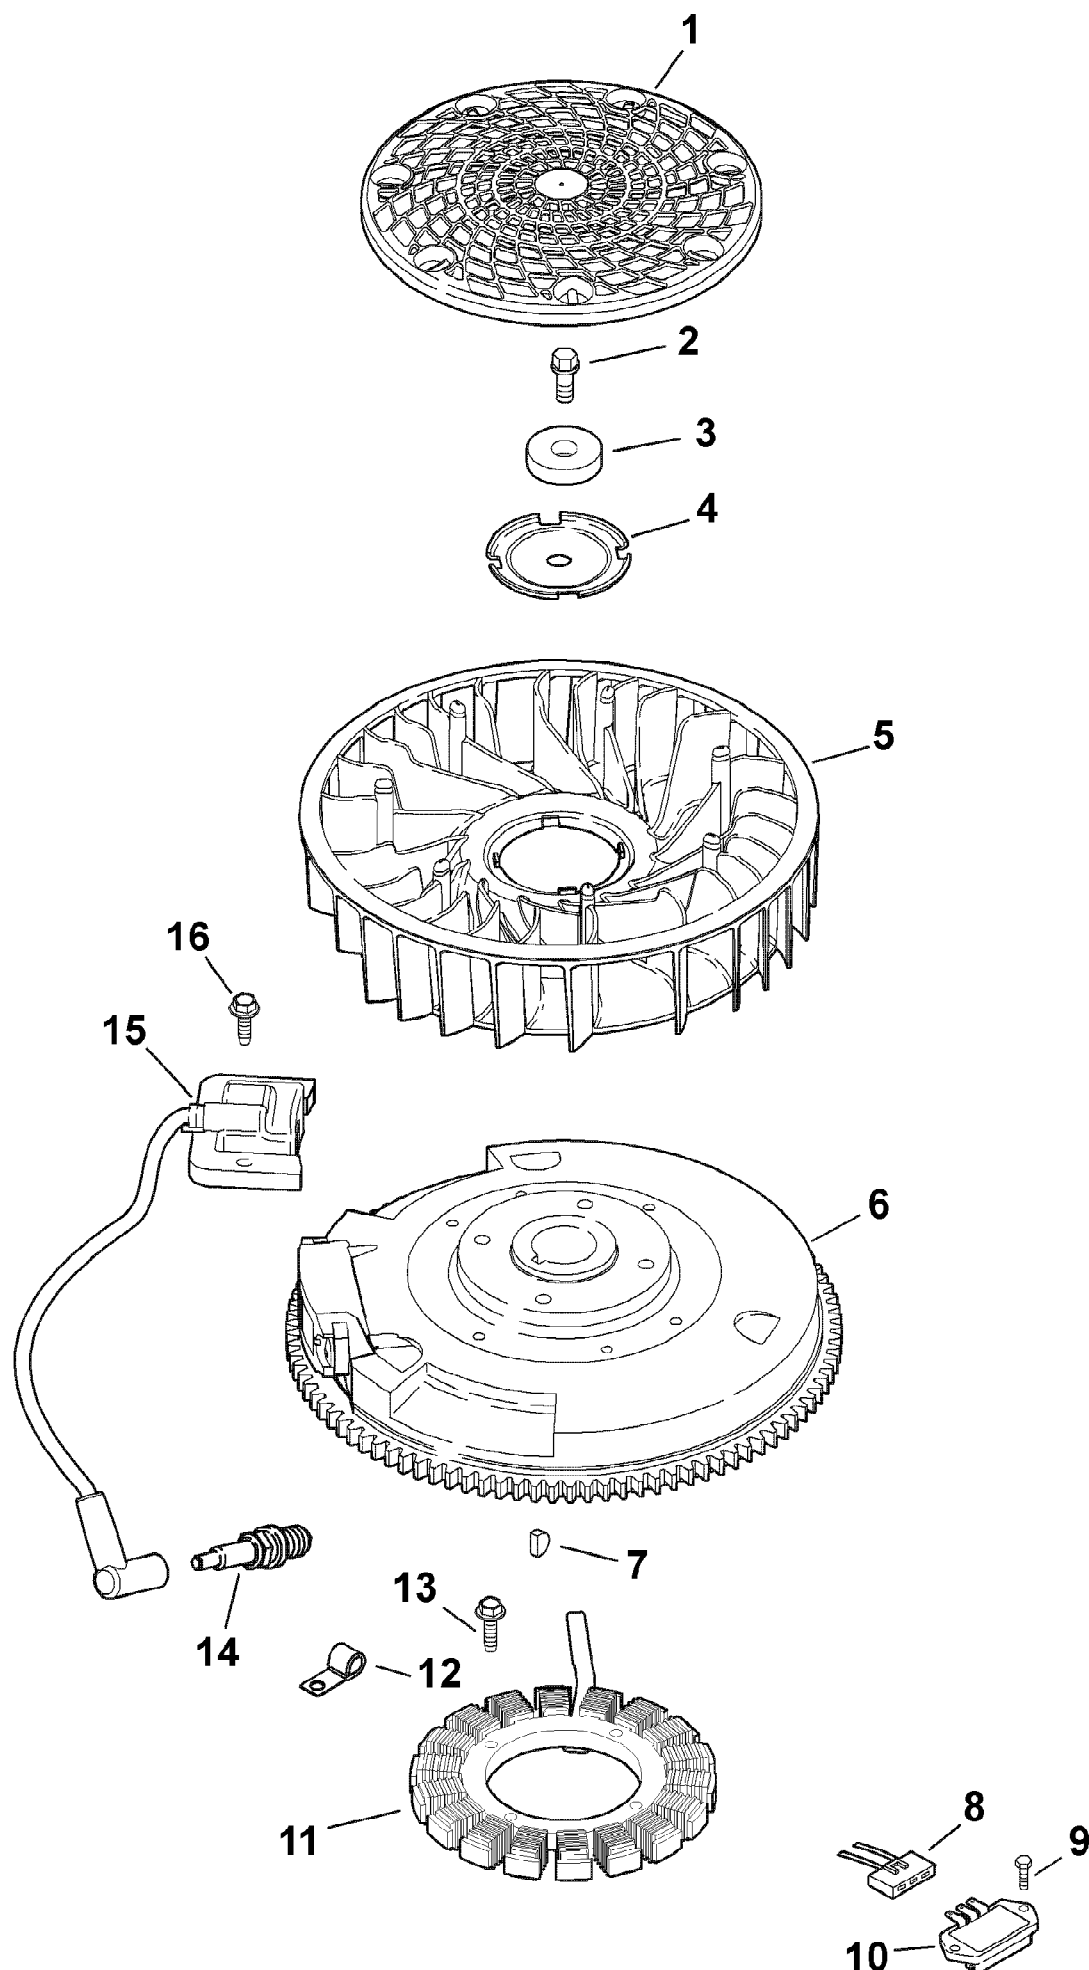

i1046 Tractor 2007 & Before
Flywheel Electrical

Page 14 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-162-03-S	1		Screen, Grass
2	KH-12-086-14	1		Screw, Flange, M10 x 1.5 x 45
3	KH-12-468-03	1	/P	Washer, Flat 13/32
4	KH-20-146-02-S	1	S	Plate, Fan Mounting
5	KH-32-157-01-S	1		Fan
6	KH-32-025-08-S	1	S	Flywheel
7	KH-X-42-15	1	/P	Key, 3/16 x 5/8
8	KH-236602-S	1	S	Connector (3 Contact)
9	KH-M-551016-S	1		Screw, Flange, M5 x 0.8 x 16
10	KH-41-403-09	1	S	Rectifier-Regulator
11	KH-237878	1	/P	Kit, 15 Amp Stator
12	KH-235173	1		Clip, Cable
13	KH-M-548025-S	1	/P	Screw, Thrd. Frmng M5 x 0.8x 25
14	759-3336	1	/P	Plug, Spark
15	KH-24-584-45-S	1	/P	Module, Ignition
16	KH-M-545020-S	1		Screw, Flnge Thrd. Frmng M5 x 0.8x 20
	KH-25-454-03-S	1		Tie, Wire Not Illustrated
	KH-32-176-02-S	1	S	Harness, Wiring Not Illustrated

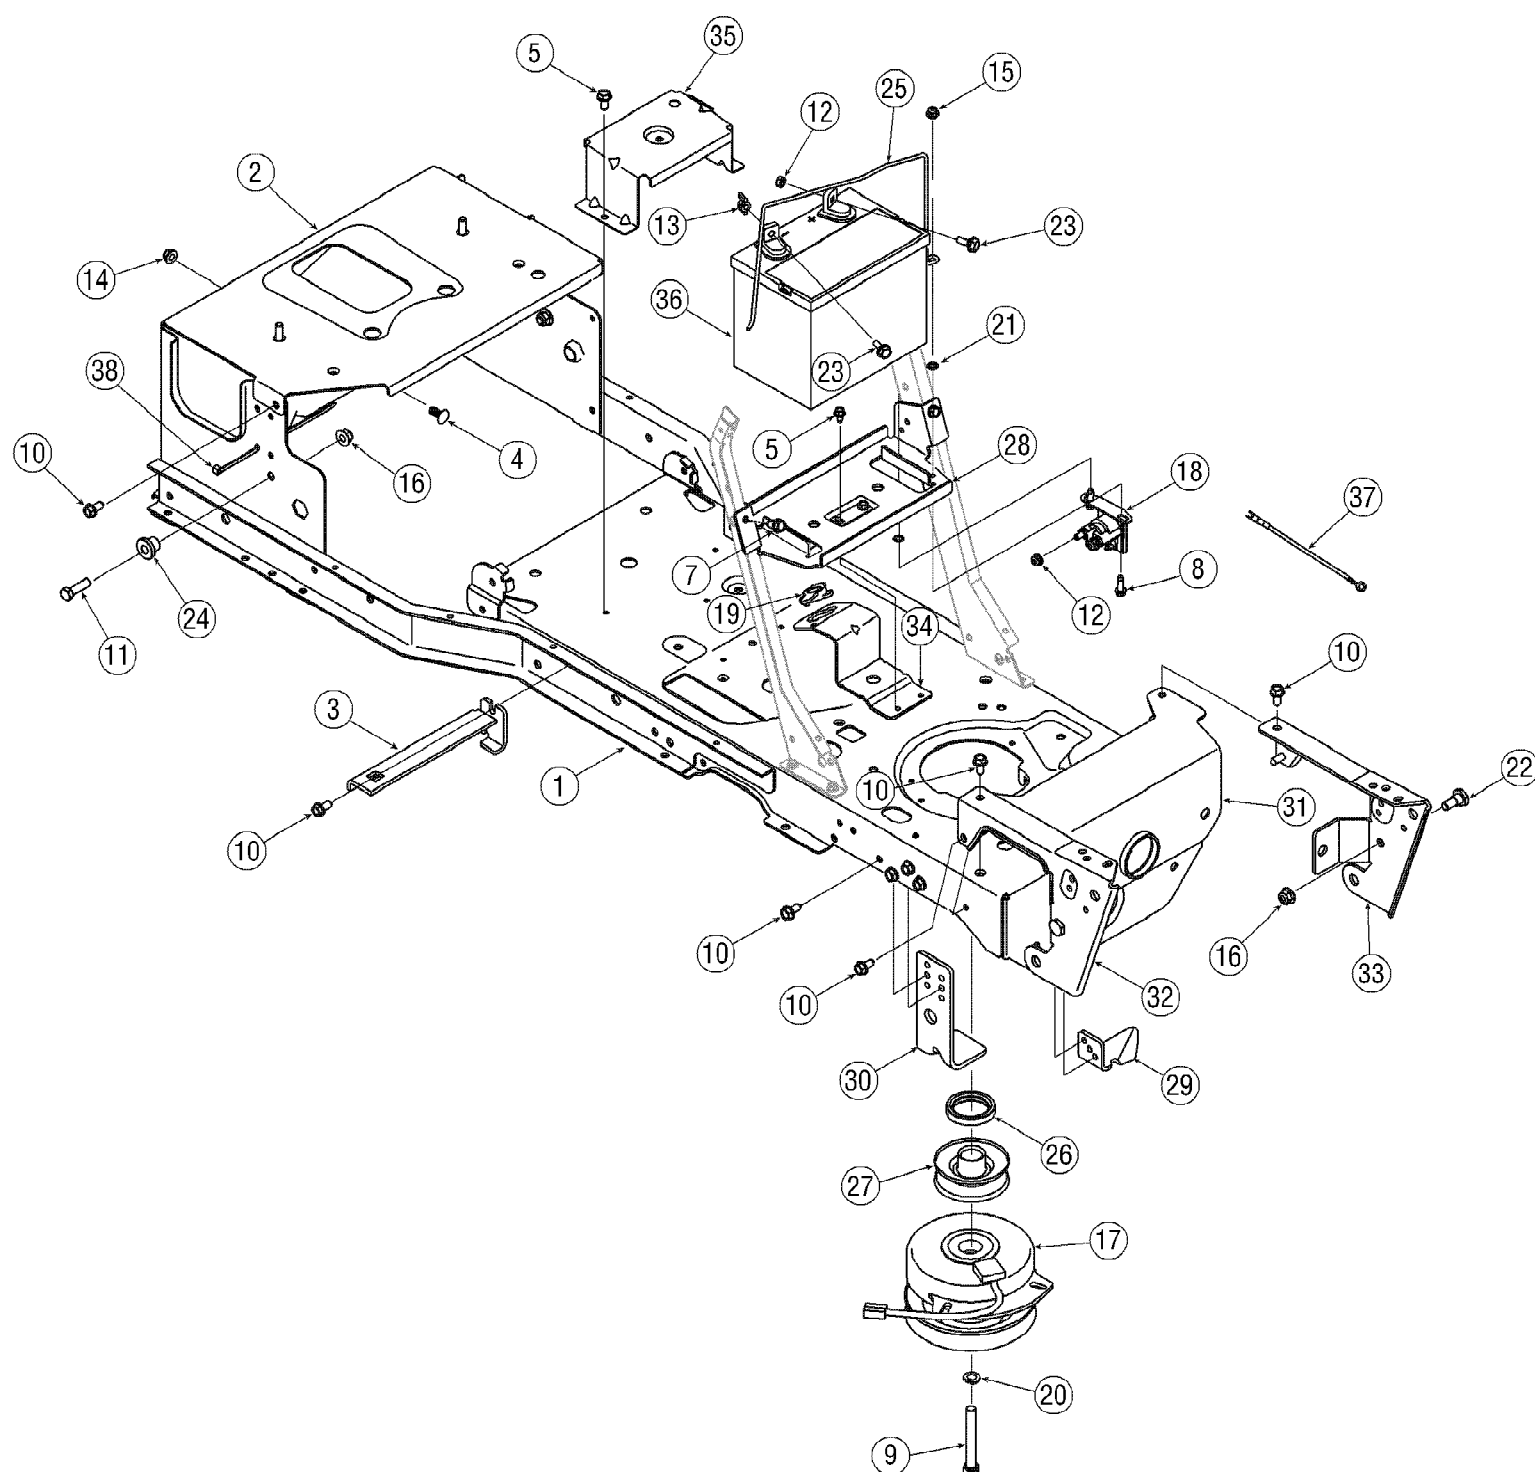

i1046 Tractor 2007 & Before
Frame PTO & Battery

Page 16 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	683-04305A	1	S	Frame Assembly
2	683-04333	1	S	Frame Assembly, Seat
3	683-04351	1	S	Bracket, Running Board Support
4	710-0451	1	/P	Screw, Carriage, 5/16-18 x .75 Gr.1
5	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
7	710-0726	1	/P	Screw, Hex Wash. Hd. Tapp, 5/16-12 x .75
8	710-0642	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .75
9	710-04379A	1		Screw, Hex Cap Lock, 7/16-20 x 3.5 Gr5
10	710-04484	1		Screw, TT, 5/16-18 x .75
11	710-3005	1	/P	Screw, Hex Cap, 3/8-16 x 1.25 Gr5
12	712-0271	1	/P	Nut, Hex Sems, 1/4-20
13	712-3087	1	/P	Nut, Wing, 1/4-20
14	712-04063	1	/P	Nut, Hex Flange Insert Lock, 5/16-18
15	712-04064	1	/P	Nut, Hex Flange Insert Lock, 1/4-20 GrF
16	712-04065	1	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF
17	717-04174A	1	S	Clutch, Electric PTO
18	725-04439	1		Solenoid, Start
19	731-05659	1		Bushing, Steering Shaft
20	736-0171	1	S	Washer, Lock, 7/16
21	736-0222	1	S	Washer, External Lock, 1/4
22	738-0143	1	/P	Bolt, Shoulder, .496 x .336:3/8-16
23	738-1132	1		Screw, Shoulder, .25 x .15:1/4-20
24	738-04058	1		Screw, Shoulder, .38 x 1.0 x .7
25	747-04215	1	S	Strap, Battery
26	750-04763	1		Spacer, 1.37 x 1.00 x .25
27	756-0978B	1	/P	Pulley, Engine
28	783-1447C	1		Bracket, Battery Support
29	783-04419B	1	S	Bracket, Clutch
30	783-04467	1		Bracket, Deck Up Stop
31	783-04806	1		Bracket, Pivot Bar
32	783-04844	1		Bracket, Pivot Support RH
33	783-04845	1		Bracket, Pivot Support LH
34	783-04868	1	S	Bracket, Steering Support
35	783-04910A	1	S	Bracket, Support Fender
36	925-1707D	1	/P	Battery - Dry
37	725-04513	1		Wire, Ground Jumper
38	725-0157	1	/P	Cable Tie
	725-04375A	1	S	Harness, Main Wire not shown

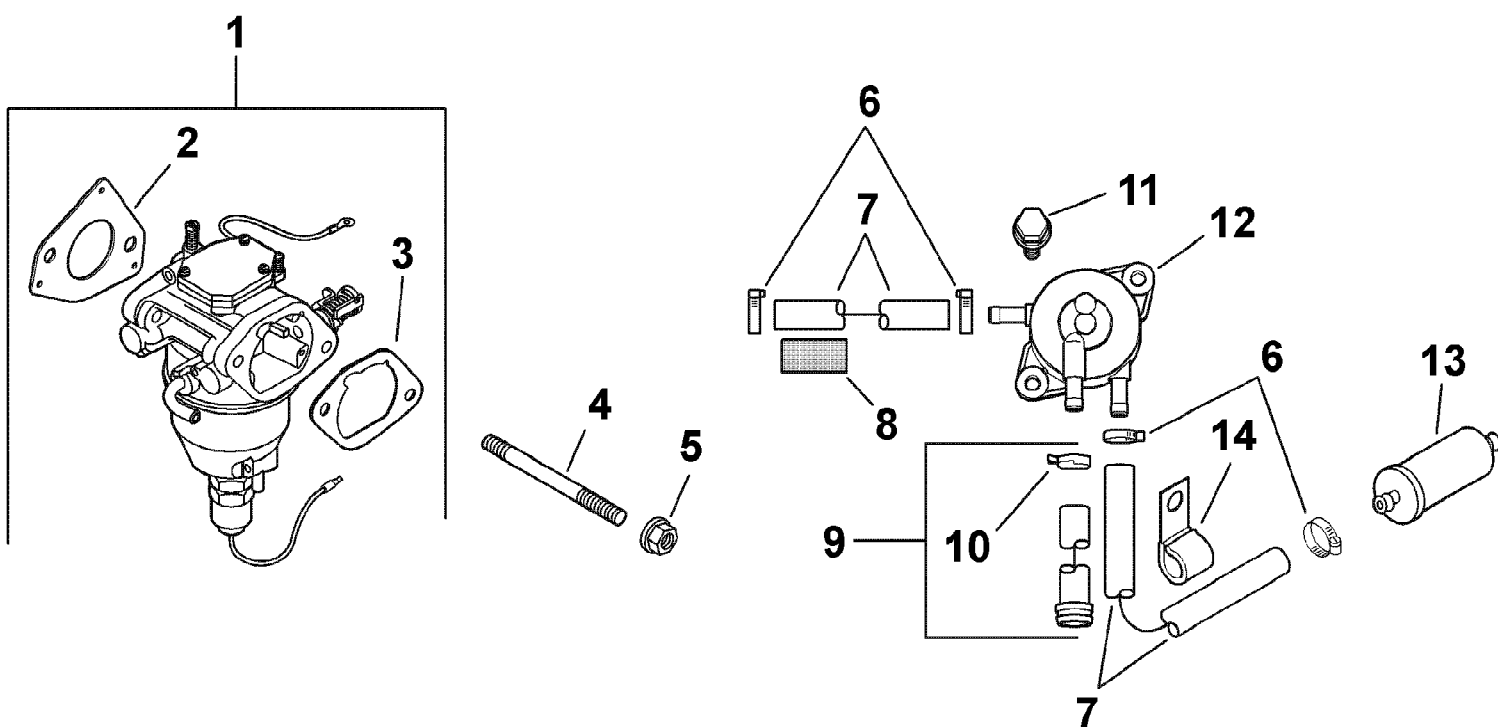

i1046 Tractor 2007 & Before
Fuel System Carburetor

Page 18 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-853-03-S	1	S	Kit, Carburetor (Incl. 2-3) Model i1046 ONLY
1	KH-32-853-04-S	1	S	Kit, Carburetor (Incl. 2-3) Model i1050 ONLY
2	KH- 24-041-52-S	1		Gasket, Carburetor
3	KH-24-041-14	1	/P	Gasket, Air Cleaner Base
4	KH-M-629105-S	1		Stud, M6 x 1.0 x 106
5	KH-M-641060-S	1	/P	Nut, Flange, M6 x 1.0
6	KH-25-237-14-S	1	/P	Clamp, Spring Hose 1/2
7	KH-25-111-34-S	1		Line, Fuel (24"- Cut to Length
8	KH-25-431-10-S	1		Sleeve, Anti Abrasion
9	KH-32-326-02-S	1	S	Kit, Fuel Pump Hose w/Clamp (Incl. 10)
10	KH-25-237-01-S	1		Clamp, Hose
11	KH-24-086-12	1		Screw, Tap, M6 x 1.7 x 18
12	KH-24-393-16	1	/P	Pump, Fuel
13	KH-25-050-22-S1	1	/P	Filter, Fuel
14	KH-47-154-01-S	1	/P	Clip, Cable
	KH-24-086-05	1		Screw, Throttle Stop - Model i1046 ONLY Not Illustrated
	KH-X-25-63	1	/P	Washer, Flat, 1/4 Not Illustrated
	KH-24-757-36-S	1		Service Kit, Choke Repair Not Illustrated
	KH-24-757-38-S	1		Service Kit, Gasket Not Illustrated
	KH-24-757-44-S	1		Kit, Float Repair Not Illustrated
	KH-24-757-45-S	1	/P	Kit, Solenoid Valve Repair Not Illustrated

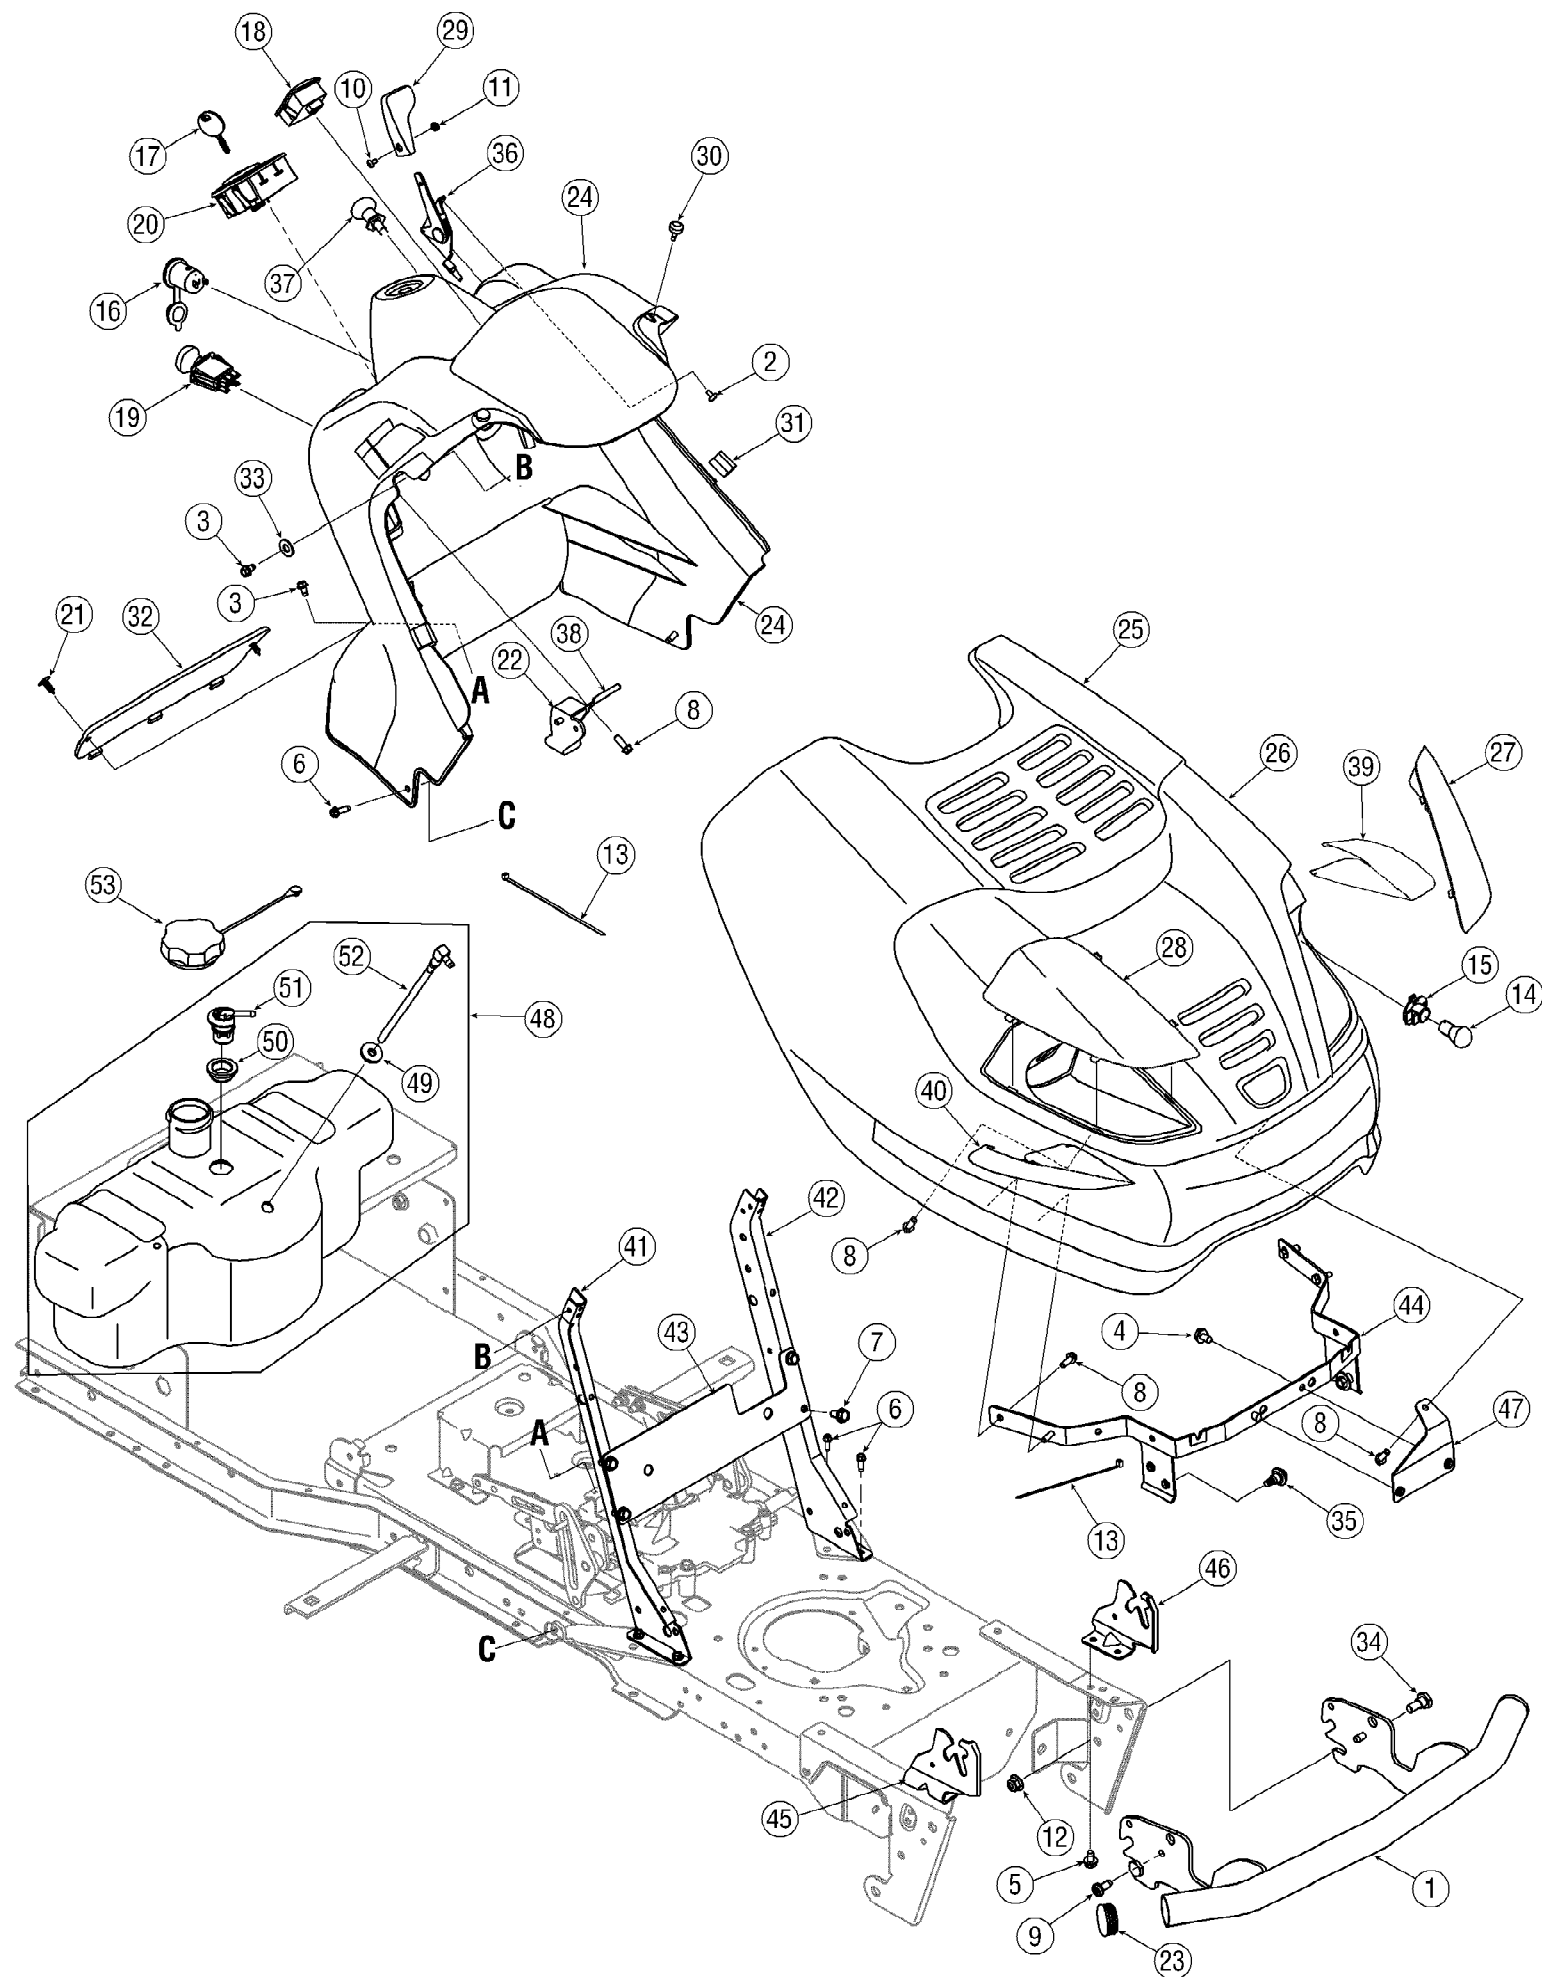


i1046 Tractor 2007 & Before
Hood Dash Panel & Fuel Tank

Page 20 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	683-04219A	1	S	Bumper Assembly
2	710-0192	1	/P	Screw, Truss Hd. Mach., 10-24 x .375
3	710-0599	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .5
4	710-0604A	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-18 x .625
5	710-0607	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-18 x .5
6	710-0642	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .75
7	710-0726	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-12 x .75
8	710-0895	1		Screw, Hex Wash Hd. Tapp, 1/4-15 x .75
9	710-1611B	1	/P	Screw, Pan Hd. Tapp, 5/16-18 x .75
10	710-3217	1	/P	Screw, Truss Hd. Mach., #8-32 x .375
11	712-0142	1	/P	Nut, Hex, 8-32
12	712-04065	1	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF
13	725-0157	1	/P	Tie, Cable
14	725-0963	1	S	Bulb, 12V Light
15	725-1649	1	S	Receptacle, Light
16	725-2003	1		Receptacle, 12V Power
17	725-2054	1	S	Key, Ignition Switch
18	725-04022B	1	S	Meter, Indicator/Service Monitor
19	725-04258	1	/P	Switch, PTO
20	725-04227	1	S	Switch, Ignition/Module
21	726-3046	1	/P	Clip, Ratchet
22	731-04213	1		Lever, Dash Brake
23	731-05368	1		Cap, Bumper
24	731-05406	1		Panel, Dash
25	731-05434	1		Hood
26	731-05435	1		Plenum, Hood
27	731-05525	1		Lense, Head Light LH
28	731-05526	1		Lense, Head Light RH
29	731-3161A	1	S	Knob, Throttle Control
30	735-0271A	1	/P	Bumper
31	735-04075	1		Deflector, Rubber Hood
32	735-04076	1		Net, Storage
33	736-0463	1	S	Washer, Flat, .25 x .63 x .0515
34	738-0143	1	/P	Bolt, Shoulder, .496 x .336:3/8-16
35	738-04091	1	S	Screw, Shoulder, .43 x .29:TT5/16-18
36	746-1100	1	S	Cable, Throttle Control
37	746-04120	1		Cable, Choke Control
38	747-1155	1		Rod, Brake Lock Pivot
39	777X42426	1		Label, Reflector
40	777X42427	1		Label, Reflector
41	783-04285D	1	S	Support, Dash, R.H.
42	783-04323D	1		Support, Dash, L.H.
43	783-04506A	1	S	Plate, Dash Support
44	783-04606B	1		Bracket, Hood Pivot
45	783-04840	1		Bracket, Hood Pivot RH
46	783-04841	1		Bracket, Hood Pivot LH
47	783-05162	1	S	Bracket, Hood Support
48	651-04174	1	/P	Tank Assembly, Fuel
49	735-0149	1	S	Bushing, Fuel Tank
50	735-04081	1		Grommet, Rubber
51	751-10441	1		Valve, Rollover
52	751-10442	1		Fitting, Fuel Pick Up
53	751-10447	1		Cap, Fuel Tank

i1046 Tractor 2007 & Before
Label i1046


Page 21 of 48

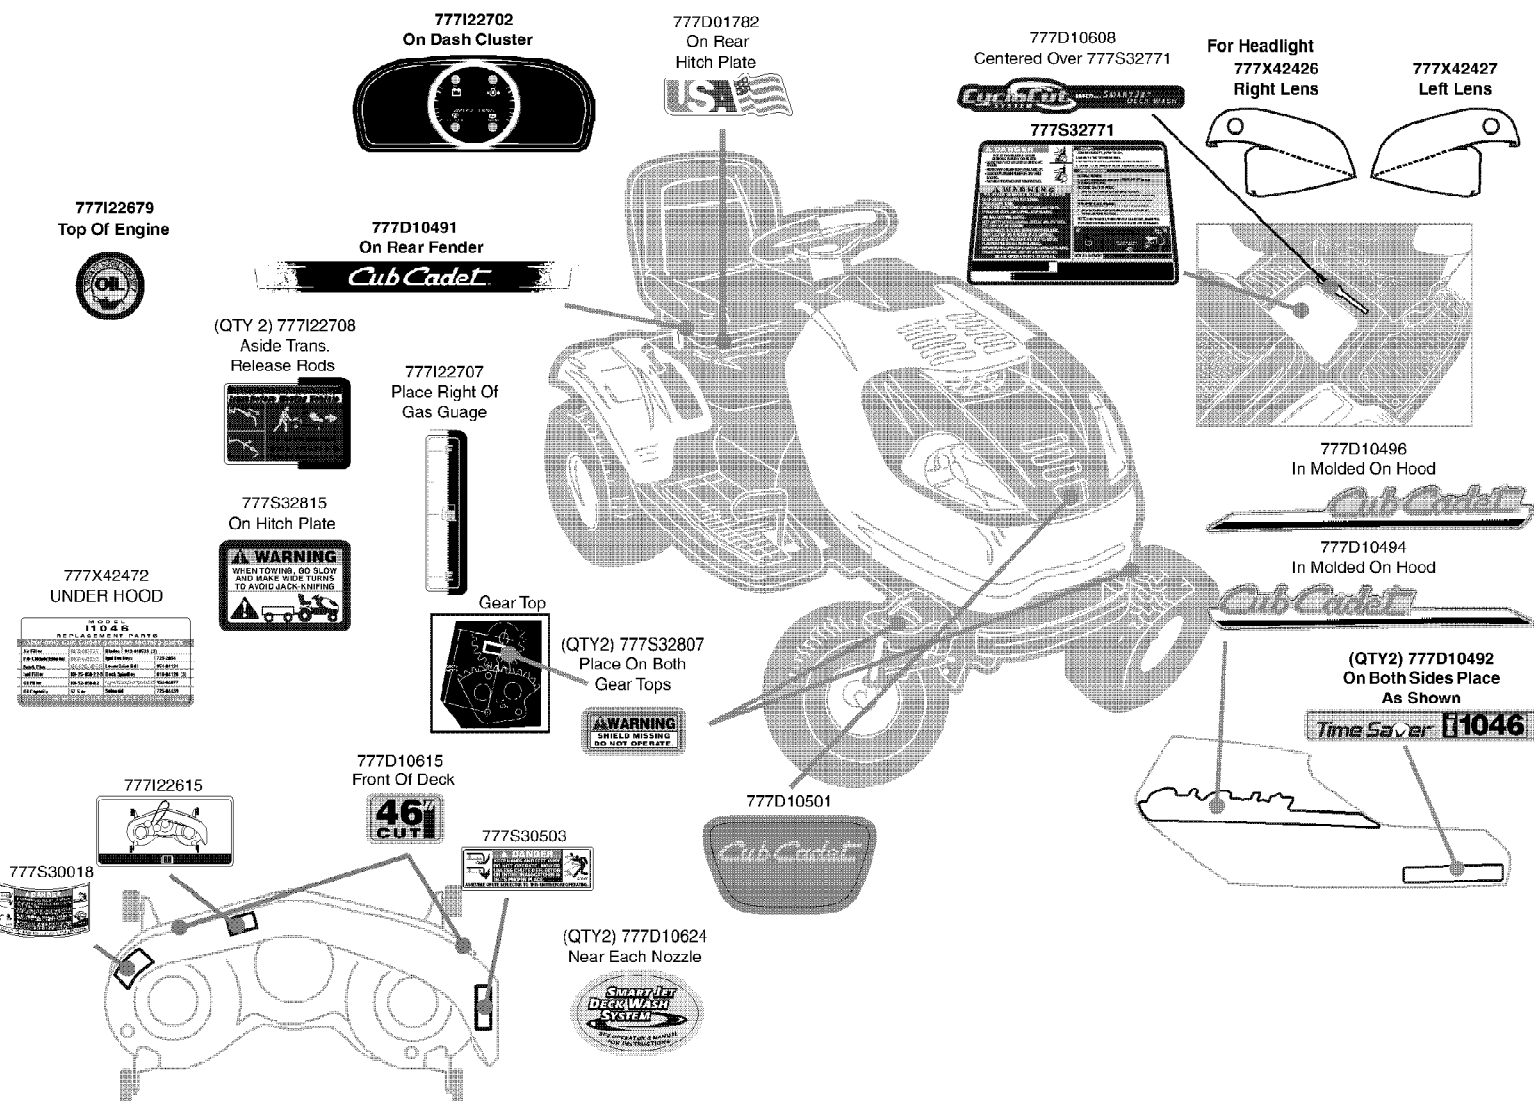

i1046 Tractor 2007 & Before
Label i1046

Page 22 of 48

Ref #	Part Number	Qty	S/P/F	Description
777I22702	777I22702	1		On Dash Cluster
777D01782	777D01782	1	/P	On Rear Hitch Plate
777D10608	777D10608	1		Centered Over 777S32771
777S32771	777S32771	1		Warning Label
777X42426	777X42426	1		For Headlights Right Lens
777X42427	777X42427	1		For Headlights Left Lens
777D10496	777D10496	1		In Molded On Hood
777D10494	777D10494	1		In Molded On Hood
777D10492	777D10492	2		On Both Sides Place As Shown
777I22679	777I22679	1		Top On Engine
777D10491	777D10491	1		On Rear Fender
777I22708	777I22708	2		Aside Trans. Release Rods.
777I22707	777I22707	1		Place Right Of Gas Guage
777S32815	777S32815	1		On Hitch Plate
777X42472	777X42472	1		Under Hood
777S32807	777S32807	2		Place On Both Gear Tops
777D10501	777D10501	1		Centered On Hood
777D10624	777D10624	2		Near Each Nozzle
777S30503	777S30503	1	/P	Danger Label On Deck
777D10615	777D10615	1		Front of Deck
777I22615	777I22615	1		On Deck
777S30018	777S30018	1	/P	On Deck

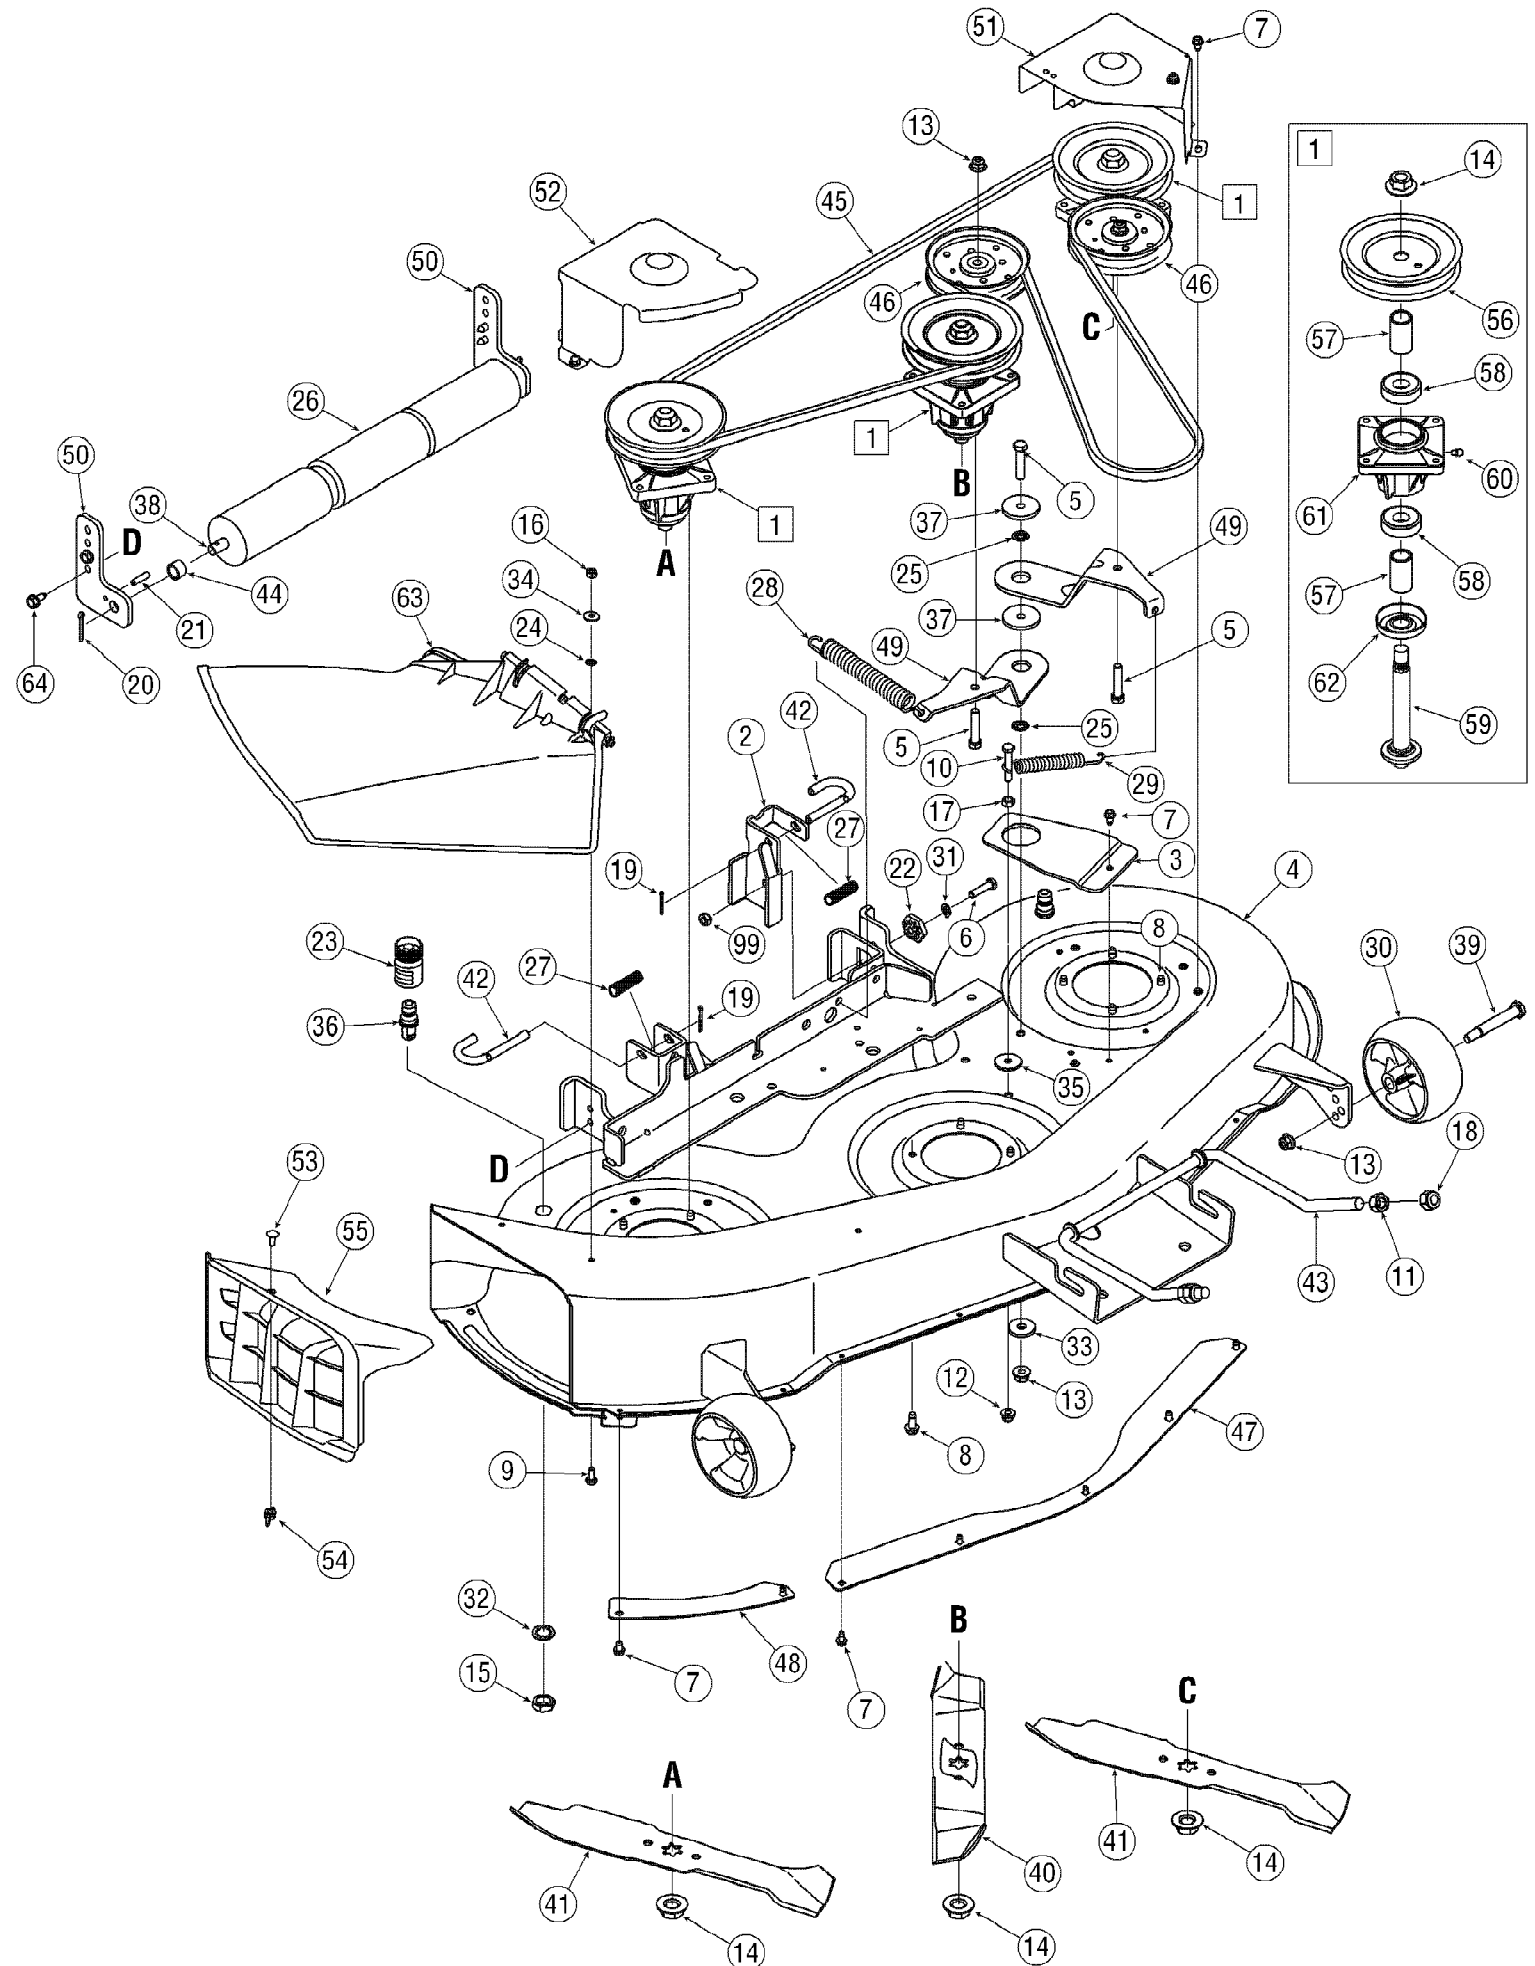

i1046 Tractor 2007 & Before
Mowing Deck 46 Inches


Page 24 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	918-0660	1	S	Spindle Assembly
2	683-0254B	1	/P	Bracket, Deck Hanger, LH
3	783-05463	1		Bracket, Support
4	683-04335	1	S	Deck Assembly
5	710-0347	1	/P	Screw, Hex Cap, 3/8-16 x 1.75 Gr5
6	710-0528	1	/P	Screw, Hex Cap, 5/16-18 x 1.25 Gr5
7	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
8	710-1260A	1	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .75
9	710-3015	1	/P	Screw, Hex Cap, 1/4-20 x .75 Gr5
10	710-3103	1	/P	Screw, Hex Cap, 5/16-18 x 2.0 Gr5
11	712-0206	1	S	Nut, Hex, 1/2-13 Gr5
12	712-04063	1	/P	Nut, Hex Flange Insert Lock, 5/16-18 GrF
13	712-04065	1	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF
14	712-0417A	1	/P	Nut, Hex Flange, 5/8-18
15	712-0641	1	S	Nut, Hex, M16-1.5
16	712-3006	1	/P	Nut, Hex, 1/4-20 Gr5
17	712-3010	1	S	Nut, Hex, 5/16-18 Gr5
18	712-3083	1	/P	Nut, Hex Insert Lock, 1/2013
19	714-0111	1	S	Pin, Cotter, 3/32 x 1.0
20	714-0162	1	/P	Pin, Cotter, 5/32 x 1.25
21	715-0108	1	/P	Pin, Spring, 1/4 x 1.0
22	717-04074	1	S	Gear, Deck Adjust
23	721-04041	1	S	Adapter, Water Nozzle
24	726-0233	1	/P	Nut, Push, .25 x .5
25	726-0269	1		Nut, Push On Speed, 3/8 Thrd.
26	731-05679	1		Roller, Front
27	732-0306A	1	S	Spring, Compression, .531 x 1.75
28	732-0594A	1	S	Spring, Extension, .91 x 7.33
29	732-0826A	1	/P	Spring, Extension, .865 x 4.68
30	734-04155	1		Wheel, Deck Ball, 5.0
31	736-0119	1	S	Washer, Lock, 5/16
32	736-0225	1	/P	Washer, Internal Tooth Lock, 5/8
33	736-0247	1	/P	Washer, Flat, .406 x 1.25 x .157 HT
34	736-0270	1	/P	Washer, Belleville, .265 x .75 x .062
35	736-0343	1	/P	Washer, Flat, .33 x 1.25 x .12
36	737-04003C	1	S	Nozzle, Deck Wash
37	738-04162A	1	/P	Spacer, Shoulder, .884 x .190
38	738-04235	1	S	Shaft, 1/2 Dia x 20.8
39	738-3056	1	S	Bolt, Shoulder, .496 x 2.5:3/8-16
40	942-04124	1	/P	Blade, 3 in 1 Star, 14.88
41	942-04125	1	/P	Blade, 3 in 1 Star, 16.28
42	747-1116	1	/P	Rod, Deck Release
43	747-1130B	1	/P	Rod, Deck Front Hanger
44	750-1206	1		Spacer, .542 x .75 x .5
45	754-04118	1	S	V-Belt, Type A x 122.5
46	756-04129	1	S	Pulley, Idler, 4.25 Dia
47	783-0141	1		Skirt, Deck Center
48	783-0142	1	S	Skirt, Deck RH
49	783-05118	1	/P	Bracket, Idler
50	783-05397	1	S	Bracket, Roller Height
51	783-0747B	1	/P	Cover, Deck Belt LH
52	783-0805C	1	/P	Cover, Deck Belt RH
53	710-0134	1	/P	Screw, Carriage, 1/4-20 x .62 Gr2

i1046 Tractor 2007 & Before
Mowing Deck 46 Inches

Page 25 of 48

Ref #	Part Number	Qty	S/P/F	Description
54	712-3087	1	/P	Nut, Wing, 1/4-20
55	731-05264	1		Plug, Mulching
56	756-1188	1		Pulley, Deck, 5.75 Dia
57	750-0952	1		Spacer, .792 x 1.06 x 1.8
58	741-0919	1	S	Bearing, Ball
59	753-06348	1	/P	Shaft, Spindle, 6.11 Lg Replaces 738-1186 6.05 Lg
60	737-3000	1	S	Fitting, Lube
61	619-0042A	1	/P	Housing, Spindle
62	17983	1		Shield, Bearing
63	931-1032B	1	/P	Chute Assembly, Discharge
63	703-1693A	1	/P	Bracket, Hinge Mounting not shown
63	711-0792	1	S	Pin, Hinge, .25 x 6.75 not shown
63	726-0106	1	S	Nut, Push Cap Speed, 1/4 not shown
63	732-0602A	1	/P	Spring, Torsion not shown
64	710-04484	1		Screw, TT, 5/16-18 x .75

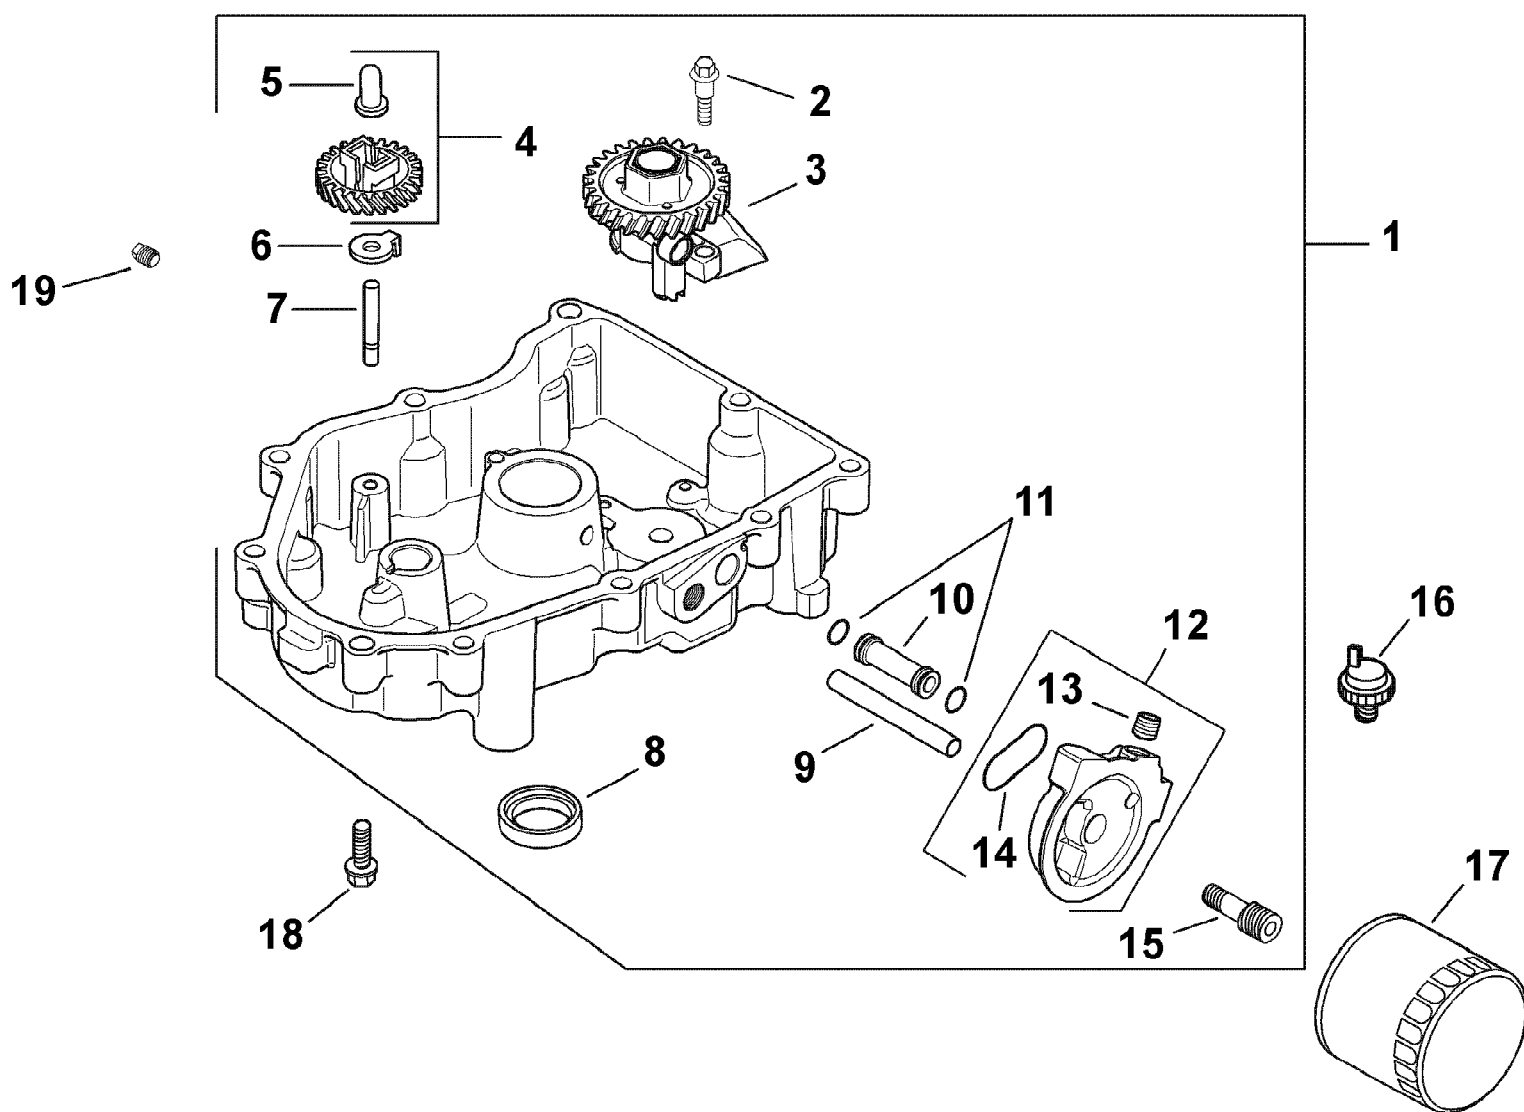


i1046 Tractor 2007 & Before
Oil Pan Filter

Page 27 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-199-02-S	1	S	Pan Assembly, Oil (Incl. Ref. 2-15)
2	KH-32-086-01-S	1		Screw, Flnge Thrd. Frmng M6 x 1.0 x 26.5
3	KH-32-393-10-S	1	/P	Pump Assembly, Oil
4	KH-24-043-12	1	/P	Kit, Governor Gear w/Pin (Incl. Ref. 5)
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-24-448-02-S	1		Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08-S	1	S	Seal, Oil (PTO End)
9	KH-32-123-01-S	1		Tube, Oil Feed - Filter to Pan
10	KH-32-123-03-S	1		Tube, Oil Feed - Pan to Filter
11	KH-24-153-01	1	/P	O-Ring, Oil Pick-up
12	KH-32-029-07-S	1	S	Kit, Oil Filter Adapter
13	KH-25-139-60-S	1	/P	Plug, Pipe, 1/8
14	KH-32-153-04-S	1		O-Ring, Oil Filter Adapter
15	KH-32-136-03-S	1		Nipple, Oil Filter
16	KH-25-099-27-S	1	/P	Switch, Oil Pressure
17	KH-52-050-02-S	1	/P	Filter, Oil
18	KH-24-086-17-S	1	/P	Screw, Flange, M8 x 1.25 x 45
19	KH-25-139-57-S	1	/P	Plug, Sq. Hd. Pipe, 3/8 NOT USED Replaced by Oil Drain Valve



Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	KH-32-883-03-S1	1	/P	Air Filter & Pre-Cleaner
	KH-52-050-02-S	1	/P	Oil Filter
	KH-25-050-22-S1	1	/P	Fuel Filter
	KH-24-584-45-S	1	/P	Ignition Module
	KH-41-403-09	1	S	Voltage Regulator
	KH-24-393-16	1	/P	Fuel Pump
	KH-24-757-46-S	1	/P	Carb Kit
	KH-24-757-45-S	1	/P	Carburetor Solenoid
	754-04134	1	S	Drive Belt (Hydro Trans)
	N/A	1		P.T.O. Belt
	754-04118	1	S	Deck Belt
	742-04125	1	S	Blades (Outside)
	742-04124	1	S	Blade (Center)
	712-0417A	1	/P	Blade Nut
	618-0660	1	S	Spindle Assy. w/Pulley
	734-04155	1		Deck Wheels (Front)
	N/A	1		Roller (Front)
	731-3005	1	/P	Roller (Back) (Qty. 3)
	721-04041	1	S	Water Nozzle Adapter
	723-04035	1		Ball Joints (RH Thrd)
	723-04036	1		Ball Joints (LH Thrd)
	725-04039	1	S	Brake Switch
	751-10447	1		Fuel Cap
	725-04439	1		Solenoid
	725-2054	1	S	Ignition Key
	725-04227B	1	S	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	717-04174A	1	S	P.T.O. Clutch
	KH-25-357-05-S	1	S	Engine Oil
	737-3121	1	/P	Transmission Fluid
	490-900-0041	1		Deck Leveling Guage
	490-900-0005	1	S	Grease Gun with one tube of grease Not Shown
	490-900-0006	1	S	Replacement tubes if grease (3 Pack) Not Shown

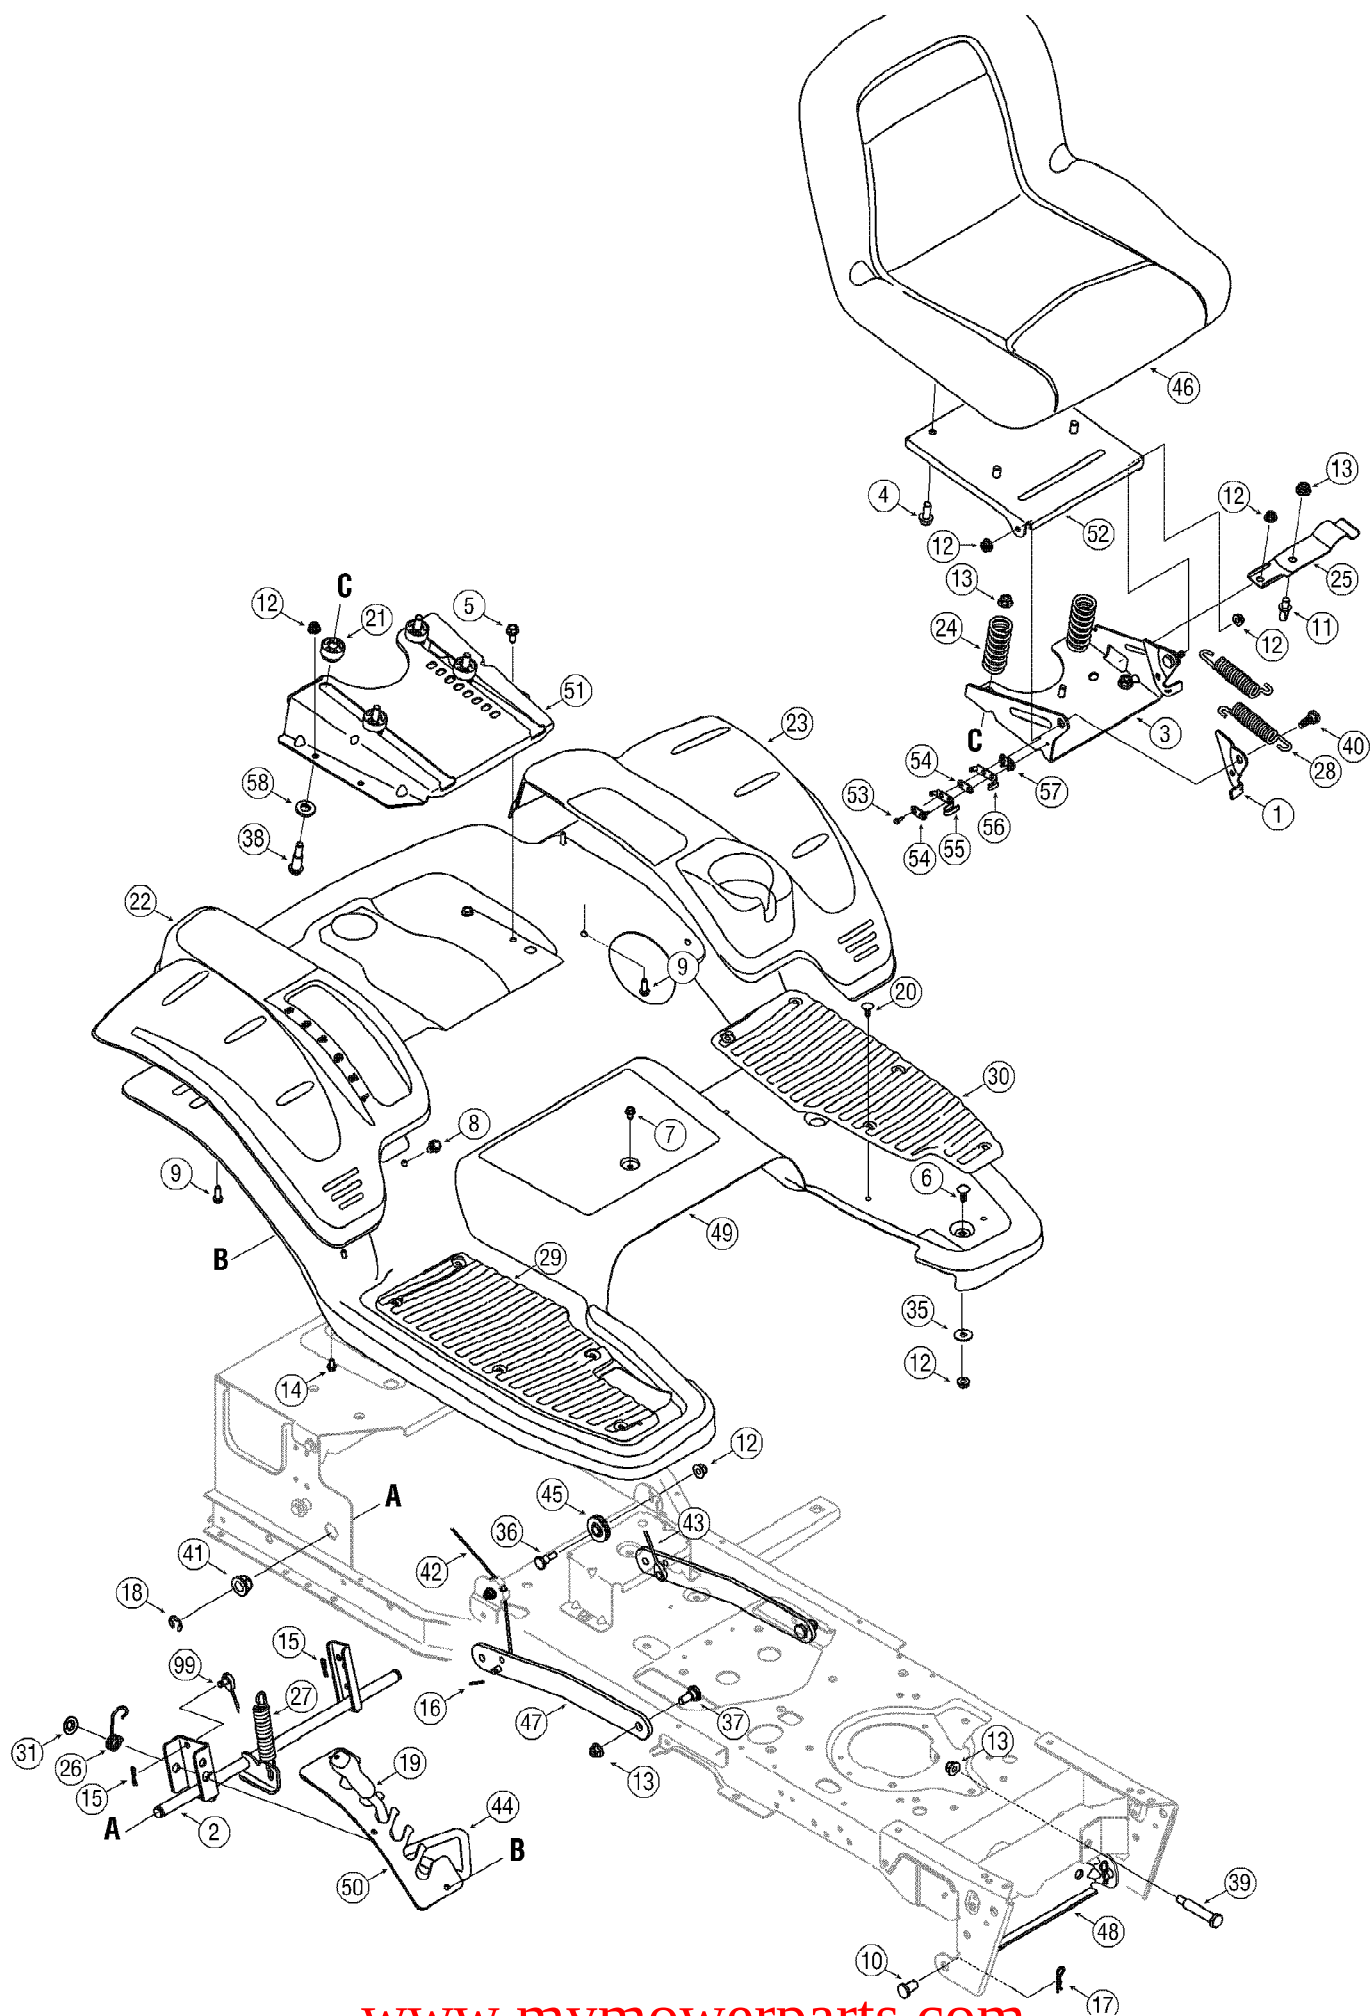

i1046 Tractor 2007 & Before
Seat Fender & Deck Lift


Page 31 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	783-05515	1		Bracket, RH Seat Lift
2	647-04095A	1	S	Shaft, Lift
3	683-04313A	1	S	Seat Slide
4	710-04482	1		Screw, Hex Flange, 3/8-16 x .875 Gr5
5	710-04484	1		Screw, TT 5/16-18 x .75
6	710-0451	1	/P	Screw, Carriage, 5/16-18 x 75
7	710-0599	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .5
8	710-0726	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-12 x .75
9	710-0895	1		Screw, Hex Wash Hd. Tapp, 1/4-15 x .75
10	711-0332	1	S	Pin, Clevis, .5 x .78
11	711-04626	1		Pin, Seat Index
12	712-04063	1	/P	Nut, Hex Flange Insert Lock, 5/16-18 GrF
13	712-04065	1	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF
14	710-04187	1	/P	Screw, Hex Wash Hd. H/L, 1/4-15 x .5
15	714-0104	1	S	Pin, Internal Cotter
16	714-0111	1	S	Pin, Cotter, 3/32 x 1.0
17	714-04023	1	S	Pin, Internal Cotter
18	716-0106A	1		E-ring, .625 Shaft
19	720-0311	1		Grip, Handle
20	726-3046	1	/P	Clip, Ratchet
21	731-04074	1		Spacer, Seat Adjustment
22	731-05477	1		Cover, Rear Fender RH
23	731-05518	1		Cover, Rear Fender LH
24	732-04035	1		Spring, Compression
25	732-04386	1		Spring, Seat Adjust
26	732-04459	1		Spring, Lift Torsion
27	732-0826A	1	/P	Spring, Extension, .865 x 4.68
28	732-1184	1	/P	Spring, Extension, .84 x 4.6
29	735-04078	1		Pad, Foot RH
30	735-04079	1		Pad, Foot LH
31	726-0221	1	/P	Nut, Speed, .5
32	736-0272	1	S	Washer, Flat, .51 x 1.0 x .06
34	736-0192	1	S	Washer, Flat, .535 x .93 x .09
35	736-3078	1	/P	Washer, Flat, .344 x 1.0 x .063 HT
36	738-0138A	1	/P	Bolt, Shoulder, .496 x 2.5:3/8-16
37	738-0380	1	S	Bolt, Shoulder, .5 x .27:3/8-16
38	738-0966A	1	/P	Bolt, Shoulder, .5 x .925:3/8-16
39	738-1011A	1	/P	Bolt, Shoulder, .5 x 2.23:3/8-16
40	738-0296	1	S	Bolt, Shoulder, .447 x .268:5/16-18
41	741-0225	1	S	Bearing, Hex Flange,
42	746-04369	1		Cable, Lift, 16.16 Lg
43	746-0968	1		Cable, Lift, 16.16 Lg
44	747-04701	1		Handle, Lift
45	756-1154	1		Pulley, Roller
46	757-04053	1		Seat, High Back
47	783-05546	1	S	Link, Deck Lift
48	783-0720C	1	/P	Bracket, Front Deck Adjust
49	783-04901	1	S	Fender, Rear
50	783-04977A	1	S	Plate, Deck Lift
51	783-05307	1	S	Pedesta, Seat
52	783-05272A	1	S	Plate, Seat Pivot
53	710-0227	1	/P	Screw, Hex Wash Hd. Tapp, #8-18 x .5
54	726-0279	1		Plate, Insulator

i1046 Tractor 2007 & Before
Seat Fender & Deck Lift

Page 32 of 48

Ref #	Part Number	Qty	S/P/F	Description
55	725-1303	1	S	Switch, Outer Seat Spring
56	725-1439	1		Switch, Inner Seat Spring
57	726-0278	1		Plate, Insulator Boss
58	736-0326	1	S	Washer, Flat, .510 x 1 x .125

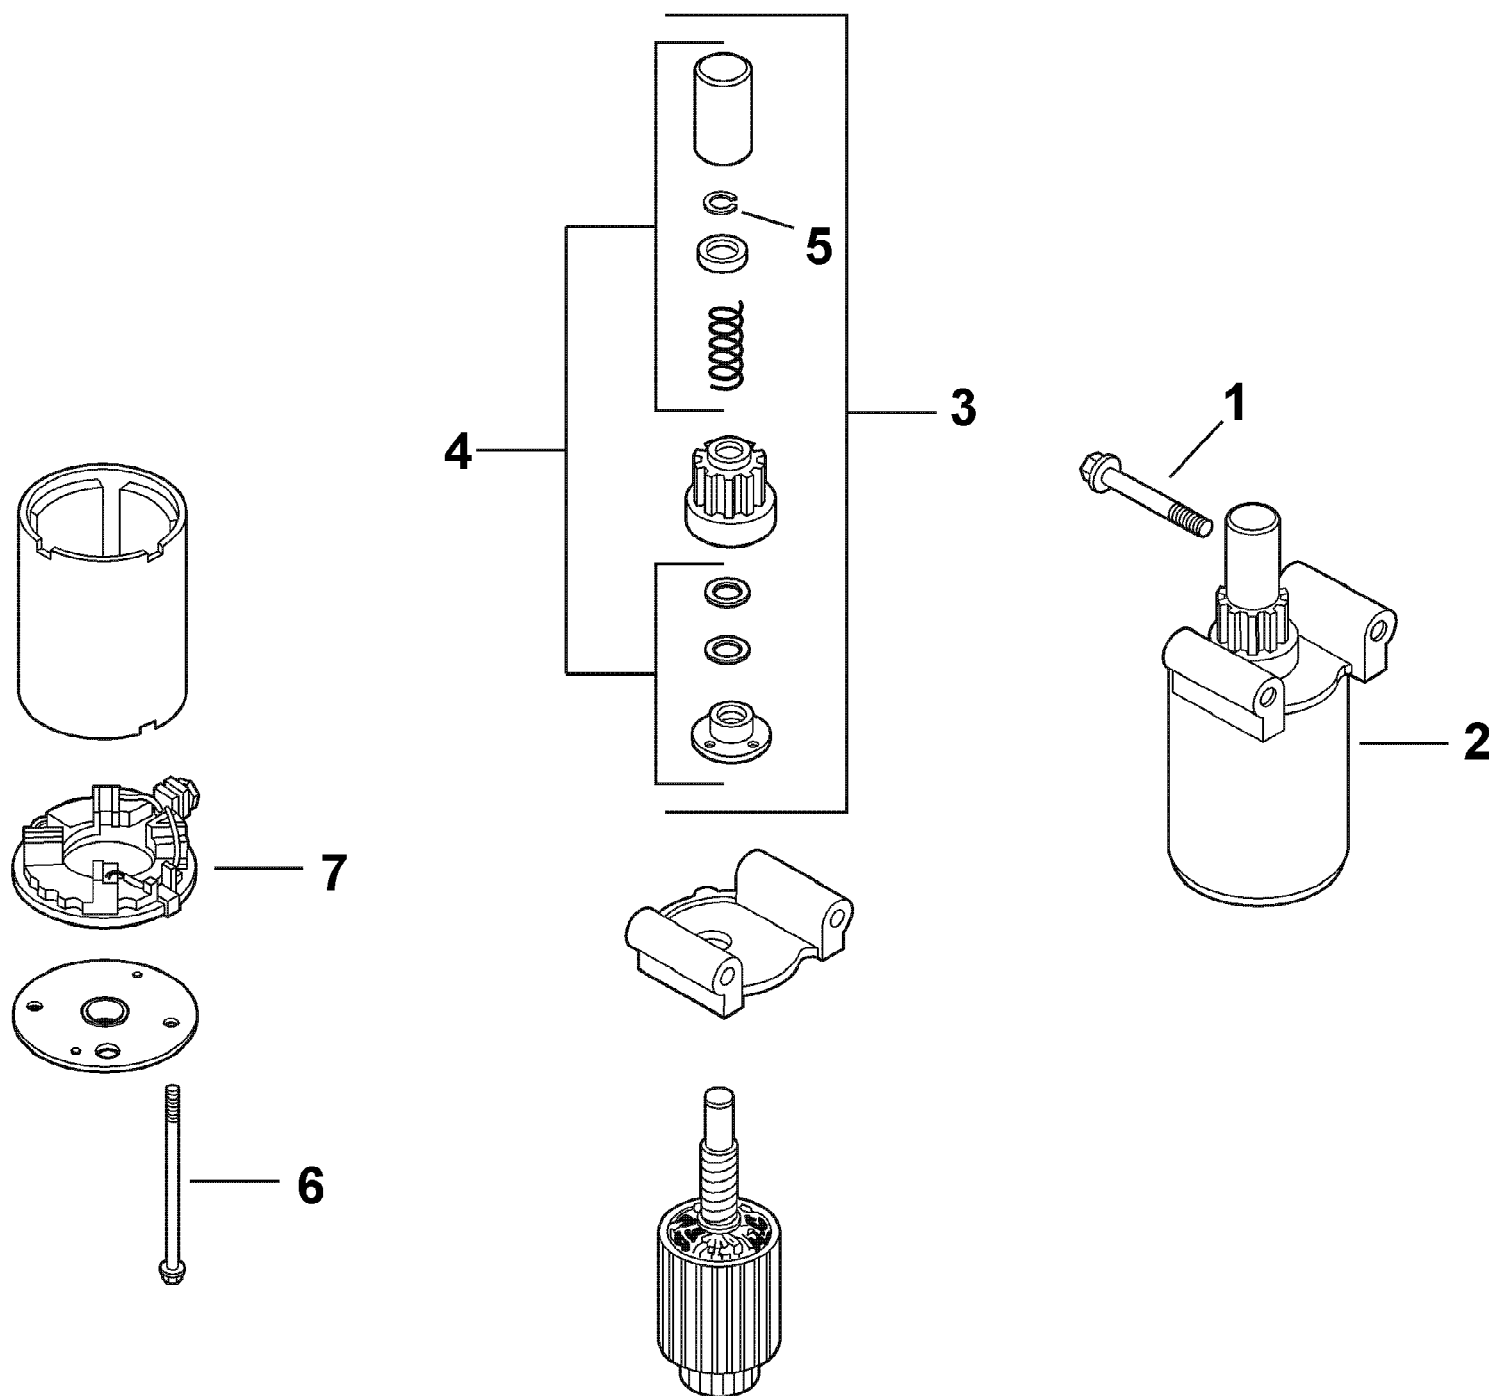


i1046 Tractor 2007 & Before
Starter Motor

Page 34 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-839080	1	S	Screw, Flange, M8 x 1.25 x 80
2	KH-32-098-01-S	1	S	Starter Assembly
3	KH-12-755-39-S	1		Kit, Drive
4	KH-12-755-38-S	1		Kit, Drive Parts (Incl. Ref. 5)
5	KH-32-141-01-S	1		Ring, Retaining Ring
6	KH-32-211-01-S	1		Bolt, Thru
7	KH-12-243-04-S	1		Commutator, End Cap

i1046 Tractor 2007 & Before Steering Control & Front Axle

Page 35 of 48

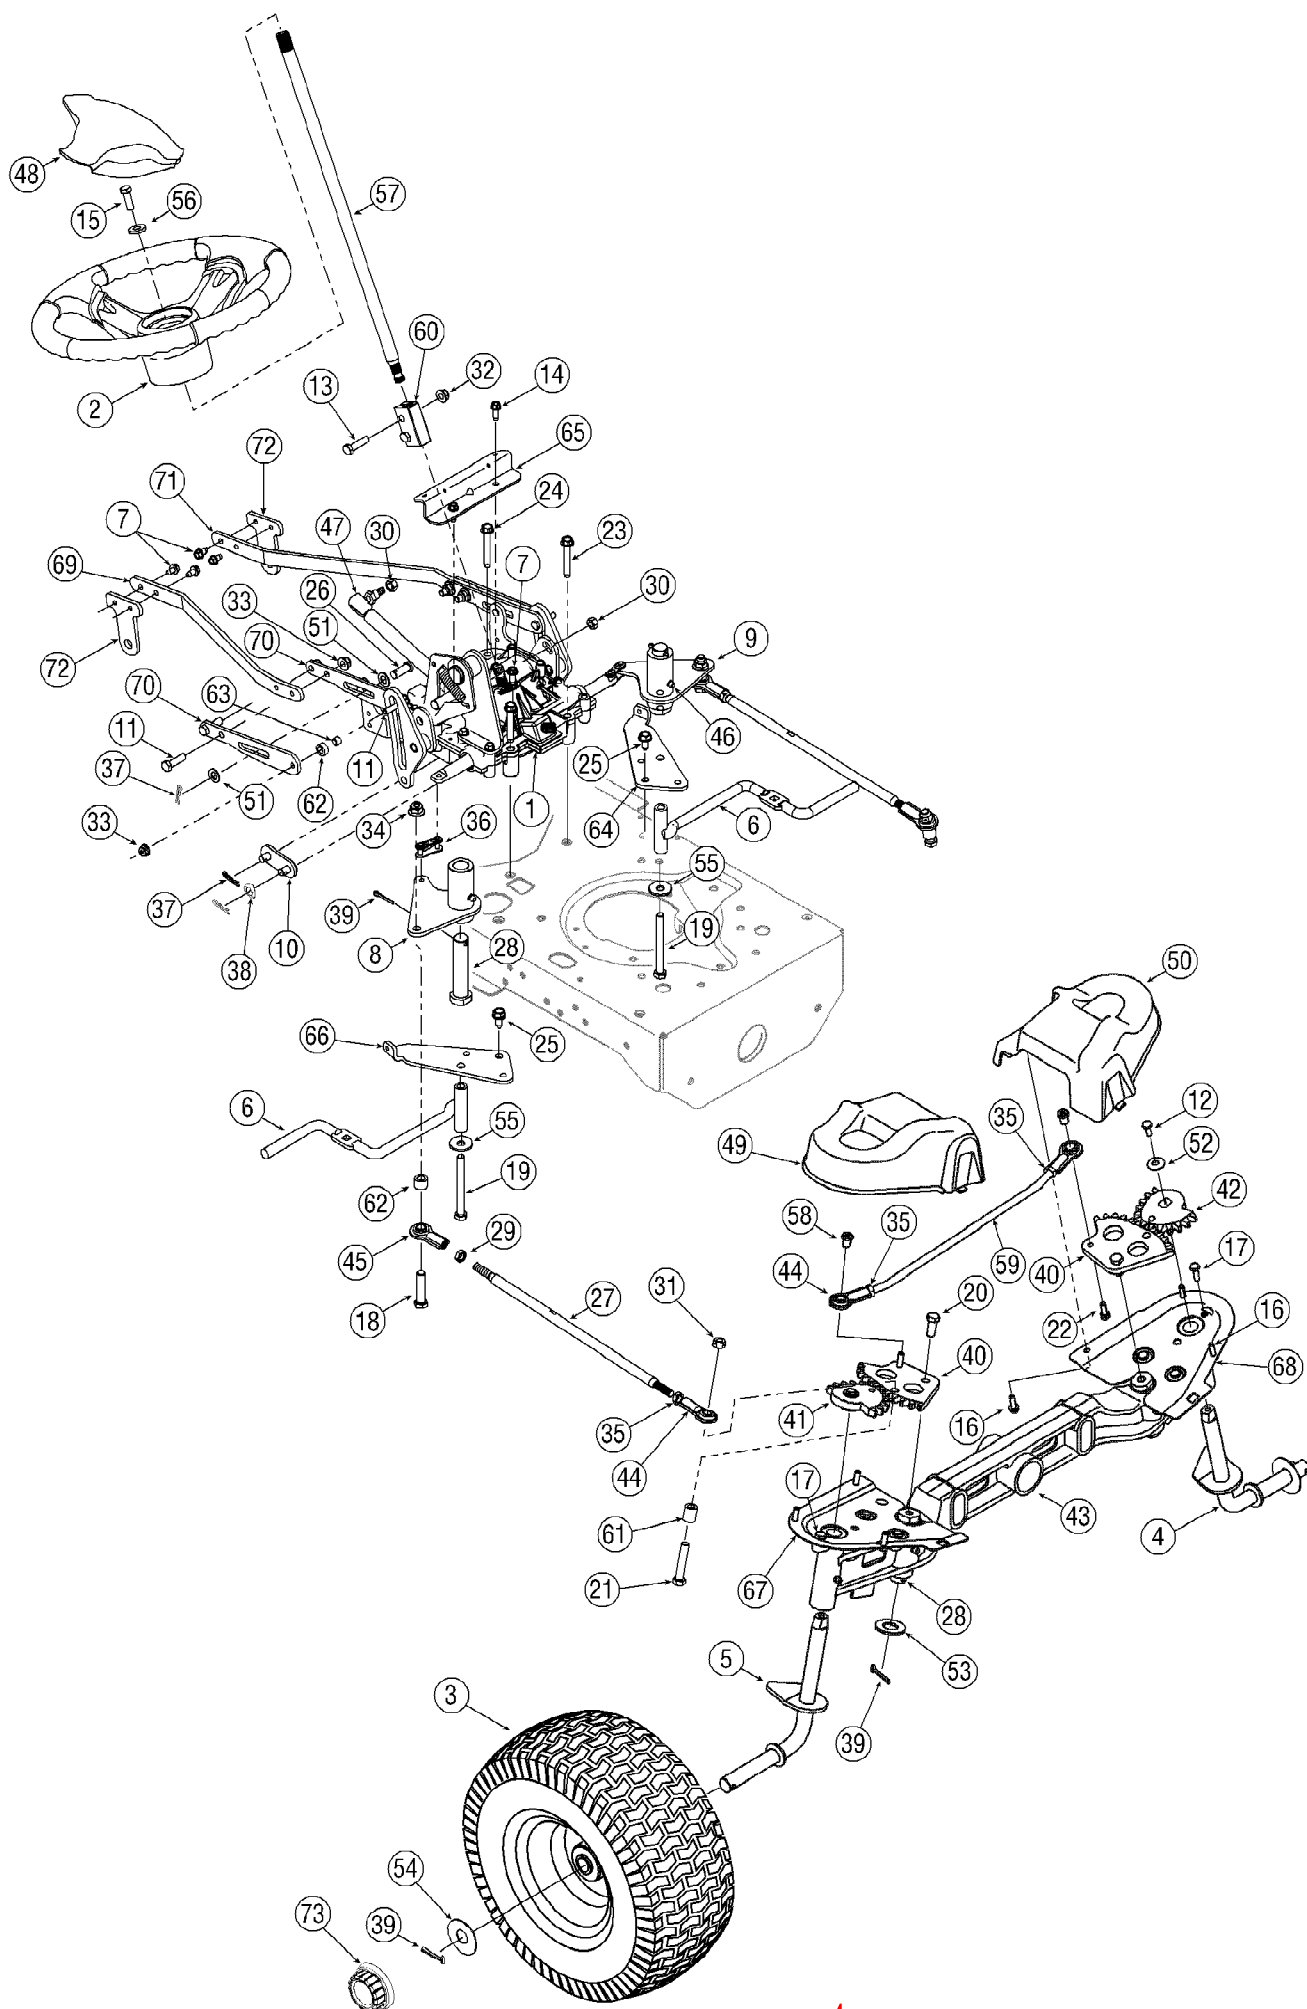


i1046 Tractor 2007 & Before
Steering Control & Front Axle

Page 36 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	618-04430	1	S	Steering Assembly, Steering/Hydro
1	759-04284	1		Kit, Replacment Steering Gear Box (Incl. LH & RH Cams, 1 Tube, 2 Pins & 2 Washers)
2	631-04008A	1	/P	Wheel, Steering
3	N/A	1		Wheel Assembly
3	734-1731	1		Tire, 15 x 6 x 6 Not shown
3	634-04104A	1	S	Rim Assembly Not shown
3	737-0224	1		Grease Fitting Not shown
3	941-04137	1	/P	Bearing, Ball Not shown
3	934-0255	1	/P	Valve, Tubeless Air Not shown
4	647-04062	1	S	Axle Assembly, LH
5	647-04063	1	S	Axle Assembly, RH
6	647-04080A	1	S	Rod, Fender Support
7	710-0599	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .5
8	683-04282A	1		Arm, Steering, RH
8	759-04220	1		Service Kit RH
9	683-04284A	1		Arm, Steering, LH
9	759-04221	1		Service Kit LH
10	683-04332	1		Link, Steering Box/Hydro
11	710-0597	1	/P	Screw, Hex Cap, 1/4-20 x 1.0 Gr5
12	710-0195	1	S	Screw, Hex Cap, 1/4-28 x .625 Gr5
13	710-0528	1	/P	Screw, Hex Cap, 5/16-18 x 1.25 Gr5
14	710-0642	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .75
15	710-0650	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-18 x .875
16	710-04187	1	/P	Screw, Hex Wash Hd. Hi/Lo, 1/4-15 x .5
17	710-3015	1	/P	Screw, Hex Cap, 1/4-20 x .75 Gr5
18	710-0520	1	/P	Screw, Hex Cap, 3/8-16 x 1.5 Gr5
19	710-3085	1	/P	Screw, Hex Cap, 3/8-16 x 3.5 Gr5
20	710-3119	1	/P	Screw, Hex Cap Lock, 3/8-16 x .75 Gr5
21	710-3144	1	/P	Screw, Hex Cap, 3/8-16 x 2.0 Gr5
22	710-3296	1		Screw, Hex Cap Lock, 1/4-20 x .75 Gr5
23	710-04006	1		Screw, Hex Wash Hd. Tapp, 5/16-18 x 2.0
24	710-04389	1		Screw, Hex Wash Hd. Tapp, 5/16-18 x 2.25
25	710-04484	1		Screw, TT, 5/16-18 x .75
26	711-04722	1		Pin, Clevis, .375 x .969 HT
27	711-04472	1		Link, Drag
28	711-04562	1		Shaft, Steering Pivot Gear
29	712-0312A	1		Nut, Jam, 3/8-24 LH Thrd
30	712-0365	1		Nut, Hex Lock, M8 x 1.25 Gr9
31	712-0375	1	/P	Nut, Hex Lock, 3/8-16
32	712-04063	1	/P	Nut, Hex Insert Flange Lock, 5/16-18 GrF
33	712-04064	1	/P	Nut, Hex Insert Flange Lock, 1/4-20 GrF
34	712-04065	1	/P	Nut, Hex Insert Flange Lock, 3/16-16 GrF
35	712-3001	1	S	Nut, Hex Jam, 3/8-24 Gr2
36	713-04037	1	S	Link, Connecting
37	714-0104	1	S	Pin, Internal Cotter
38	736-0286	1	S	Washer, Sping, .39 x .75 x .010
39	714-04039	1		Pin, Cotter, 5/32 x 1.25
40	717-04274	1	S	Gear, Spur, 12T
41	717-04275	1	S	Gear, Spur, RH 13T
42	717-04282	1	S	Gear, Spur, LH 13T
43	719-04170A	1	/P	Axle, Pivot Bar

Ref #	Part Number	Qty	S/P/F	Description
44	723-04035	1		End, Ball Joint Rod
45	723-04036	1		End, Ball Joint Rod, LH Thrd.
46	737-3000	1	S	Fitting, Grease
47	727-0626A	1	S	Cylinder, Damper
48	731-04532A	1	/P	Cover, Steering Wheel
49	731-05476	1		Cover, Steering Gear, RH
50	731-05618	1		Cover, Steering Gear, LH
51	736-0185	1	S	Washer, Flat, .375 x .738.063
52	736-0270	1	/P	Washer, Bell, .265 x .75 x .062
53	736-0315	1	/P	Washer, Flat, .76 x 1.5 x .12
54	736-0866	1		Washer, Flat, .755 x 1.92 x .060
55	736-0452	1	S	Washer, Bell, .396 x 1.14 x .095
56	736-3004	1	S	Washer, Flat, .406 x .875 x .105
57	738-04189	1		Shaft, Steering, .625 x 17.281
58	738-04240	1		Nut, Shoulder, .375 x .5
59	747-04496	1		Rod, 3/8-24 x 14.4 Lg
60	748-04139	1		Block, Steering Shaft
61	750-04676	1		Spacer, .385 x .63 x .75
62	750-04776	1		Spacer, .380 x .625 x .265
63	750-04777	1		Spacer, .26 x .372 x .33
64	783-04798	1	S	Bracket, Steering Support, LH
65	783-04799	1	S	Bracket, Steering Support, Upper
66	783-05140	1	S	Bracket, Steering Support, RH
67	783-05184	1	S	Plate, Base Cover, RH
68	783-05185	1	S	Plate, Base Cover, LH
69	783-05380	1	S	Link, Steering/Hydro RH
70	783-05381	1		Bracket, Hydro/Steering Adjustment
71	783-05404	1	S	Link, Steering/Hydro LH
72	783-05446	1	S	Bracket, Steering Link
73	731-3020	1	S	Hub Cap
74	736-0222	1	S	Washer, Lock
	490-900-0005	1	S	Grease Gun with one tube of grease Not shown
	490-900-0006	1	S	Replacement tubes of grease (3 pack) Not shown

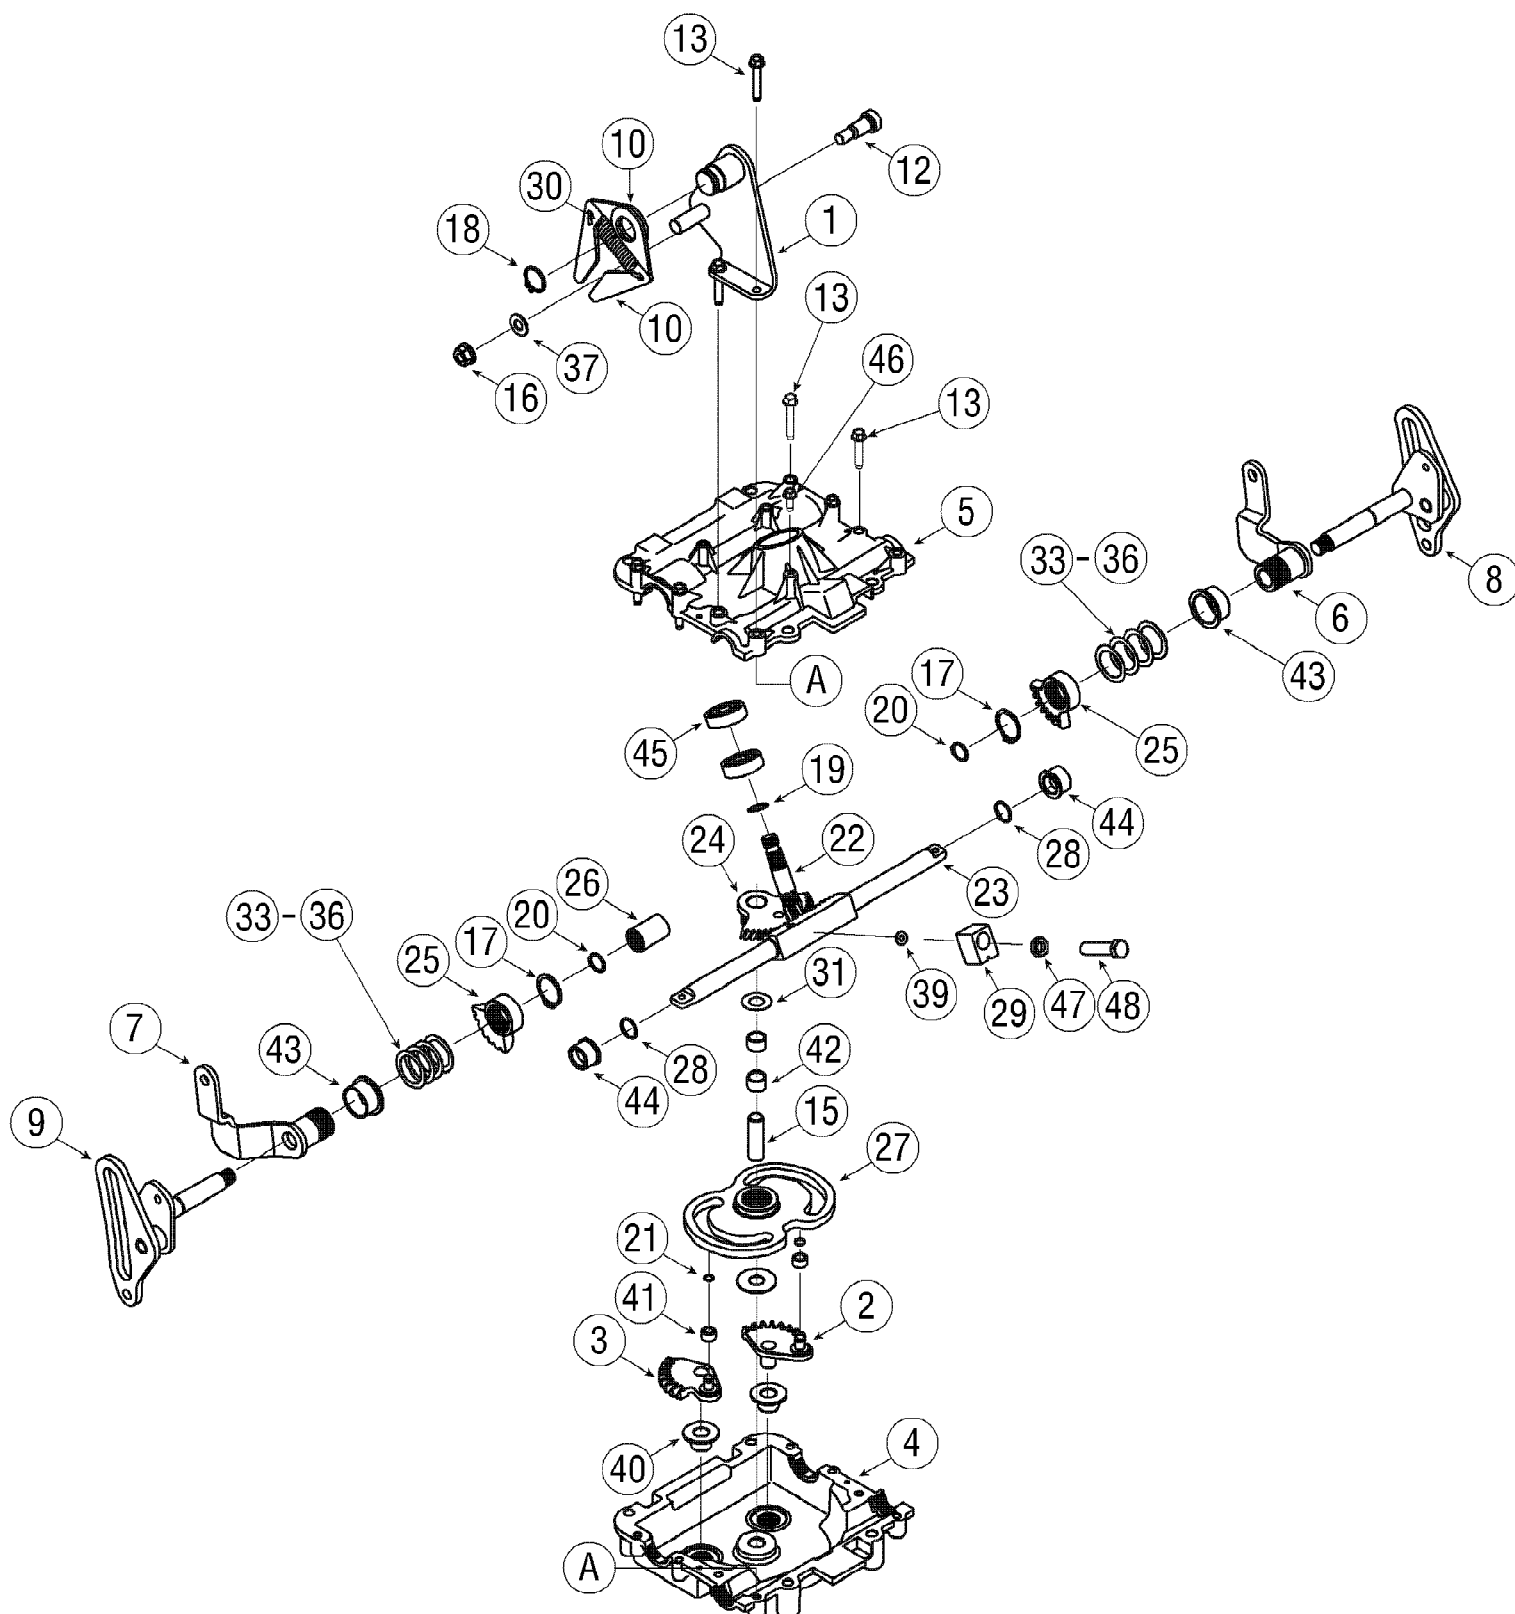

i1046 Tractor 2007 & Before
Steering Gear Box

Page 39 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	607-04243	1		Bracket, Steering Box Return
2	617-04036	1	S	Gear, Bevel LH
3	617-04037	1	S	Gear, Bevel RH
4	619-04153	1		Housing, Steering Lower
4	737-0148	1	S	Grease, Darina not shown
5	619-04154A	1	S	Housing, Steering Upper
6	647-04083	1		Arm, Hydro LH
7	647-04084	1		Arm, Hydro RH
8	647-04085	1		Cam, Hydro LH
9	647-04086	1		Cam, Hydro RH
10	703-2441	1		Arm, Neutral
11	710-0599	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x .5
12	710-04040	1	/P	Screw, Shoulder, .497 x .75 : 3/8-16
13	710-0778	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x 1.5
14	710-0809	1		Screw, Hex Wash Hd. Tapp, 1/4-20 x 1.25
15	711-04587A	1	S	Shaft, Steering
16	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16 Gr5
17	716-0102	1	S	Ring, Snap, 1.0 Dia. Shaft
18	716-0111	1	/P	Ring, External Retaining, .875 Shaft
19	716-0114	1	S	Ring, Retaining, .56 Dia. Shaft
20	716-0115	1	S	Ring, Retaining, .56 Dia. Shaft
21	716-04066	1		Ring, Retaining, .31125 Dia. Shaft
22	717-04318	1		Gear, Pinion, 7T
23	717-04319	1		Gear, Synchro Rack
24	717-04328	1	S	Gear, Steering, 17T
25	717-04330	1	S	Gear, Steering, 26T
26	718-04229	1		Tube, Coupler
27	718-04269	1	S	Cam, Hydro Steering
28	721-04186	1		O-Ring, .625 x .07
29	741-04257	1		Bearing, Caster
30	732-1162	1		Spring, Extension, .56 x 2.31 x .105
31	736-0369	1	S	Washer, Flat, .508 x 1.0 x .02
32	736-04237	1		Washer, Flat, .508 x 1.32 x .04
33	736-04257	1	/P	Washer, Flat, 1.015 x 1.375 x .005
34	736-04258	1	/P	Washer, Flat, 1.015 x 1.375 x .010
35	736-04259	1		Washer, Flat, 1.015 x 1.375 x .015
36	736-04260	1		Washer, Flat, 1.015 x 1.375 x .030
37	736-0864	1	S	Washer, Thrust, .375 x .812 x .06
39	736-3067	1	/P	Washer, Flat, 1.88 x .437 x .042
40	741-04203	1		Bearing, Flange, .5 x .7
41	741-04204	1		Bearing, Sleeve, .437 x .3425
42	741-04206	1		Bearing, Sleeve, .623 x .5025 x .25
43	741-04231	1		Bearing, Sleeve, 1.2 x 1.0
44	741-04235	1		Bearing, Flange, .625 x .875
45	741-0747	1		Bearing, Ball, .5625 x 1.375 x .4375
46	710-0642	1	/P	Screw, TT: 1/4-20 x .750
47	712-3001	1	S	Jam Nut, 3/8-24
48	710-1810	1		Screw, HH Cap, 3/8-24 x 1.75

i1046 Tractor 2007 & Before
Transmission Assembly LH


Page 41 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	HG-71030L	1		Housing Assembly, Main RH
2	HG-71031L	1		Side Assembly, RH
4	HG-70723	1	/P	Block Kit - 7 Piston
5	HG-51949	1		Spacer, .32 x 1.005 x .179
6	HG-70331	1	/P	Block Assembly, Cylinder
7	HG-9005110-5600	1	/P	Plug, Straight Thread
8	HG-9004800-2506	1	/P	Pin
9	HG-51190	1	/P	Screw, Hex Flange
10	HG-70719	1	/P	Seal, Oil
13	HG-51626	1		Seal, Lip
14	HG-51628	1	/P	Ring, Retaining, .375 Ext.
15	HG-51625	1		Rod, Bypass
16	HG-51627	1		Ring, Retaining, .75 Int.
19	HG-51048	1	/P	Swashplate, Trunnion
20	HG-51140	1	/P	Seal, Lip
23	HG-52681	1		Arm, Control
24	736-0371	1	/P	Washer, Flat, .34 x .88 x .06
25	HG-51812	1	/P	Screw, 5/16-24 x 1.0
27	HG-2003014	1	/P	Spring, Block
28	HG-2003017	1	/P	Washer, Thrust
29	HG-51062	1	/P	Shaft, Input
30	HG-50315	1		Bearing, Ball
31	HG-2000022	1	/P	Ring, Retaining
32	HG-50951	1	/P	Spacer
33	HG-51161	1	/P	Seal, Lip
34	HG-50329	1	/P	Ring, Retaining
35	HG-50551	1	S	Bearing, Thrust
36	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
37	HG-44145	1		Ring, Retaining
38	HG-51767	1		Gear, Pinion, 12T
39	HG-52579	1		Shaft, Motor
40	HG-51069	1		Washer, Motor Shaft
41	HG-50132	1	/P	Washer, HT
42	HG-51766	1		Gear, 10T/49T
43	HG-51043	1	/P	Gear, 10T Jackshaft
44	HG-51083	1		Pin, Jackshaft
45	HG-52531	1		Ring, Retaining
46	HG-52541	1		Gear, Bull, 52T
47	HG-52532	1		Washer, 1.018 x 1.57 x .105
48	HG-52542	1		Bearing, Sleeve
49	HG-52683	1		Shaft, Axle
50	HG-51517	1	/P	Bearing, Sleeve
51	HG-51518	1	/P	Seal, Lip
53	HG-70868L	1		Plate Kit, Expansion
57	HG-71529	1		Kit, Center Section
59	HG-71357	1		Kit, Bypass Arm RH
61	HG-71497	1	/P	Filter Assembly
73	HG-44433	1		Screw, Hex
74	HG-44094	1	/P	Arm, Brake
75	HG-50884	1	/P	Spring, Brake
100	HG-52473	1		Rotor, Brake
131	HG-51616	1	S	Screw, Patch, 5/16-24 x 1
134	HG-51950	1		Washer, 3/4 x 1.5 x .062

Ref #	Part Number	Qty	S/P/F	Description
135	HG-52401	1	/P	Spring, Extension
138	HG-71510	1	/P	Kit, Breather
140	HG-51945	1		Arm, Neutral
141	HG-52432	1		Kit, Scissors Arm
150	917-0678	1	/P	Puck, Brake
151	917-0682	1	/P	Plate, Puck
153	HG-62589	1	/P	Assembly, Brake Yoke
154	HG-23711	1		Spacer, Torsion Spring
155	941-0343	1	/P	Pin, Actuating
156	HG-50919	1	/P	Spring, Brake
157	HG-51146	1		Bolt, Special Flange
158	936-0371	1	S	Washer, Flat
159	712-0335	1	S	Nut, Castle, 5/16-24
160	914-0507	1	/P	Pin, Cotter, 3/32 x .75
	HG-50928	1	/P	Sealant not shown
	HG-70853	1	/P	Seal Kit not shown

i1046 Tractor 2007 & Before Transmission Assembly RH

Page 43 of 48

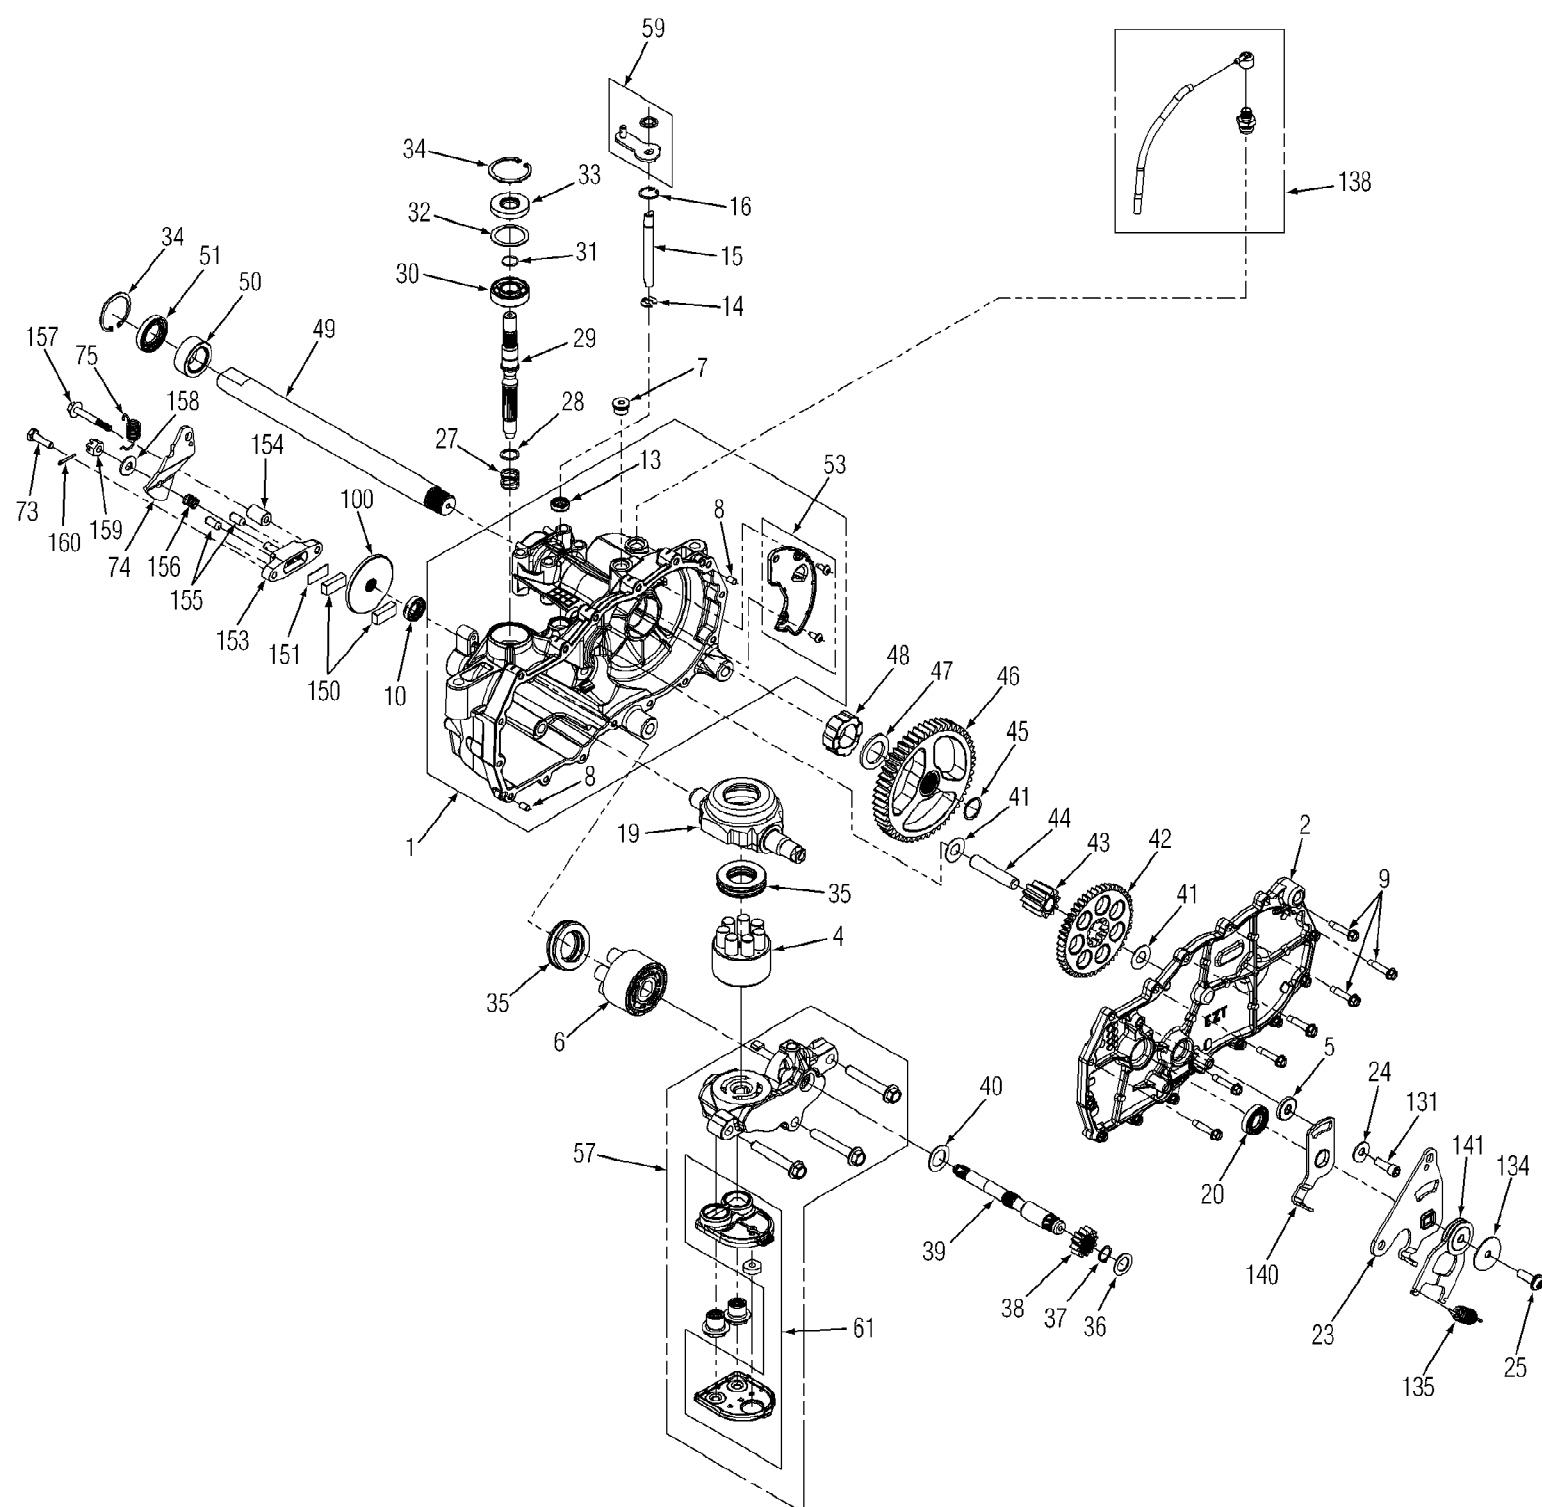

i1046 Tractor 2007 & Before
Transmission Assembly RH


Page 44 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	HG-71585	1		Housing Assembly, Main RH
2	HG-71586	1		Side Assembly, RH
4	HG-70723	1	/P	Block Kit - 7 Piston
5	HG-52527	1		Spacer, .32 x 1.005 x .179
6	HG-70331	1	/P	Block Assembly, Cylinder
7	HG-9005110-5600	1	/P	Plug, Straight Thread
8	HG-9004800-2506	1	/P	Pin
9	HG-51190	1	/P	Screw, Hex Flange
10	HG-70719	1	/P	Seal, Oil
13	HG-51626	1		Seal, Lip
14	HG-51628	1	/P	Ring, Retaining, .375 Ext.
15	HG-51625	1		Rod, Bypass
16	HG-51627	1		Ring, Retaining, .75 Int.
19	HG-51048	1	/P	Swashplate, Trunnion
20	HG-51140	1	/P	Seal, Lip
23	HG-52682	1		Arm, Control
24	736-0371	1	/P	Washer, Flat, .34 x .88 x .06
25	HG-51812	1	/P	Screw, 5/16-24 x 1.0
27	HG-2003014	1	/P	Spring, Block
28	HG-2003017	1	/P	Washer, Thrust
29	HG-51062	1	/P	Shaft, Input
30	HG-50315	1		Bearing, Ball
31	HG-2000022	1	/P	Ring, Retaining
32	HG-50951	1	/P	Spacer
33	HG-51161	1	/P	Seal, Lip
34	HG-50329	1	/P	Ring, Retaining
35	HG-50551	1	S	Bearing, Thrust
36	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
37	HG-44145	1		Ring, Retaining
38	HG-51767	1		Gear, Pinion, 12T
39	HG-52579	1		Shaft, Motor
40	HG-51069	1		Washer, Motor Shaft
41	HG-50132	1	/P	Washer, HT
42	HG-51766	1		Gear, 10T/49T
43	HG-51043	1	/P	Gear, 10T Jackshaft
44	HG-51083	1		Pin, Jackshaft
45	HG-52531	1		Ring, Retaining
46	HG-52541	1		Gear, Bull, 52T
47	HG-52532	1		Washer, 1.018 x 1.57 x .105
48	HG-52542	1		Bearing, Sleeve
49	HG-52683	1		Shaft, Axle
50	HG-51517	1	/P	Bearing, Sleeve
51	HG-51518	1	/P	Seal, Lip
53	HG-70868R	1		Plate Kit, Expansion RH
57	HG-71530	1		Kit, Center Section RH
59	HG-71006	1		Kit, Bypass Arm RH
61	HG-71497	1	/P	Filter Assembly
73	HG-44433	1		Screw, Hex
74	HG-44094	1	/P	Arm, Brake
75	HG-50884	1	/P	Spring, Brake
100	HG-52473	1		Rotor, Brake
131	HG-51616	1	S	Screw, Patch, 5/16-24 x 1
134	HG-51950	1		Washer, 3/4 x 1.5 x .062

i1046 Tractor 2007 & Before
Transmission Assembly RH

Page 45 of 48

Ref #	Part Number	Qty	S/P/F	Description
135	HG-52401	1	/P	Spring, Extension
138	HG-71510	1	/P	Kit, Breather
140	HG-51946	1		Arm, Neutral, RH
141	HG-52432	1		Kit, Scissors Arm
150	917-0678	1	/P	Puck, Brake
151	917-0682	1	/P	Plate, Puck
153	HG-62589	1	/P	Assembly, Brake Yoke
154	HG-23711	1		Spacer, Torsion Spring
155	941-0343	1	/P	Pin, Actuating
156	HG-50919	1	/P	Spring, Brake
157	HG-51146	1		Bolt, Special Flange
158	936-0371	1	S	Washer, Flat
159	712-0335	1	S	Nut, Castle, 5/16-24
160	914-0507	1	/P	Pin, Cotter, 3/32 x .75
	HG-50928	1	/P	Sealant not shown
	HG-70853	1	/P	Seal Kit not shown

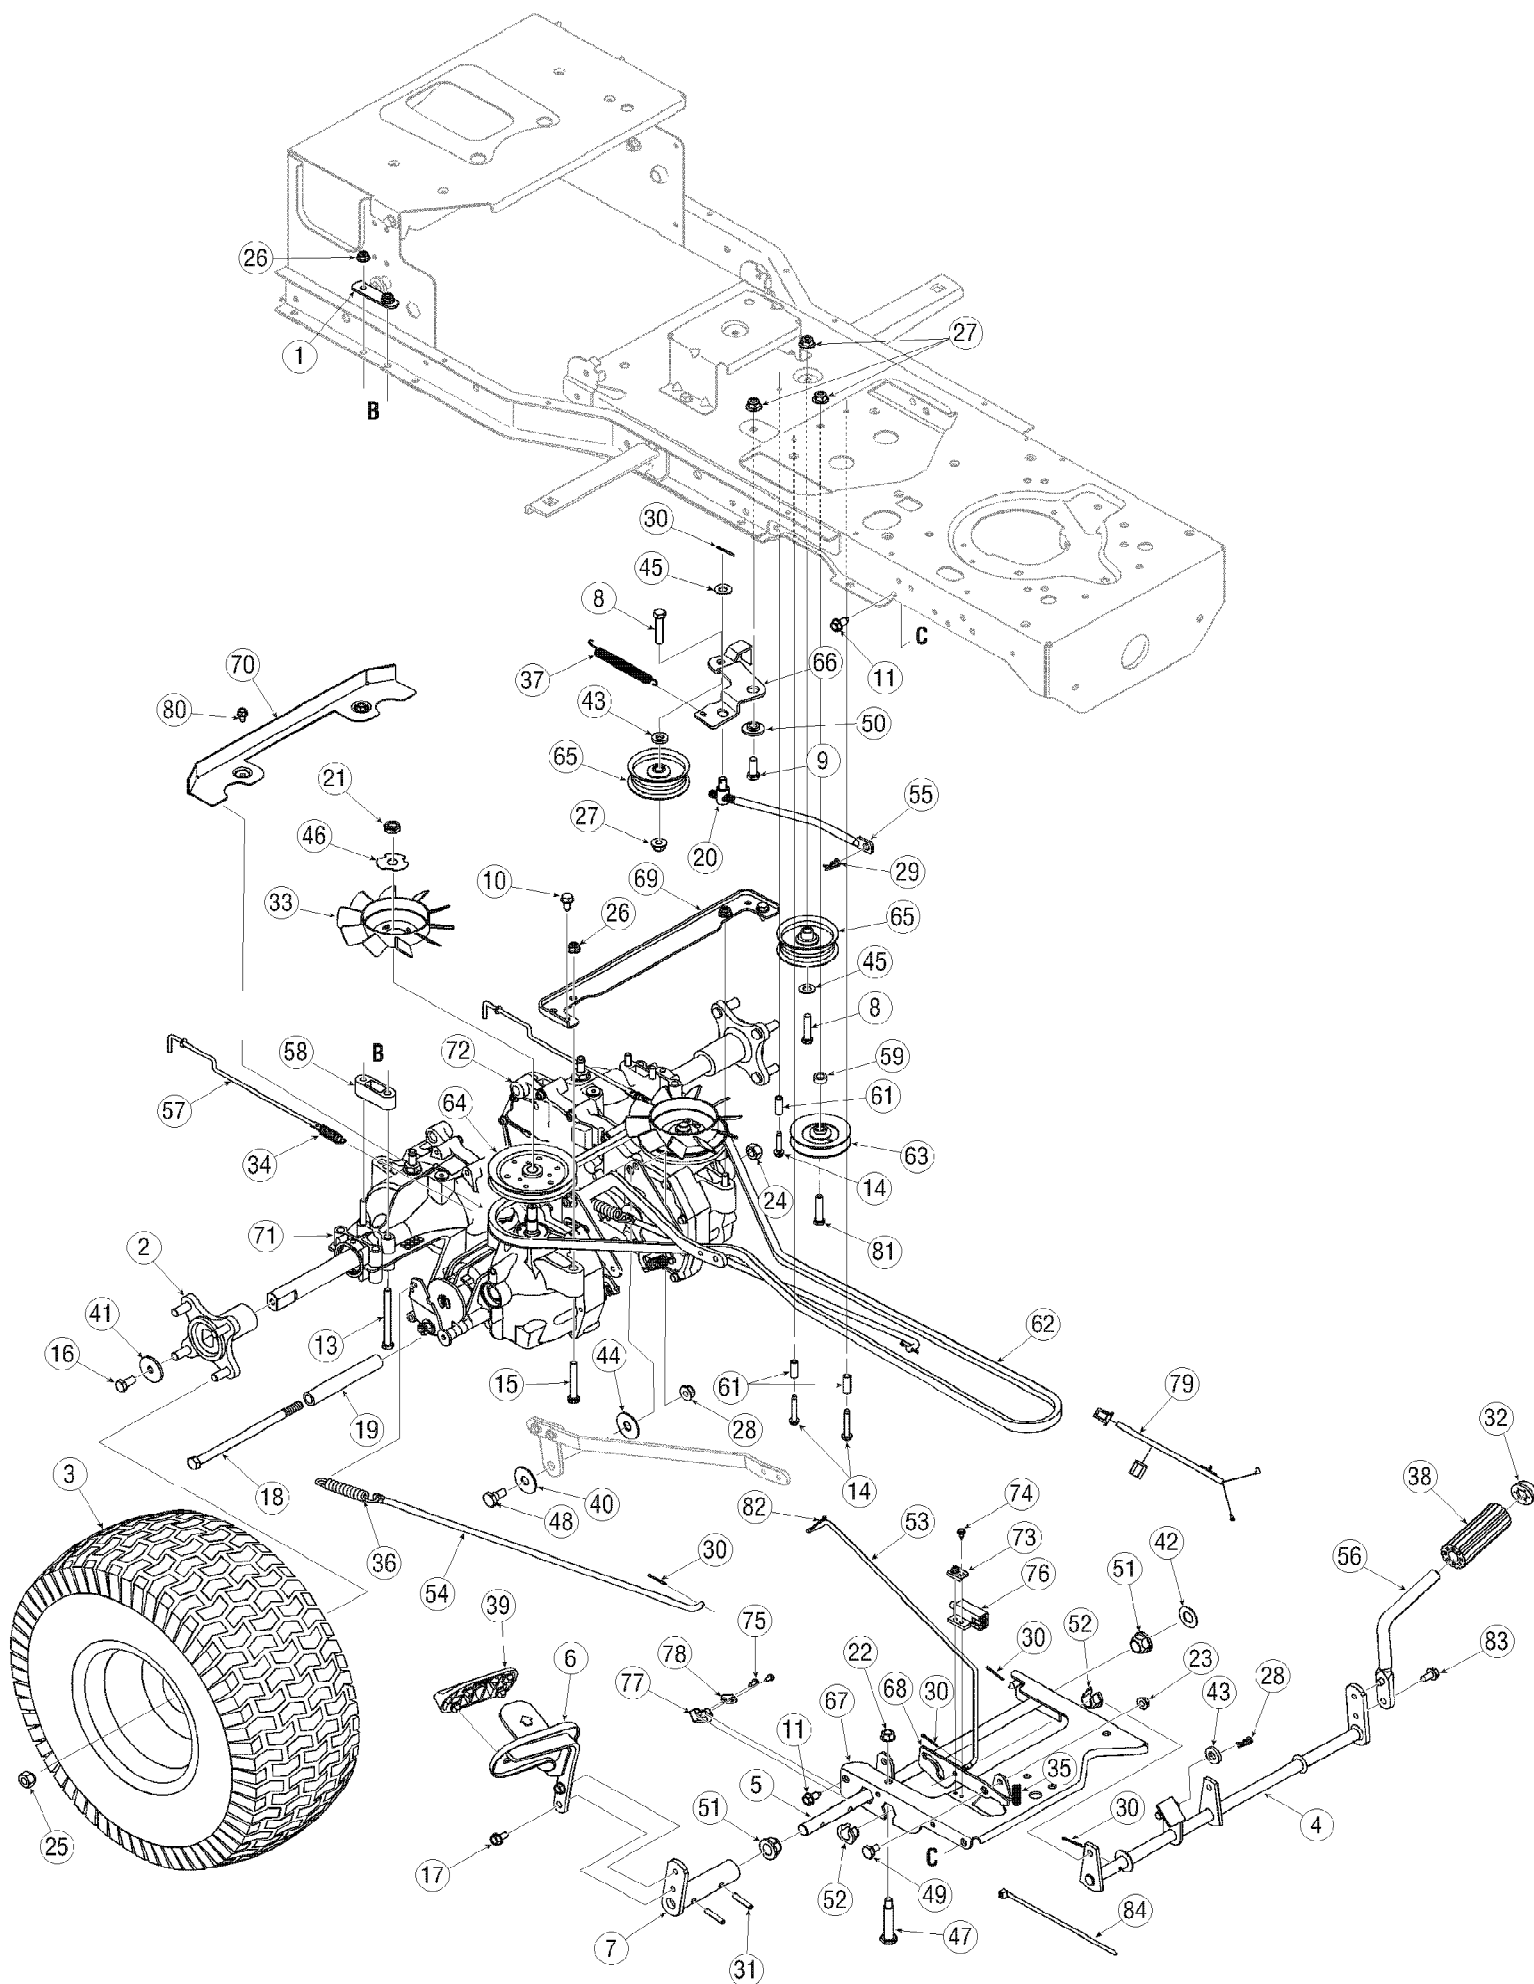

Ref #	Part Number	Qty	S/P/F	Description
1	17840	1	S	Bracket, Transmission Mounting
2	618-04317	1	S	Hub, Wheel
3	N/A	1		Wheel Assembly order components
3	734-1730	1		Tire, 20 x 8 x 8
3	634-0246A	1	S	Rim Assembly, Rear
3	934-0255	1	/P	Valve, Tubeless Air
4	647-04061	1		Shaft Assembly, Brake Control
5	647-04094	1		Shaft Assembly, Hydro Control Pedal
6	683-0267C	1	/P	Pedal Assembly, Hydro Control
7	683-04314A	1	S	Bracket, Pedal
9	710-0514	1	/P	Screw, Hex Cap, 3/8-16 x 1.0 Gr5
10	710-0607	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-18 x .5
11	710-0726	1	/P	Screw, Hex Wash Hd. Tapp, 5/16-12 x .75
13	710-1266	1	/P	Screw, Hex Cap, 5/16-18 x 3.5 Gr5
14	710-1325	1	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x 1.625
15	710-3073	1	S	Screw, Hex Cap, 5/16-18 x 2.25 Gr5
16	710-3119	1	/P	Screw, Hex Cap Lock, 3/8-16 x .75 Gr5
17	710-04484	1		Screw, Hex Wash Hd. Tapp, 5/16-18 x .75
18	710-04648	1		Screw, Hex Cap, 7/16-14 x 8.5 Gr5
19	711-04554	1		Spacer, .479 x .75 x 4.97
20	711-0832	1	S	Ferrule, 3/8-24 x .375 Dia.
21	712-0346	1	S	Nut, Hex Jam Insert Lock, 1/2-20 Gr5
22	712-0431	1	S	Nut, Hex Flange Top Lock, 3/8-16 GrF
23	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18 Gr5
24	712-0290	1	/P	Nut, Hex Lock, 7/16-14 GrA
25	712-3050	1	/P	Nut, Lug, 7/16-14
26	712-04063	1	/P	Nut, Hex Flange Insert Lock, 5/16-18 GrF
27	712-04065	1	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF
28	712-0375	1	/P	Nut, Hex Lock, 3/8-16
29	714-0104	1	S	Pin, Internal Cotter
30	714-0111	1	S	Pin, Cotter, 3/32 x 1/0
31	715-0143	1	S	Pin, Spirol, .25 x 1.25
32	726-0214	1	/P	Cap, Push, 5/8
33	731-05846	1	/P	Fan, Hydro
34	732-0209	1	S	Spring, Extension, .48 x 2.03
35	732-0335	1		Spring, Compression, .405 x 1.17
36	732-0716C	1	S	Spring, Extension, .59 x 4.0
37	732-0814	1		Spring, Extension, .56 x 5.52
38	735-0239	1	/P	Pad, Foot, 4.0 in. Lg
39	735-0662	1		Pad, Hydro Control Pedal
40	736-3027	1		Washer, Flat, .531 x 1.75 x .09
41	736-0227	1	S	Washer, Flat, .39 x 1.5 x .134
42	736-0290	1	/P	Washer, Flat, .625 x 1.0 x .067 HT
43	736-3010	1	/P	Washer, Flat, .407 x .812 x .135 HT
44	736-3039	1	S	Washer, Flat, .406 x 1.5 x .105
45	736-3050	1	/P	Washer, Flat, .406 x .812 x .051
46	736-04263	1		Washer, Hydro Lock
47	738-0129	1	/P	Bolt, Shoulder, 3/8-16: .5 x 2.0
48	738-0143	1	/P	Bolt, Shoulder, .496 x .336: 3/8-16
49	738-0155	1	S	Bolt, Shoulder, .435 x .160 : 5/16-18
50	738-0347	1	S	Spacer, Shoulder, .625 ID x .169
51	741-0225	1	S	Bearing, Hex Flange
52	741-3065B	1	/P	Bearing, Hex Flange, .625 ID Split

Ref #	Part Number	Qty	S/P/F	Description
53	747-04562	1		Rod, Park Brake
54	747-04584A	1	/P	Rod, Brake
55	747-04598A	1		Rod, Drive Engage
56	747-04629	1	S	Bracket, Brake Pedal
57	747-04649A	1		Rod, Hydro Dump
58	748-04155	1		Spacer, T-Axle
59	750-04776	1		Spacer, .38 x .625 x .265
61	750-04456	1		Spacer, .26 x .372 x 1.42
62	754-04134	1	S	V-Belt, 88.4
63	756-04209	1	/P	Pulley, V Type Drive, 3.06
64	756-04274	1		Pulley, V Type, 4.5
65	756-0981B	1	S	Pulley, Flat Idler, 2.75
66	783-04570A	1	S	Arm, Idler
67	783-04881A	1	S	Bracket, Foot Pedal Support
68	783-04981	1		Bracket, Park Brake
69	783-05330A	1	S	Bracket, Support
70	783-05473	1	S	Bracket, Belt Keeper Mounts & secured to top of trans.
70	783-05332	1	S	Bracket, Belt Keeper Mounts to the top but secured by trans. side cover bolts.
71	918-04339A	1	/P	Transmission, Hydro RH
72	918-04342A	1	/P	Transmission, Hydro LH
73	17962	1		Plate, Switch
74	710-0224	1	S	Screw, Hex Wash Hd. Tapp, #10-16 x .5
75	710-0227	1	/P	Screw, Hex Wash Hd. Tapp, #8-18 x .5
76	725-04039	1	S	Switch, Brake
77	725-1644	1		Switch, Reverse
78	726-0320	1	S	Plate, Insulator Nut
79	725-04374	1		Harness, Reverse Jumper
80	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
81	710-3144	1	/P	Screw, Hex Head Cap, 3/8-16 x 2
82	714-04040	1	/P	Cotter Pin, Bow Tie
83	710-1611B	1	/P	Screw, TT, 5/16-18 x .750
84	725-0157	1	/P	Cable Tie