


420 4X2 Utility Vehicle
Axle (Front Suspension)


Page 1 of 78

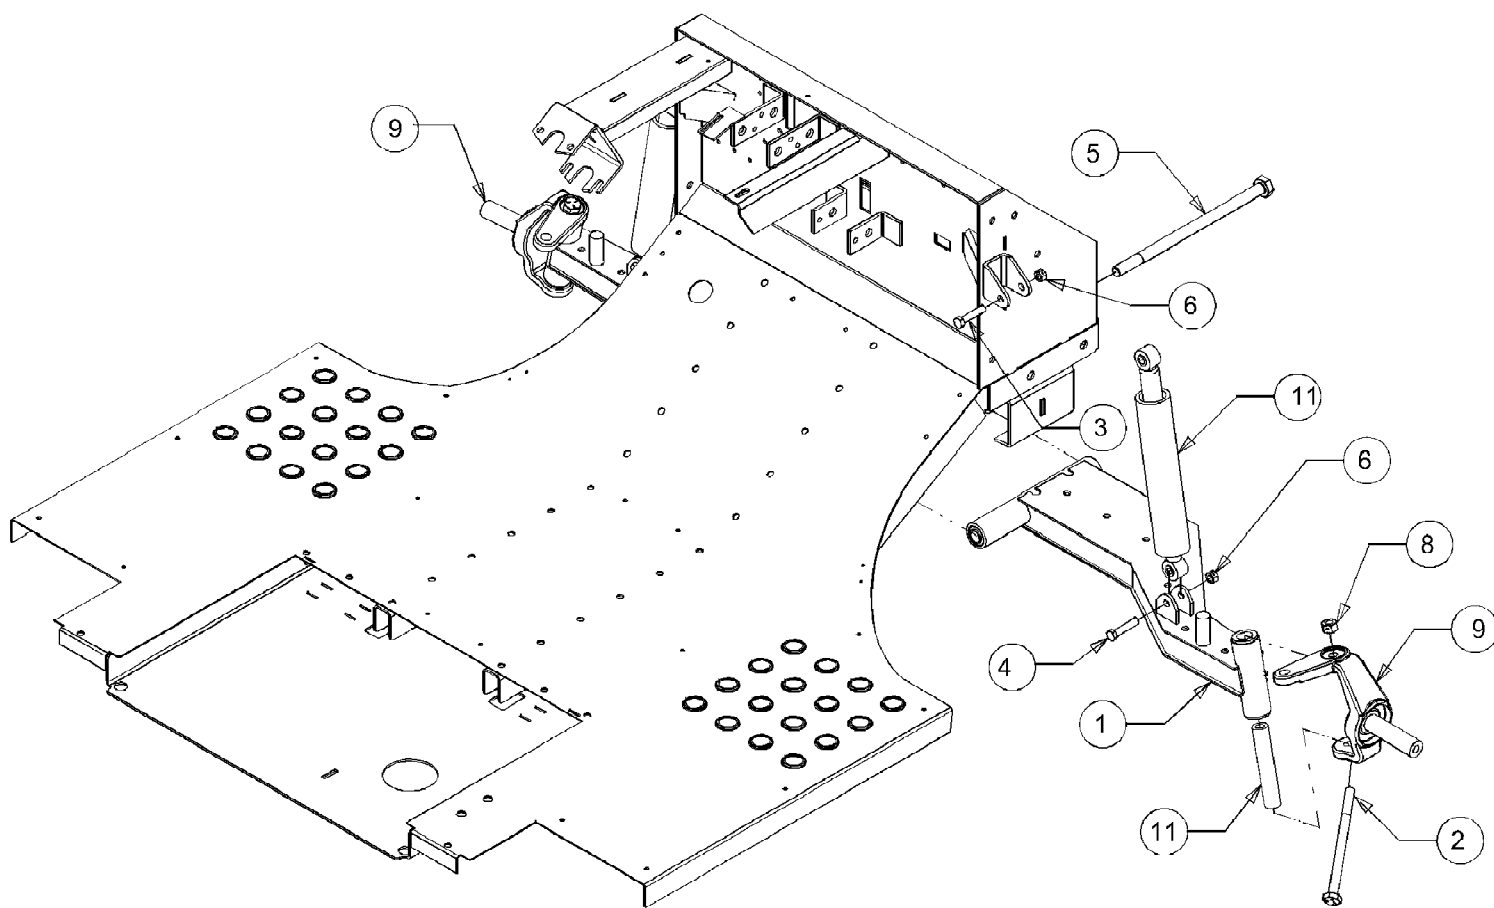

420 4X2 Utility Vehicle
Axle (Front Suspension)

Page 2 of 78


Ref #	Part Number	Qty	S/P/F	Description
1	607-04004	1		Axle Assembly, Right-front
	737-04006	1	/P	Grease Fitting
	741-0758	2		Bearing, .63 ID x 1.19 OD
	741-0762	2		Bushing, Steering
	750-1357	1		Spacer, .645 ID x 1.063 OD
	607-04005	1		Axle Assembly, Left-front
	737-04006	1	/P	Grease Fitting
	741-0758	2		Bearing, .63 ID x 1.19 OD
	741-0762	2		Bushing, Steering
	750-1357	1		Spacer, .645 ID x 1.063 OD
2	710-04012	2		Hex Screw, 1/2-13 x 6.50, Gr5
3	710-04023	2		Hex Screw, M10-1.25 x 65mm
4	710-04024	2		Hex Screw, M10-1.25 x 50mm
5	710-04120	2		Hex Screw, 5/8-11 x 11.13, Gr5
6	712-04006	4		Nut, Hex Lock, Nylon, M10 -1.25
?7	712-3016	2	/P	Nut, Hex Lock, Nylon, 5/8-11, Gr5
8	712-3022	2	/P	Nut, Hex Lock, 1/2-13
9	723-0618	1		Steering Control Knuckle, RH
	723-0619	1		Steering Control Knuckle, LH
?10	732-04069	2	S	Shock Absorber, 2.9 Stroke
11	750-1388	2		Tube, .875 x .50 x 4.75
	737-0168	1	S	Grease, Alvania, EP Lead-Free

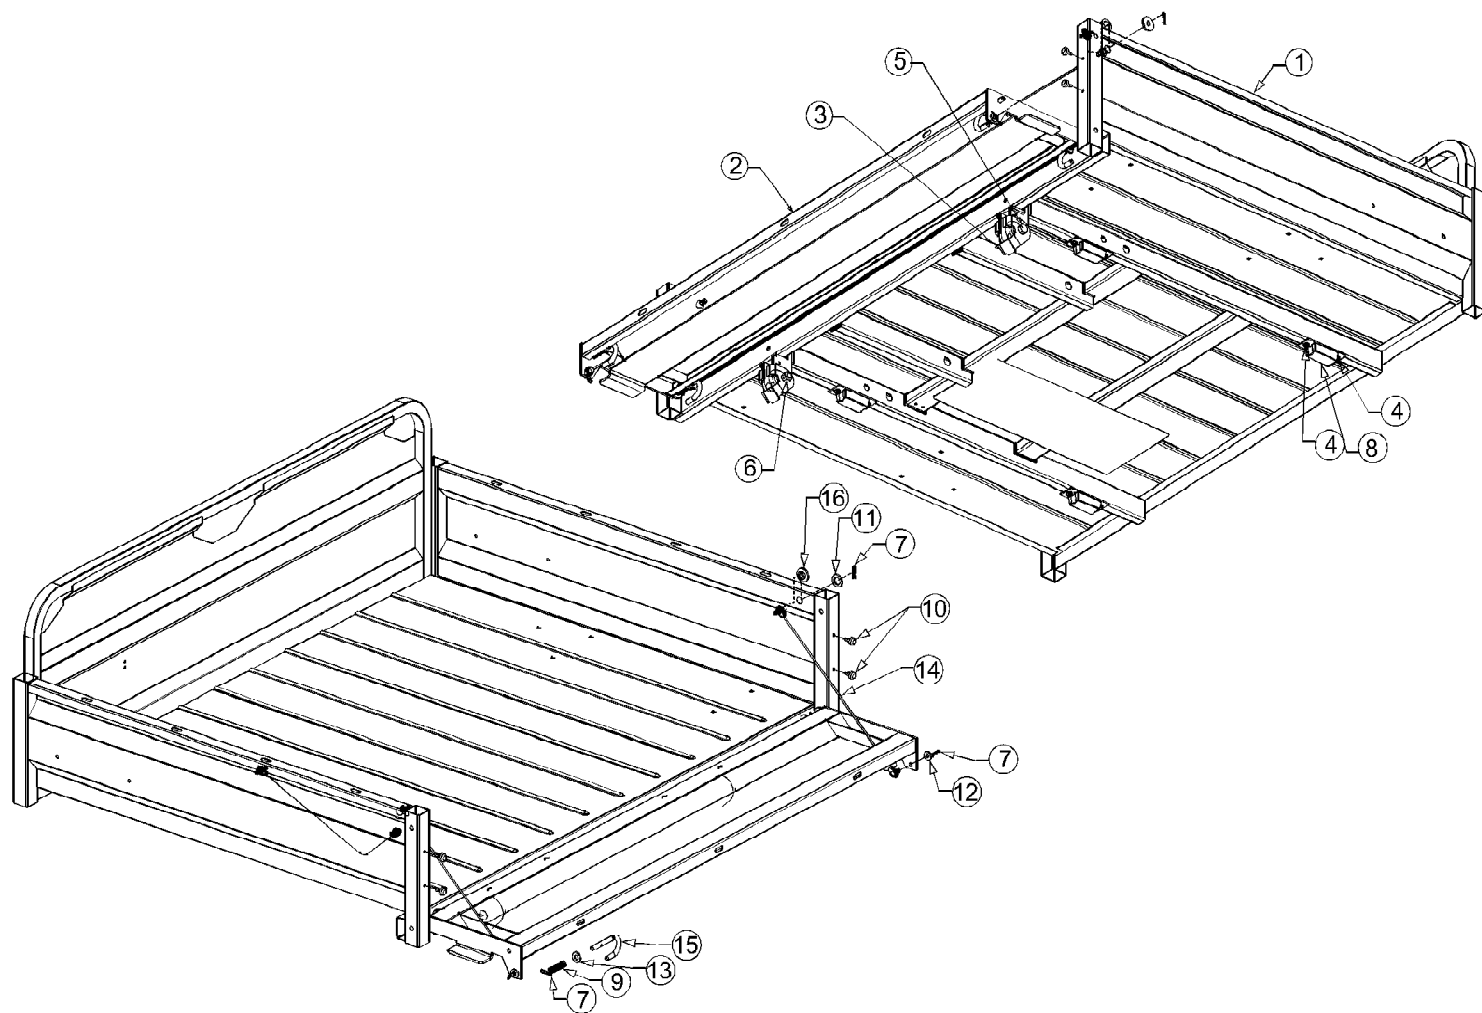

420 4X2 Utility Vehicle
Bed

Page 4 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-04021	1	S	Bed Assembly, Utility
2	607-04028	1	S	Tailgate Assembly
3	707-04216	2	S	Bracket, Stop
4	710-0599	8	/P	Screw, Self-tapping, 1/4-20 x 0.500
5	710-3233	2	/P	Screw, Hex 1/2-13 x 2.50 GR5
6	712-3022	2	/P	Nut, Hex Lock, 1/2-13
7	714-0104	8	S	Cotter Pin, .072 Dia x 1.13LG
8	731-04016	4		Bumper, Extension Suspension
9	732-0306	4	S	Compression Spring, .406 x .531 x 1.75 LG
10	735-0271	4	S	Bumper, .62Dia x .3
11	736-0162	2	/P	Washer, Flat, .64 ID x 1.0 x .12
12	736-3008	2	S	Washer, Flat, .344 x .750 x .120
13	736-3010	4	/P	Washer, Flat, .407 x .812 x .135 HDN
14	746-0968	2		Cable, Lift 16.16 LG
15	747-1116	4	/P	Handle, Deck Release
16	748-0331	2	S	Spacer, Shoulder .625 Dia x .324 Dia

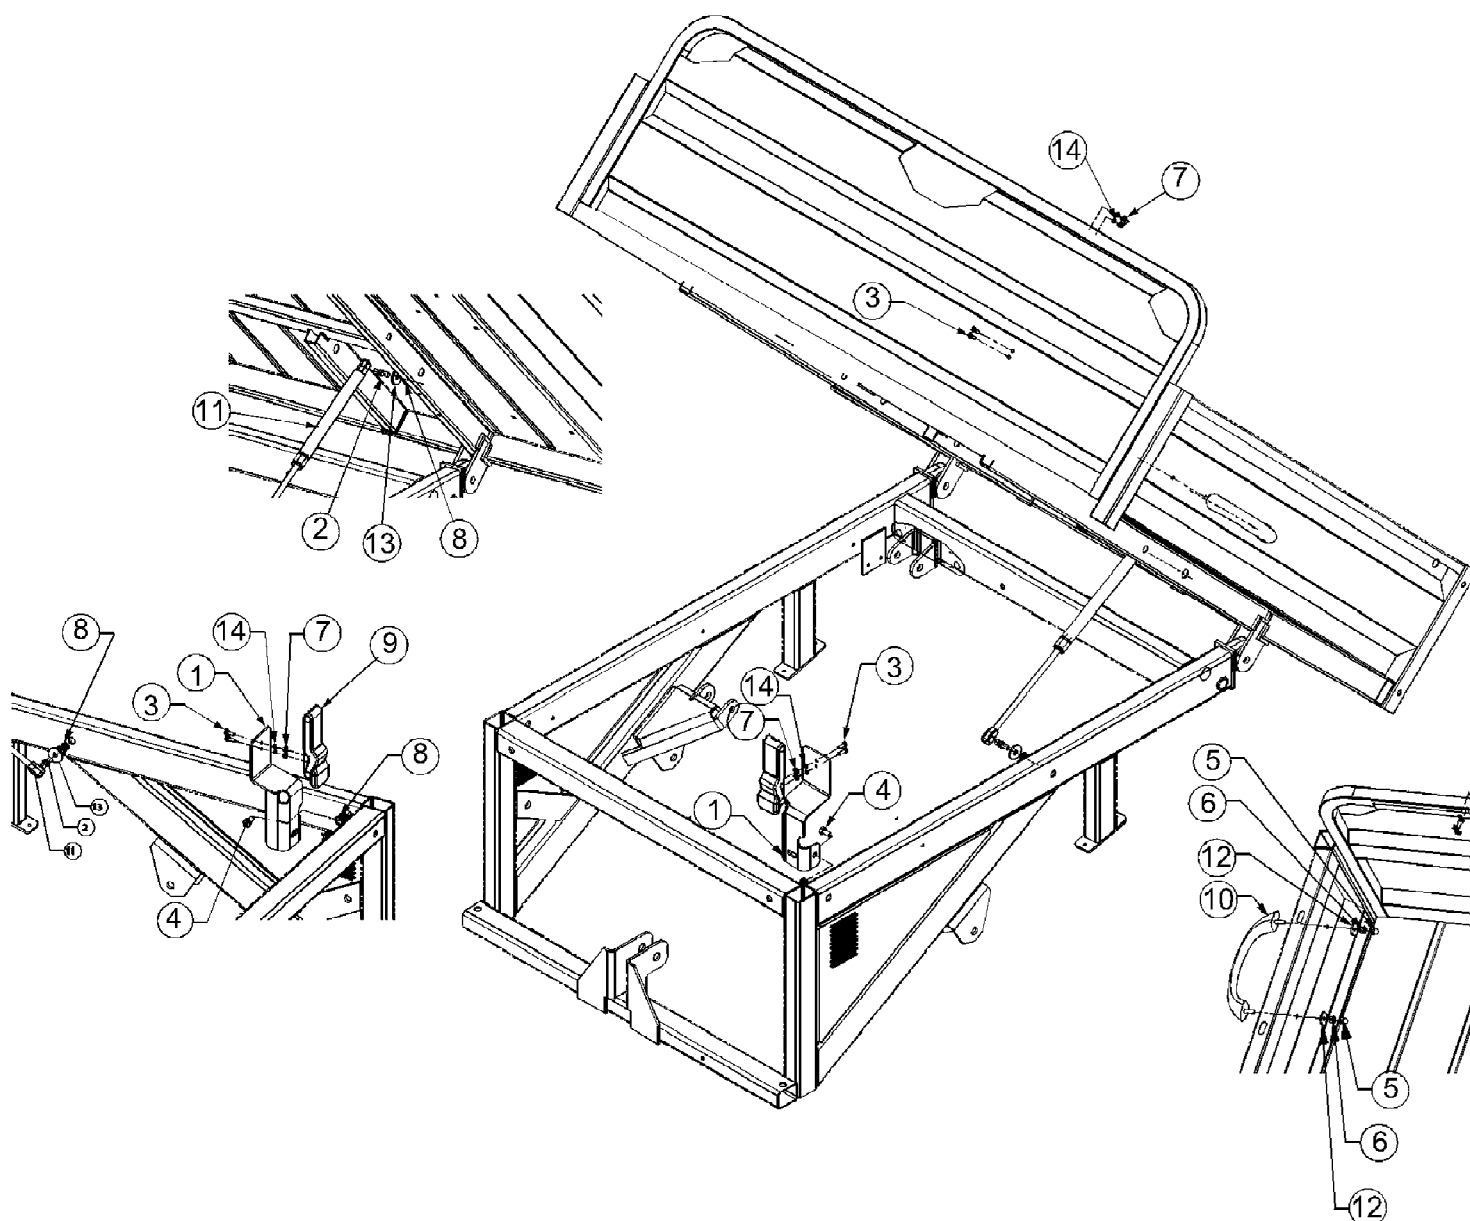


420 4X2 Utility Vehicle
Bed Lift

Page 6 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	707-04060	1		Bracket, Bed Latch Base
2	710-04166	2	/P	Stud, Ball 5/16-18
3	710-0899A	4	/P	Screw, Hex Sems, #10-32 x .62, Gr5
4	710-3025	1	/P	Hex Screw, 5/16-18 x .625, Gr5
5	712-0264	2		Nut, Acorn 1/4-20 w/o Lock
6	712-0324	2	/P	Nut, Hexlock, 1/4-20
7	712-0349	4	/P	Hex Nut, 10-32
8	712-0703A	3	/P	Nut, Insert 5/16-18
9	726-04005	1		Latch
10	731-04174	1		Handle, Bag w/Screw
11	732-04109	1	S	Spring, Gas .91 Stroke
12	736-0176	2	S	Washer, Flat .265 x .938 x .120
13	731-0231	2		Washer, Flat .34 ID X1.125 OD x .12
14	736-0722	4	S	Washer, Lock, #10

420 4X2 Utility Vehicle
Bumper

Page 7 of 78

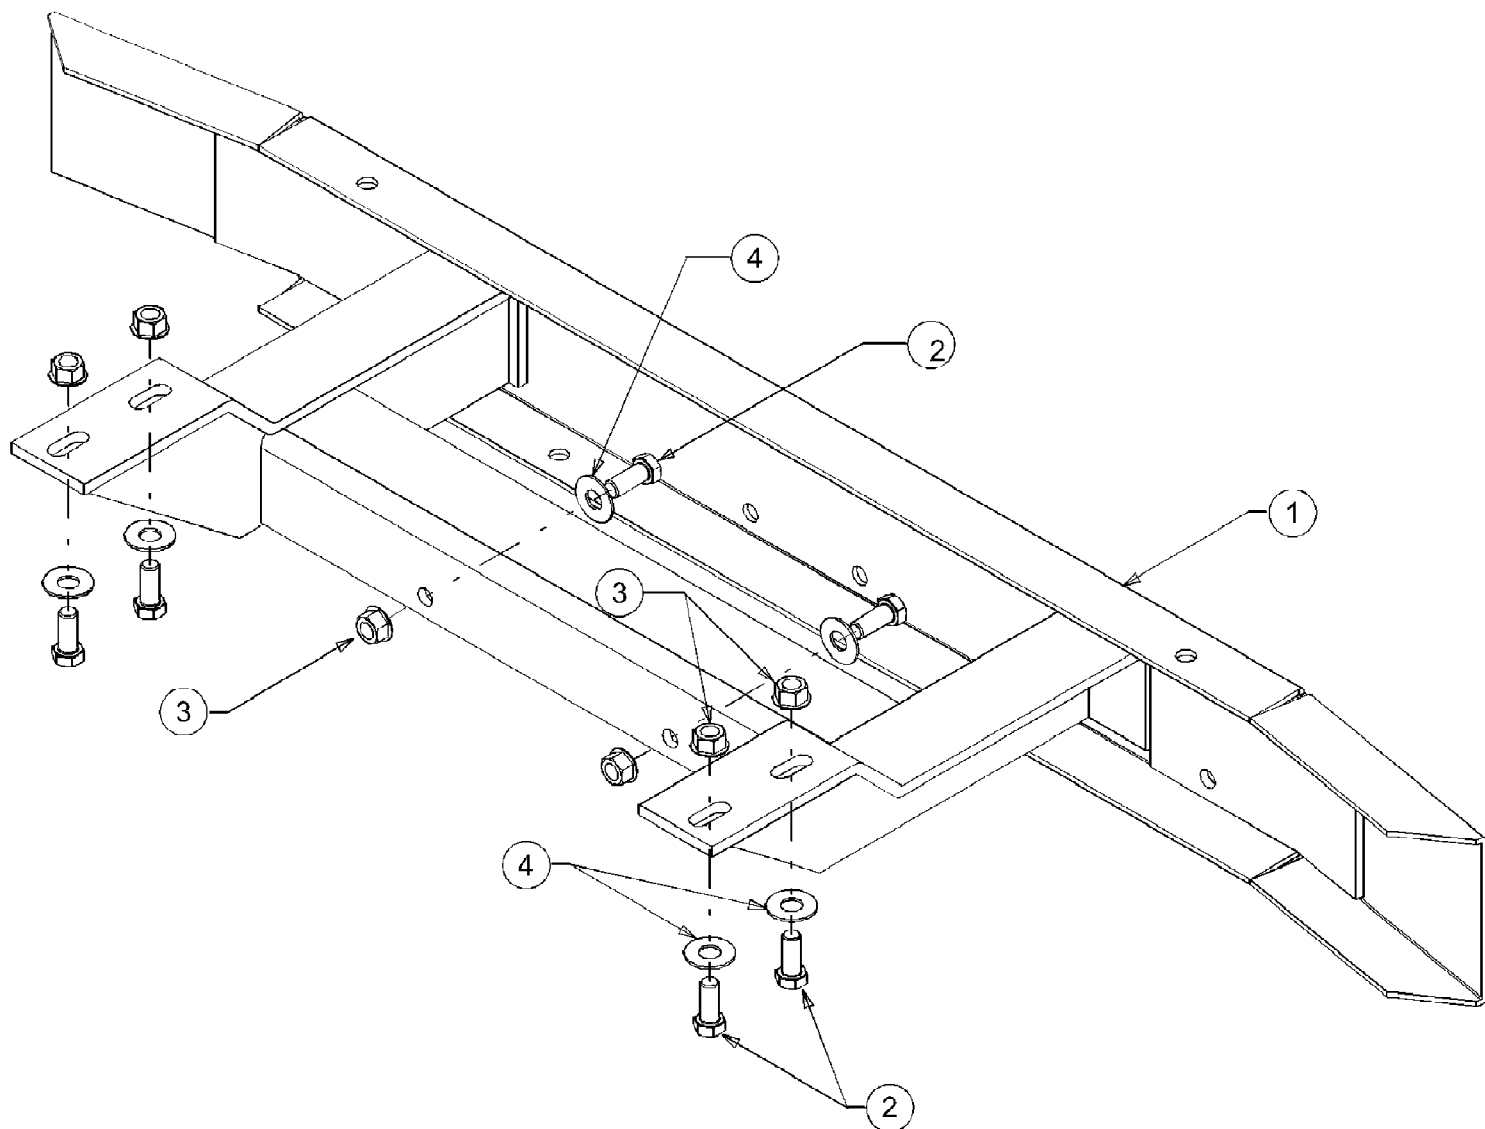


420 4X2 Utility Vehicle
Bumper

Page 8 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-0037	1	S	Front Bumper Assembly
2	710-3001	6	/P	Screw, Hex, 3/8-16 x .88
3	712-0431	6	S	Nut, Flange Lock, 3/8-16
4	736-04006	6		Washer, Flat, .444 x 1.0 x .057

420 4X2 Utility Vehicle
Cables


Page 9 of 78

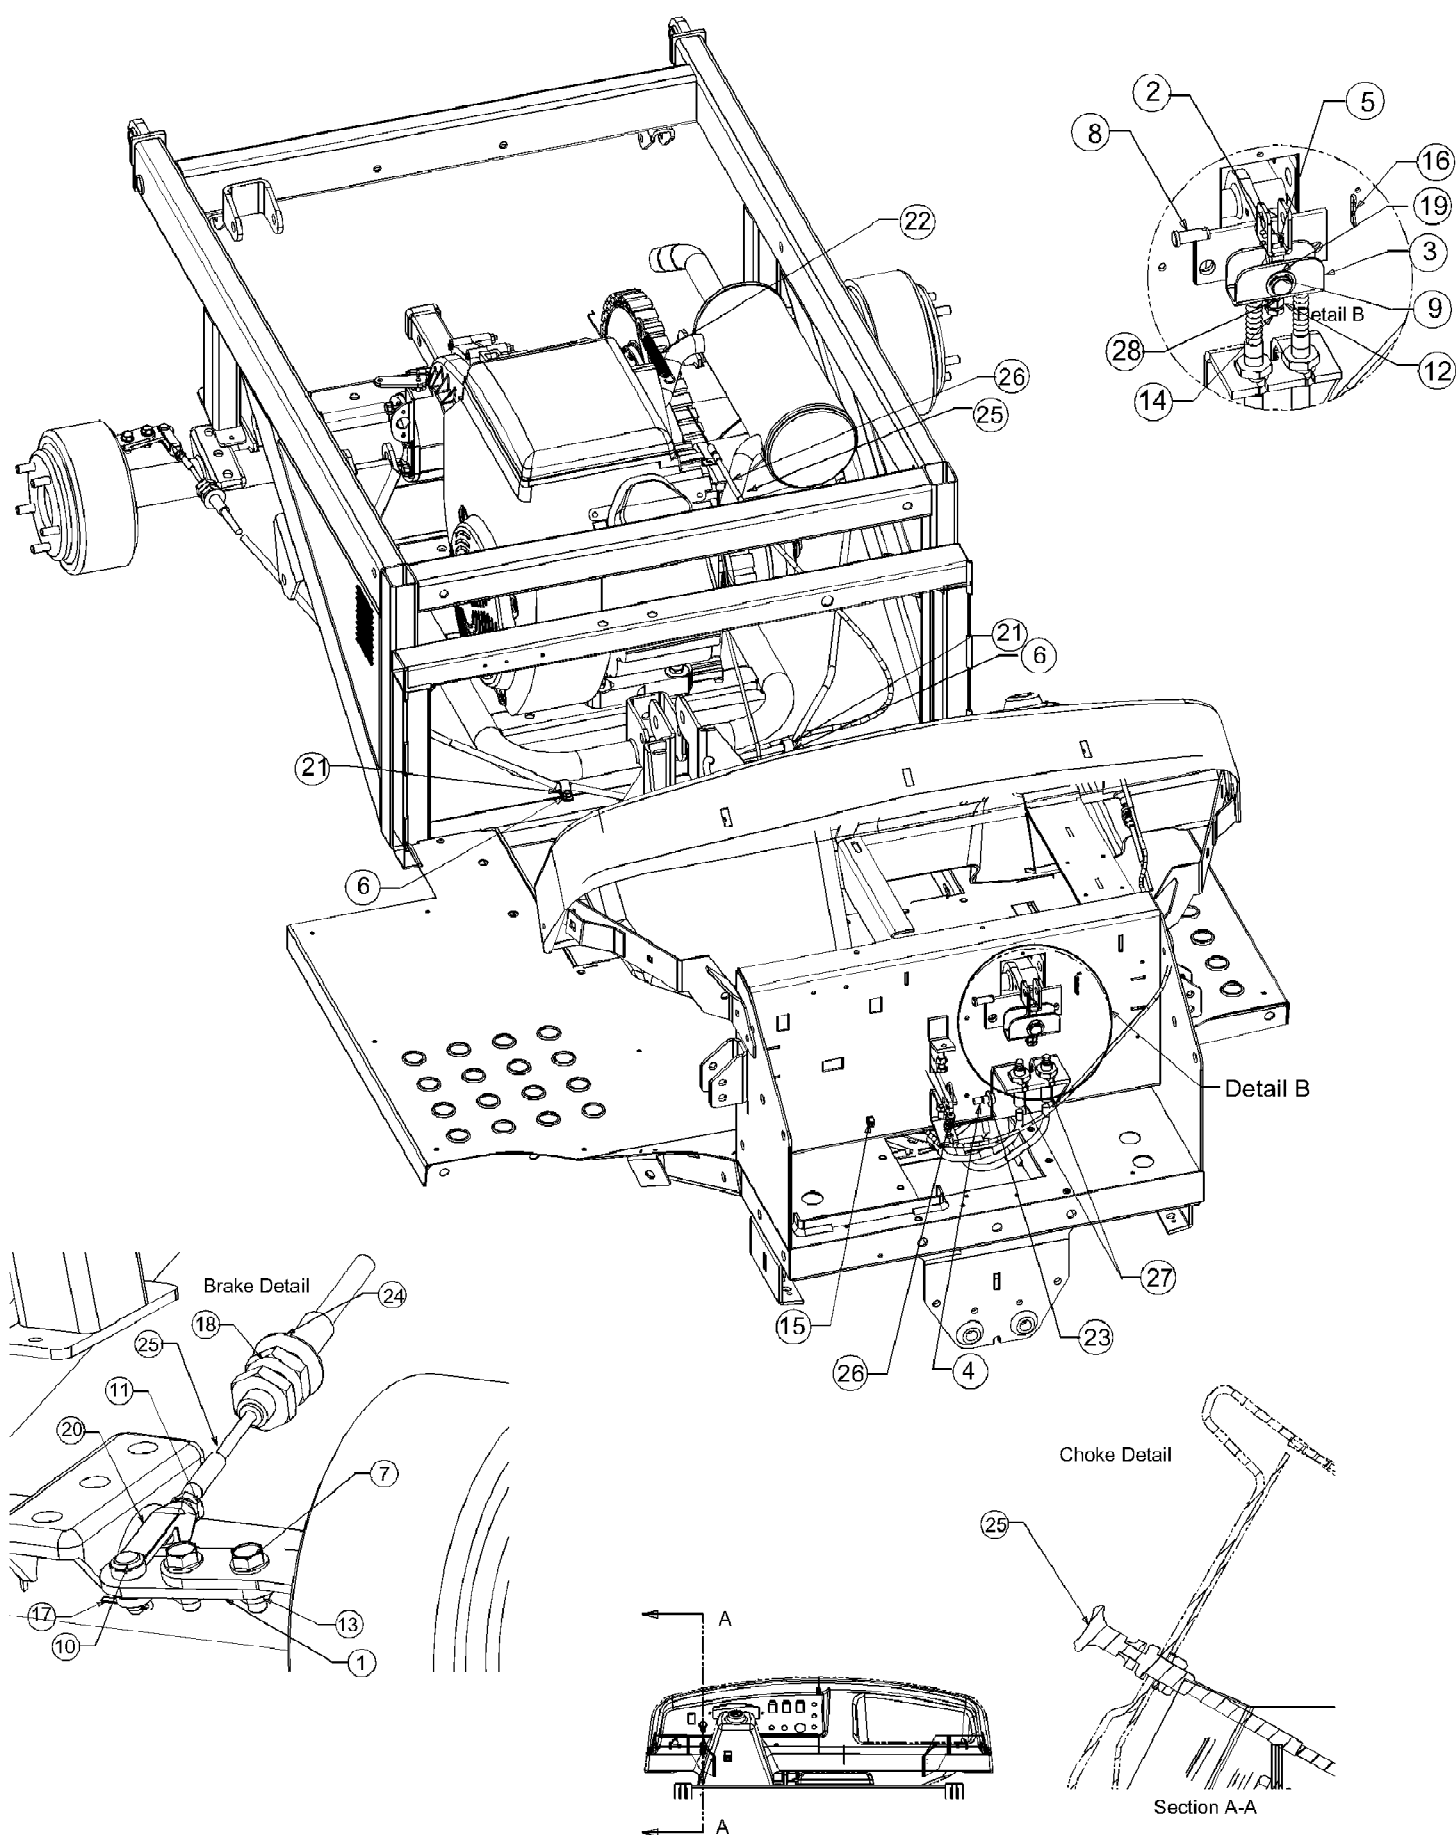

420 4X2 Utility Vehicle
Cables

Page 10 of 78


Ref #	Part Number	Qty	S/P/F	Description
1	707-04196	2	S	Plate, Arm Brake
2	707-04199	1		Mount,Cable
3	707-04200	1		Bracket, Equalizer
4	710-04027	1		Screw, Shoulder, .375 x .375
5	710-0378	1	/P	Screw, 5/16-18 x 2.5
6	710-0599	2	/P	Screw, Self-Tapping
7	710-1238	4	/P	Washer, 5/16-18 x .875
8	711-0173	1	/P	Pin, Clevis 375 x .969
9	711-04024	1	S	Pin, Clevis .625 OD x 1.37
10	711-0653	2	/P	Pin, Clevis .312 OD x 1.0
11	712-0256	2	/P	Nut, Jam 5/16-24
12	712-0267	1	S	Nut, Hex 5/16-18
13	712-3004A	4	/P	Nut, Flange Lock 5/16-18
14	712-3007	1	/P	Nut, Jam 5/16-18
15	712-3009	1	S	Hexlock Nut, 5/16-18
16	714-0104	1	S	Pin, Cotter, .072 x 1.13
17	714-0507	2	S	Pin, Cotter 3-32 x .750
18	719-0104	2		E-Ring for .500 Dia Shaft
19	716-0106	2	/P	E-Ring.625 Shaft
20	719-3018	2		Yoke, 5/16-24
21	726-04000	2		Clamp
22	732-0470A	1	S	Extension Spring
23	736-0159	1	S	Washer, .349 x .879 x .063
24	736-0355	2	/P	Flat Washer, 1.0 OD x .56 ID x .040
25	746-04002	1	S	Cable, Control, Choke
26	746-04042	1	S	Cable, Control, Throttle
27	746-04072A	1	/P	Cable, Control, Brake
28	750-04194	1		Spacer, .466 OD x .443

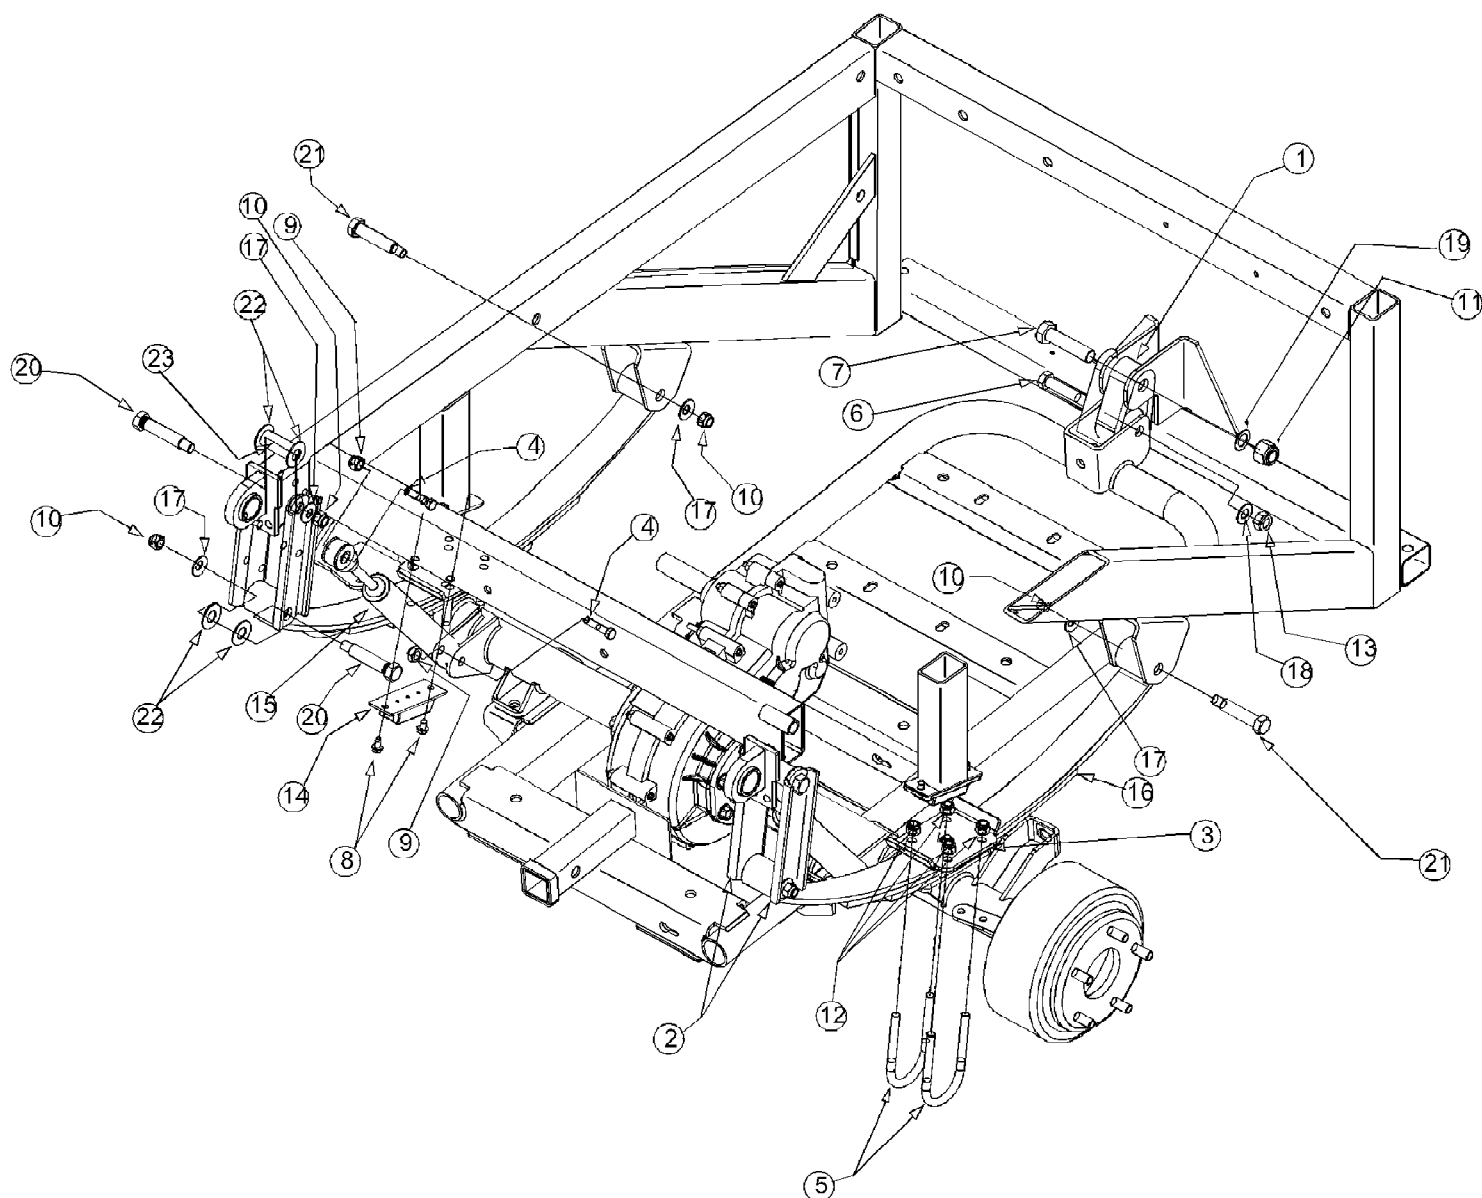

420 4X2 Utility Vehicle
Chassis

Page 12 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-04025	1		Link Assembly
2	707-04119	4		Plate, Shackle
3	707-04120A	2		Bracket, Spring Leaf
4	710-04024	4		Hex Screw, M12-1.25
5	710-04119	4	/P	U-Bolt 3/8-16
6	710-04128	1	/P	Hex Screw, M12-1.75
7	710-04129	1	/P	Hex Screw, 5/8-11 x 2.5
8	710-0599	4	/P	Screw, Self Tapping 1/4-20
9	712-04006	4		Locknut, M10 x 1.25
10	712-04049	6	S	Hexlock Nut
11	712-3016	1	/P	Hexlock Nut, 5/8 - 11
12	712-0130	8	/P	Hexlock Nut, 3/8-16
13	712-3103	1		Hexlock Nut, M12 x 1.75
14	731-04016	2		Bumper, Suspension
15	732-04043	2	S	Shock Absorber, 2.50 Stroke
16	732-04055	2	S	Spring, Leaf 4 x 2
17	736-0407	6		Bell Washer, .45 x 1.00 x .062
18	736-0272	1	S	Flat Washer, .510 x 1.00 x .060
19	736-0494	1		Flat Washer, .632 x 1.00 x .035
20	738-04035	4	S	Shoulder Screw, .550 x 2.290
21	738-04042	2	S	Shoulder Screw, .550 x 2.13
22	741-0405	8	S	Bearing, .56 ID x 1.25 OD x .06
23	750-04137	2	S	Bushing, .75 OD x .562 ID x 1.75 LG

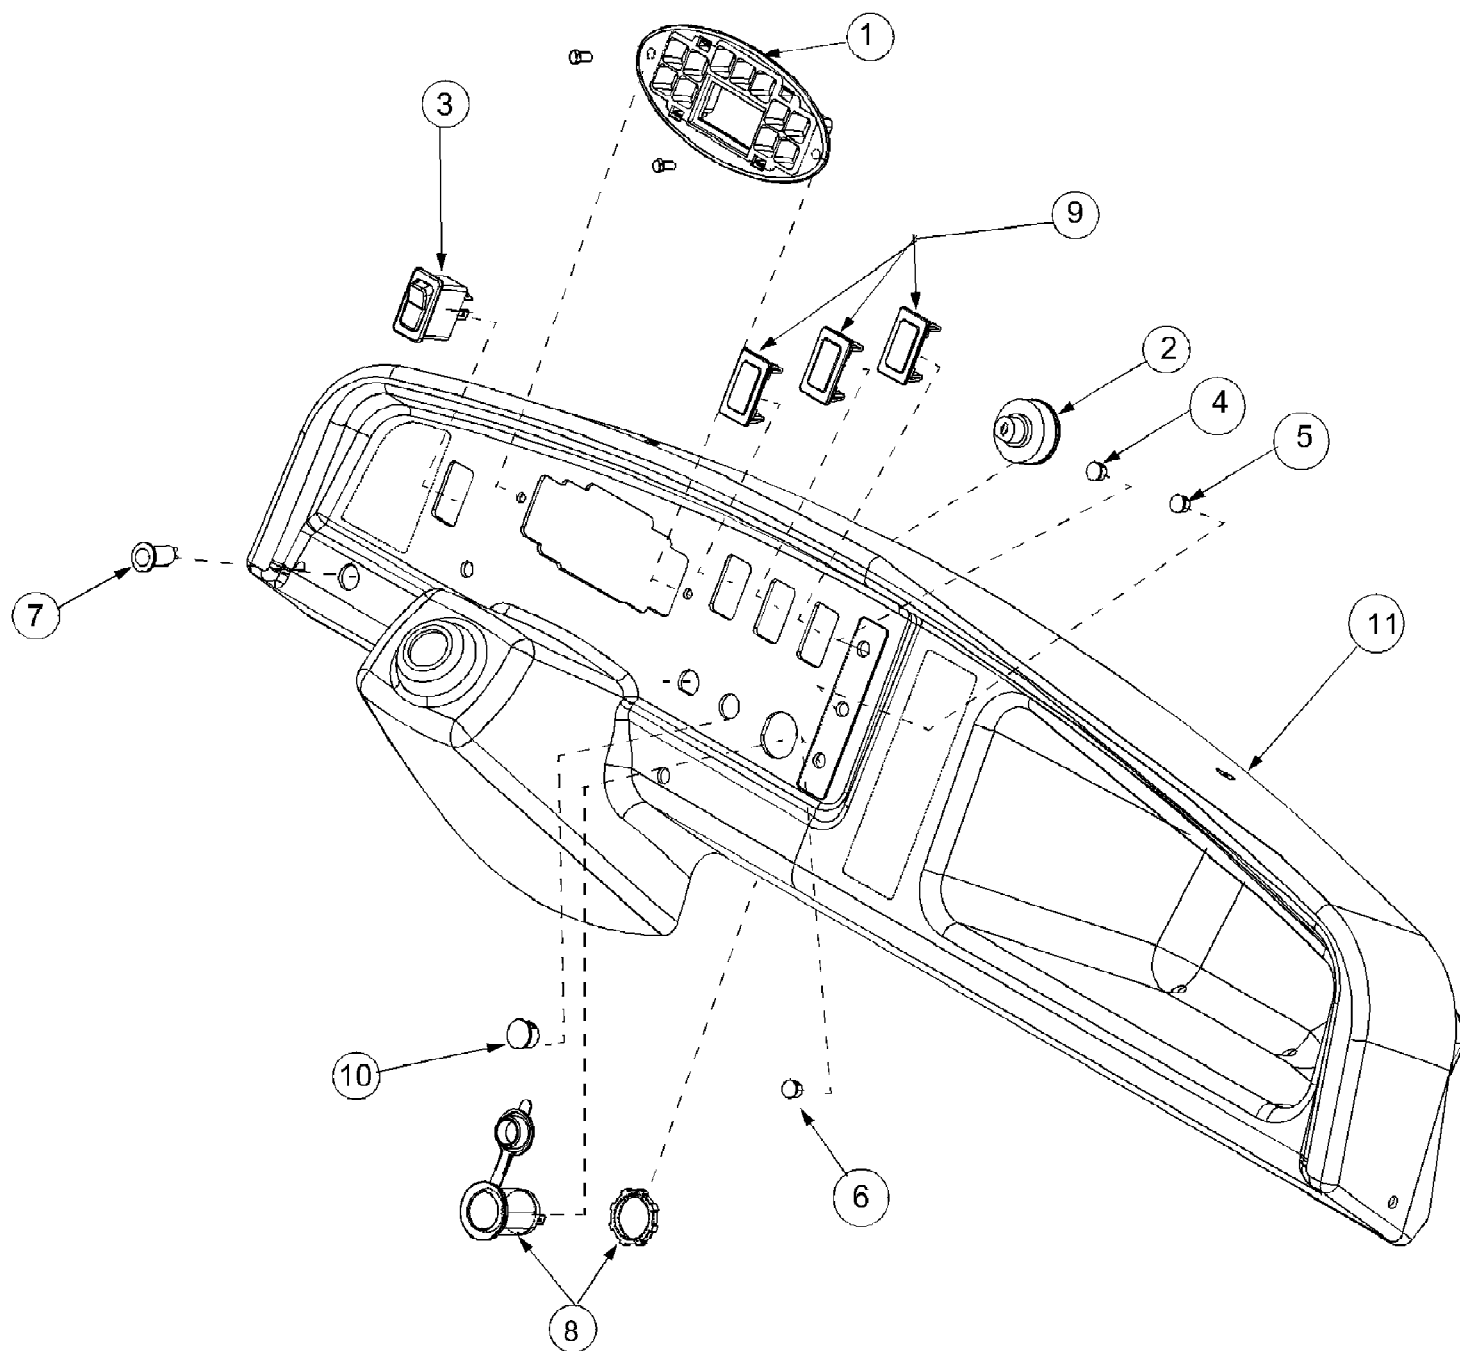


420 4X2 Utility Vehicle
Dash Panel

Page 14 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	625-04006	1	S	Instrument Panel
2	725-04000	1	S	Switch, Key
3	725-04006	1		Rocker Switch, Headlight
4	725-04060	1	S	Switch, Green Forward
5	725-04061	1	S	Switch, Yellow Neutral
6	725-04062	1	S	Switch, Red Reverse
7	725-04071	1	S	Switch, Diff-Lock Amber
8	725-2003	1		Receptacle, Power, 12v
9	731-04010	3		Switch
10	731-04023	2		Plug, Horn Switch
11	731-04270	1	S	Dash Panel
	725-1341B	1	/P	Key - Ignition


420 4X2 Utility Vehicle
Electrical Schematic (Part 1)

Page 15 of 78

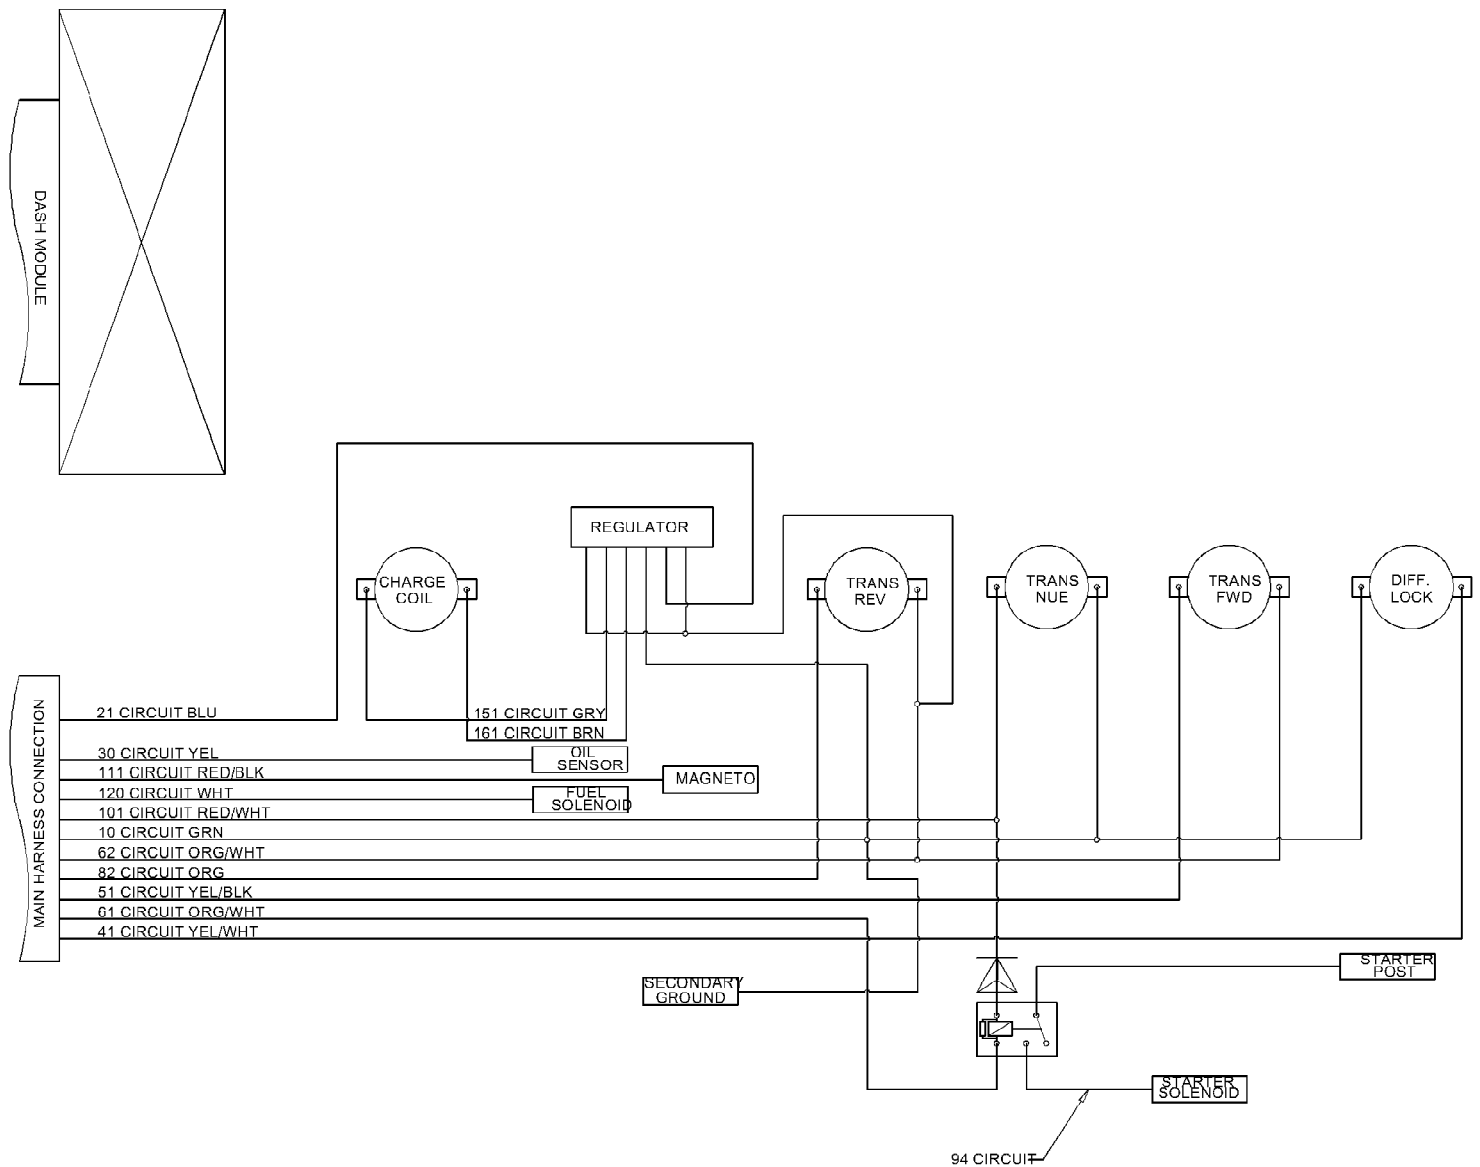


420 4X2 Utility Vehicle Electrical Schematic (Part 2)

Page 16 of 78

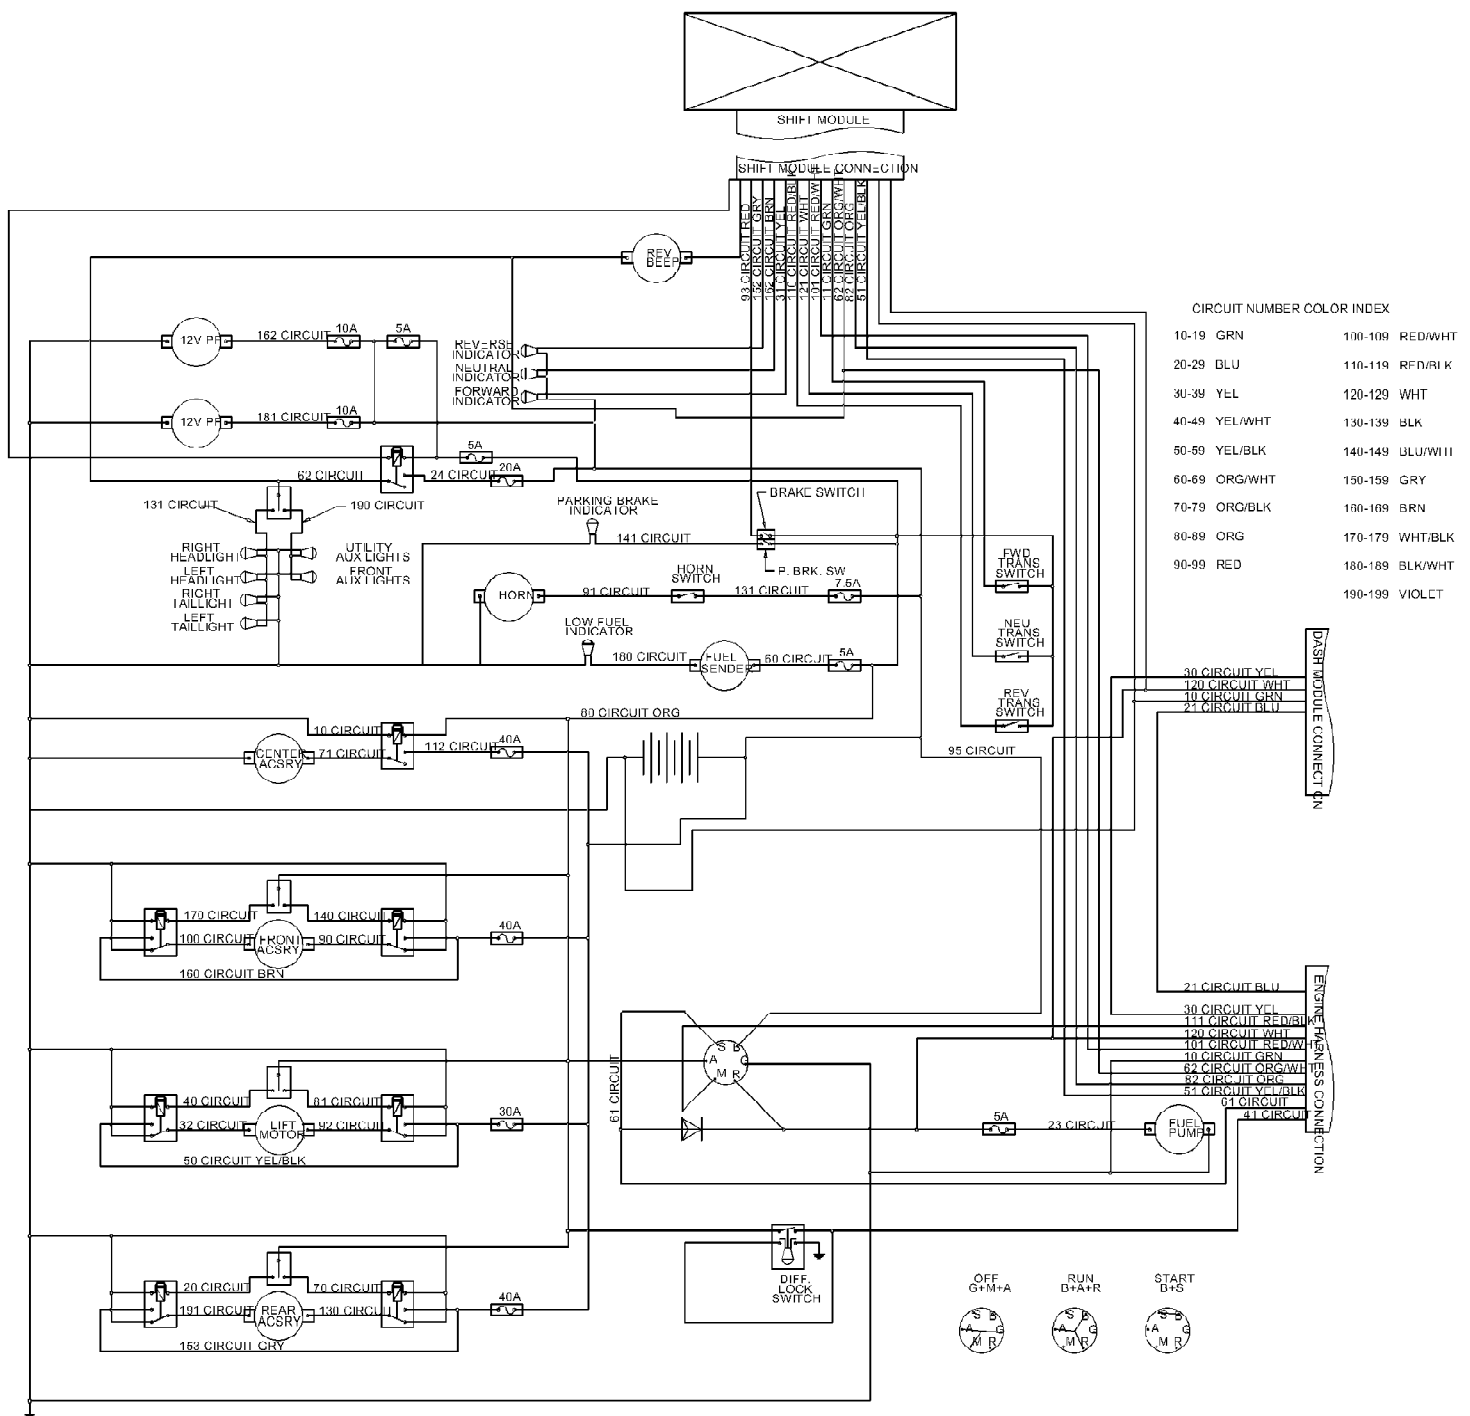

420 4X2 Utility Vehicle
Electrical System (Part 1)

Page 17 of 78

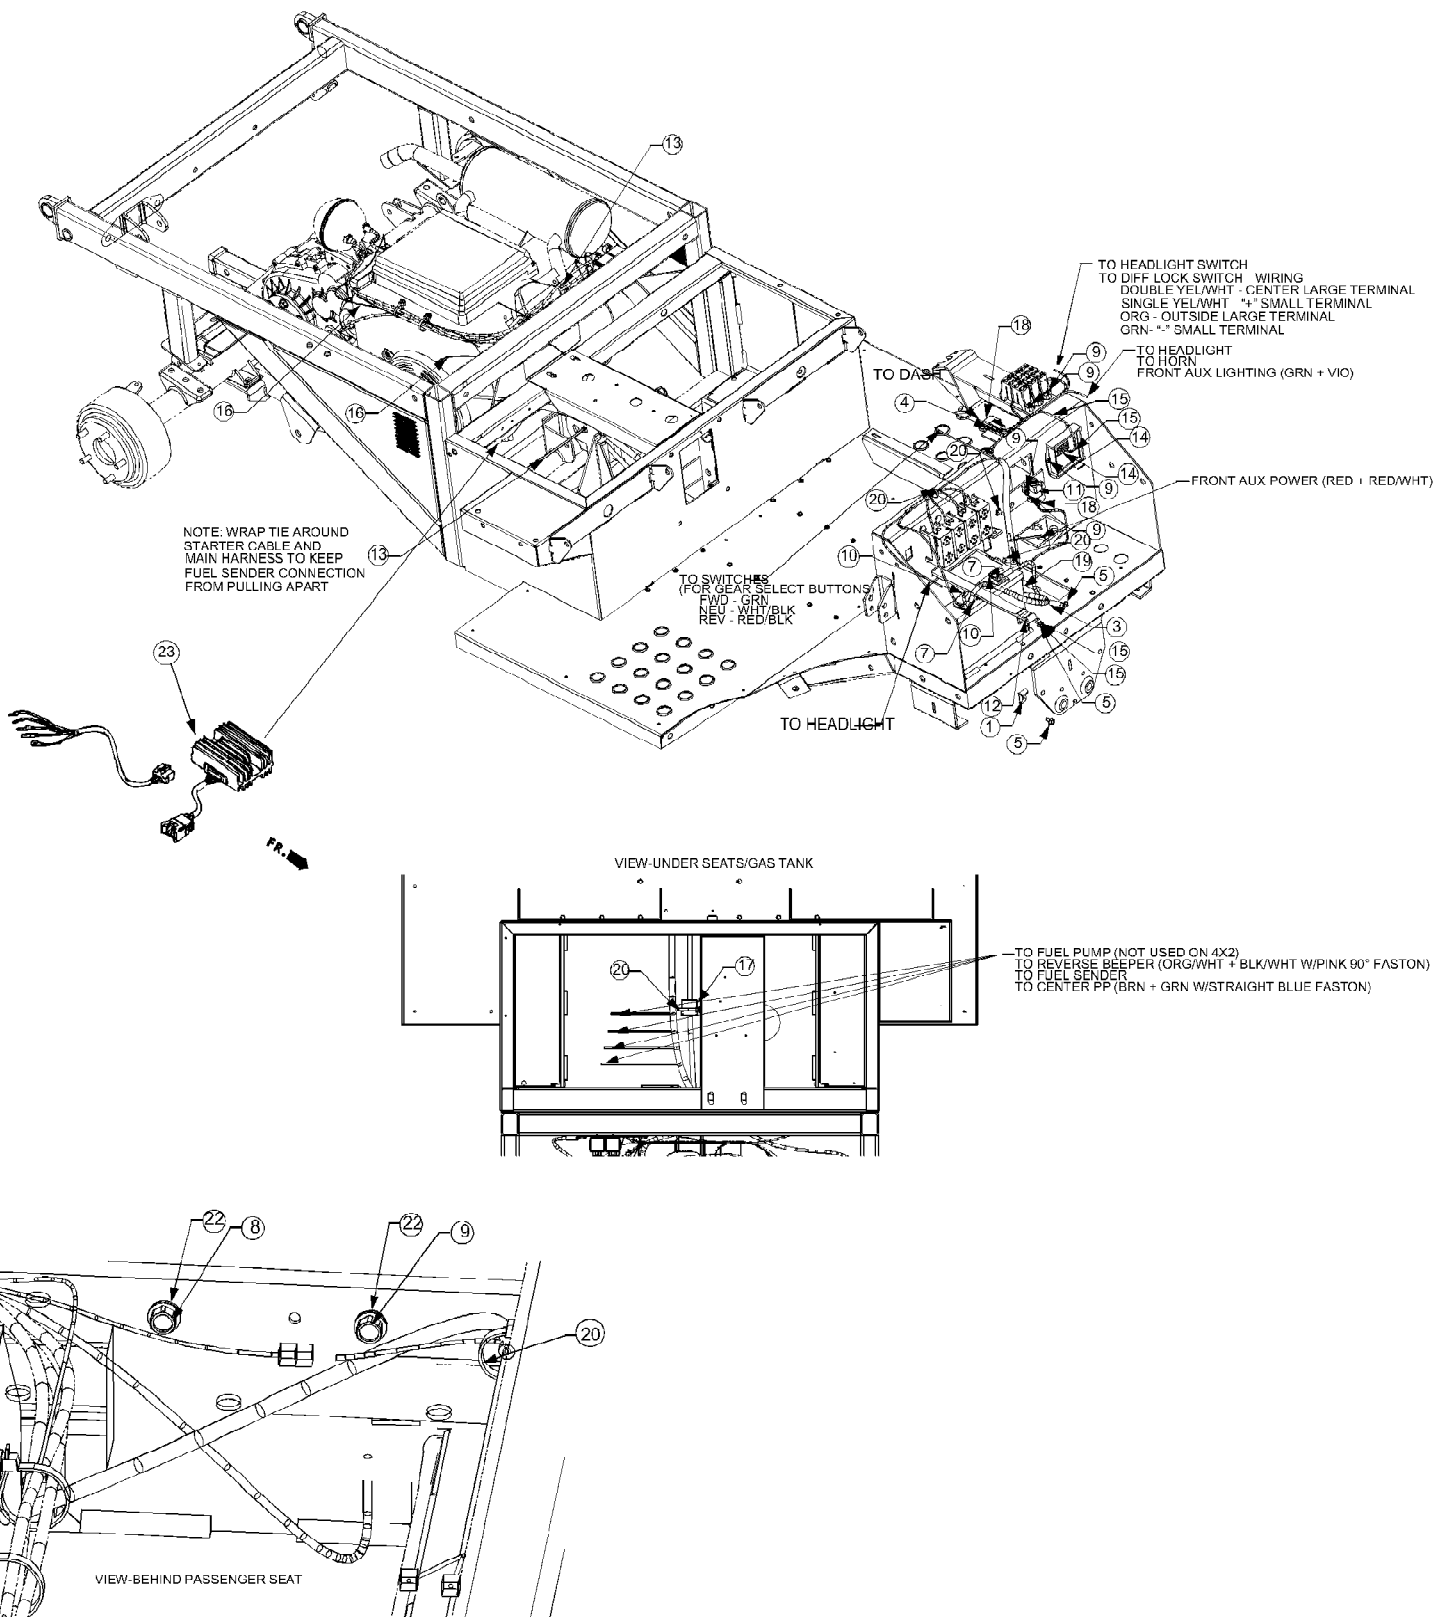


420 4X2 Utility Vehicle
Electrical System (Part 1)

Page 18 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	16606	1	S	Bracket, Retainer Hook
3	629-04060	2		Harness Assembly, Motor Ground
4	710-04030	2		Screw, 1/4-20 x .50
5	710-0599	3	/P	Screw, Self-tapping, 1/4-20 x 0.500
?6	710-0607	1	/P	Screw, Self-tapping, 5/16-18 x .50
7	710-0703	2	/P	Screw, Hex Carriage, 1/4-20 x .75
8	710-0788	2	/P	Screw, Self-tapping, 1/4-20 x 1.000
9	710-3009	8	/P	Screw, #10-24 x 0.75
10	712-0271	2	/P	Nut, Hex Sems, 1/4-20
11	721-3049	1	/P	Cover, Protective
12	723-3064	1		Strap, Battery
13	725-0157	2	/P	Cable Tie, 3/16 x .05 x 7.4
14	725-04059	1	S	Control, Shaft (Electronic Shift Module)
15	725-04065	1	S	Harness, Utility Main
16	725-04066	1	S	Harness, Motor
17	725-04069	1	S	Control, Reverse
18	725-1657A	2	S	Switch
19	725-1738	1	S	Battery
20	726-0470	8		Cable Tie, .19 x 8.39 Tree Mount
?21	726-3046	2	/P	Clip .250 Dia.
22	736-0329	2	S	Lock Washer, 1/4
23	31620-ZG500-3	1		Rectifier Assembly, Regulator (20A)

420 4X2 Utility Vehicle
Electrical System (Part 2)

Page 19 of 78

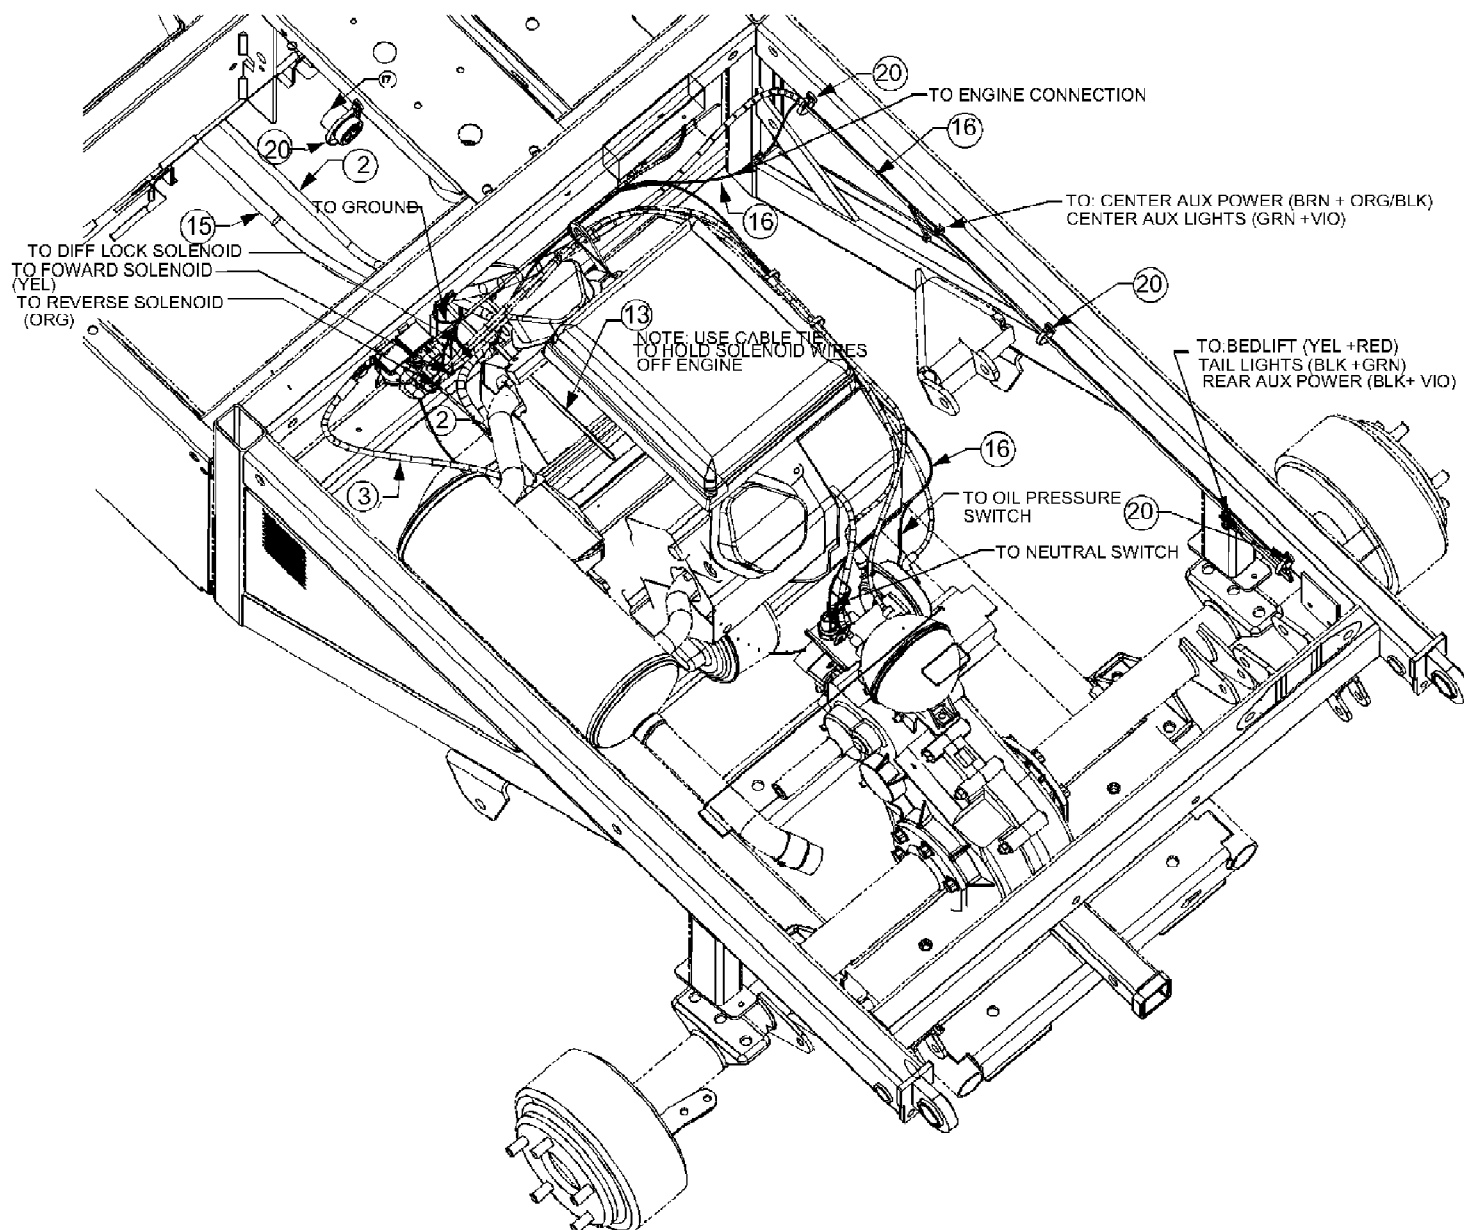


420 4X2 Utility Vehicle
Electrical System (Part 2)

Page 20 of 78

Ref #	Part Number	Qty	S/P/F	Description
2	629-04054	1	S	Harness Assembly, Starter
3	629-04060	2		Harness Assembly, Motor Ground
13	725-0157	2	/P	Cable Tie, 3/16 x .05 x 7.4
15	725-04065	1	S	Harness, Utility Main
16	725-04066	1	S	Harness, Motor
17	725-04069	1	S	Control, Reverse
20	726-0470	8		Cable Tie, .19 x 8.39 Tree Mount

420 4X2 Utility Vehicle
Engine & Transmission Cradle


Page 21 of 78

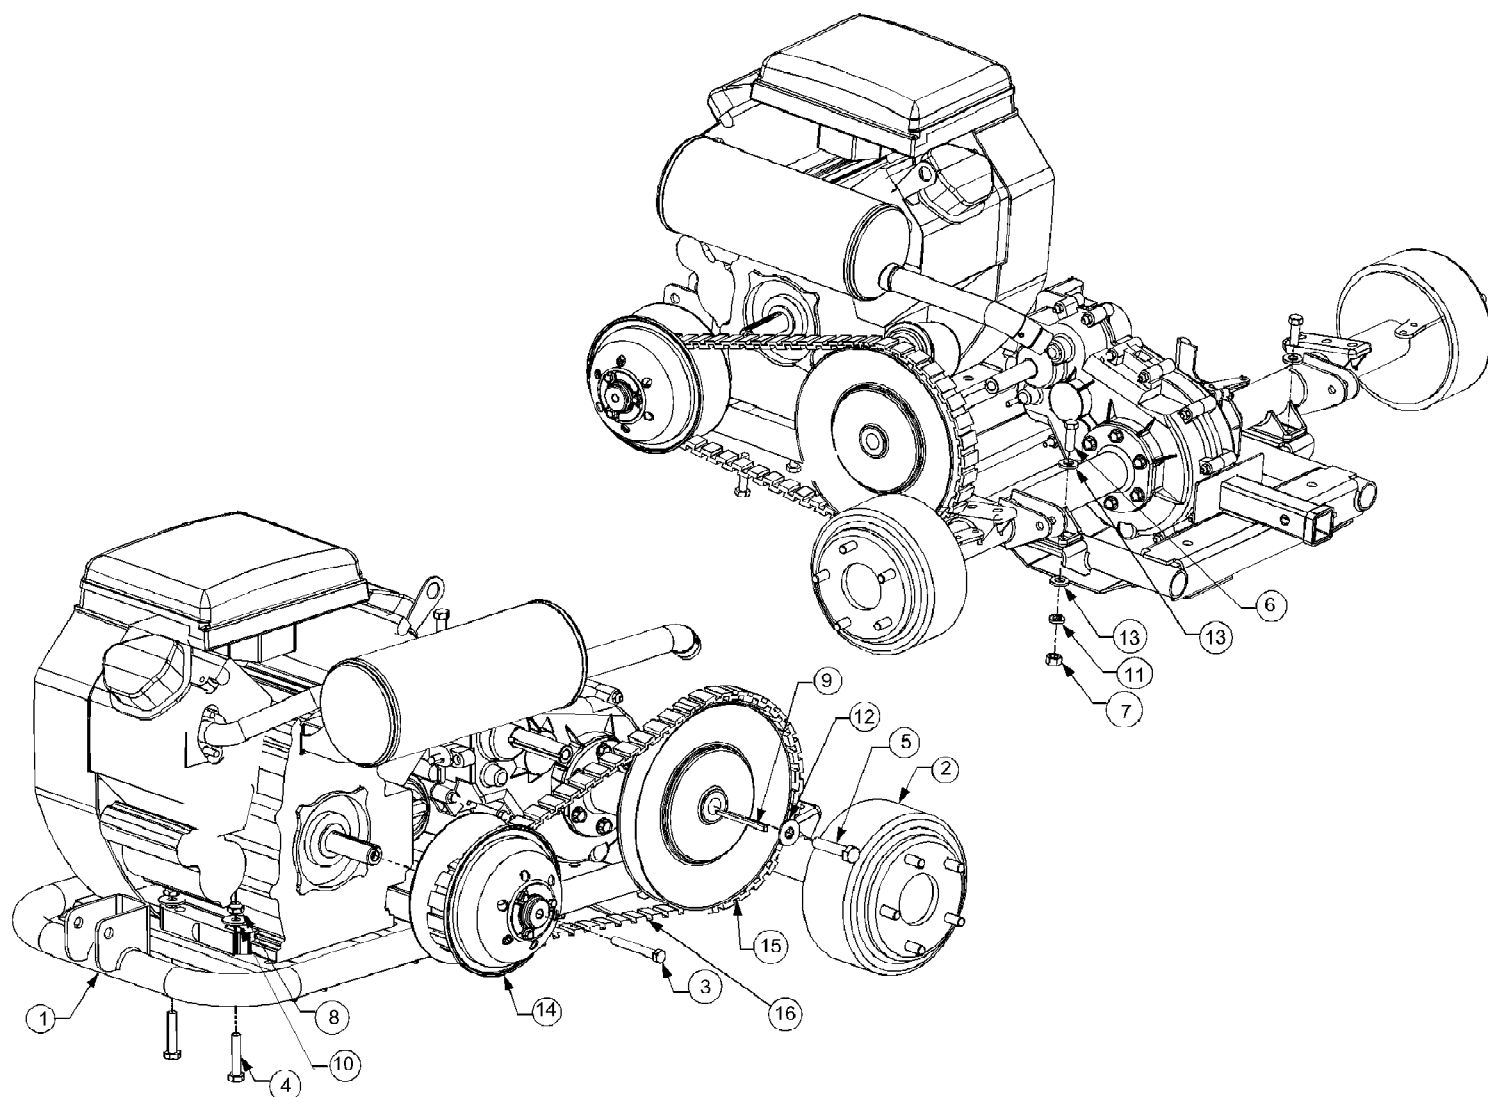

420 4X2 Utility Vehicle
Engine & Transmission Cradle

Page 22 of 78


Ref #	Part Number	Qty	S/P/F	Description
1	607-04022	1		Engine/Trans. Cradle
2	918-04080A	1	/P	Transmission Ass'y, Diff-Lock
2	DC-4170693P	1	/P	Brake Shoes (per axle) Not shown
3	710-04019	1		Hex Screw, 3/8-24 x 3.00
4	710-04024	4		Hex Screw, M10-1.25
5	710-04167	1	/P	Hex Screw, 1/2-20 x 2.25
6	710-3029	4	/P	Hex Screw, 7/16-20 x 1.25
7	712-0378	4	/P	Nut, Hex 7/16-20
8	712-04006	4		Nut, Nylon Lock, M10-1.25
9	714-04030	1	S	Key, Square 1875 x 3.25
10	736-0133	4	S	Washer, Flat, .510 x 1.00 x .125
11	736-0171	4	S	Washer, Lock 7/16
12	736-04019	1		Washer, Flat, .531 ID x 1.25 X 1.
13	736-0326	8	S	Washer, Flat, .510 x 1.00 x .125
14	618-04062	1	S	Clutch Assembly, Engine
15	618-04063	1	S	Clutch Assembly, Transmission
16	754-04018	1	S	V-Belt, Cogged
	737-04040	1	/P	Transmission Oil (Approx. 22 oz.) Not shown, Also use 737-04158 Cub Cadet Gear Oil

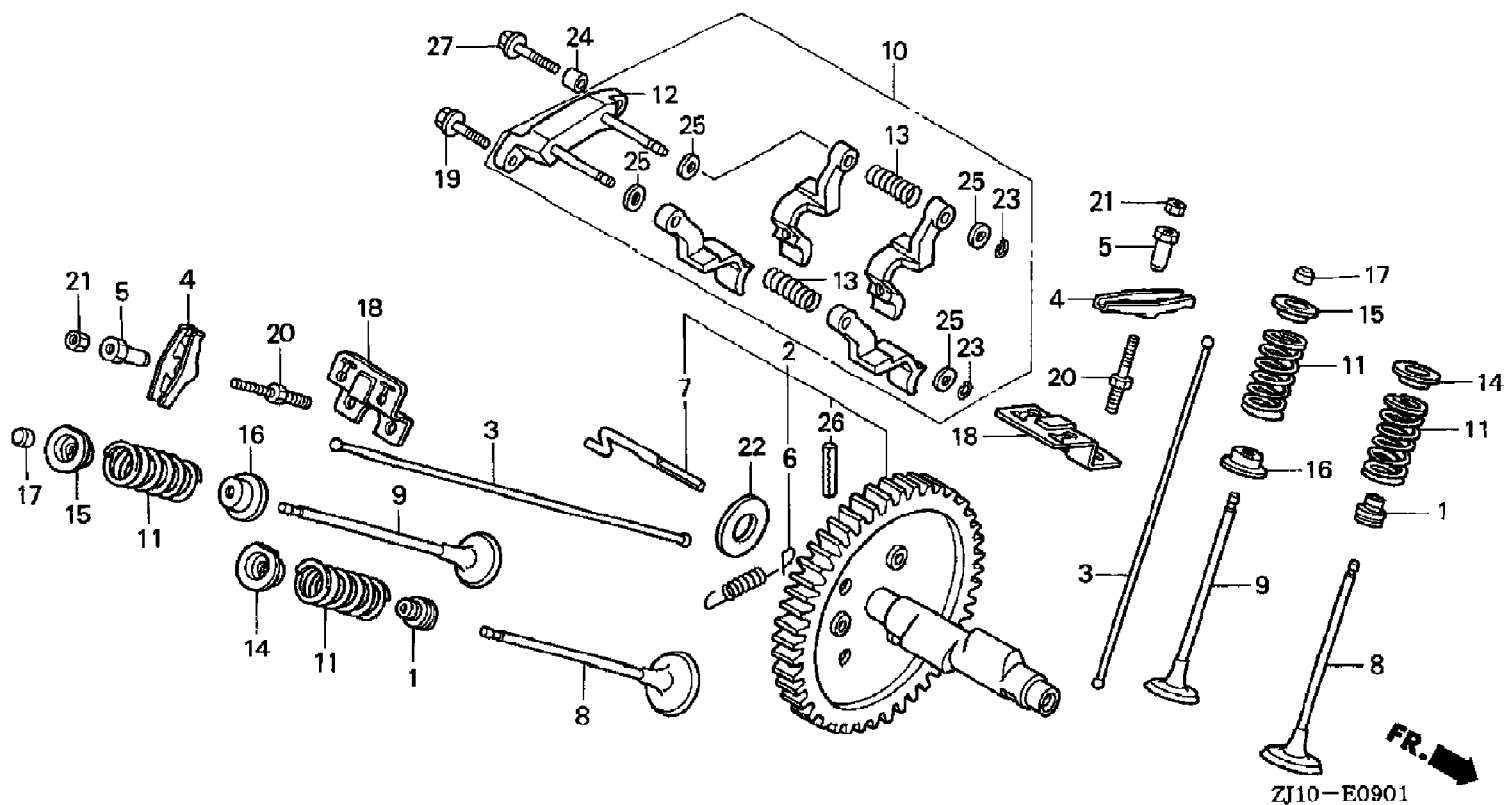

420 4X2 Utility Vehicle
Engine - Camshaft

Page 24 of 78


Ref #	Part Number	Qty	S/P/F	Description
1	12209-ZE8-003	2		Seal, Valve Stem
2	14100-ZJ1-842	1		Camshaft Assembly
3	14410-ZJ1-840	4		Rod, Push
4	14431-ZE2-010	4		Arm, Valve Rocker
5	14451-ZE1-013	4		Pivot, Rocker Arm
6	14568-ZJ1-841	1		Spring, Weight Return
7	14576-ZJ1-840	1		Pin, Decompression
8	14711-ZE3-000	2		Valve, In
9	14721-ZE3-000	2		Valve, Ex
10	14730-ZJ1-840	1		Lifter Ass'y., Valve
11	14751-ZE2-003	4		Spring, Valve
12	14760-ZJ1-840	1		Shaft, Valve Lifter
13	14764-ZJ1-840	2		Spring, Valve Lifter
14	14771-ZE2-000	2		Retainer, In. Valve Spring
15	14773-ZE2-000	2		Retainer, Ex. Valve Spring
16	14775-ZE2-010	2		Seat, Valve Spring
17	14781-ZE2-000	2		Rotator, Valve
18	14791-ZE2-010	2		Plate, Push Rod Guide
19	90005-896-000	1		Bolt, Flange (5x16)
20	90012-ZE0-010	4		Bolt, Pivot (8mm)
21	90206-ZE1-000	4		Nut, Pivot Adj
22	90446-357-000	1		Washer, Thrust (17.2mm)
23	90602-ZE1-000	2		Clip, Governor Holder
24	94301-08120	1		Pin A, Dowel (8x12)
25	94101-06800	4		Washer, Plain (6mm)
26	94305-60282	1		Pin, Spring (6x28)
27	95701-06025-00	1		Bolt, Flange (6x25)

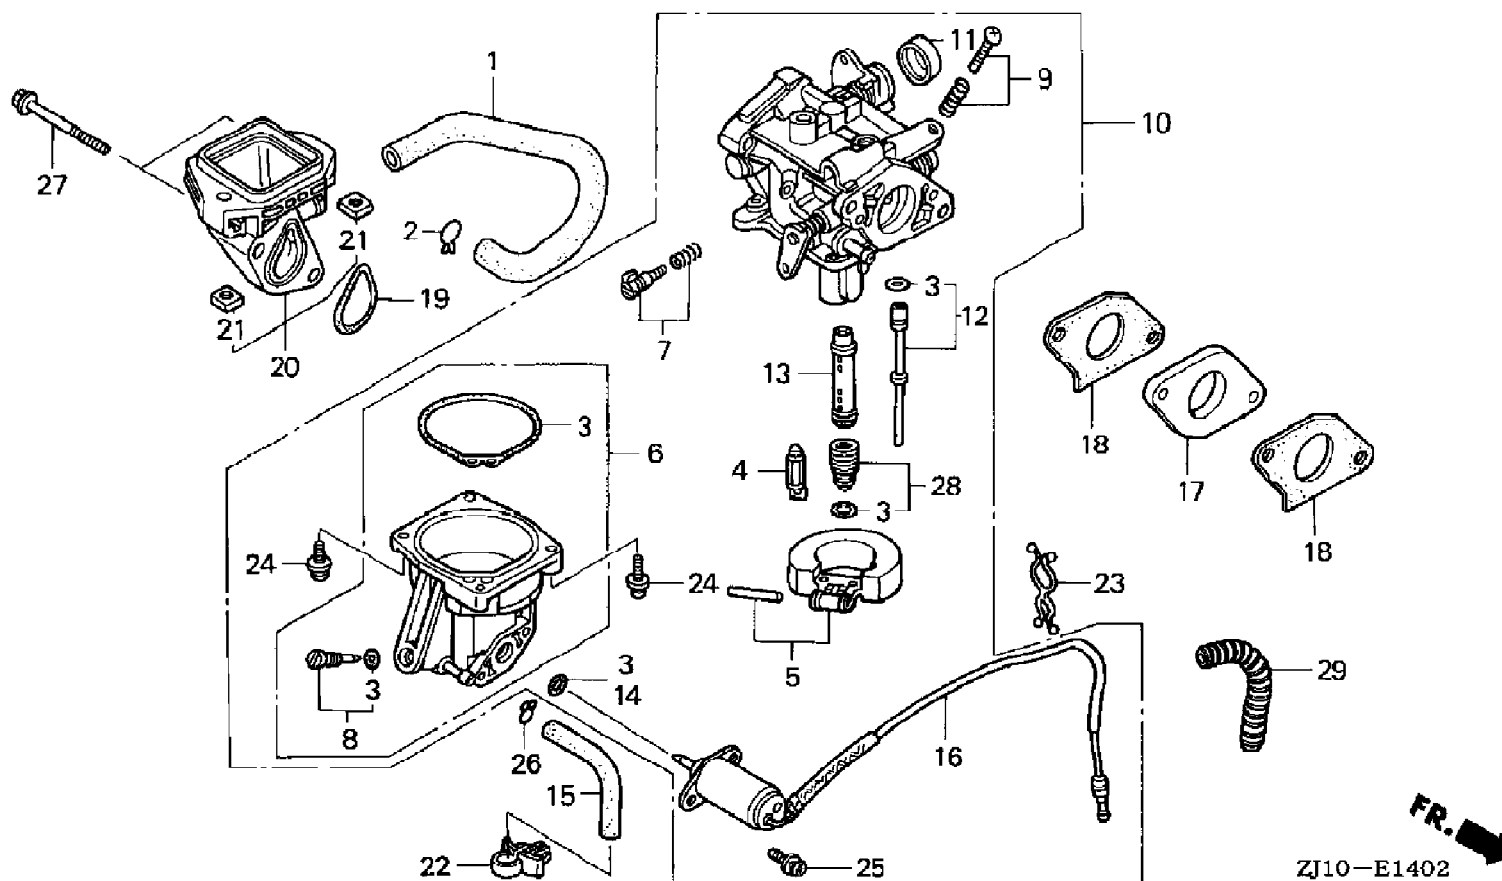

420 4X2 Utility Vehicle
Engine - Carburetor

Page 26 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	12357-ZJ1-840	1		Tube, Breather
2	15772-551-000	1		Clip, Breather Tube
3	16010-ZG8-000	1		Gasket Set
4	16011-KCK-910	1		Valve Set, Float
5	16013-ZV4-005	1		Float Set
6	16015-ZJ1-841	1		Chamber Set, Float
7	16016-ZJ1-010	1		Screw Set
8	16024-124-760	1		Screw Set, Drain
9	16028-ZG8-000	1		Screw Set
10	16100-ZJ1-841	1	S	Carburetor Assembly. (Bg22g A)
11	16148-141-881	1		Cap, Choke Lever Dust
12	16150-ZJ1-841	1		Jet Set (#52)
13	16166-ZJ0-000	1		Nozzle, Main
14	16178-548-004	1		O-ring (5.8x1.9)
15	16198-ZJ1-840	1		Tube, Drain
16	16200-ZJ1-841	1	S	Valve Assembly., Solenoid
17	16211-ZJ0-830	1		Insulator, Carburetor
18	16221-ZJ1-840	2		Gasket, Carburetor
19	17228-ZG8-003	1		Gasket, Air Cleaner
20	17410-ZJ1-840	1		Elbow, Air Cleaner
21	90314-ZJ1-840	2		Nut, Insert (6mm)
22	90682-959-661	1		Clip B, Cable
23	91402-ZJ1-841	1		Clip, Purse Lock
24	93892-04014-08	4		Screw-washer (4x14)
	93892-04014-18	4		Screw-washer (4x14)
25	93892-05012-08	2		Screw-washer (5x12)
26	95002-02080	1		Clip, Tube (B8)
27	95801-06120-00	2		Bolt, Flange (6x120)
28	99201-ZG8-	1		Jet Set, Main (#110)
29		1		UNKNOWN

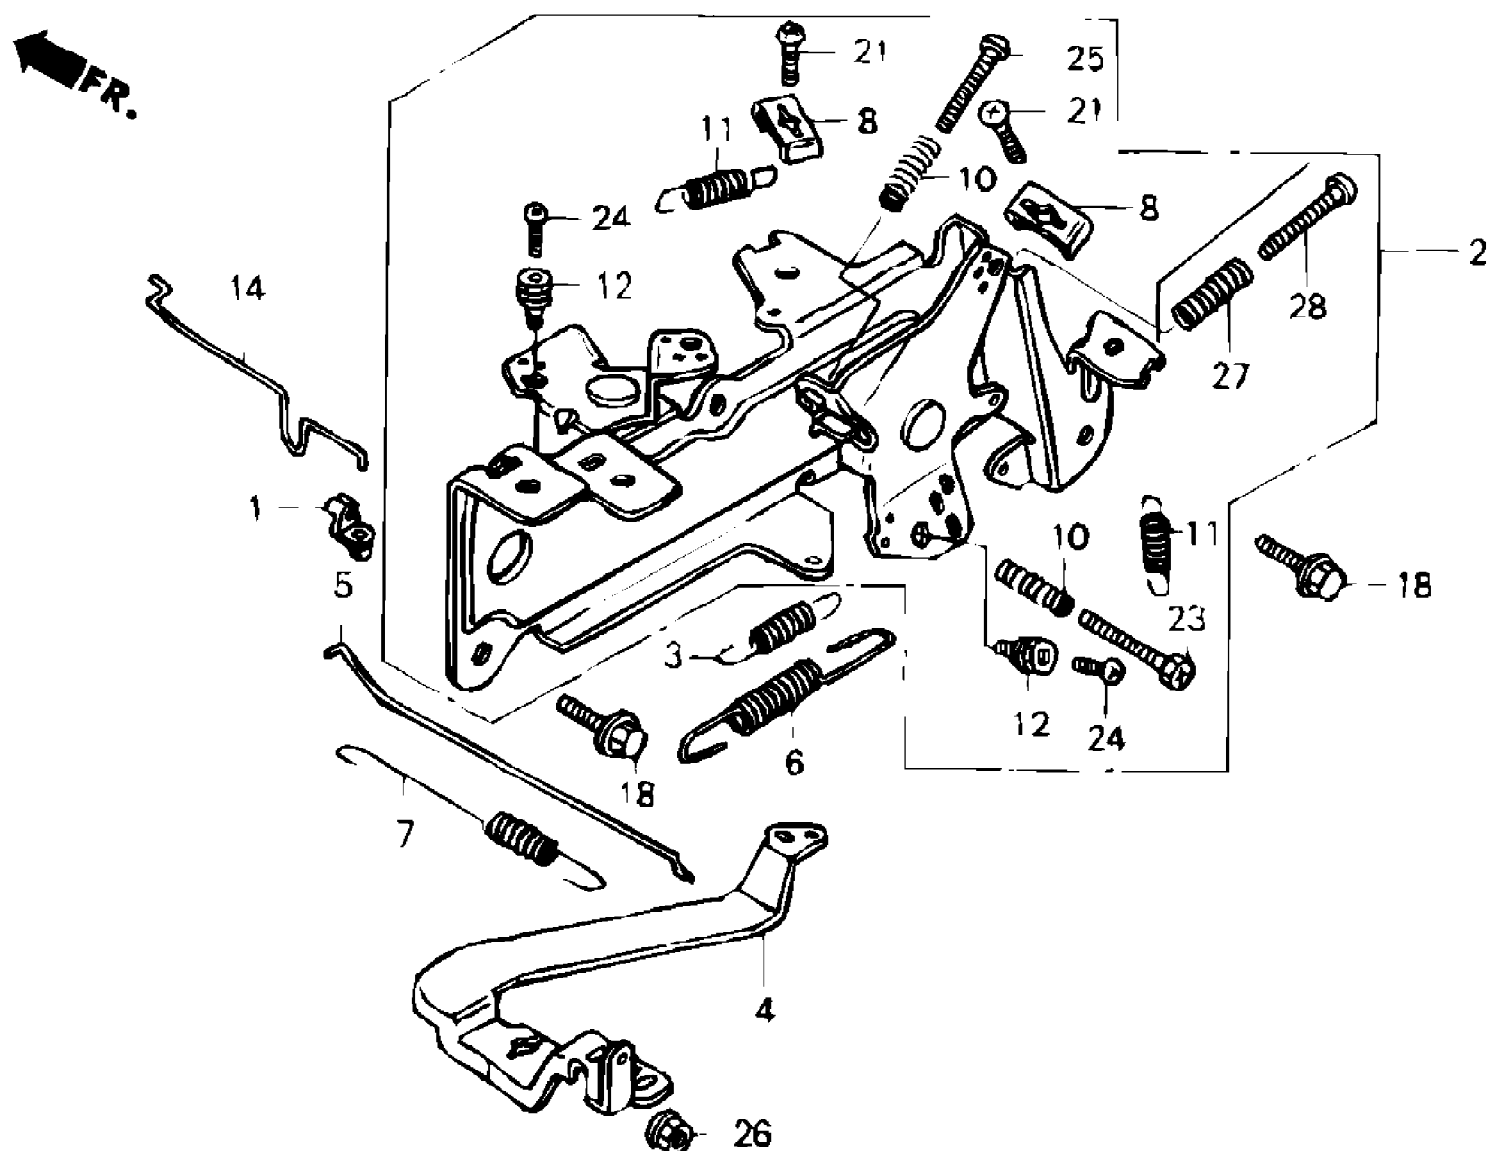


420 4X2 Utility Vehicle
Engine - Control

Page 28 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	16263-883-W10	1		Joint, Rod
2	16500-ZJ1-861	1		Control Assembly
3	16534-ZJ1-840	1		Spring, Starter
4	16551-ZJ1-840	1		Arm, Governor
5	16555-ZJ1-840	1		Rod, Governor
6	16561-ZJ4-830	1		Spring, Governor
7	16562-ZJ1-840	1		Spring, Throttle Return
8	16576-891-000	2		Holder, Cable
10	16584-883-300	2		Spring, Control Adjusting
11	16592-ZJ1-000	2		Spring, Cable Return
12	16617-ZJ1-840	2		Holder, Cable
14	16611-ZJ1-840	1		Rod, Choke Control
18	90014-952-000	2		Bolt, Flange (6x14)
21	92301-05016-0A	2		Bolt, Slot (5x16)
23	92301-05025-0A	1		Bolt, Slot (5x25)
24	92301-04006-0H	2		Bolt, Recessed (4x6)
25	93500-05025-0A	1		Screw, Pan (5x25)
26	94050-06000	1		Nut, Flange (6mm)
27		1		UNKNOWN
28		1		UNKNOWN

420 4X2 Utility Vehicle
Engine - Crankcase Cover

Page 29 of 78

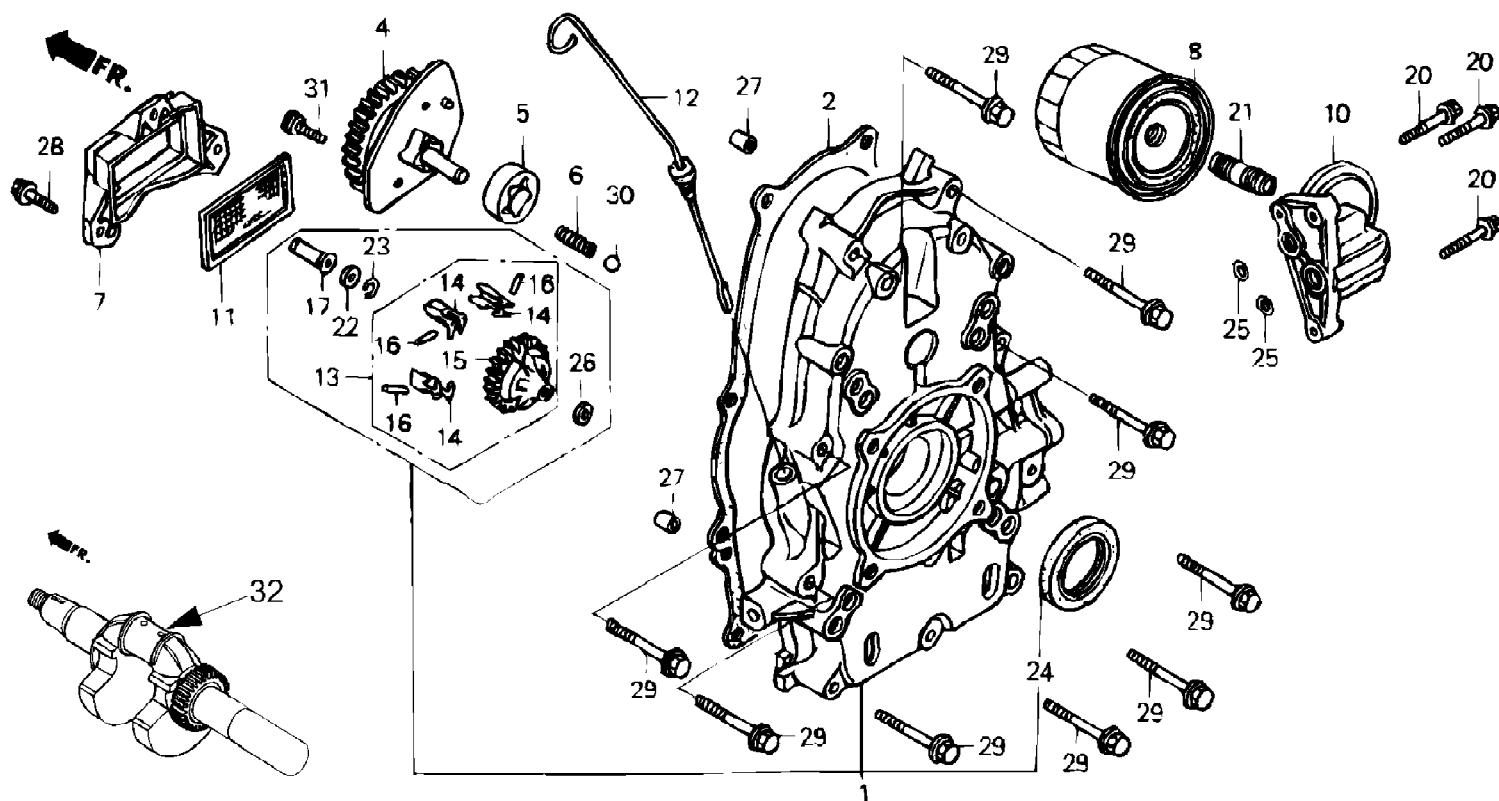


420 4X2 Utility Vehicle
Engine - Crankcase Cover

Page 30 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	11300-ZJ1-840	1		Cover Assembly, Crankcase (Q-type)
2	11381-ZJ1-840	1		Gasket, Case Cover
4	15120-ZJ1-000	1		Cover Assembly, Oil Pump
5	15124-ZJ1-003	1		Rotor, Oil Pump (Outer)
6	15232-ZJ1-000	1		Spring, Relief Valve
7	15348-ZJ1-840	1		Cover, Oil Filter
8	15400-P0H-305PE	1	S	Filter, Oil
10	15411-ZJ1-840	1		Base, Oil Filter
11	15427-ZJ1-000	1		Screen, Oil Filter
12	15655-ZJ1-840	1		Dipstick, Oil
13	16510-ZJ1-840	1		Governor Assembly
14	16511-ZJ1-840	3		Weight, Governor
15	16512-ZJ1-840	1		Holder, Governor Weight
16	16513-ZE2-000	3		Pin, Governor Weight
17	16531-ZE2-000	1	S	Slider, Governor
20	90015-883-000	3		Bolt, Flange (6x28)
21	90018-PN3-000	1		Holder, Oil Filter
22	90473-147-000	1		Washer (6x16)
23	90602-ZE1-000	1		Clip, Governor Holder
24	91202-ZJ1-841	1		Oil Seal (38x58x9)
25	91320-MJ6-003	2		O-ring (11.8x2.4)
26	94101-06800	1		Washer, Plain (6mm)
27	94301-08140	2		Pin A, Dowel (8x14)
28	95701-06020-00	3		Bolt, Flange (6x20)
29	95701-08050-00	9		Bolt, Flange (8x50)
30	96211-12000	1		Ball, Steel (#12) (3/8)
31	96600-06016-00	2		Bolt, Socket (6x16)
32	13310-ZJ1-840	1		Crankshaft

420 4X2 Utility Vehicle
Engine - Cylinder Barrel

Page 31 of 78

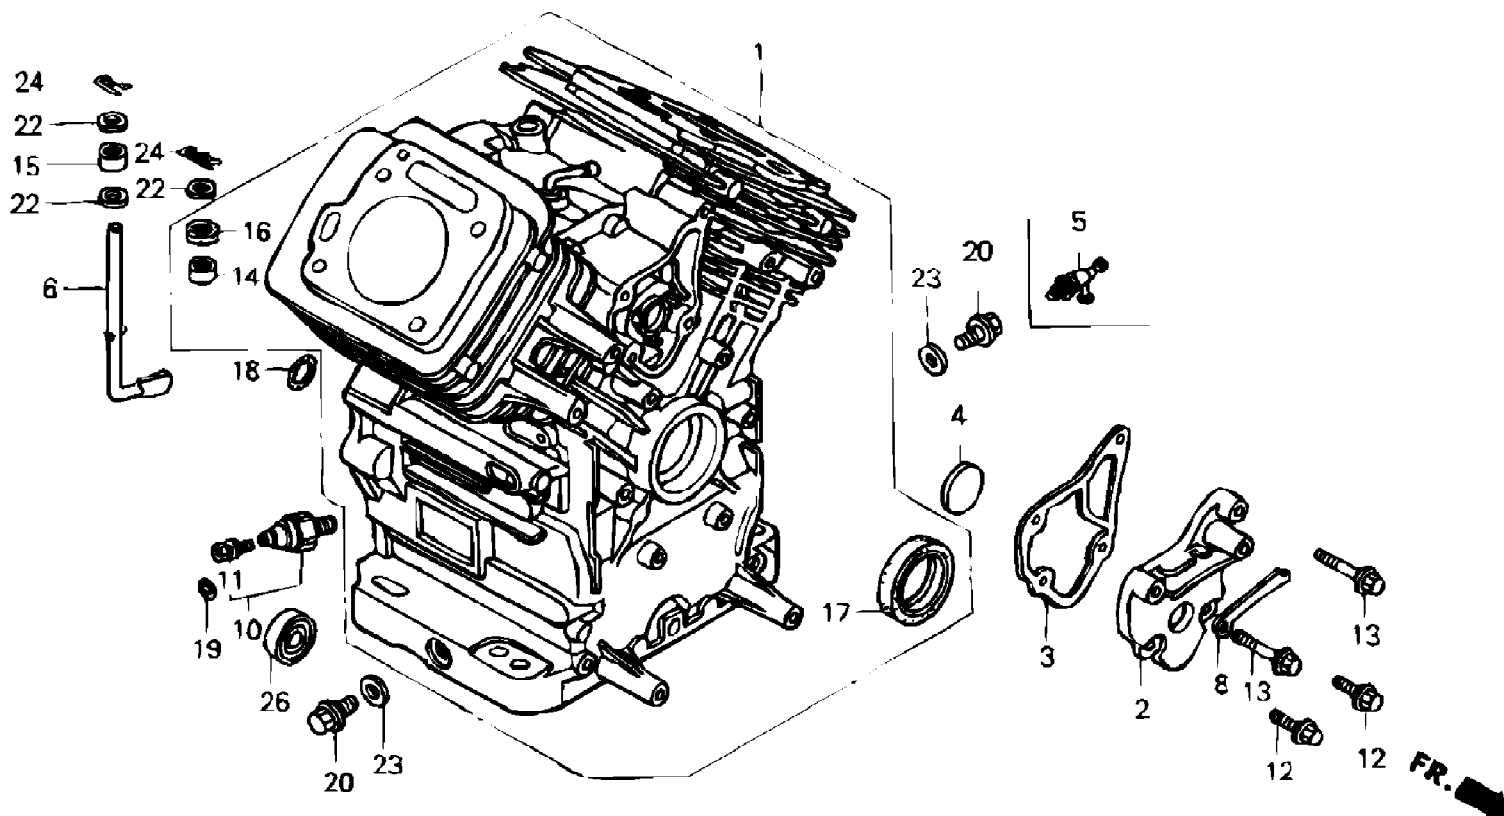


420 4X2 Utility Vehicle
Engine - Cylinder Barrel

Page 32 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	12000-ZJ1-841	1	/P	Cylinder Assembly
2	12356-ZJ1-000	1		Cover, Breather
3	12358-ZJ1-000	1		Gasket, Breather Cover
4	12372-ZE2-300	1		Valve, Breather
5	15558-ZJ1-	1		Valve, Drain (14x1.5)
6	16541-ZJ1-840	1		Shaft, Governor Arm
8	31511-ZJ1-000	1		Clamp, Wire
10	37240-ZG3-E01	1		Switch, Oil Pressure
11	90002-ZG5-004	1		Screw-washer (4x8)
12	90029-888-000	2		Bolt, Flange (6x16)
13	90031-ZE1-000	2		Bolt, Flange (6x32)
14	91001-ZJ1-841	1		Bearing, Needle (8x12.7x11.1)
15	91002-ZJ1-841	1		Bearing, Needle (8x12x10)
16	91201-ZE9-003	1		Oil Seal (8x14x5)
17	91201-ZJ1-841	1		Oil Seal (38x58x9)
18	91302-MB6-830	1		O-ring (13x3.0)
19		1		UNKNOWN
20	92800-14000	2		Bolt, Drain Plug (14mm)
22	94102-08800	3		Washer, Plain (8mm)
23	94109-14000	2		Washer, Drain Plug (14mm)
24	94251-08000	2		Pin, Lock (8mm)
26	96140-60030-10	1		Bearing, Radial Ball (6003)

420 4X2 Utility Vehicle
Engine - Cylinder Head

Page 33 of 78

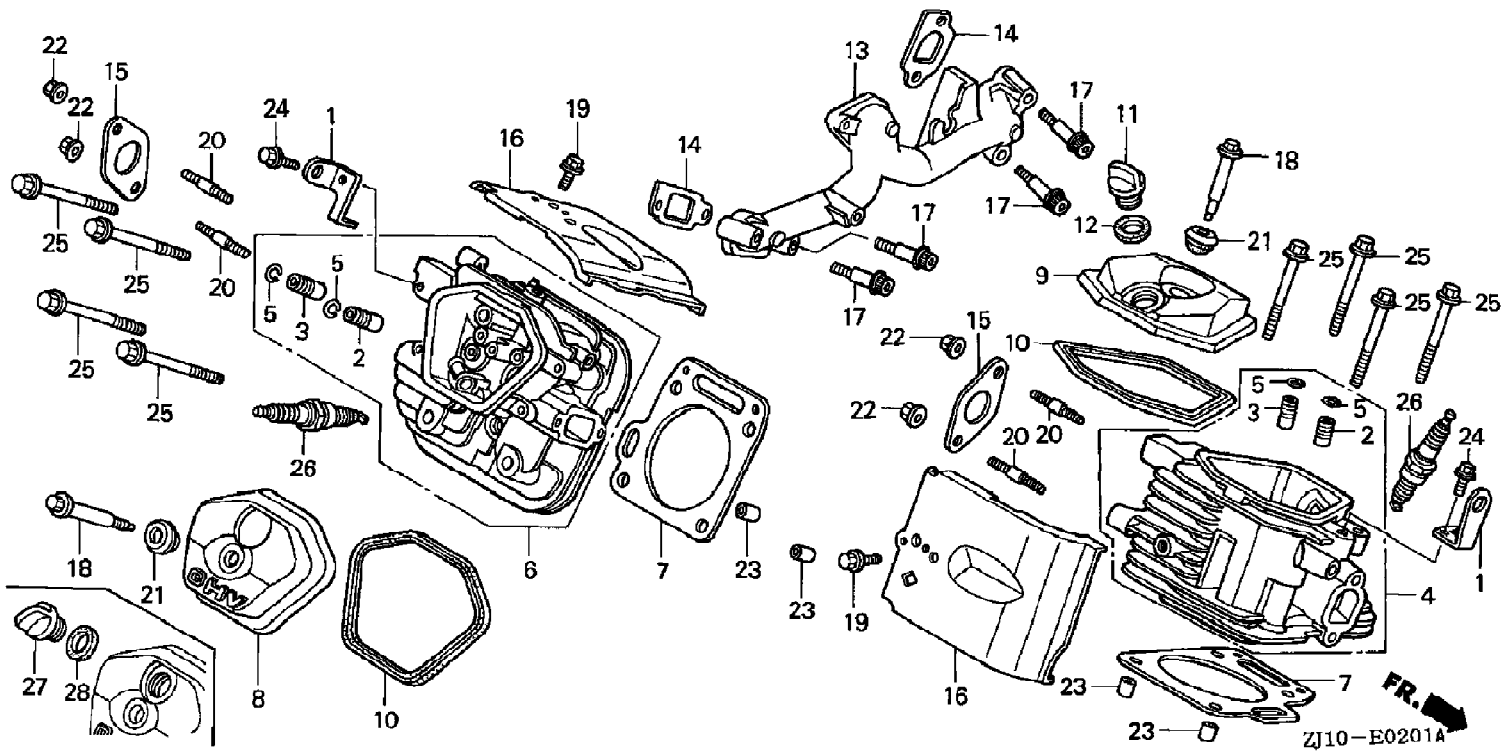


420 4X2 Utility Vehicle
Engine - Cylinder Head

Page 34 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	11911-ZJ1-840	2		Hanger, Engine
2	12204-ZE2-306	2		Guide, Valve (OS)
3	12205-ZJ1-405	2		Guide, Ex. Valve (OS)
4	12210-ZJ1-840	1	S	Cylinder Head (#1)
5	12216-ZE2-300	4		Clip, Valve Guide
6	12220-ZJ1-840	1		Cylinder Head (#2)
7	12251-ZJ1-841	2		Gasket, Cylinder Head
8	12311-ZJ1-840	1		Cover, Head
9	12314-ZJ1-840	1		Cover, Head Filler
10	12391-ZE2-020	2		Gasket, Cylinder Head Cover
11	15611-MB0-000	1		Cap, Oil Filler
12	15625-ZJ1-840	1		Gasket, Oil Filler Cap
13	17101-ZJ1-840	1		Manifold, In
14	17151-ZJ1-841	2		Gasket, In. Manifold
15	18333-ZE3-800	2		Gasket, Ex. Pipe
16	19682-ZJ1-840	2		Shroud, Head
17	90011-ZJ1-841	4		Bolt, Socket (8x45)
18	90014-ZE2-000	2		Bolt, Head Cover
19	90014-952-000	2		Bolt, Flange (6x14)
20	90018-ZJ1-840	4		Bolt, Stud (8x22)
21	90441-ZE2-010	2		Washer, Head Cover
22	94050-08000	4		Nut, Flange (8mm)
23	94301-12200	4		Pin A, Dowel (12x20)
24	95701-08020-00	2		Bolt, Flange (8x20)
25	95701-10080-00	8		Bolt, Flange (10x80)
26	98079-52876	2		Spark Plug (BPR2ES) (NGK)
27		1		UNKNOWN
28		1		UNKNOWN

420 4X2 Utility Vehicle
Engine - Fan Cover

Page 35 of 78

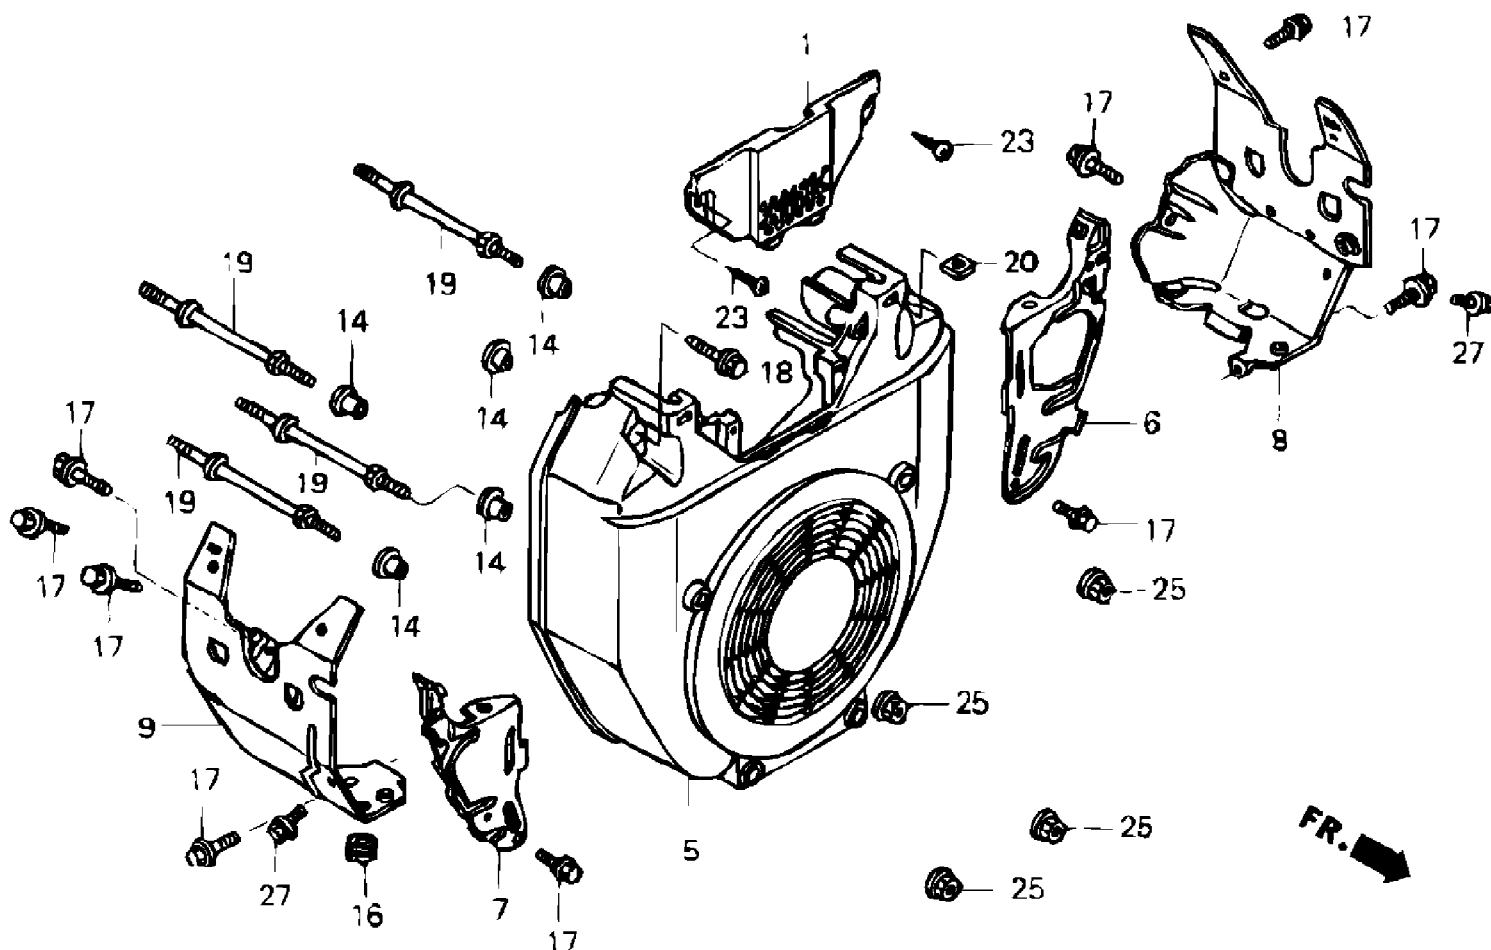


420 4X2 Utility Vehicle
Engine - Fan Cover

Page 36 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	16715-ZJ1-840	1		Cover, Fuel Pump
5	19611-ZJ1-	1		Cover, Fan (Bright Red)
6	19612-ZJ1-840	1		Plate, R. Side
7	19614-ZJ1-840	1		Plate, L. Side
8	19631-ZJ1-840	1		Shroud, R
9	19632-ZJ1-840	1		Shroud, L
14	33713-GC2-000	6		Collar B, Taillight
16	80101-310-000	1		Rubber, Rr. Fender Cushion
17	90013-883-000	10		Bolt, Flange (6x12) (Ct200)
18	90018-ZE1-000	2		Bolt, Flange (6x23)
19	90042-ZJ1-840	4		Bolt, Stud (6x71)
20	90313-ZJ1-840	2		Nut, Square (5mm)
23	93913-25580	2		Screw, Tapping (5x20)
25	94050-06000	4		Nut, Flange (6mm)
27	95701-06008-00	2		Bolt, Flange (6x8)

420 4X2 Utility Vehicle
Engine - Flywheel

Page 37 of 78

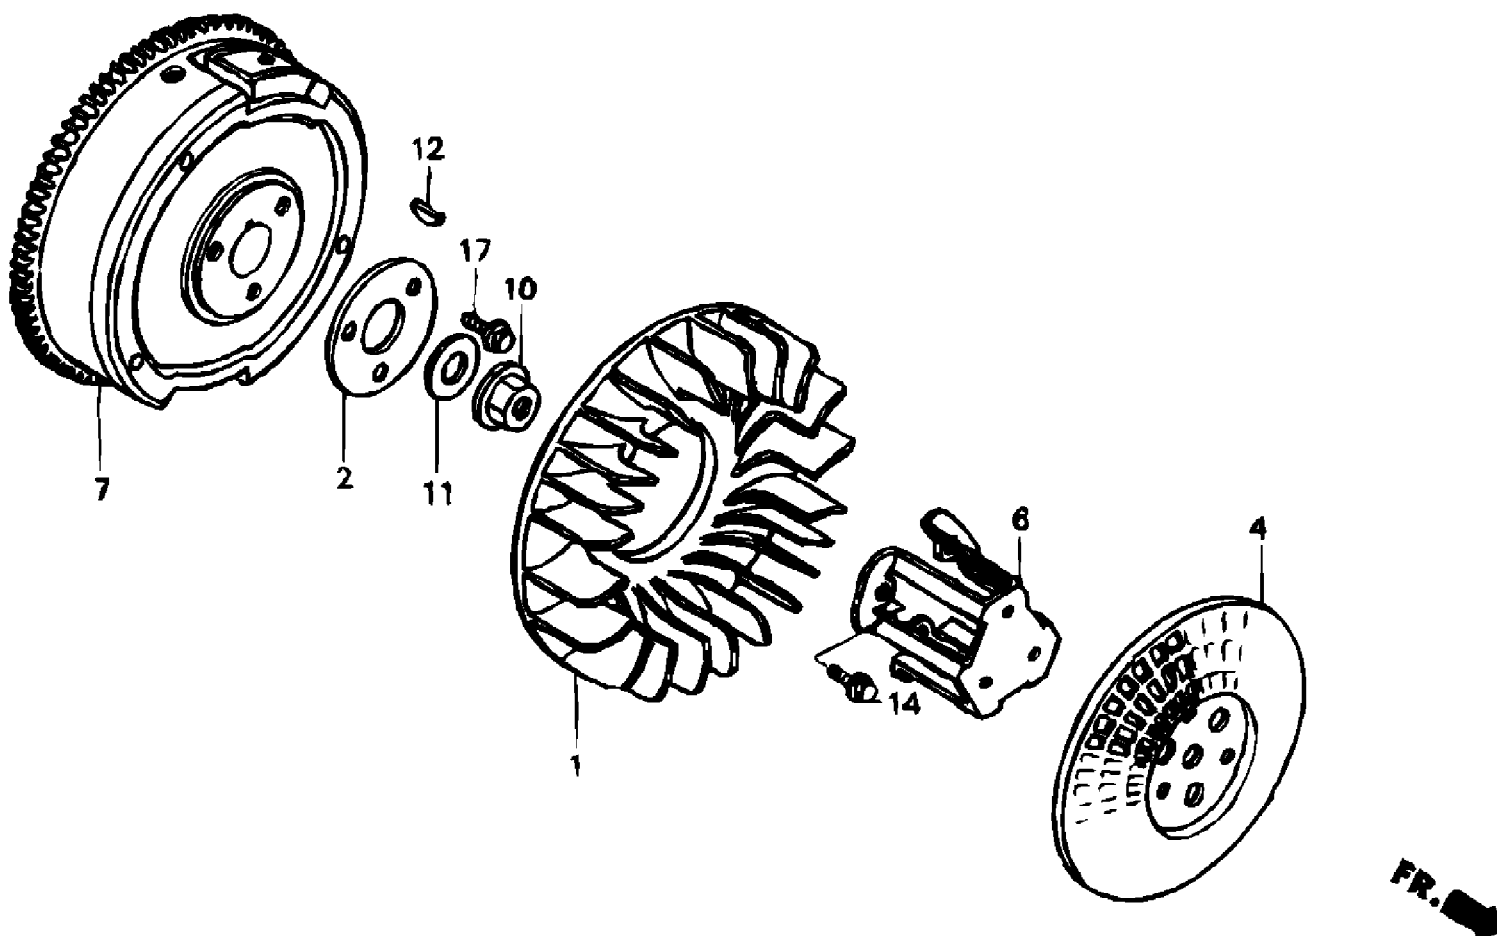


420 4X2 Utility Vehicle
Engine - Flywheel

Page 38 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	19511-ZJ1-000	1		Fan, Cooling
2	19513-ZJ1-000	1		Plate, Cooling Fan Setting
4	28452-ZJ1-811	1		Grid, Screen
6	28454-ZJ1-801	1		Holder, Screen Grid
7	31110-ZJ1-840	1		Flywheel
10	90201-ZG3-000	1		Nut, Flange (20mm)
11	90401-ZG3-000	1		Washer (20mm)
12	90741-ZE2-000	1		Key, Special Woodruff (25x18)
14	95701-08016-00	1		Bolt, Flange (8x16)
17	95701-08016-00	1		Bolt, Flange (8x16)

420 4X2 Utility Vehicle
Engine - Ignition Coil

Page 39 of 78

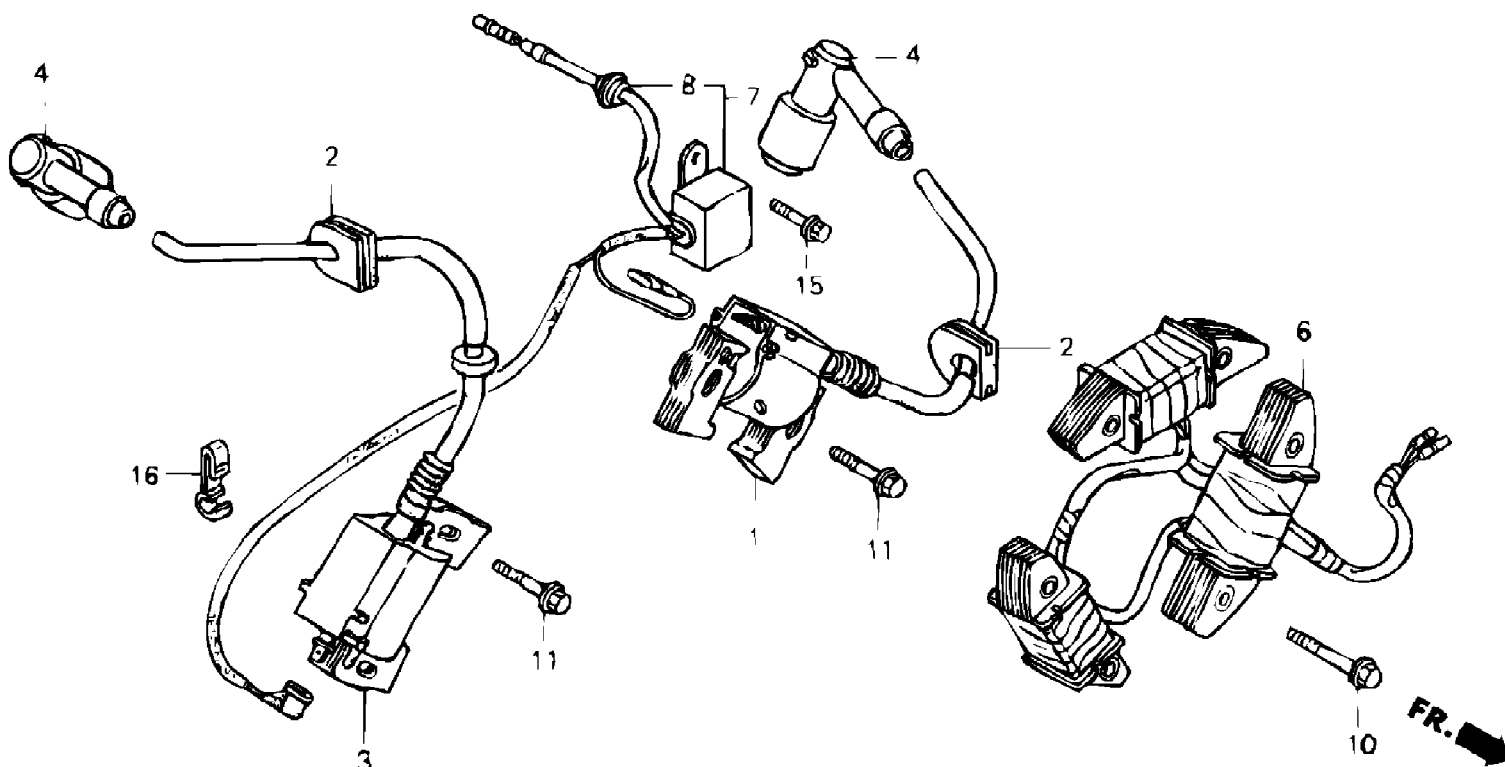



420 4X2 Utility Vehicle
Engine - Ignition Coil

Page 40 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	30500-ZJ1-841	1	S	Coil Assembly., R. Ignition
2	30518-ZJ1-000	2		Grommet, Ignition Wire
3	30550-ZJ1-841	1	S	Coil Assembly., L. Ignition
4	30700-ZJ1-841	2		Cap Assembly., Noise Suppressor
6	31630-ZJ1-801	1	S	Coil Assembly., Charge (12V/20A)
7	31740-ZJ1-841	1		Diode Assembly., Engine Stop
8	63312-ZA7-000	1		Grommet, Tool
10	90031-ZE1-000	6		Bolt, Flange (6x32)
11	90031-ZE1-000	2		Bolt, Flange (6x32)
15	95701-06008-00	1		Bolt, Flange (6x8)
16	32763-PA0-000	1		Clamp, Wire

420 4X2 Utility Vehicle
Engine - Piston

Page 41 of 78

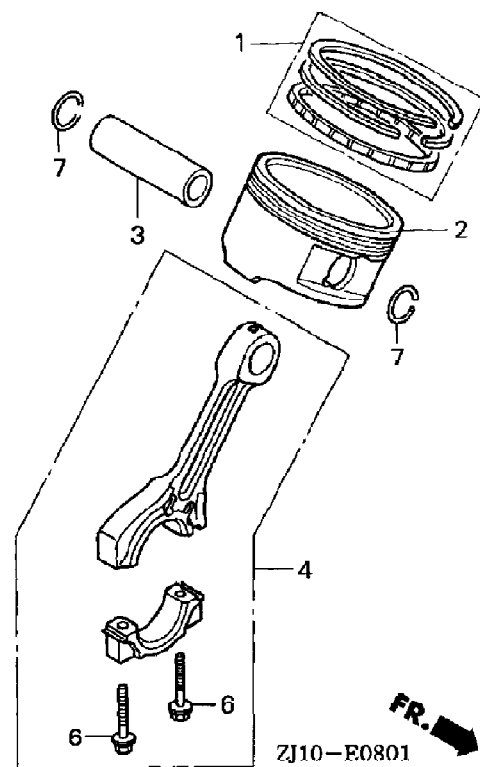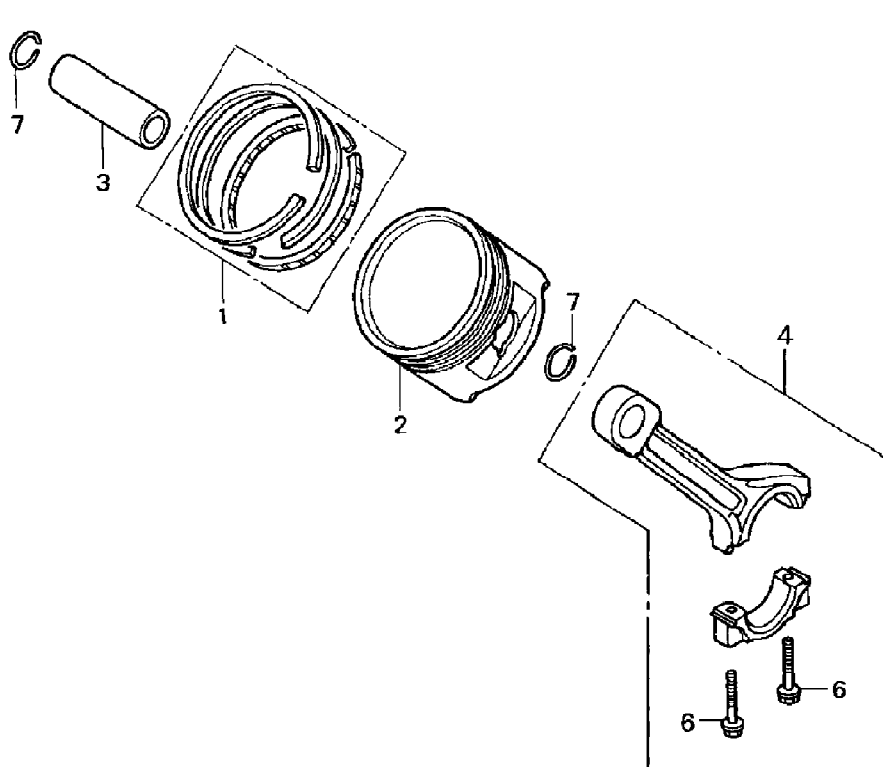


420 4X2 Utility Vehicle
Engine - Piston

Page 42 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	13010-ZJ1-841	2		Ring Set, Piston (Std)
	13011-ZJ1-841	2		Ring Set, Piston (OS 0.25)
	13012-ZJ1-841	2		Ring Set, Piston (OS 0.50)
	13013-ZJ1-841	2		Ring Set, Piston (0.75)
2	13101-ZJ1-840	2		Piston (Std)
	13102-ZJ1-840	2		Piston (OS 0.25)
	13103-ZJ1-840	2		Piston (OS 0.50)
	13104-ZJ1-840	2		Piston (0.75)
3	13111-ZJ1-840	2		Pin, Piston
4	13200-ZJ1-841	2		Rod Assembly, Connecting
6	90001-ZN1-000	4		Bolt, Connecting Rod (6x37)
7	94601-18000	4		Clip, Piston Pin (18mm)

420 4X2 Utility Vehicle
Engine - Starter Motor


Page 43 of 78

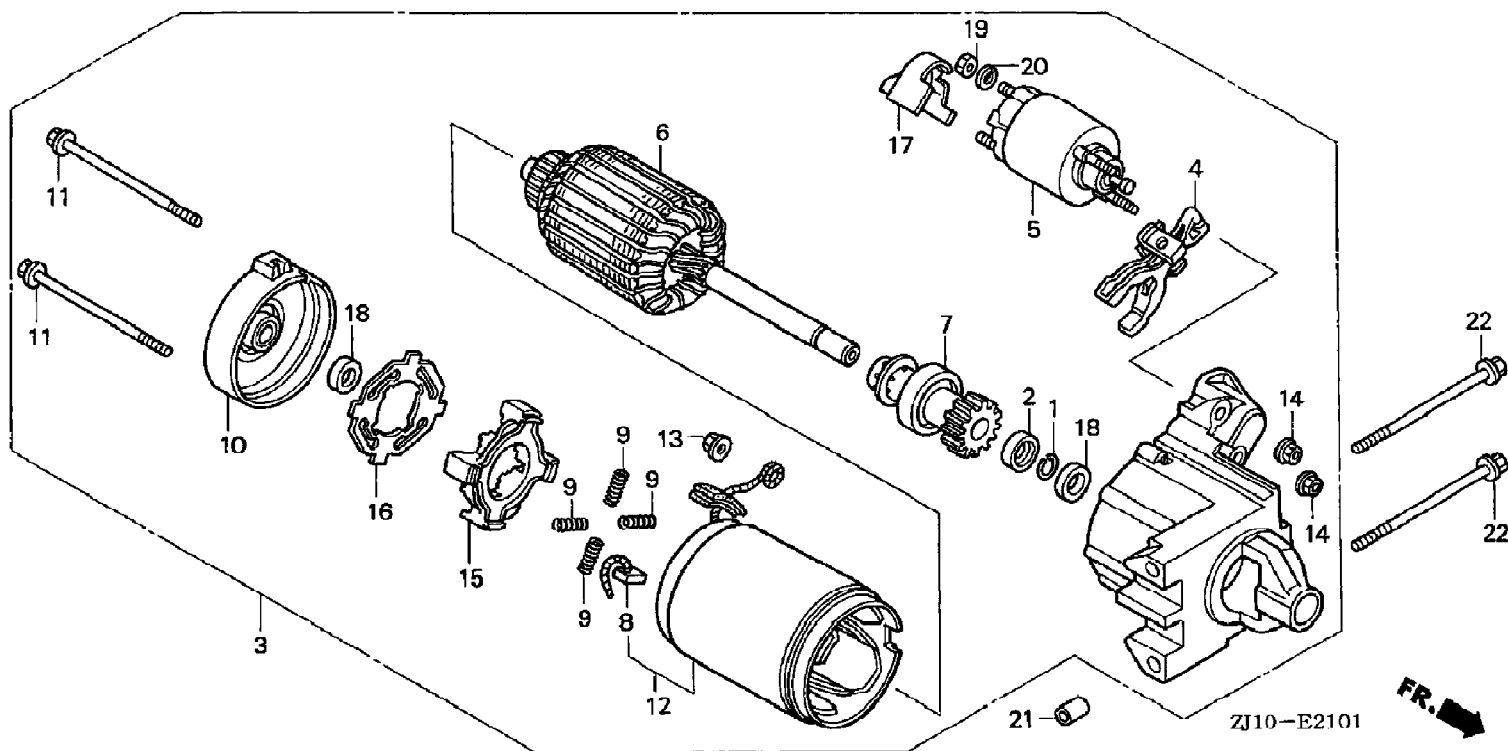

420 4X2 Utility Vehicle
Engine - Starter Motor

Page 44 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	30201-PH9-004	1		Ring, Snap (Denso)
2	30202-PZ1-003	1		Collar Set, Clutch Stop
3	31200-ZJ1-841	1	S	Motor Assembly., Starter
4	31203-PH9-004	1		Lever, Pinion Drive
5	31204-ZJ1-H01	1	S	Switch Assembly., Magnet
6	31206-ZG4-801	1		Armature
7	31207-ZJ1-H01	1		Clutch, Overrunning
8	31211-PH9-004	4		Brush
9	31212-PH9-004	4		Spring, Brush
10	31213-P64-N01	1		Cover
11	31214-PH9-004	2		Bolt, Through
12	31216-ZJ1-H01	1		Yoke
13	31220-PH9-004	1		Nut, Hex. (8mm)
14	31223-PA0-006	2		Nut, Flange (5mm)
15	31231-PH9-004	1		Holder, Brush
16	31233-PH9-004	1		Insulator, Brush Holder
17	31234-ZJ1-H01	1		Cover, Terminal
18	91002-ZG4-801	2		Bearing A
19	94001-08000-0S	1		Nut, Hex. (8mm)
20	94111-08000	1		Washer, Spring (8mm)
21	94301-10120	2		Pin, Dowel (10x12)
22	95701-08110-00	2		Bolt, Flange (8x110)

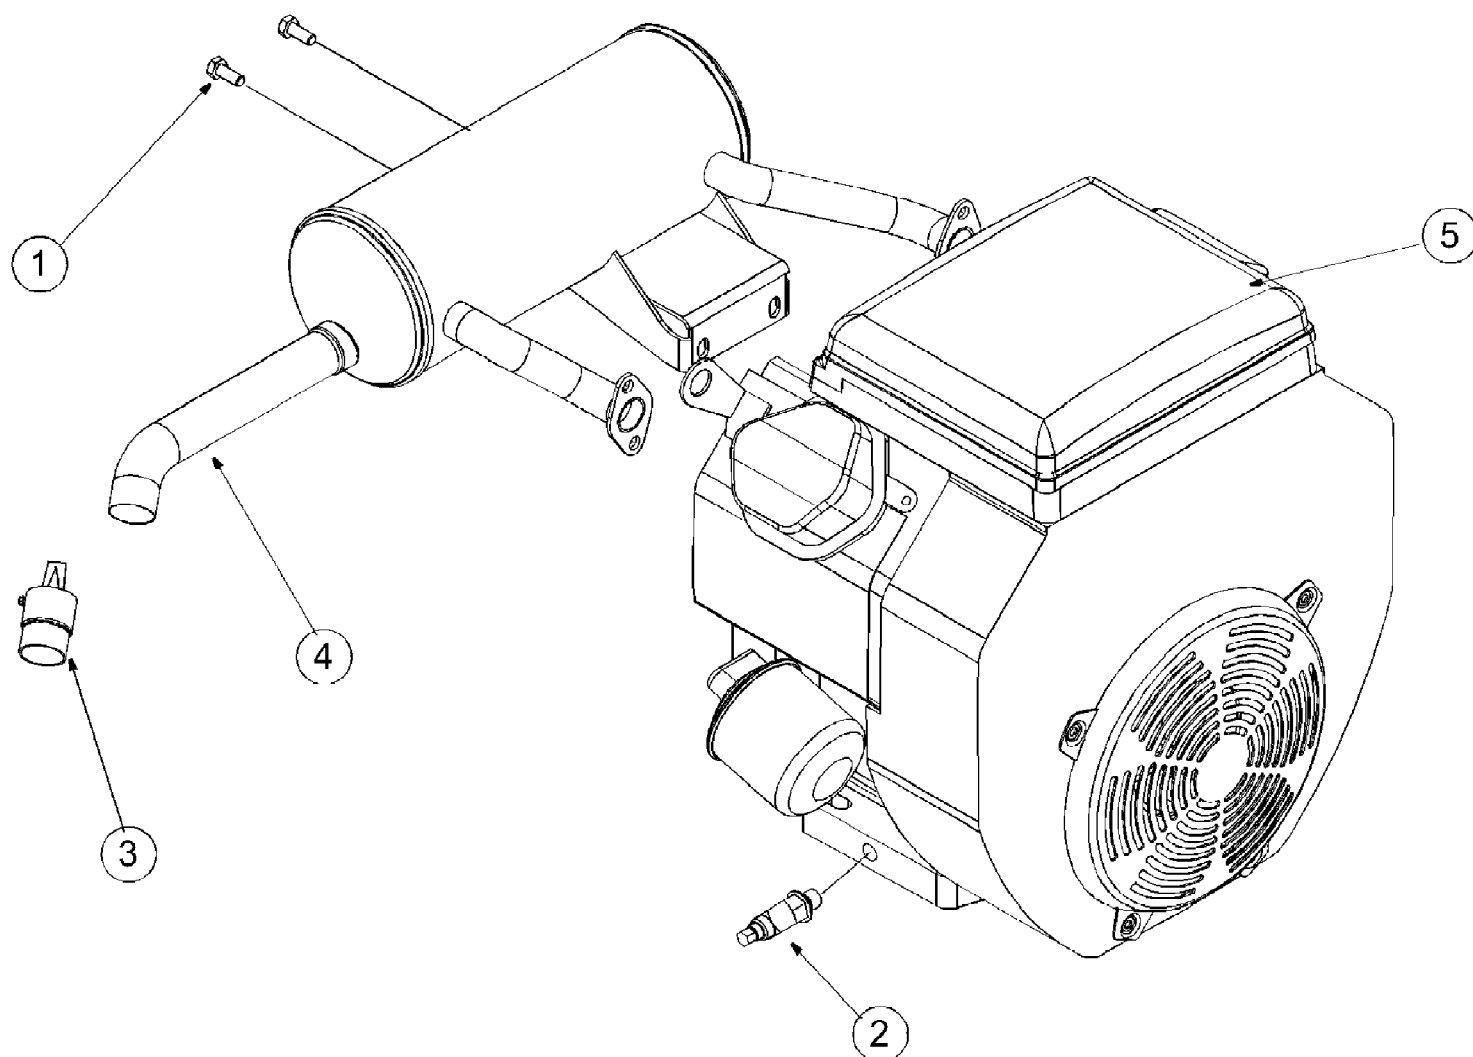


420 4X2 Utility Vehicle
Engine Accessories

Page 46 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	710-04022	2		Screw, M8
2	737-04013	1		Valve, Oil Drain
3	751-0544	1	S	Spark Arrestor
4	751-0854A	1	S	Muffler, Honda GX620
5	952H638700	1		Engine, Honda GX618K1
	17210-ZJ1-842	1		Element, Air Cleaner
	17218-ZJ1-840	1		Element, Pre Cleaner
	16910-ZE8-015	1		Filter, Fuel

420 4X2 Utility Vehicle
Fenders

Page 47 of 78

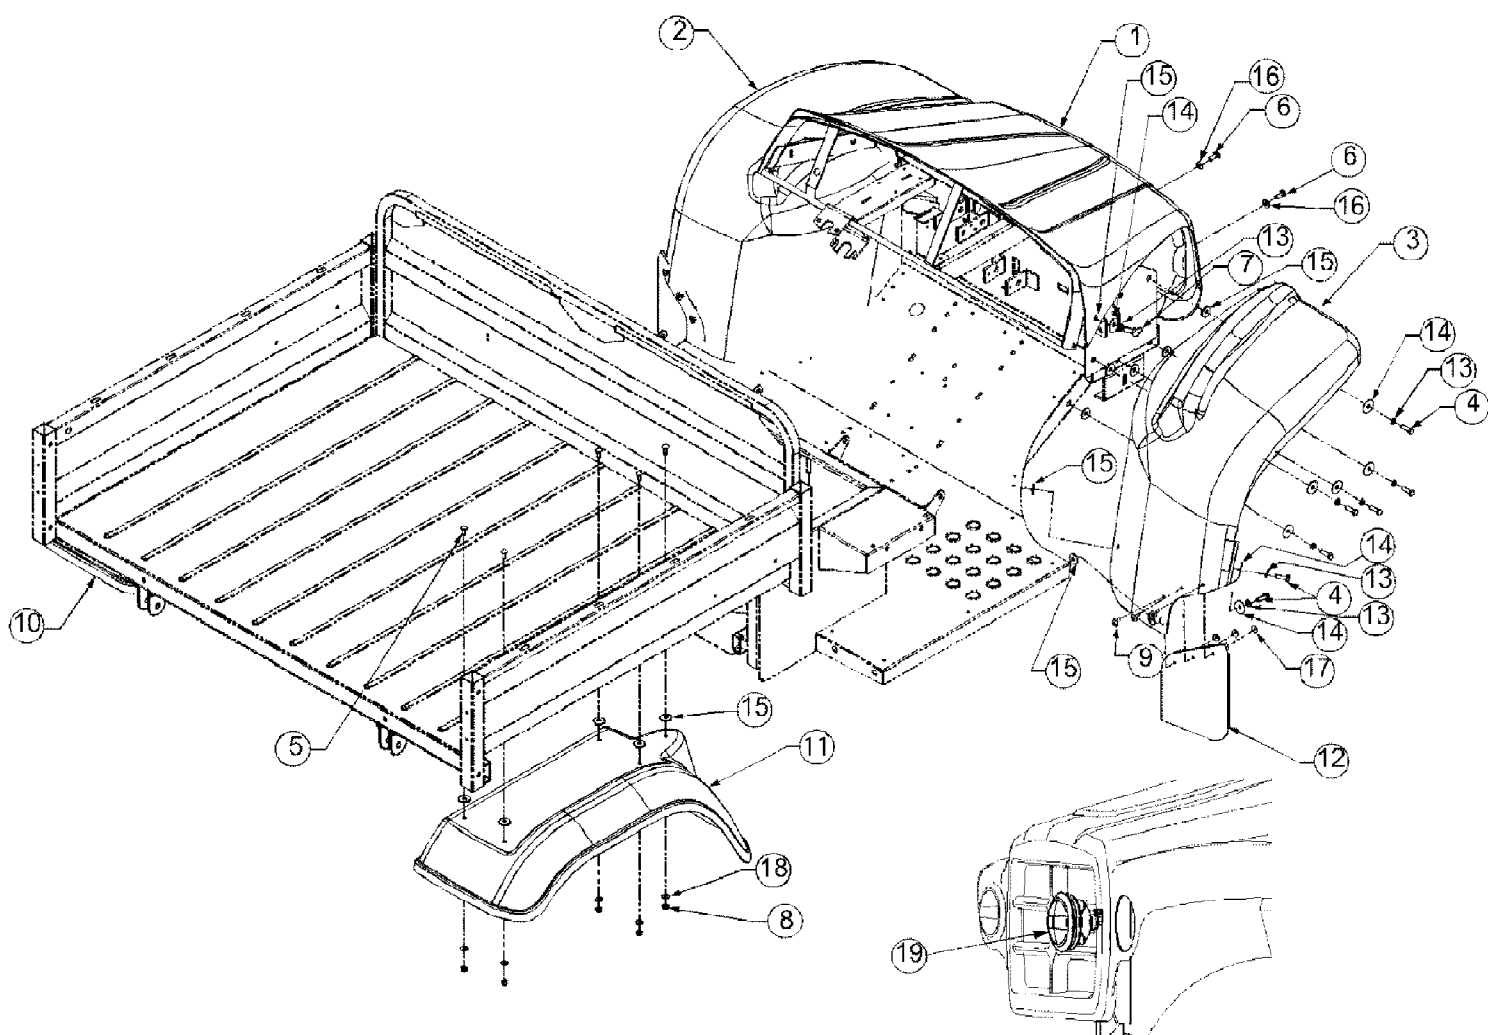


420 4X2 Utility Vehicle
Fenders

Page 48 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	731-04403	1	S	Panel, Hood
2	731-04407	1	S	Panel, Front Fender, LH
3	731-04406	1	S	Panel, Front Fender, RH
4	710-0376	14	/P	Hex Screw, 5/16-18 x 1.0 Gr5
5	710-0703	10	/P	Hex Screw, 1/4-20 x .75
6	710-3008	2	/P	Hex Screw, 5/16-18 x .75 Gr5
7	710-3232	2	/P	Screw, Thumb 5/16-18
8	712-0324	10	/P	Hex Lock Nut, Nylon, 1/4-20
9	728-04004	6	S	Rivet, Pop
10	731-04409	1	S	Panel, Rear Fender, LH
11	731-04408	1	S	Panel, Rear Fender, RH
12	735-04003	2		Flap, Mud
13	736-0119	14	S	Lock Washer, 5/16
14	736-04004	16		Flat Washer, .350 x 1.25 x .06
15	736-04008	26		Washer, Rubber, .310 x 1.0 x .125
16	736-0275	2	S	Flat Washer, .44 x .688 x .65
17	736-0400	6	S	Flat Washer, .194 x .62 x .063
18	736-3020	10	S	Flat Washer, .271 x .630 x .065
19	625-04003	2	S	Headlight Assembly
	725-2022	2		Bulb Not shown

420 4X2 Utility Vehicle
Frame


Page 49 of 78

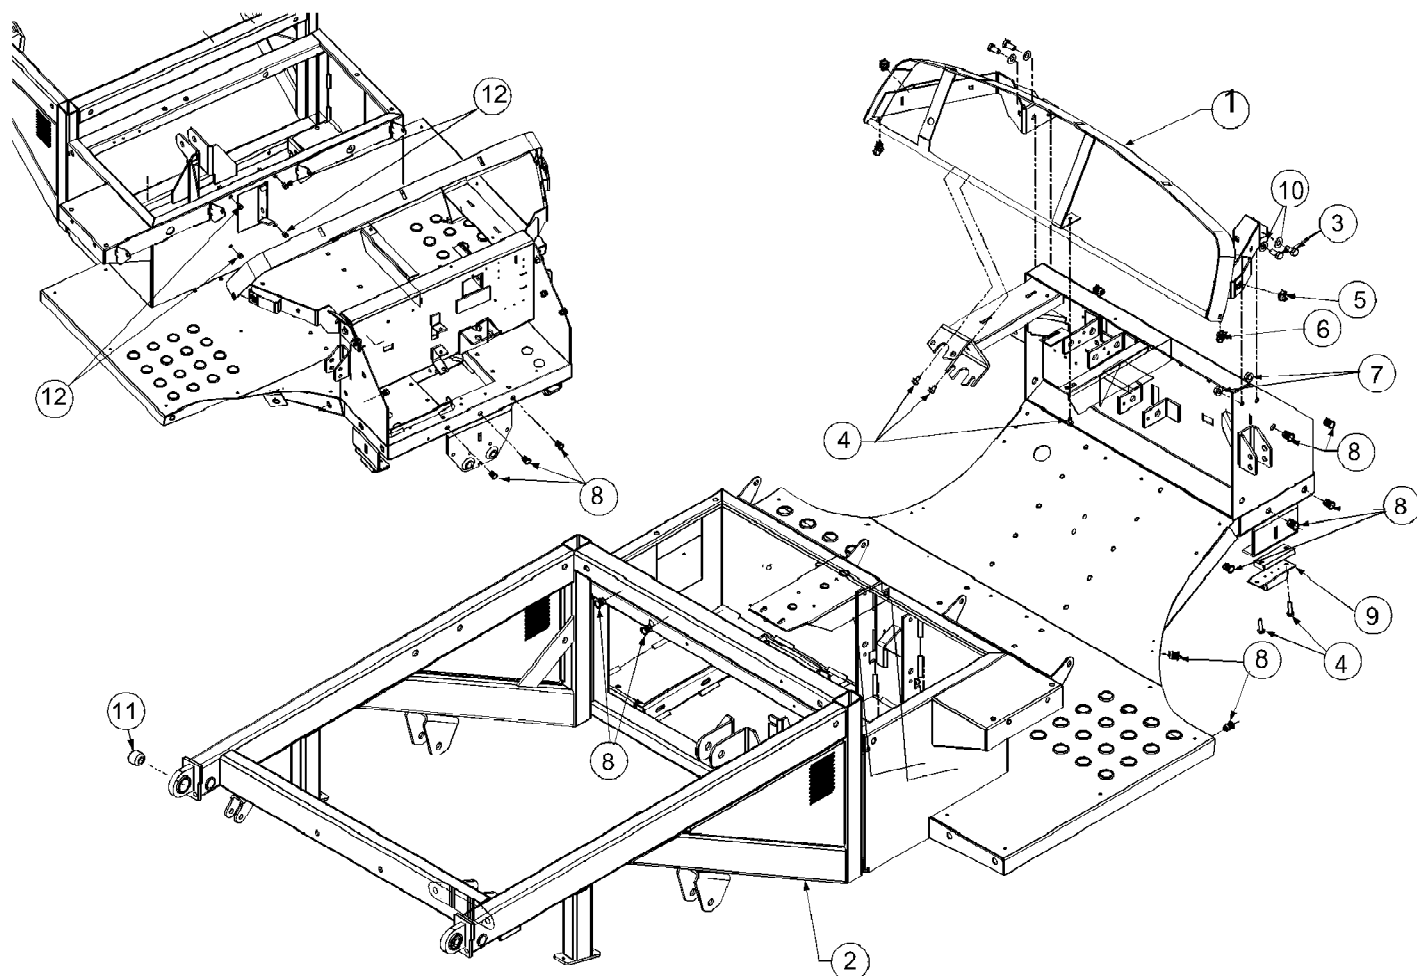

420 4X2 Utility Vehicle
Frame

Page 50 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-04007A	1		Frame Assembly, Upper Dash
2	607-04026	1		Frame Assembly, Complete
3	710-0216	4	/P	Screw, Hex, 3/8-16 x .75
4	710-0599	7	/P	Screw, Self-tapping, 1/4-20 x 0.500
5	712-04004	2		Nut, Retainer, 5/16-18
6	712-04005	2		U-Nut, 1/4-20
7	712-0431	4	S	Nut, Flange Lock, 3/8-16
8	712-0703A	19	/P	Nut, Insert, 5/16-18
9	731-04016	2		Bumper, Compression Extension
10	736-3050	4	/P	Washer, Flat, .406 x 812 x .51
11	741-0761	2		Rubber Bushing, Bed Pivot
12	750-1261	4		Insert 1/4-20

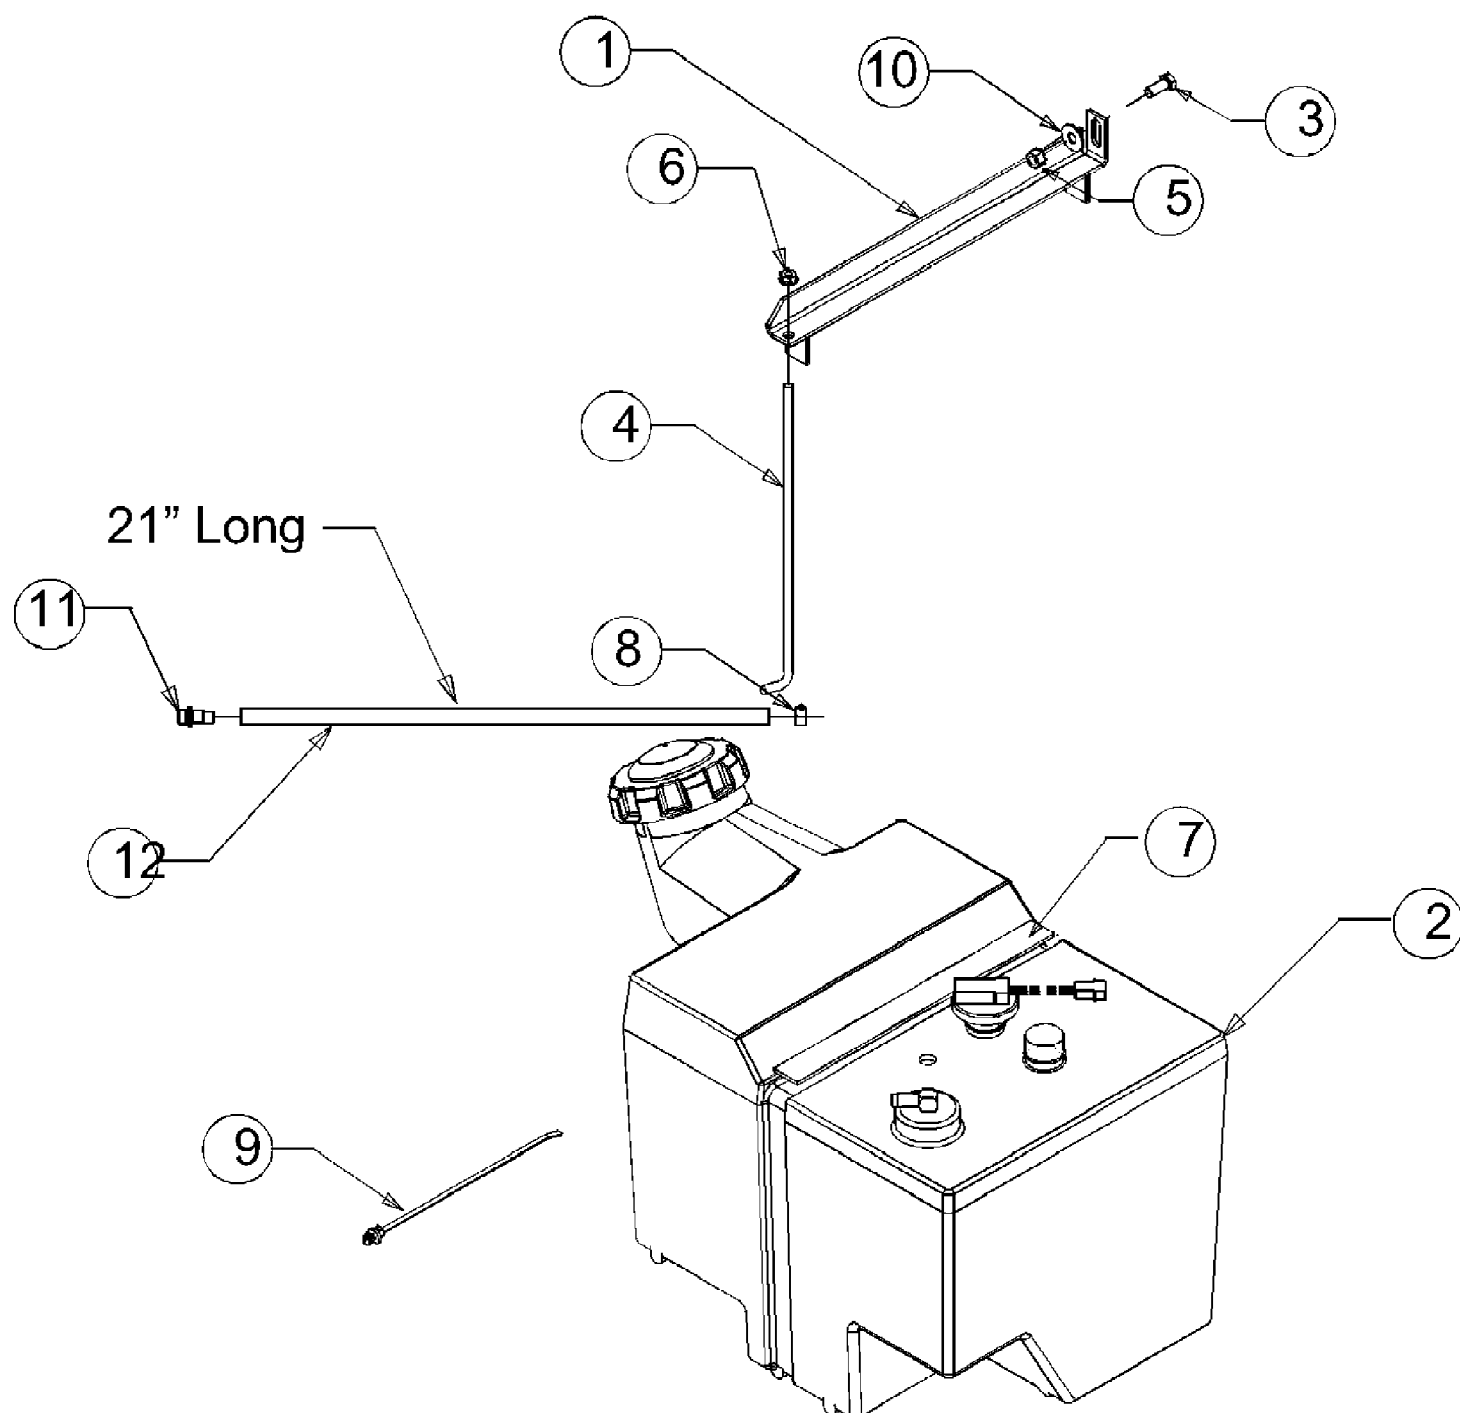


420 4X2 Utility Vehicle
Fuel System

Page 52 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-0034	1		Bracket Assembly, Fuel Tank
2	631-0223	1	/P	Tank Assembly, Fuel
3	710-3008	1	/P	Hex Screw, 5/16-18 x .75
4	711-1768	1		Hold-down Rod, Fuel Tank
5	712-0265	1	/P	Sems Nut, 5/16-18
6	712-3027	1	S	Nut, Flange Lock, 1/4-20
7	~N/A	11		Gasket, Fuel Tank
8	726-0205	1	/P	Clamp, Hose
9	726-0470	1		Cable Tie, 19 x 8.39
10	736-0159	1	S	Washer, .349 x .879 x .063
11	737-0296	1	/P	Vent, 3/8 Dia.
12	751-0535-46	1	S	Hose, Fuel Line Cut to length
	16910-ZE8-015	1		Filter, Fuel Not Shown

420 4X2 Utility Vehicle
Hood


Page 53 of 78

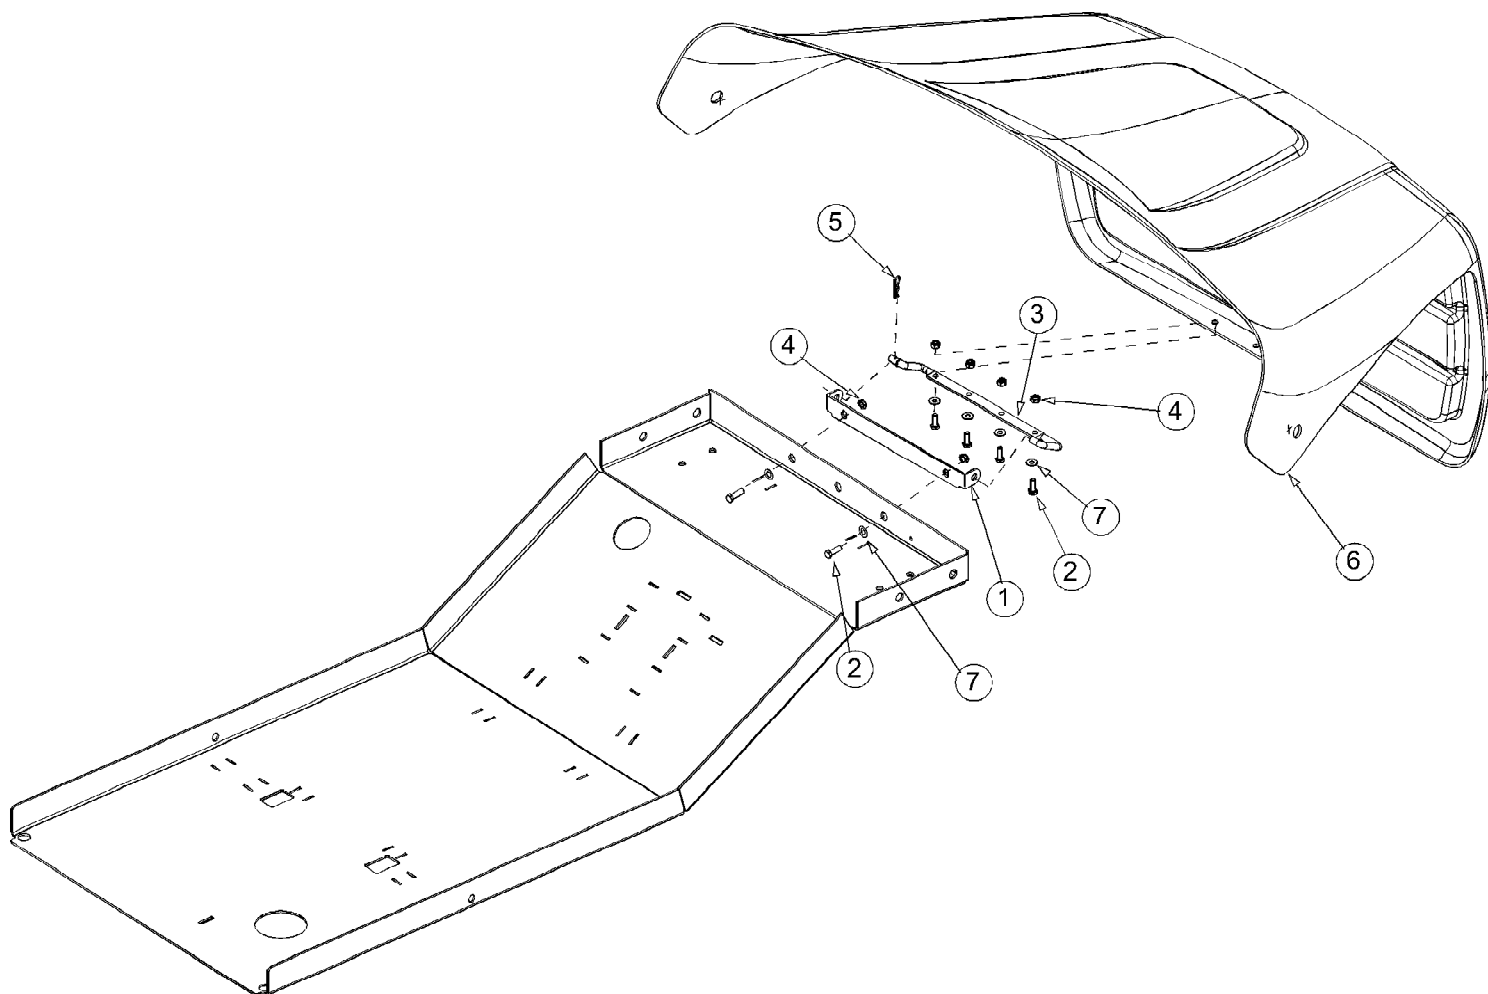

420 4X2 Utility Vehicle
Hood

Page 54 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	707-04165	1	S	Mounting Bracket, Hood
2	710-3015	4	/P	Hex Screw, 1/4-20, .75, Gr5
3	711-04139	1		Rod Mounting Hood
4	712-0324	4	/P	Nut, Nylon Hex Lock, 1/4-20, Gr8
5	714-0101	1	S	Cotter Pin
6	731-04233	1	S	Panel, Hood
7	736-3020	4	S	Washer, Flat, .271 x .630 x .065
	731-04403	1	S	Hood

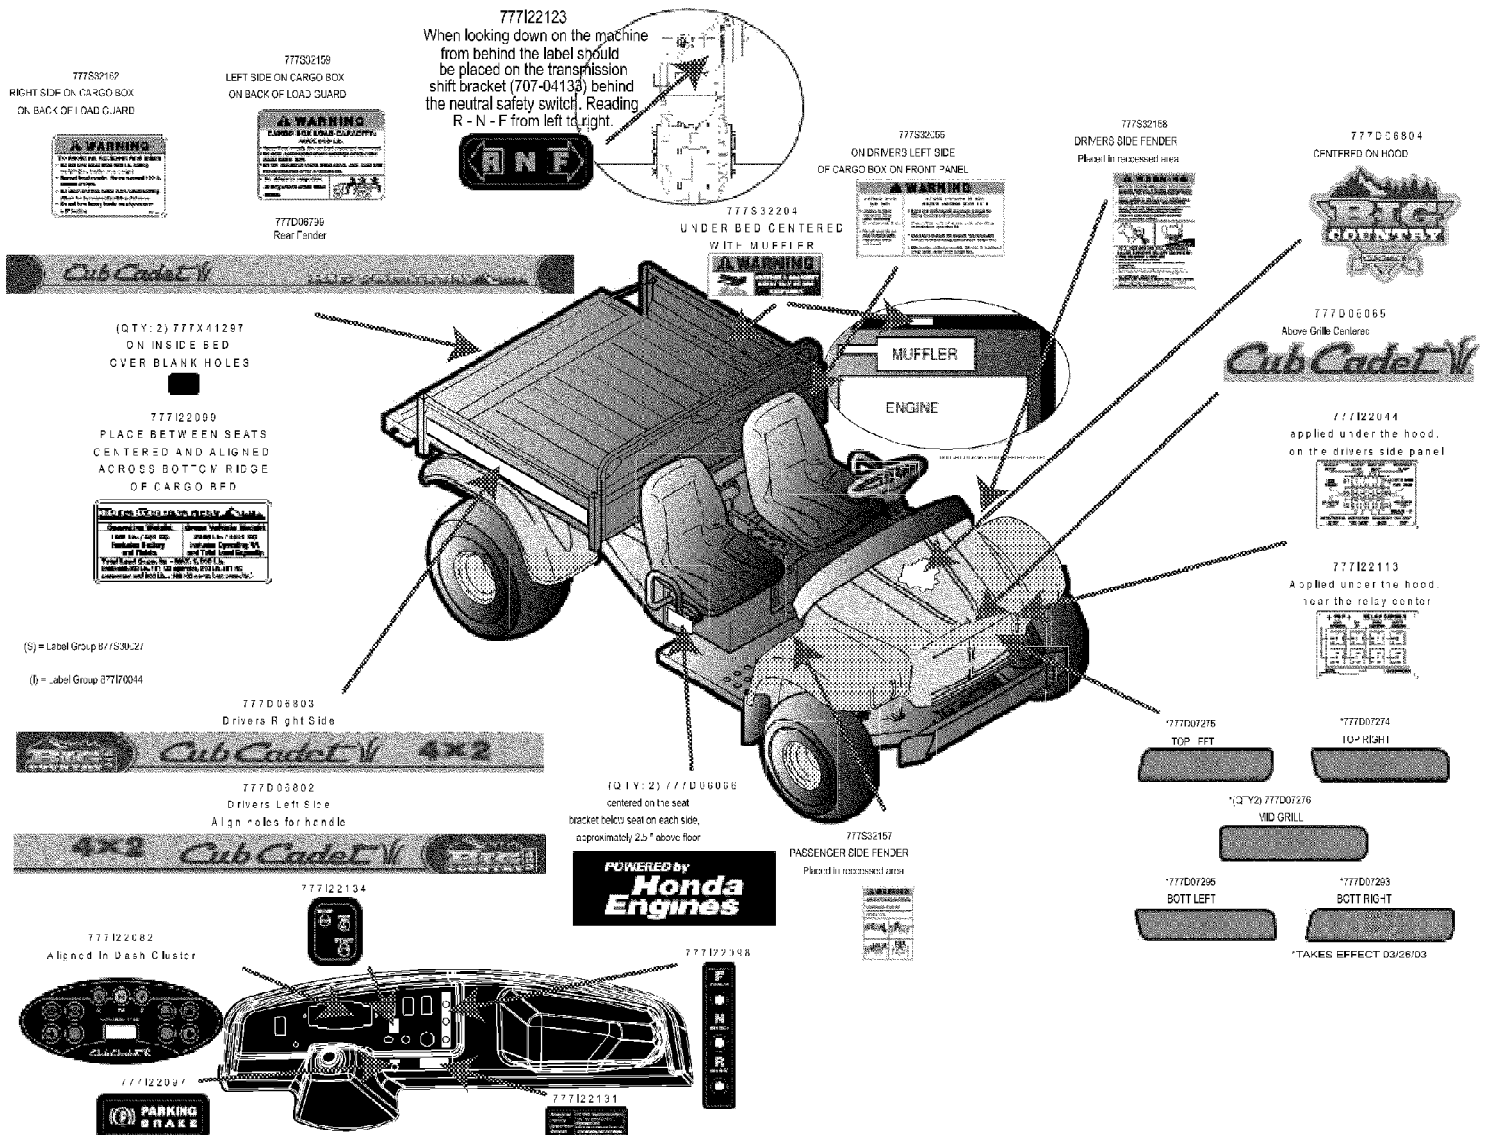


420 4X2 Utility Vehicle
Labels

Page 56 of 78

Ref #	Part Number	Qty	S/P/F	Description
777S32162	777S32162	1		LABEL-TOW LOAD
777S32159	777S32159	1		LABEL-BED LOAD
777D06799	777D06799	1	S	LABEL-TAIL GATE
777I22123	777I22123	1		LABEL-MANUAL SHAFT
777S32204	777S32204	1		LABEL-SAFETY M
777X41297	777X41297	1		LABEL-BED HOLE BLANK
777I22099	777I22099	1		LABEL-OPERATING WGHT
877S30027	877S30027	1		
877I70044	877I70044	1		
777D06803	777D06803	1		LABEL-RIGHT SIDE BED
777D06802	777D06802	1		LABEL-LEFT SIDE BED
777I22134	777I22134	1		LABEL-IGNITION
777I22082	777I22082	1		LABEL-INST PANEL
777I22097	777I22097	1		LABEL-PARKING BRAKE
777I22131	777I22131	1		LABEL-SHIFT FAULT
777I22098	777I22098	1		LABEL-FWD N REV
777D06066	777D06066	1		LABEL-POWERED BY
777S32157	777S32157	1		LABEL-RIDER FALL
777D07295	777D07295	1		
777D07293	777D07293	1		
777D07276	777D07276	1		
777D07275	777D07275	1		
777D07274	777D07274	1		
777I22113	777I22113	1		LABEL-RELAY CHART
777I22044	777I22044	1		LABEL-FUSE CHART
777D06065	777D06065	1		LABEL-GRILLE LOGO
777D06804	777D06804	1		LABEL-HOOD
777S32158	777S32158	1		LABEL-ROLL & FALL
777S32055	777S32055	1		LABEL-BED LOAD
707-04133	707-04133	1		BRKT-VACUUM ACTUAT

420 4X2 Utility Vehicle
Pedals/Parking Brake


Page 57 of 78

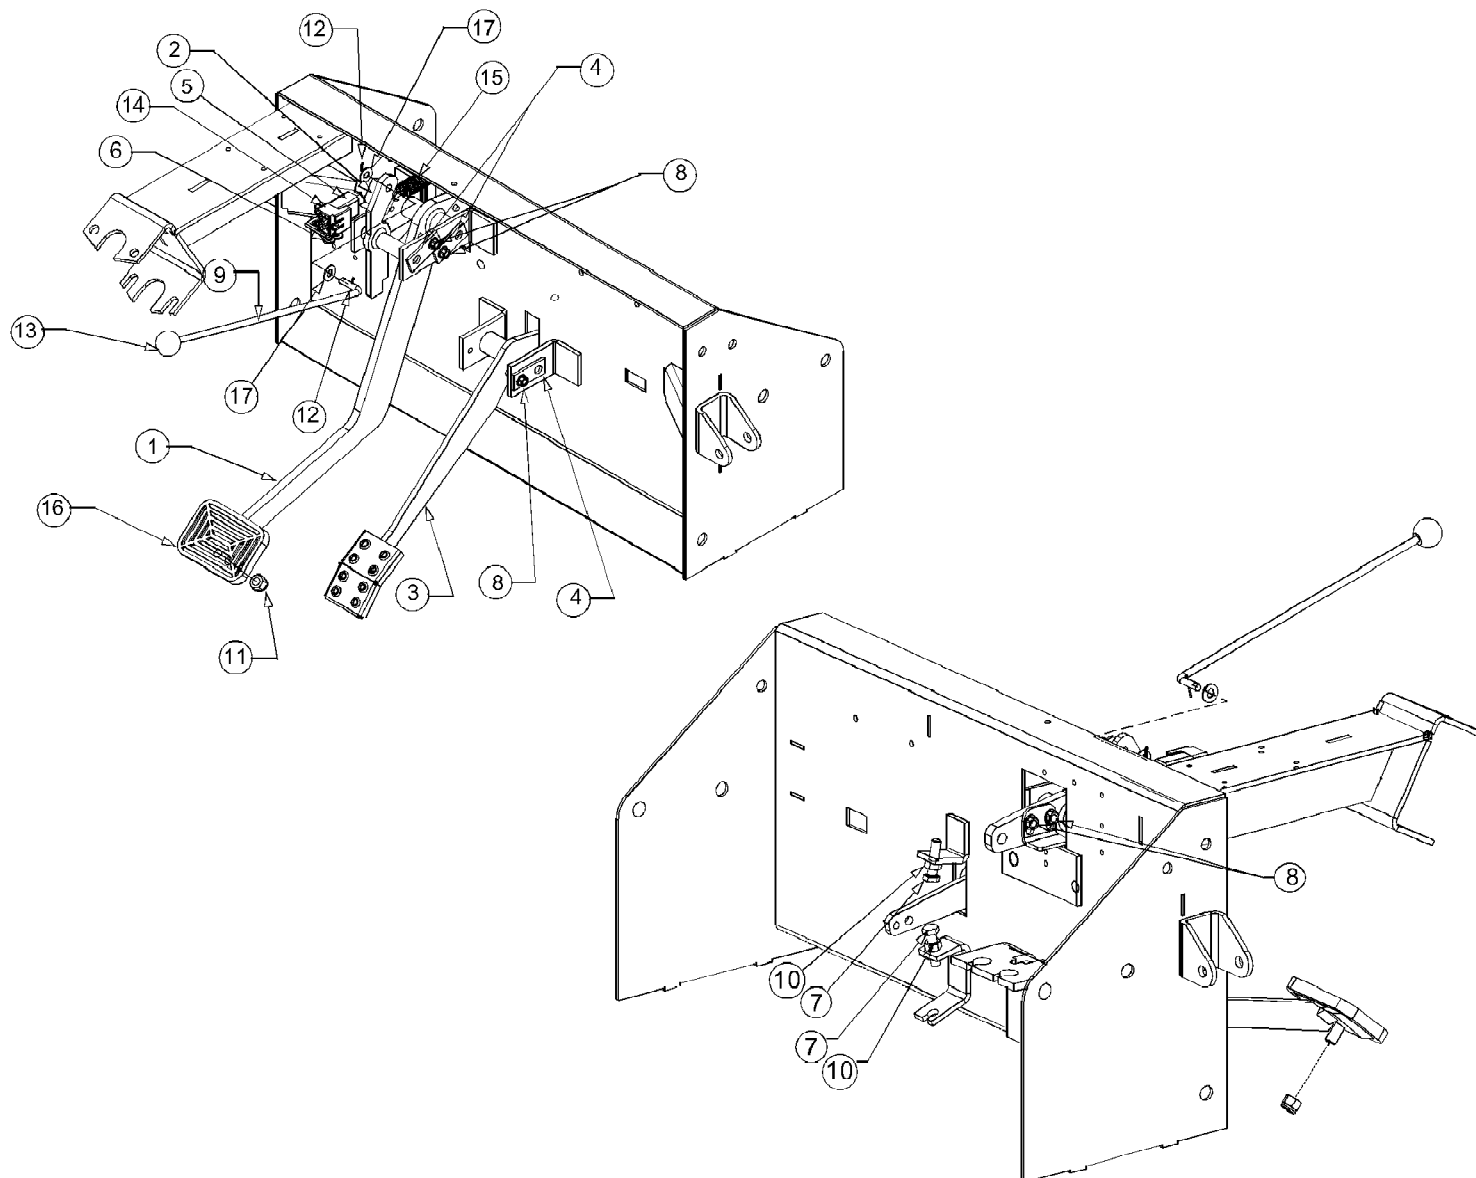

420 4X2 Utility Vehicle
Pedals/Parking Brake

Page 58 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	607-0038	1		Pedal Assembly, Brake
2	607-0021	1		Lever Assembly, Parking Brake
3	607-0039	1		Pedal Assembly, Throttle
4	611-0157	3		Shaft Assembly, Pedal Pivot
5	721-3049	1	/P	Cover, Protective
6	710-04030	2		Screw, Hi-Lo, 1/4-20 x .5
7	710-0528	2	/P	Screw, Hex 5/16-18 x 1.25
8	710-0875	3		Screw, Self-tapping, 1/4-20, .75
9	711-1765	1		Rod, Brake Lock
10	712-3010	2	S	Nut, Hex 5/16-18
11	712-3061	1	S	Nut, Hexlock, 3/8 - 24
12	714-0127	2	/P	Pin, Cotter 1/16 x .75
13	720-04001	1	/P	Knob, Ball
14	725-1657A	1	S	Snap Mount Switch, Interlock
15	732-1187	1		Spring, Extension, .637 x 2.972
16	735-04000	1		Pad, Brake Pedal
17	736-0463	2	S	Washer, Flat .25 x .630 x .0515

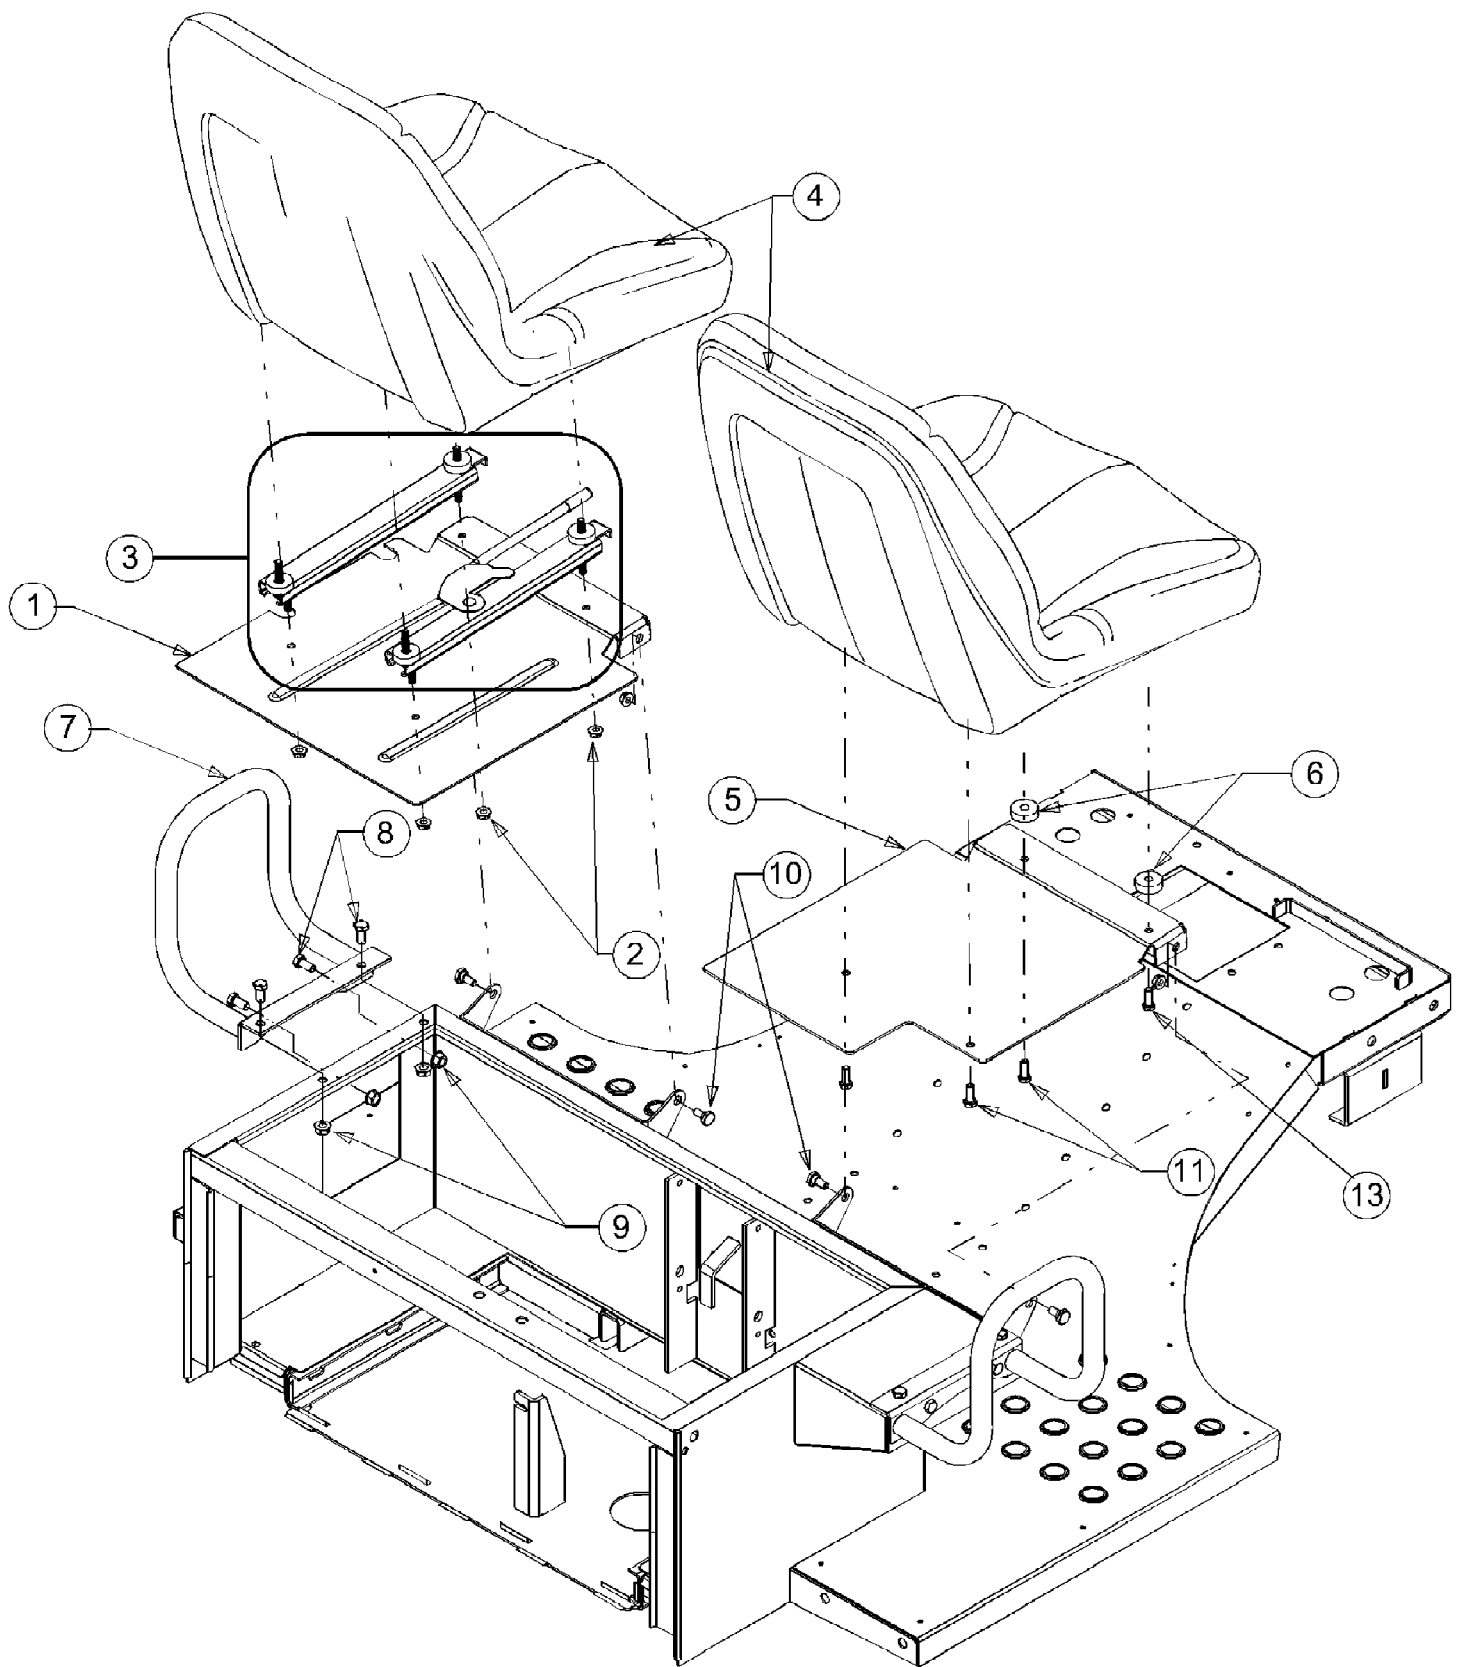


420 4X2 Utility Vehicle
Seats

Page 60 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	707-04061A	1	S	Plate, Seat, LH
2	712-3004A	8	/P	Nut, Flange Lock, 5/16-18, Gr5
3	757-0389	1		Track Assembly, Seat
4	757-04008	2	S	Seat
5	707-04062A	1	S	Plate, Seat, RH
6	750-04023	4		Spacer, Seat
7	649-04002	2	S	Tube Assembly, Grab Handle
8	710-0216	8	/P	Hex Screw, 3/8-16 x .75, Gr5
9	712-0431	8	S	Nut, Flange Lock, 3/8-16
10	738-0140	4	S	Shoulder Screw, .435 x .178-5/16 x .56
11	710-3025	2	/P	Hex Screw, 5/16-18 x .625, Gr5
12	735-0271	6	S	Bumper .62 Dia x .3 Not Shown
13	710-0376	2	/P	Hex Screw 5/16-18 x 1.00 Gr 5

420 4X2 Utility Vehicle
Shifter Assembly (Part 1)

Page 61 of 78

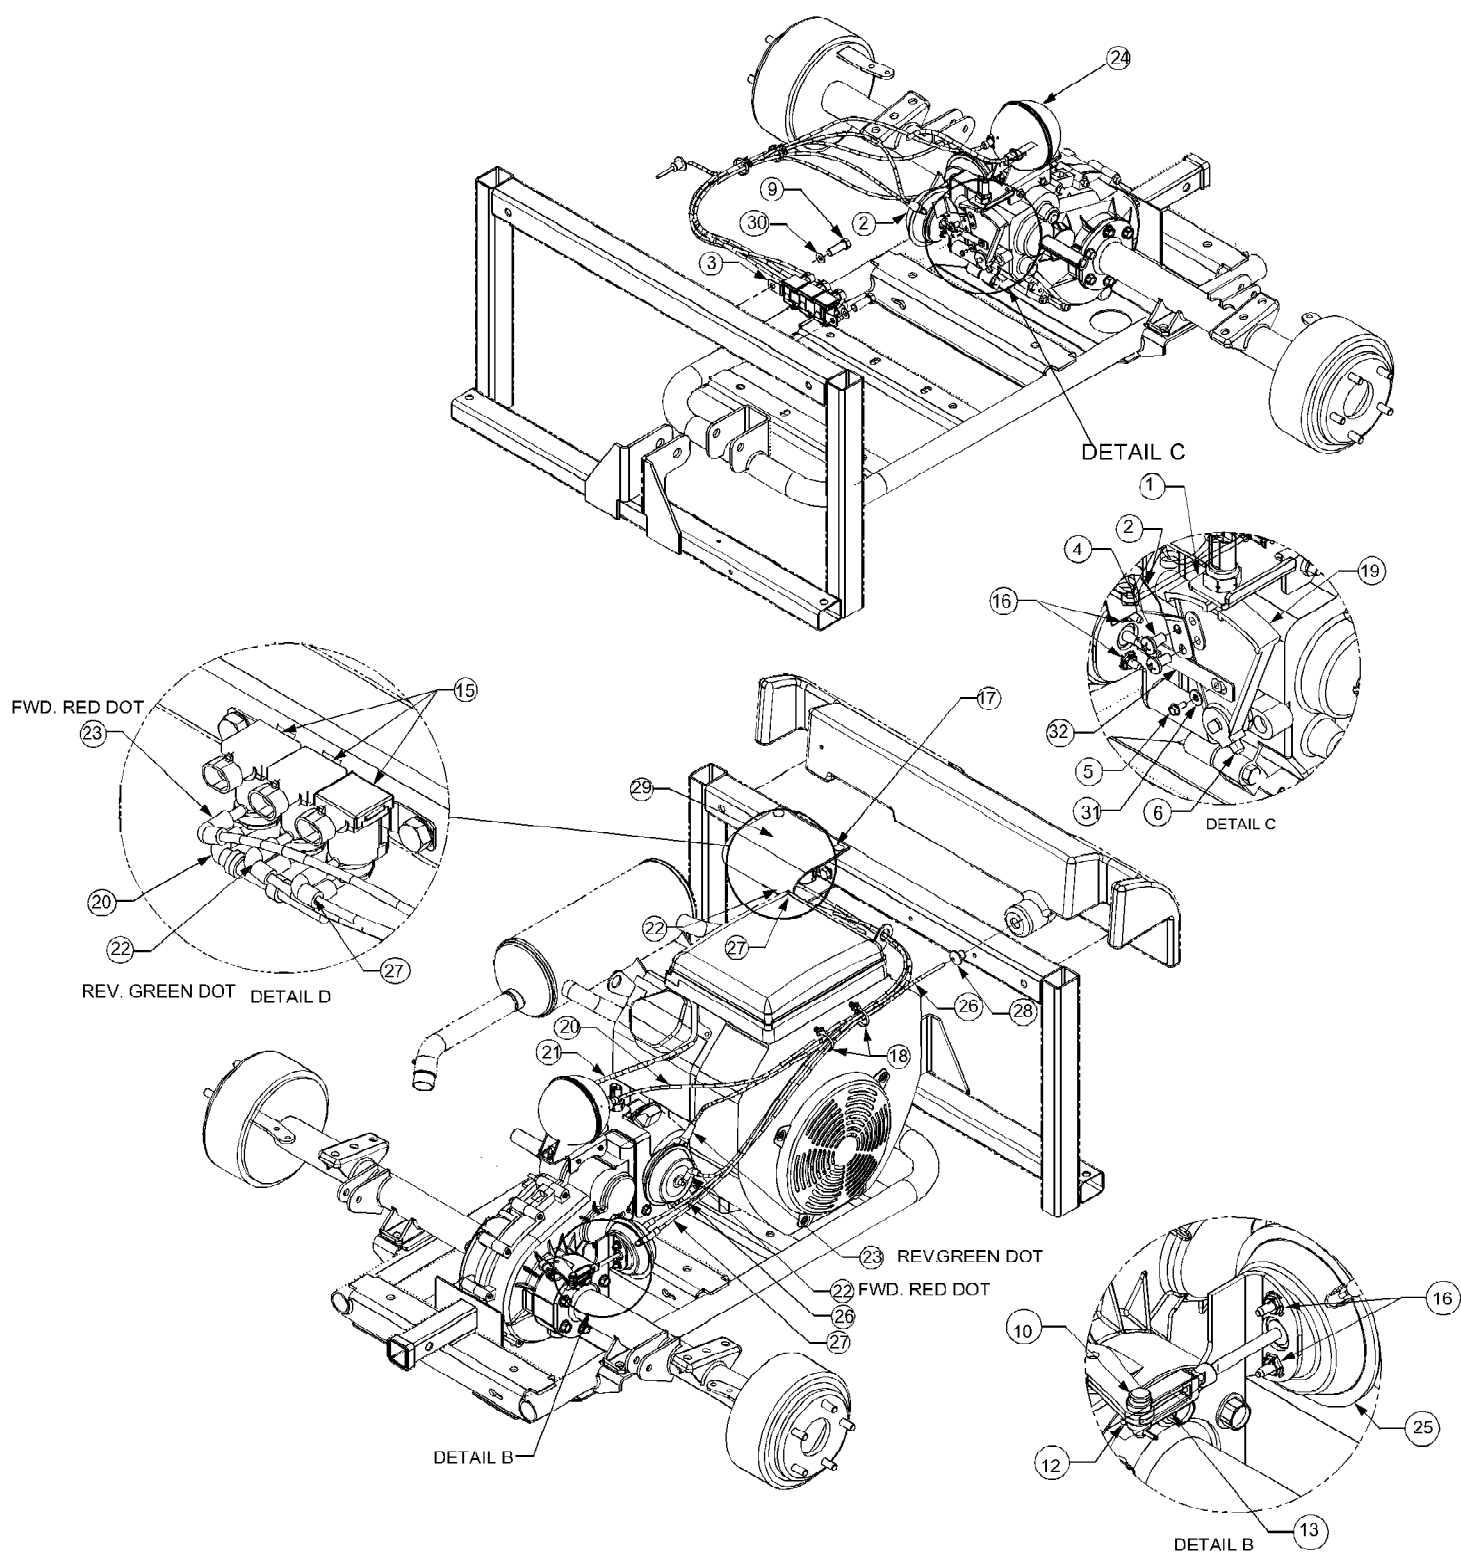


420 4X2 Utility Vehicle
Shifter Assembly (Part 1)

Page 62 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	707-04133	1		Mounting Bracket, Vacuum Actuator
2	707-04140	1		Bracket, Shift
3	707-04146	1		Bracket, Vac Relay
4	710-04030	2		Screw, 1/4-20 x.5
5	710-04164	1	/P	Screw, Hex. #8 - 18 .375
6	710-04169	1	/P	Screw, Set, 5/16-24 x .50 LG
9	710-3029	2	/P	Screw, 1/4-14 x .625 Hex
10	711-0653	1	/P	Pin, Clevis .312 OD x 1.0
12	714-0507	1	S	Pin, Cotter 3/32x.750
13	719-04065	1	S	Yoke, 1/4-28
15	759-04258	1	/P	Solenoid,Kit Vacuum Actuator Replaces 725-3278
16	726-04024	4	/P	Self Threading Nut
17	726-0465	4		Clip, Panel Retainer
18	726-0470	2		Cable Tie
19	731-04289	1		Arm, Shift
20	731-04295	1	S	Hose
21	731-04296	1	S	Hose, Manifold Vacuum
22	731-04297	1	S	Hose, Actuator Vacuum
23	731-04298	1	S	Hose, Actuator Vacuum
24	731-04310	1	S	Reservoir, Air
25	731-04333	1	S	Actuator, Vac Differential Lock
26	731-04334	1	S	Hose, Vac Differential Lock, Vent
27	731-04335	1	S	Hose, Vac Differential Lock Supply
28	735-04030	1		Grommet, .58 x .25
29	735-04034	1		Cover, Solenoid
30	736-0278	2		Flat Washer, .330 x .687 x .030
31	736-3067	1	/P	Flat, Washer, .188 x .437 x .042
32	751-0876	1		Actuator, Vacuum Shift

420 4X2 Utility Vehicle
Shifter Assembly (Part 2)

Page 63 of 78

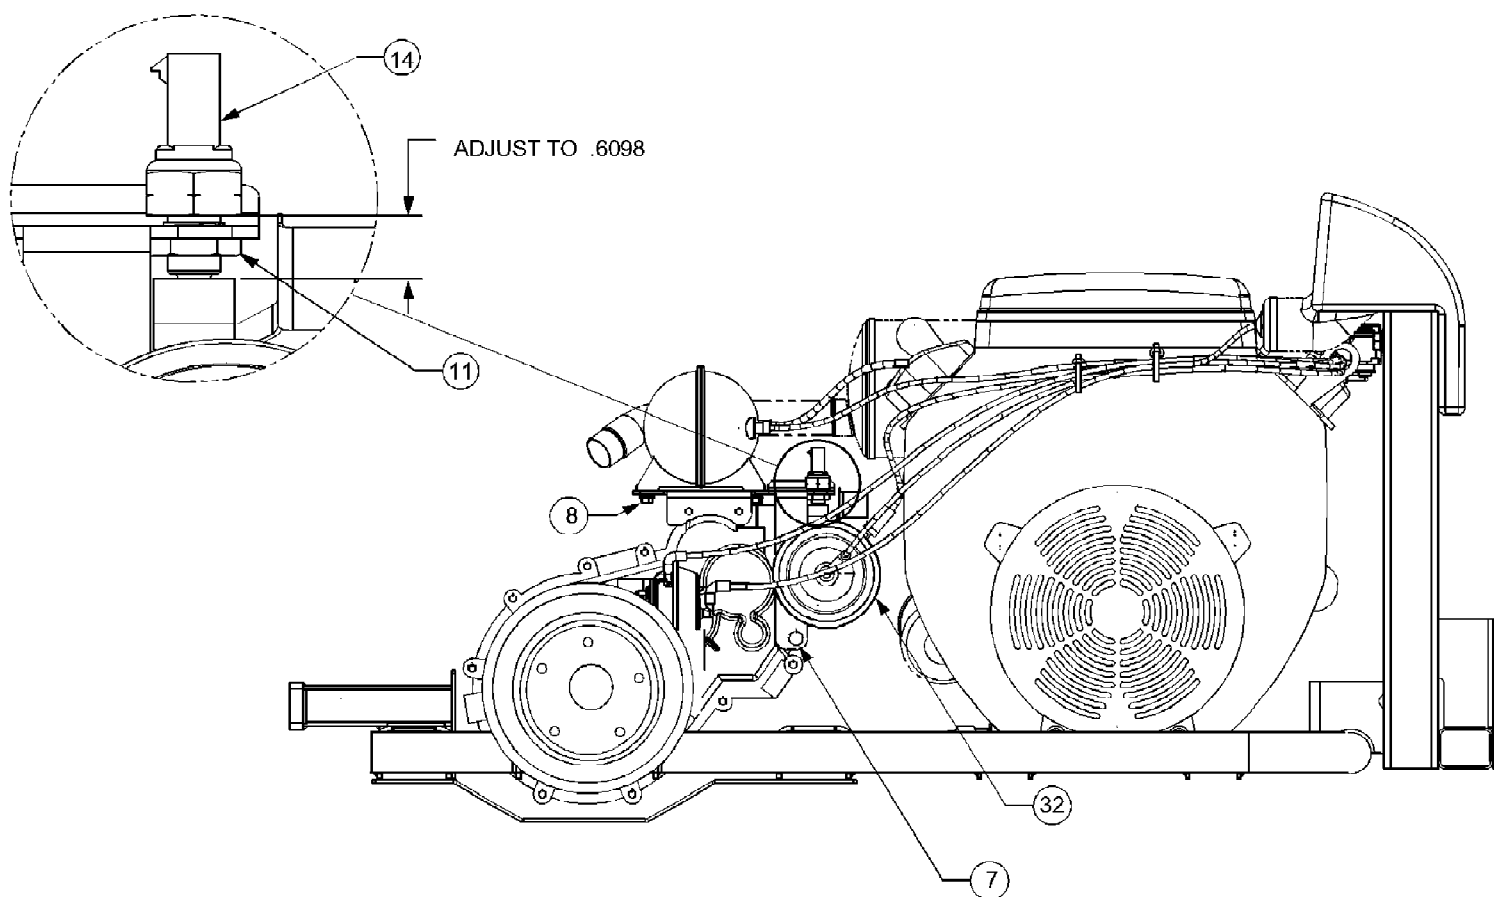


420 4X2 Utility Vehicle
Shifter Assembly (Part 2)

Page 64 of 78

Ref #	Part Number	Qty	S/P/F	Description
7	710-0607	1	/P	Screw, 5/16-18
8	710-0896	2	/P	Screw, 1/4-14
11	712-04048	1	S	Nut, Hex 9/16-18
14	725-04049	1	S	Switch, Neutral
32	751-0876	1		Actuator, Vacuum Shift

420 4X2 Utility Vehicle
Steering (Lower)

Page 65 of 78

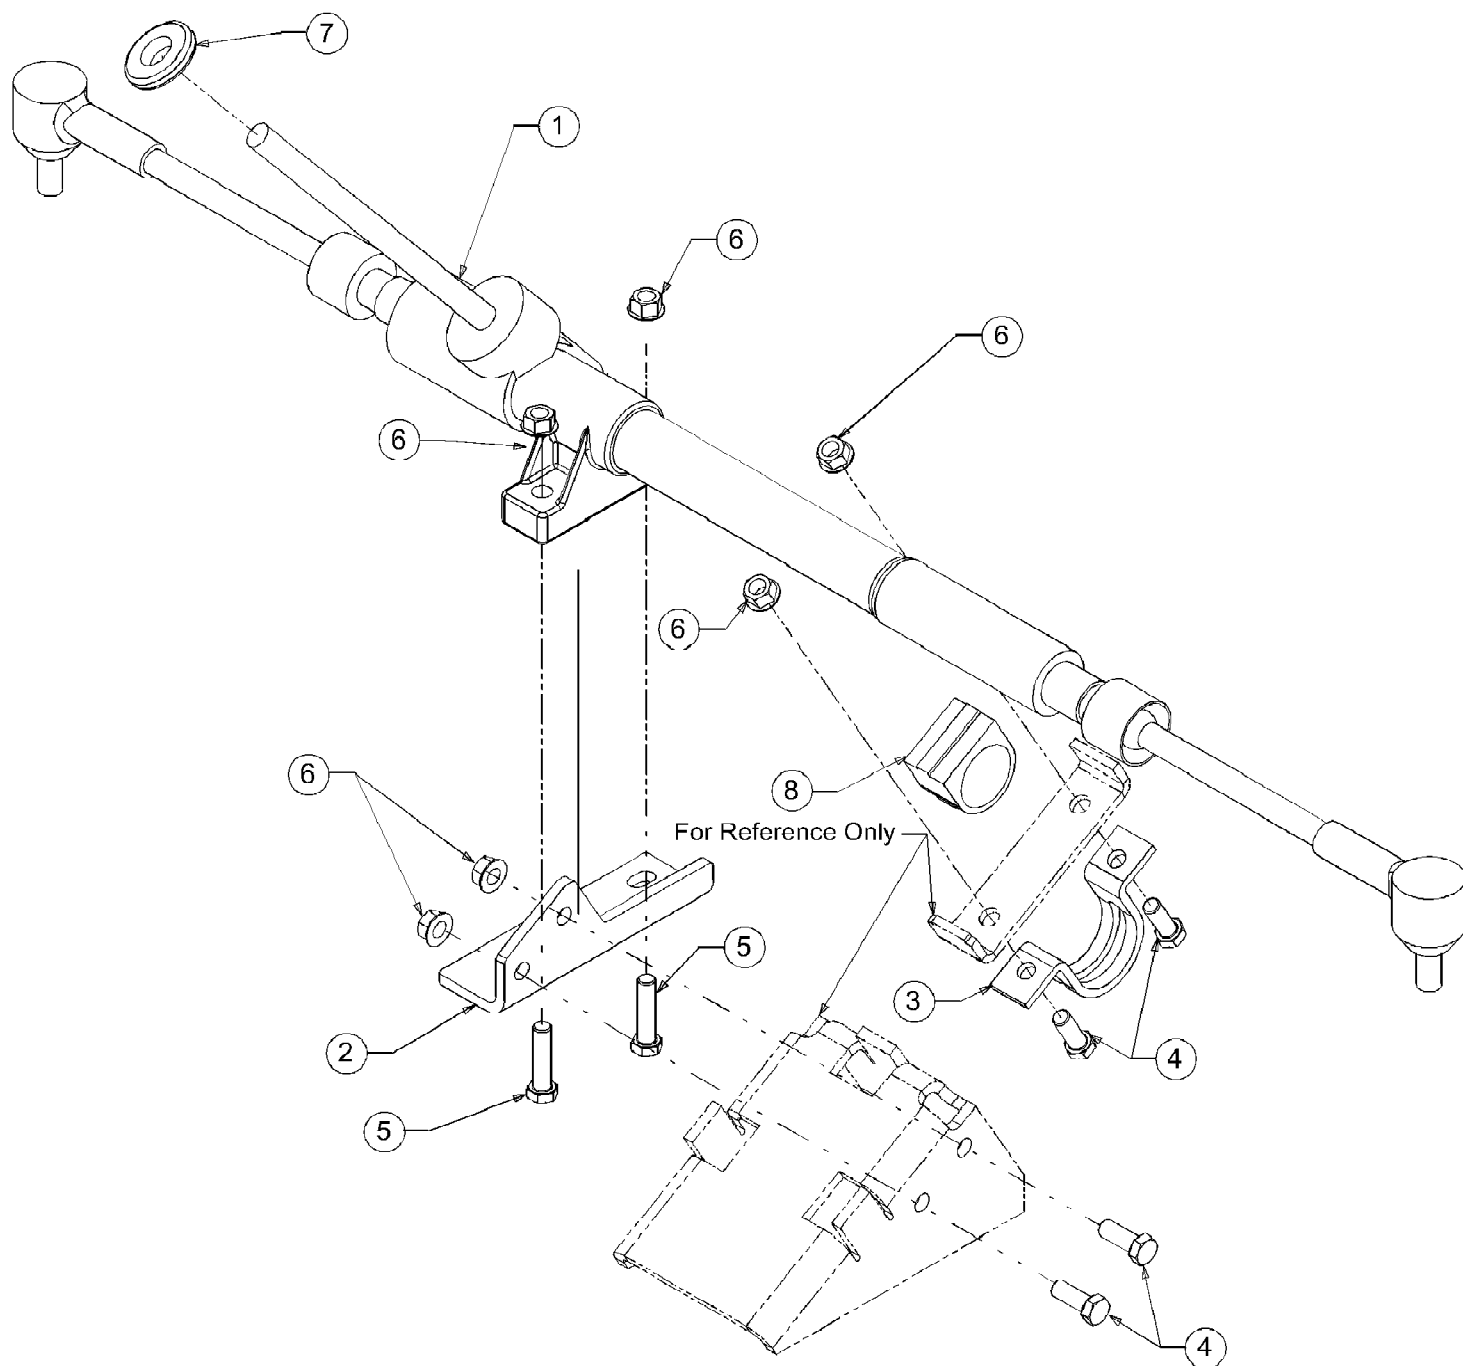


420 4X2 Utility Vehicle
Steering (Lower)

Page 66 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	617-0075A	1	S	Gear Assembly, Steering
2	707-04074	1	S	Steering Bracket, Sector Clamp
3	707-0417	1		Bracket, Steering Mounting
4	710-0514	4	/P	Hex Screw, 3/8-16, 1.00, Gr5
5	710-0520	2	/P	Hex Screw, 3/8-16, 1.50, Gr5
6	712-0431	6	S	Nut, Flange Lock, 3/8-16
7	735-0801	1		Grommet, Steering Shaft
8	741-0763	1		Bushing, Rubber

420 4X2 Utility Vehicle Steering (Upper)

Page 67 of 78

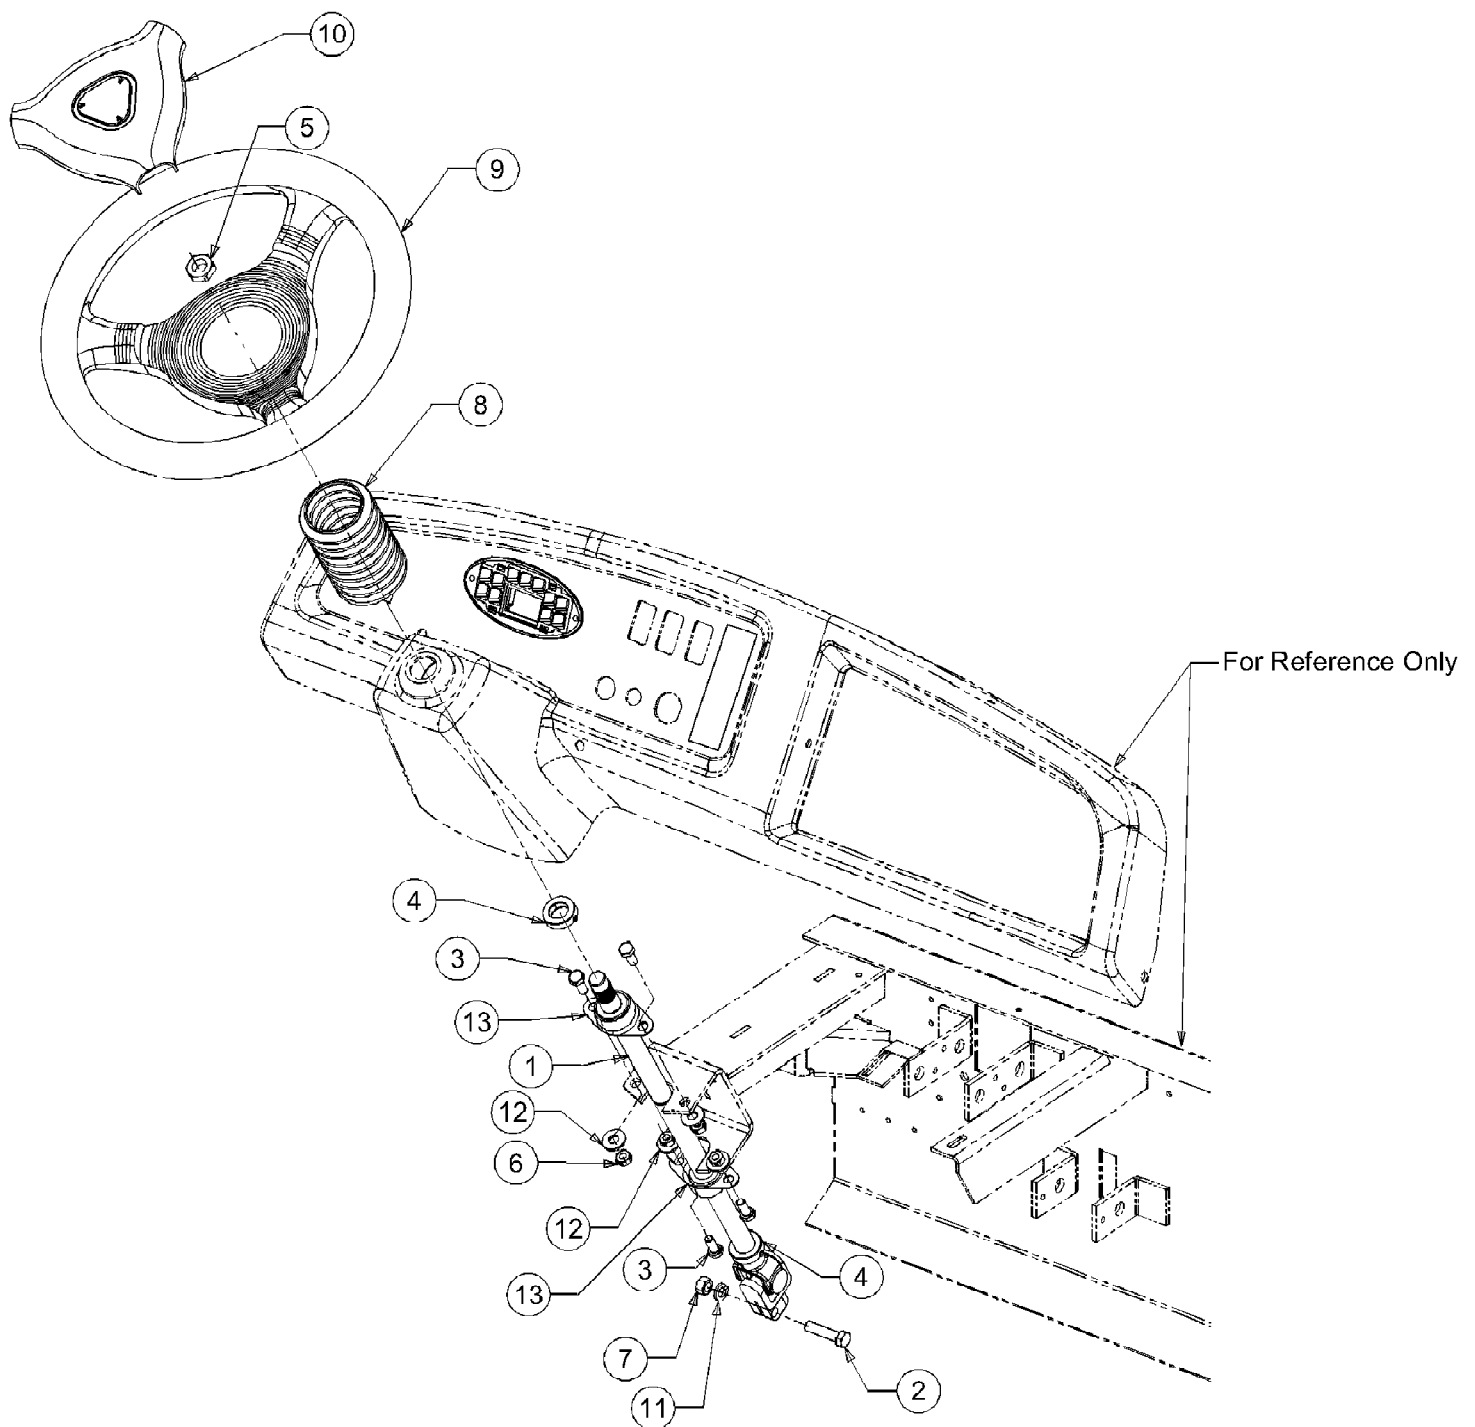


420 4X2 Utility Vehicle
Steering (Upper)

Page 68 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	623-0027	1		Shaft Assembly, Steering
2	710-0520	1	/P	Hex Screw, 3/8-16, 1.50, Gr5
3	710-3008	4	/P	Hex Screw, 5/16-18, .75, Gr5
4	711-1774	2		Collar, .75
5	712-04001	1		Nut, Hex, M16-2, Class 8
6	712-3009	4	S	Nut, Hex Lock, 5/16-18
7	712-3017	1	S	Nut, Hex, 3/8-16, Gr8
8	731-0954	1	S	Bellow, Steering, 4.75 Lg
9	731-2848	1		Steering Wheel, Three-spoke
10	731-3210	1		Cover, Steering Wheel
11	736-0169	1	S	Washer, Lock, 3/8, Regular Duty
12	736-0262	4	/P	Washer, Flat, .385 ID x .870 OD x .092
13	741-04000	2		Bearing, Flange, .75 ID, Self-Aligning

420 4X2 Utility Vehicle
Transmission - Brake Assembly

Page 69 of 78

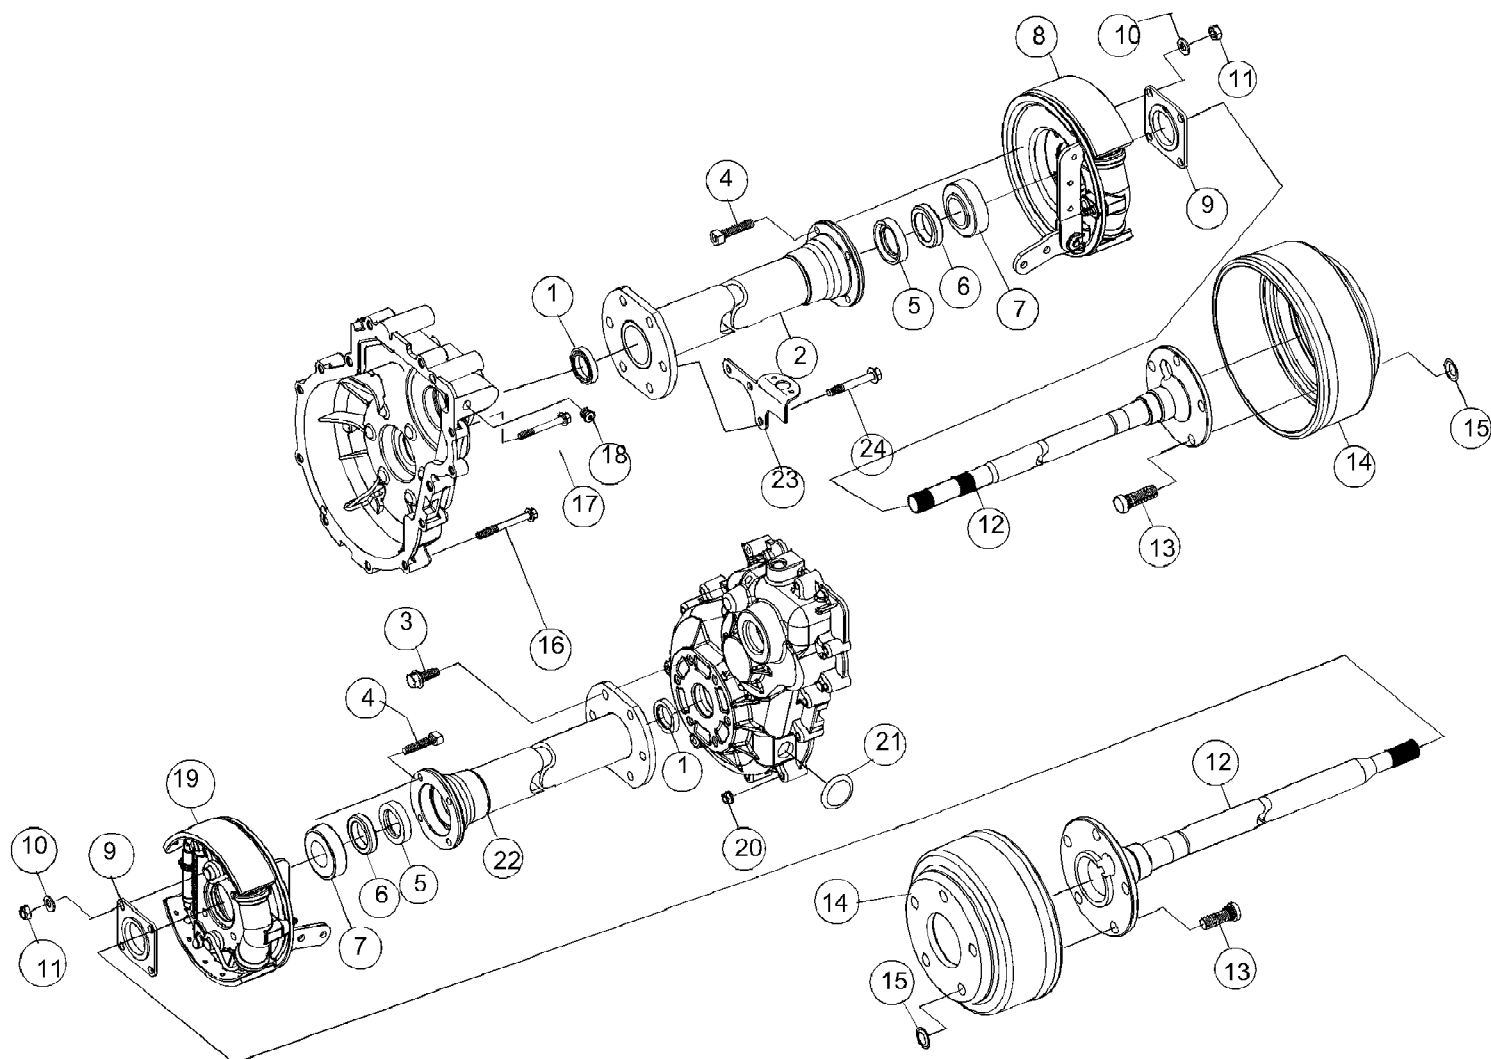


420 4X2 Utility Vehicle
Transmission - Brake Assembly

Page 70 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	DC-012HH128	1		Seal, Oil
2	DC-012TA350-1	1	S	Assembly, Tube
3	DC-070HM282	12		Screw, Flange Head
4	DC-A20HM102	8		Screw, Socket Head
5	DC-A20HH101	2		Seal, Oil
6	DC-536A1	2		Ring, Retainer
7	DC-585907	2		Ass'y, Bearing, Tapered Roller
8	DC-018WD119	1		Assembly, Brake RH
8	DC-4170693P	1	/P	Brake Shoes (per axle) Not shown
9	DC-515A7	2		Seal, Oil
10	DC-012HN126	8		Washer, Flat
11	DC-012HN125	8		Nut, Lock
12	DC-012SR166-1	2		Shaft, Axel
13	DC-012HM138-1	10		Bolt, Wheel
14	DC-012WA127	2		Drum, Brake
15	DC-34391-2	2		Nut, Spring
16	DC-012HM110-1	11		Screw, Flange Head
17	DC-012HM110-2	2		Screw, Flange Head
18	DC-012HN140	1		Vent
19	DC-018WD118	1		Assembly, Brake LH
8	DC-4170693P	1	/P	Brake Shoes (per axle) Not shown
20	DC-012HN120	13		Nut, Lock
21	DC-41356	1		Plug, Rubber
22	DC-012TA349-1	1	S	Assembly, Tube
23	DC-012TF238	1		Bracket, Differential Lock Actuator
24	DC-012HM137	6		Screw, Flange Head

420 4X2 Utility Vehicle
Transmission - Differential Lock Assembly

Page 71 of 78

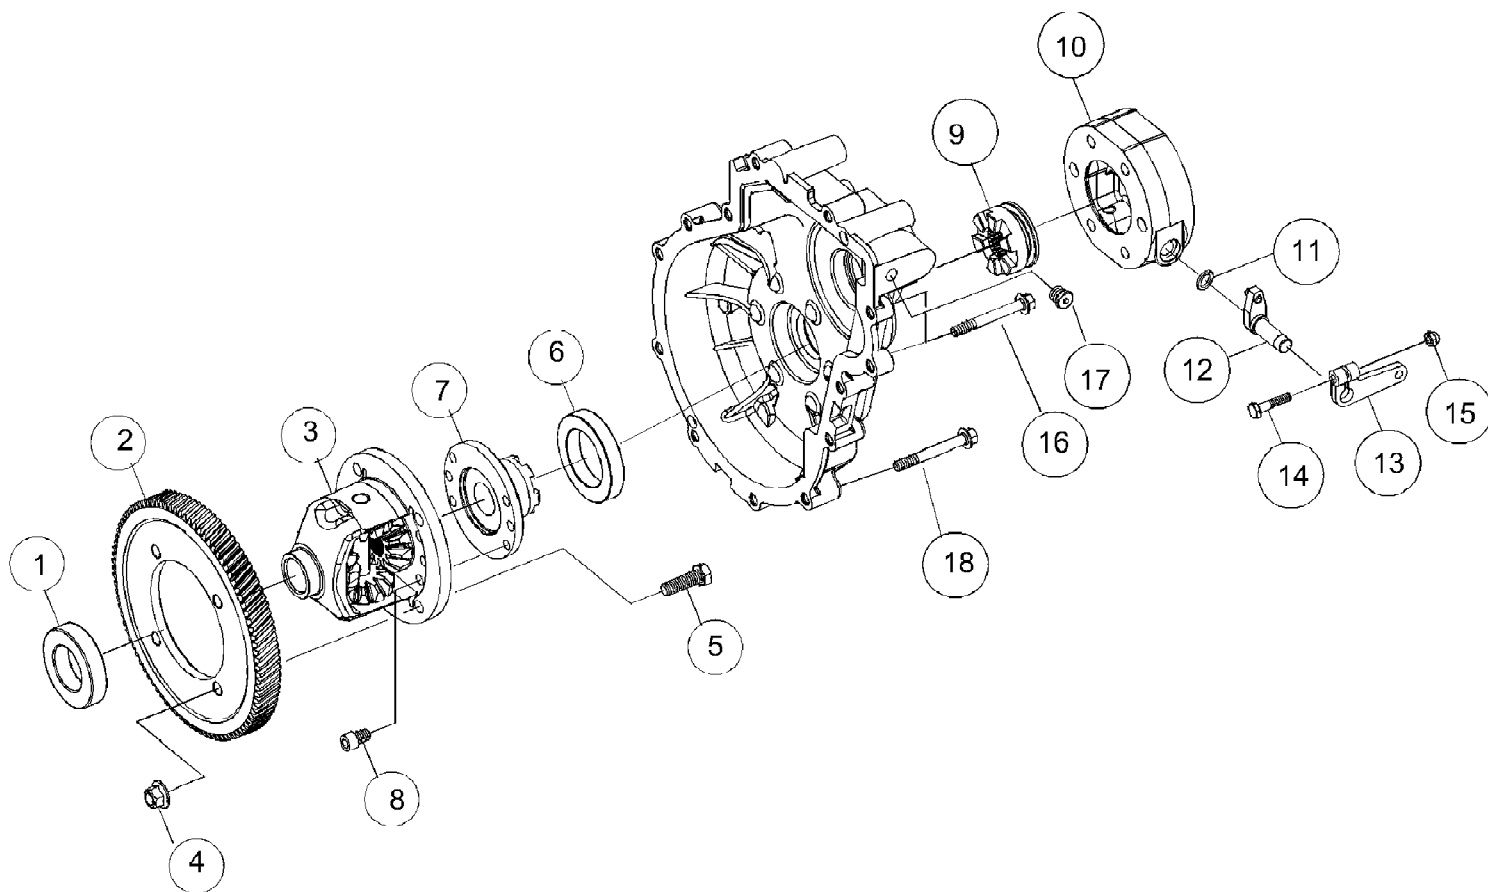


420 4X2 Utility Vehicle
Transmission - Differential Lock Assembly

Page 72 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	DC-585994	1	F	Bearing, Ball
2	DC-012GS216	1	F	Gear, Helical (Ring)
3	DC-012DA116X	1	S	Assembly, Differential
4	DC-012HN138	4		Nut, Lock
5	DC-012HM128	4		Bolt, Hex
6	DC-012HD142	1	F	Bearing, Ball
7	DC-012DC117	1	S	Flange, Half, Differential
8	DC-012HM136	6		Screw, Socket Head
9	DC-026HS104	1		Gear, Clutch Differential Lock
10	DC-012CH119	1		Housing, Differential Lock
11	DC-3112	1		Seal Oil
12	DC-012SV117X	1		Assembly, Shift Shaft
13	DC-314004	1		Lever, Actuating
14	DC-4150221	1		Screw, Hex Head
15	DC-4150223	1		Nut, Lock
16	DC-012HM110-2	2		Screw, Flange Head
17	DC-012HN140	1		Vent
18	DC-012HM110-1	11		Screw, Flange Head

420 4X2 Utility Vehicle
Transmission - Input Shaft Assembly


Page 73 of 78

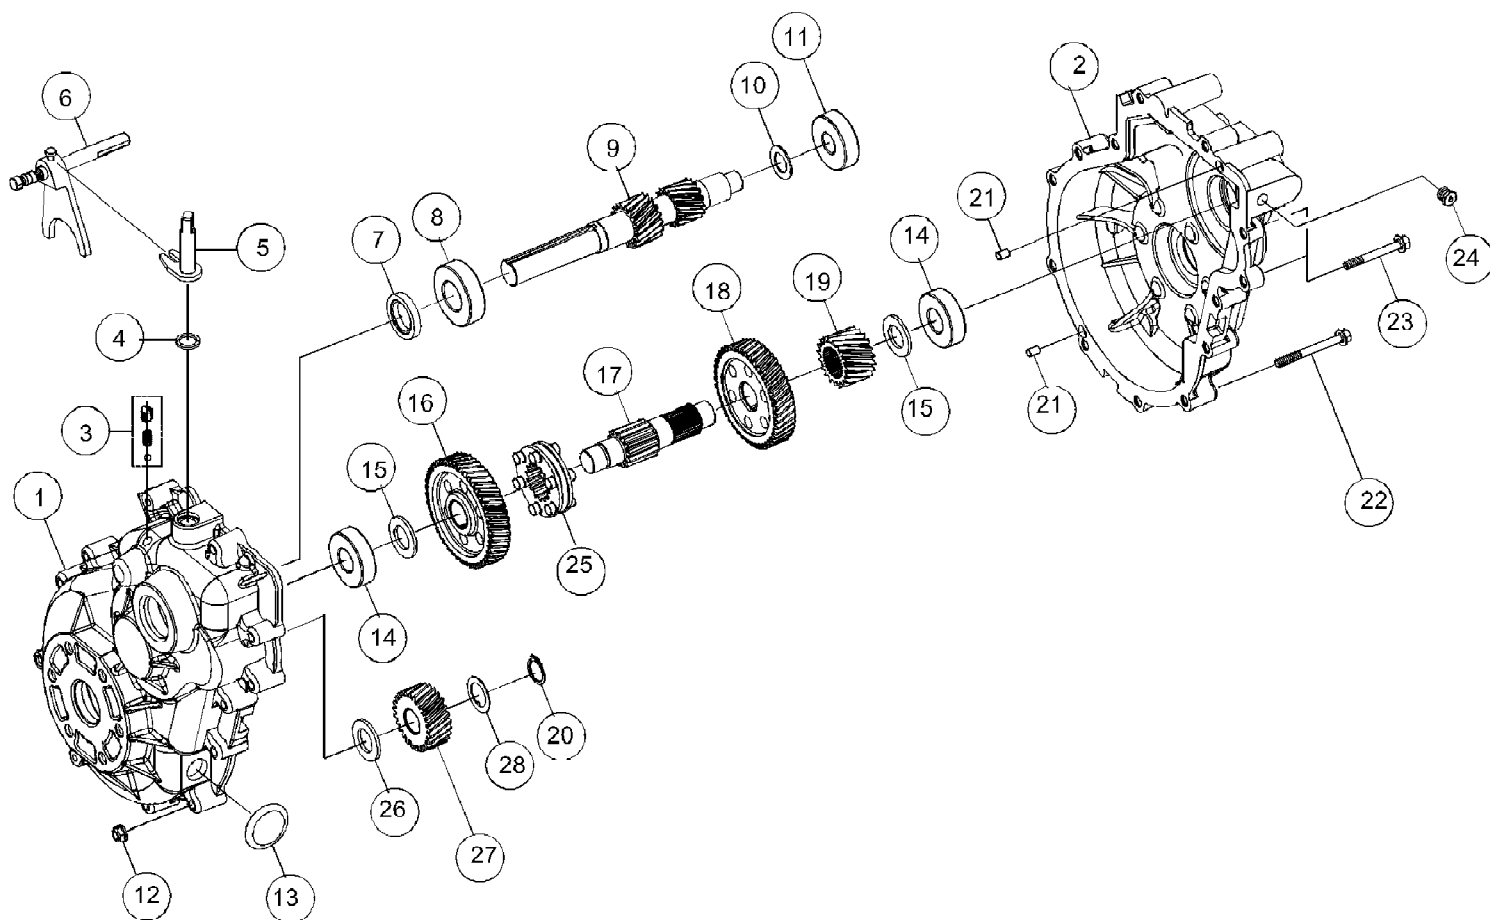

420 4X2 Utility Vehicle
Transmission - Input Shaft Assembly

Page 74 of 78


Ref #	Part Number	Qty	S/P/F	Description
1	DC-012CH254-3	1	F	Housing, Axle, w/Idler Shaft
2	DC-012CH240	1	F	Housing, Axle, Finished
3	DC-012LK133	1		Kit, Detent
4	DC-012HH122	1		Seal, Oil
5	DC-012GV164X	1		Assembly, Actuator
6	DC-012SV112X	1		Assembly, Shift Rod
7	DC-012HH128	3		Seal, Oil
8	DC-585965	1	F	Bearing, Ball
9	DC-012GS307	1	F	Shaft, Input
10	DC-012LK134	2		Kit, Shim Use Shim(s) as required to maintain proper clearance.
11	DC-012HD111	1	F	Bearing, Ball
12	DC-012HN120	13		Nut, Lock
13	DC-41356	1		Plug, Rubber
14	DC-012HD129	2	F	Bearing, Ball
15	DC-012HS121	2		Spacer, Flat,
16	DC-012GS202X	1	F	Gear Assembly, Forward
17	DC-012GS200	1		Shaft, Intermediate
18	DC-012GS204X	1	F	Gear Assembly, Reverse
19	DC-012GS215	1	F	Gear, Helical (Pinion)
20	DC-012HR128	1		Ring Retaining
21	DC-012HP120	2		Pin, Dowel
22	DC-012HM110-1	11		Screw, Flange Head
23	DC-012HM110-2	2		Screw, Flange Head
24	DC-012HN140	1		Vent
25	DC-012GS302	1		Gear, Clutch
26	DC-012HS126	1		Washer, Thrust
27	DC-012GS207X	1	F	Gear, Assembly, Idler
28	DC-012HS125	1		Washer, Thrust

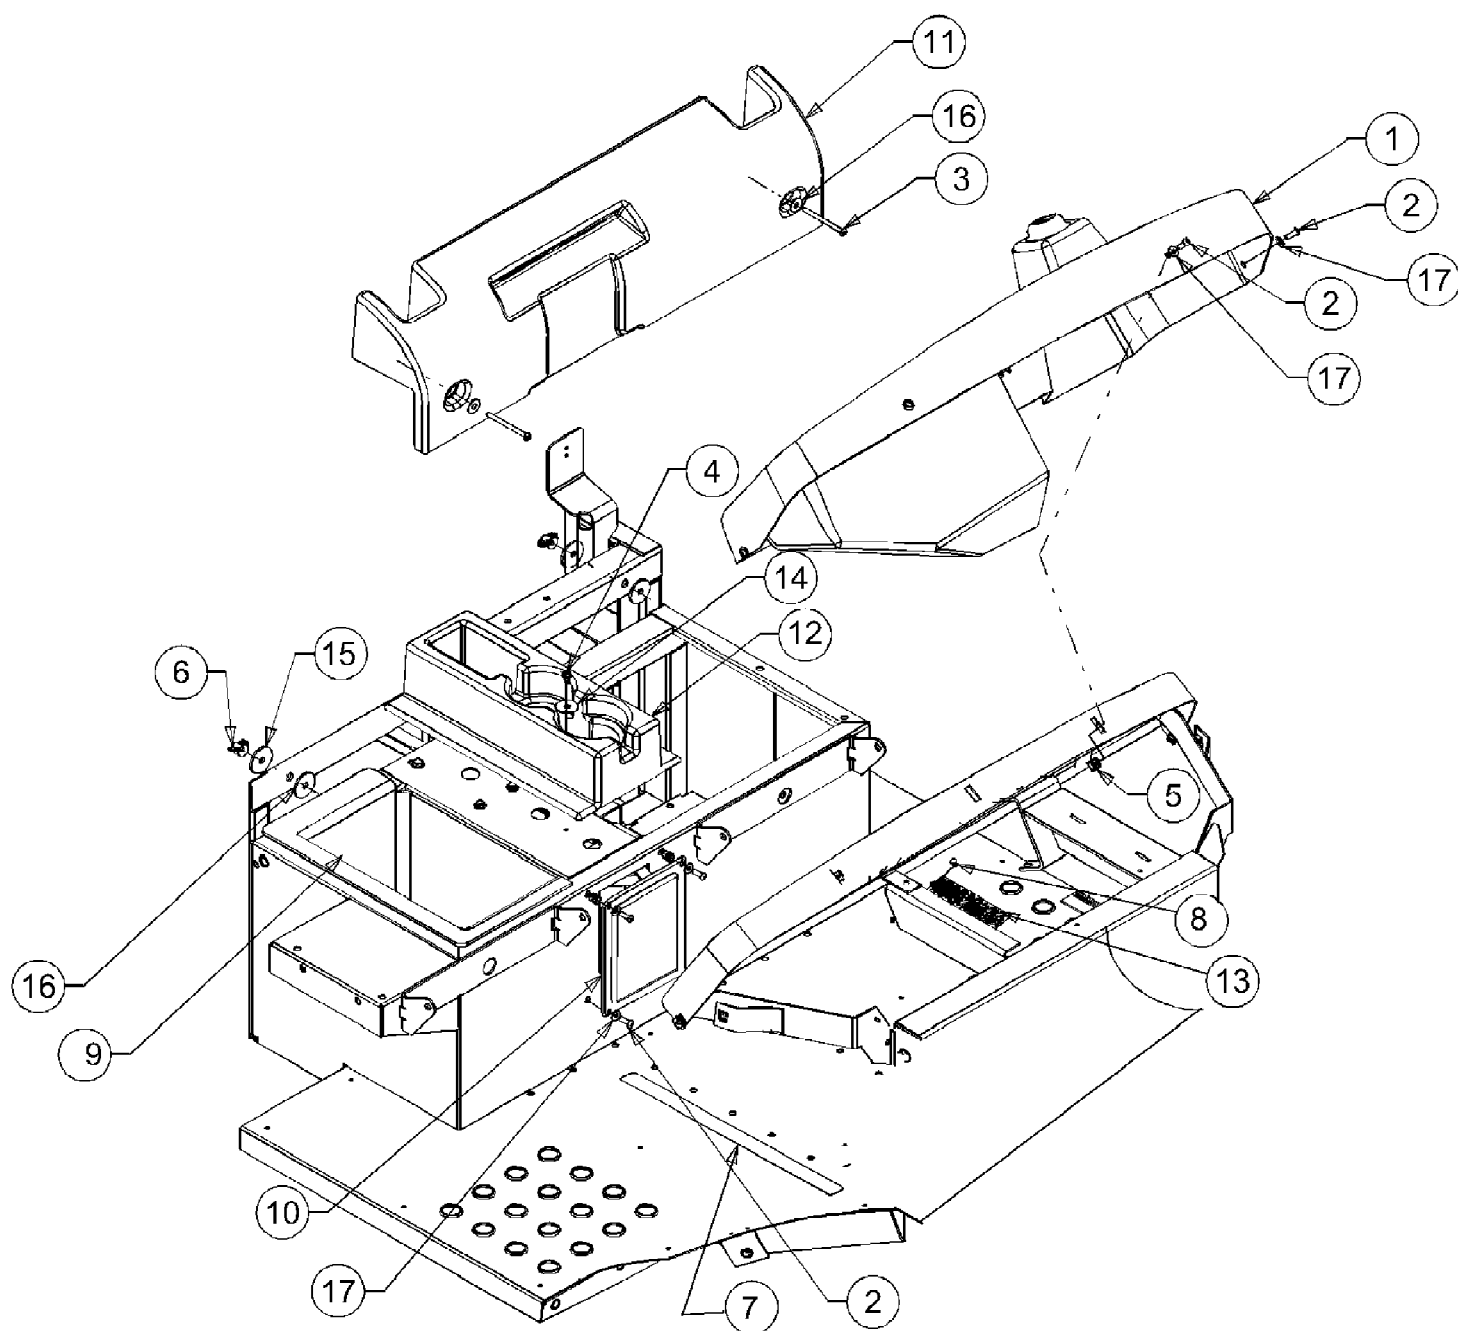

420 4X2 Utility Vehicle
Trim Panels

Page 76 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	731-04270	1	S	Dash
2	710-04064	8	/P	Screw, 1/4-20 x .75
3	710-04066	2	/P	Screw, 1/4-20 x 3.0
4	710-0599	1	/P	Screw, Self-tapping, 1/4-20 x 0.500
5	712-04013	2		Nut, Retainer, 1/4-20
6	712-0397	2	S	Wing Nut, 1/4-20 (w/ Bell Washer)
7	723-04014	4		Anti Skid Foot Pad
8	726-0465	4		Retainer Clip .250 x .267
9	731-04033A	1	S	Tool Box
10	731-04225	1	S	Panel, Shift Cover
11	731-04317	1	S	Panel, Airbox Cover
12	731-2648	1		Console, Cup Holder
13	735-04029	1	S	Pad, Foot
14	736-04004	1		Flat Washer, .350 x 1.25 x .06
15	736-04017	2		Washer, Rubber, .375 x 1.5 x 1.25
16	736-0195	2	/P	Washer, Flat, .3125 x .875 x .04
17	736-3020	8	S	Washer, Flat, .271 x .630 x .065

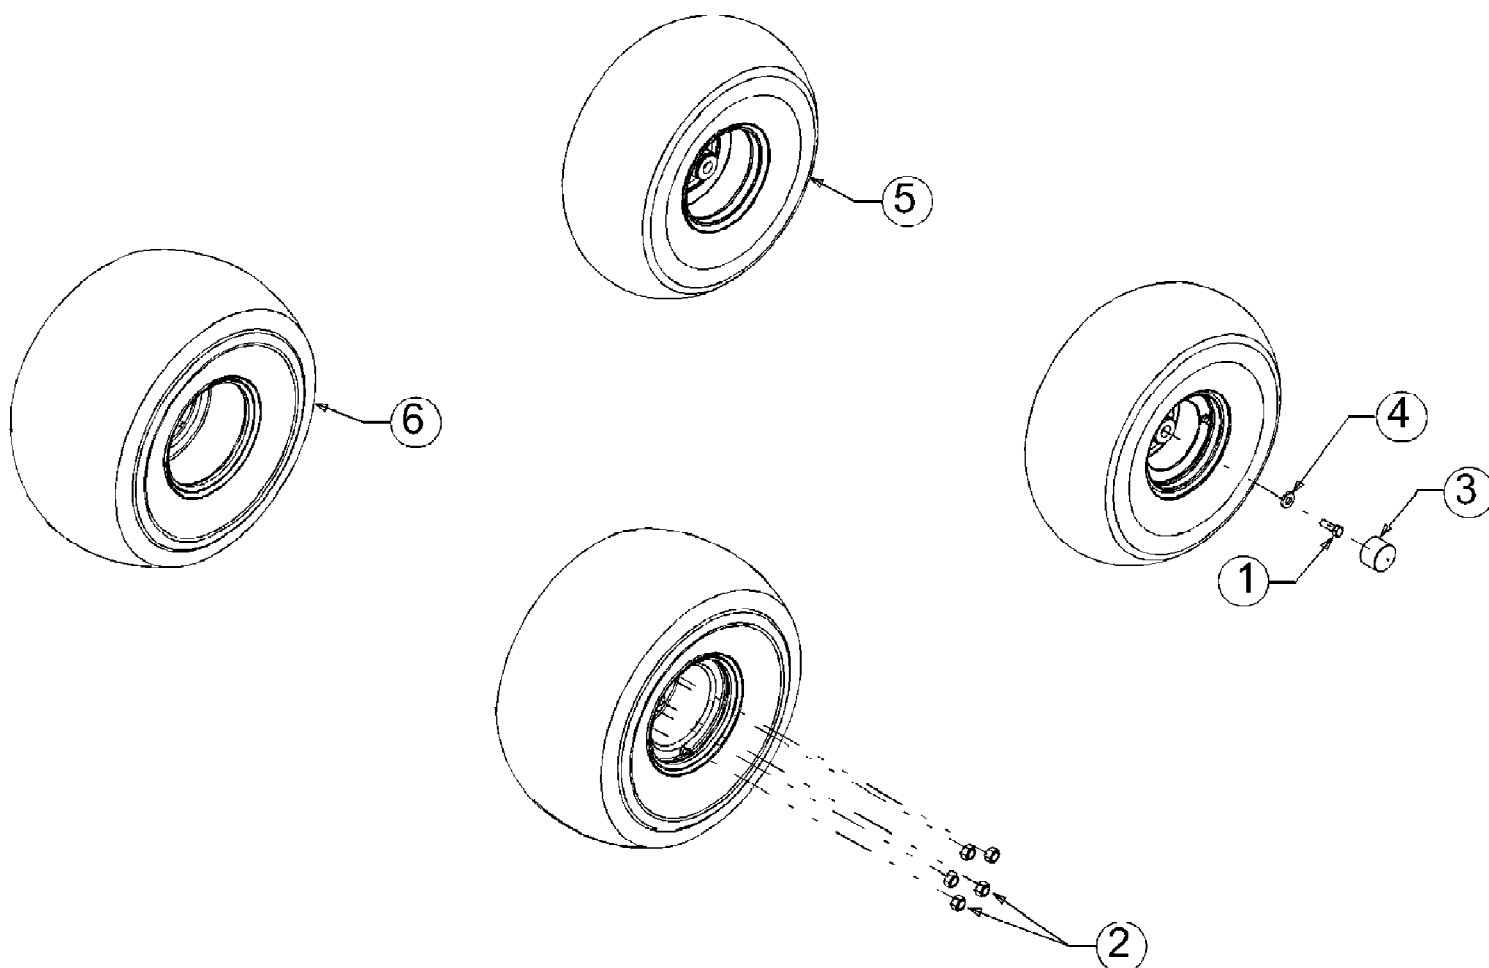

420 4X2 Utility Vehicle
Wheels

Page 78 of 78

Ref #	Part Number	Qty	S/P/F	Description
1	710-3181	2	/P	Hex Screw, 1/2-13 x 1.5, Gr5
2	712-0378	10	/P	Nut Hex, 7/16-20
3	731-04029	2		Dust Cover
4	736-04019	2		Washer, Flat, .531 x 1.25 x .181
5	634-0350	2	S	Wheel Assembly 22.5 x 10 x 8 (Turf)
5	634-04029	1		Wheel Assembly 22 x 11 RH (AT)
5	634-04030	1		Wheel Assembly 22 x 11 LH (AT)
6	634-0351	2		Wheel Assembly 25 x 12 x 9 (Turf)
6	634-04027	1		Wheel Assembly 25 x 11 x 10 RH (AT)
6	634-04028	1		Wheel Assembly 25 x 11 x 10 LH (AT)