

For Husqvarna Parts Call 606-678-9623 or 606-561-4983



**Illustrated Parts
List**

132 HBV

Blower


1.1996

PARTS LIST NO. 530-067901	REPLACES 530-067901-2/15/95
PAGE NO. 1	

Note: Illustrations may differ from actual models due to design changes

MODEL 132 HBV

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

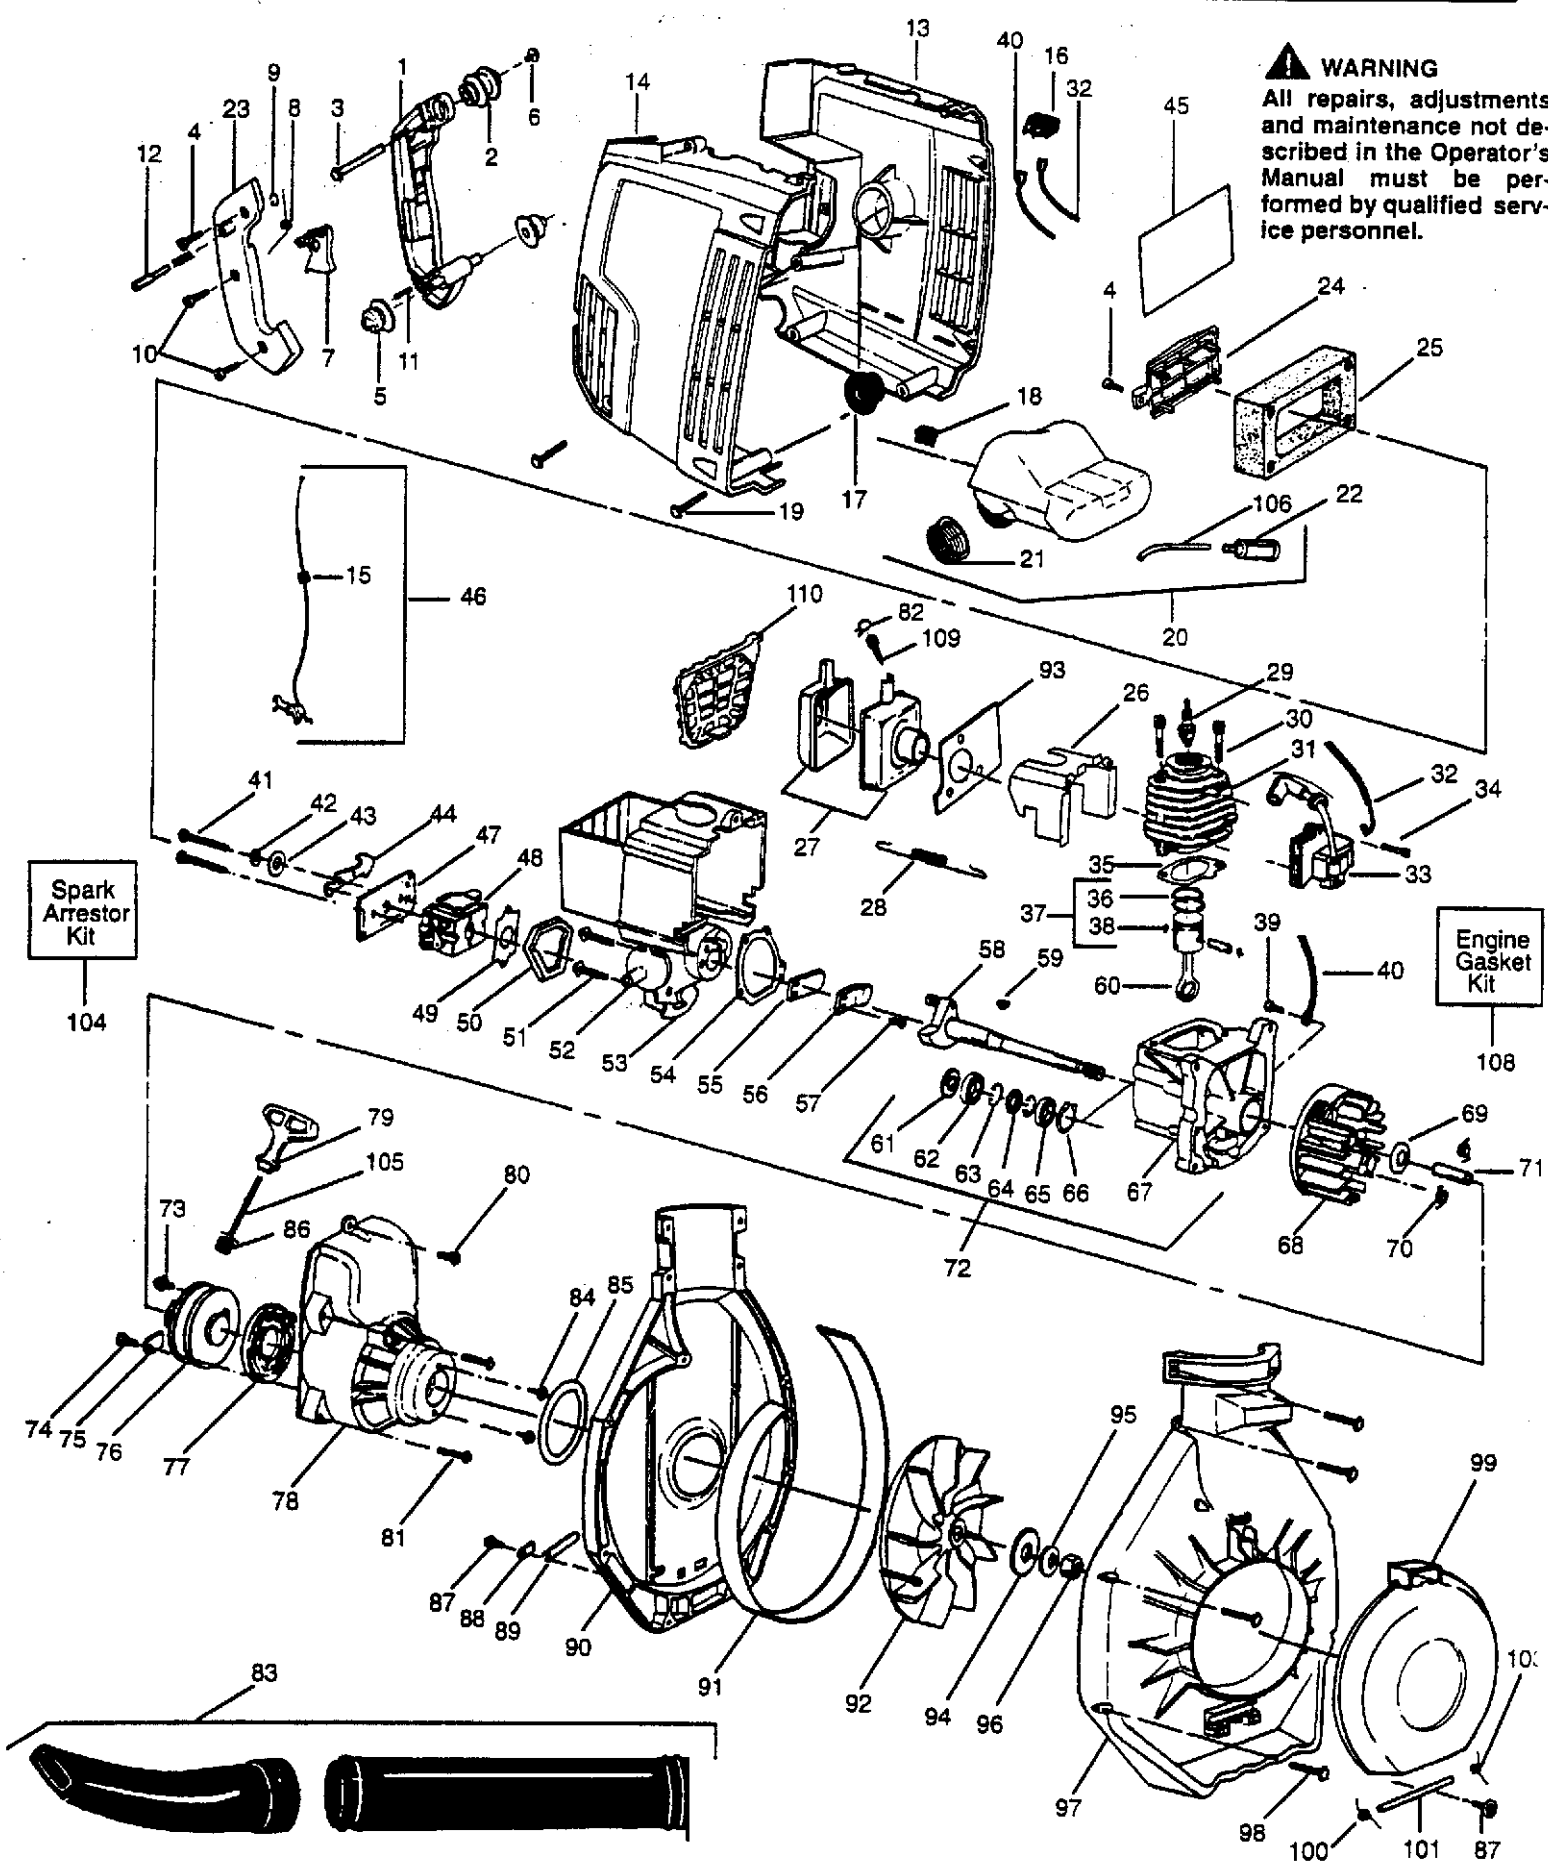

Key No.	Part No.	Description	Key No.	Part No.	Description
1	530-094712	Handle	59	530-015126	Key-Flywheel
2	530-026994	Front Isolator	60	530-010960	Connecting Rod Ass'y.
3	530-029111	Spacer	61	★★★★★	Spacer-See Service Reference 2
4	530-015635	Screw-Handle	62	530-032103	Inner Bearing
5	530-029130	Rear Isolator	63	530-015787	Ring-Retaining, C'case
6	530-015813	Screw	64	530-019158	Crankshaft Seal
7	530-029072	Trigger	65	530-032102	Outer Bearing
8	530-027597	Spring	66	530-015789	Retaining Ring-Crankshaft
9	530-015702	"C" Clip	67	530-014016	Crankcase Ass'y.
10	530-029117	Throttle Lock Button	68	530-039189	Flywheel
11	530-015840	Pin	69	530-347987	Washer
12	530-024772	Spring	70	530-023817	Spring-Starter Dog
13	530-037851	Shroud-Left	71	530-038386	Spacer-Flywheel
14	530-037850	Shroud-Right	72	530-014156	Crankcase/Crankshaft Ass'y.
15	530-019168	Grommet	73	530-016080	Screw-Starter Pulley
16	530-069572	Switch Kit	74	530-015496	Screw-Retainer
17	530-029129	Isolator-Engine Mount	75	530-027523	Retainer
18	530-029295	Isolator-Tank	76	★★★★★	Starter Pulley (Incl.73)-See Service Reference 1
19	530-015814	Screw-Shroud	77	530-029395	Starter Spring
20	530-014162	Fuel Tank Ass'y. (Incl. #21, 22 & 106)	78	530-069714	Fan Housing Kit (Incl. Starter Pulley)
21	530-014347	Fuel Cap Ass'y.	79	530-027569	Starter Handle
22	530-014362	Fuel Pick-up Ass'y.	80	530-015775	Screw-Fan Housing
23	530-014160	Handle Cover Ass'y. (Incl. 9, 10 & 12)	81	530-015769	Screw-Fan Housing
24	530-037847	Cover-Air Filter	82	530-029228	Clamp
25	530-029112	Air Filter	83	530-038508	Tube and Nozzle As'y.
26	530-029404	Air Baffle	84	530-015805	Screw-Fan Housing
27	530-069293	Muffler Kit	85	530-019167	"O" Ring-Fan Housing
28	530-029116	Spring-Muffler	86	530-029182	Eyelet
29	530-030075	Spark Plug (RCJ-8Y)	87	530-015815	Screw
30	530-015239	Screw-Cylinder	88	530-027523	Retainer
31	530-069628	Cylinder Kit	89	530-029119	Tube-Rope Retainer
32	530-029425	Lead Wire	90	530-094710	Blower Housing (Upper)
33	530-039137	Ignition Module	91	530-029173	Band
34	530-015816	Screw-Ignition Module	92	530-014157	Impeller Ass'y.
35	530-019178	Gasket-Cylinder	93	530-019232	Muffler Gasket
36	530-025875	Piston Ring	94	530-015818	Washer-Impeller
37	530-069277	Piston Kit (Incl. #36,38, & Pin)	95	530-015441	Washer-Conical
38	530-015162	Retainer	96	530-001733	Nut
39	530-015306	Screw-Groundwire	97	530-047736	Blower Housing (Lower) Ass'y (Incl. 99-103)
40	530-029426	Ground Wire	98	530-015814	Screw
41	530-015849	Screw	99	530-047700	Door
42	530-015254	Wave Washer	100	530-015667	Spring-Right
43	530-015852	Spacer	101	530-015647	Pin
44	530-029114	Choke Shutter	103	530-015672	Spring-Left
45	530-047413	Instruction Decal	104	530-069348	Spark Arrestor Kit
46	530-037492	Cable Assembly (Incl. #45)	105	530-069232	Rope Kit
47	530-029115	Plate	106	530-069247	Line Kit
48	530-069644	Carburetor (WT 141A) w/Limiter Cap	108	530-069294	Gasket Kit
49	530-019164	Gasket-Carburetor	109	530-029227	Screen
50	530-019165	Seal-Reed Block	110	530-069692	Muffler Guard
51	530-015771	Screw-Reed Block			
52	530-029113	Ground Wire			
53	530-047696	Reed Block/Heat Shield			
54	530-019166	Gasket-Reed Block			
55	530-027593	Reed Valve			
56	530-027594	Reed Stop			
57	530-016064	Screw			
58	530-014033	Crankshaft-See Service Reference 2			
			Not Shown		
				530-083094	Operator Manual
				530-083427	French/English
				530-083428	European
				530-031159	Scandinavian
					Hex Wrench 5/32"

✓ = NEW PART NUMBER FOR THIS IPL


★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)

PAGE NO. 3
 REPLACES 530-067901-2/15/95

Note: Illustrations may differ from actual models due to design changes


MODEL: 132 HBV

Vacuum Attachment Parts

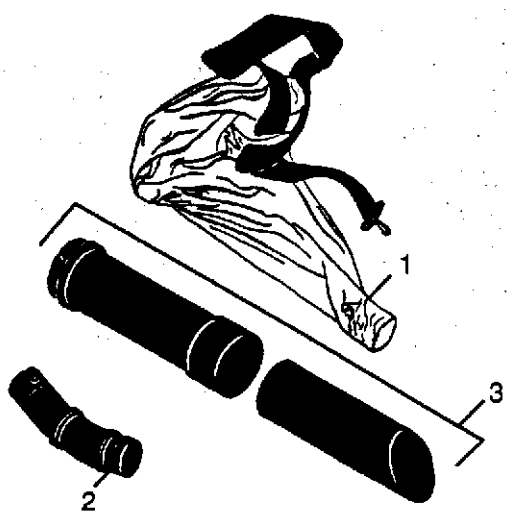

KEY NO.	PART NO.	DESCRIPTION
1	530-095116	Collection Bag W/Strap
2	530-095117	Elbow
3	530-069750	Vacuum Tube Kit


Gutter Attachment #952-703530

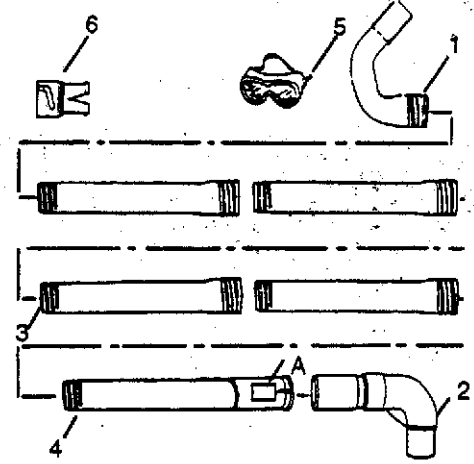

KEY NO.	PART NO.	DESCRIPTION
1	530-094426	Nozzle
2	530-094518	Elbow
3	530-094425	Extension Tube
4	530-094424	Pivot Tube
5	952-701645	Goggles
6	530-094850	Adapter
A	530-029036	Warning Decal

Carburetor Assembly (WT-141A) #530-069644

Carb. Repair Kit 17
 Carb. Gasket Kit 18

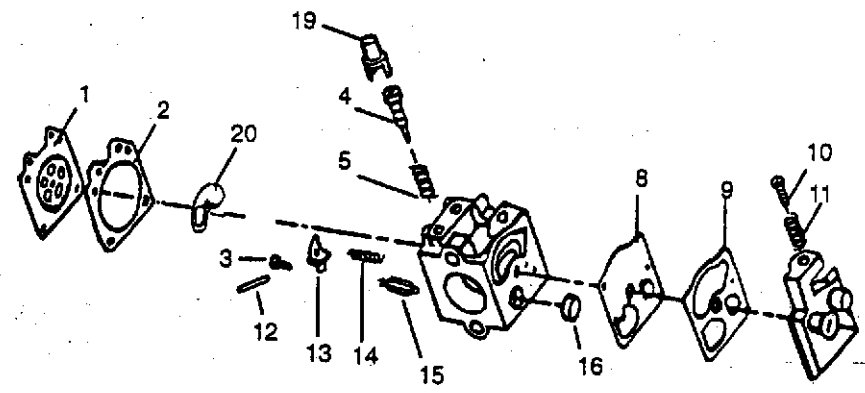


Key No.	Part No.	Description	Key No.	Part No.	Description
1	530-035014	*+ Metering Diaphragm	13	530-035031	* Metering Lever
2	530-035151	*+ Metering Diaphragm Gasket	14	530-037330	* Metering Lever Spring
3	530-035016	* Metering Lever Pin Screw	15	530-035106	* Inlet Needle Valve
4	530-035341	Mixture Needle	16	530-035178	* Fuel Inlet Screen
5	530-035376	Mixture Needle Spring	17	530-035264	Carb. Kwik Repair Kit (*Indicates Contents)
8	530-035166	*+ Fuel Pump Diaphragm	18	530-035219	Carb. Gasket/Diaphragm Kit (+Indicates Contents)
9	530-035164	*+ Fuel Pump Gasket			Kit (+Indicates Contents)
10	530-035203	Idle Speed Screw			Limiting Cap
11	530-035121	Idle Screw Spring	19	530-038403	
12	530-035028	* Metering Lever Pin	20	530-035211	*+ Circuit Plate Gasket

530-067901 - 3/29/96	
PAGE NO. 4	REPLACES 530-067901-2/15/95


Note: Illustrations may differ from actual models due to design changes

SERVICE REFERENCE

1. Starter Pulley – When ordering a new starter pulley for your unit, please measure your existing pulley as shown by the dimensions in the illustrations below and order accordingly.

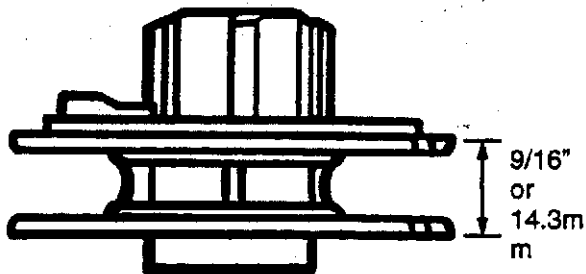

530-069291

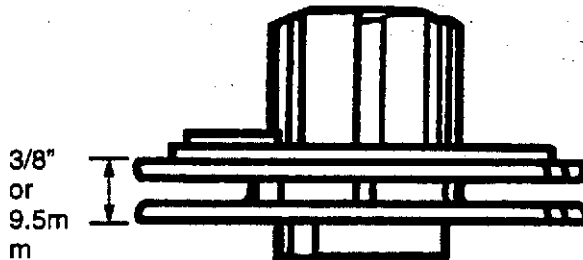


530-069486

NOTE: Illustrations smaller than actual size.

2. Crankshaft Spacer – Earlier models equipped with the laminated crankshaft (shown on the left) requires Spacer 530-015788. Later models equipped with a step on the crankshaft (shown on the right), do not require the spacer.

Spacer Required

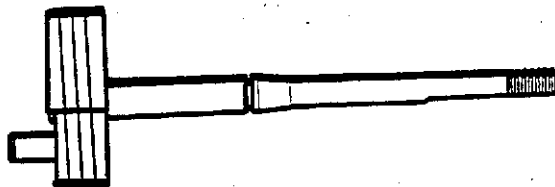

Spacer Not Required

