



No  
Diagram  
Available  
  
Parts List  
Only


Ref #	Part Number	Qty	Description
	94074-05		Bar - 16" Sprocket Tip Not available separately
	93778-05		Bar - 20" Sprocket Tip Not available separately
	86846-05		Bar - 24" Sprocket Tip Not available separately
	218839-12		Chain - PMR370GLX 60CL Not available separately
	218069-12		Chain - PMR370GLX 70CL Not available separately
	218070-12		Chain - PMR370GLX 81CL Not available separately
	219131-00		File Plate Not available separately
	214217-00		Round File Not available separately

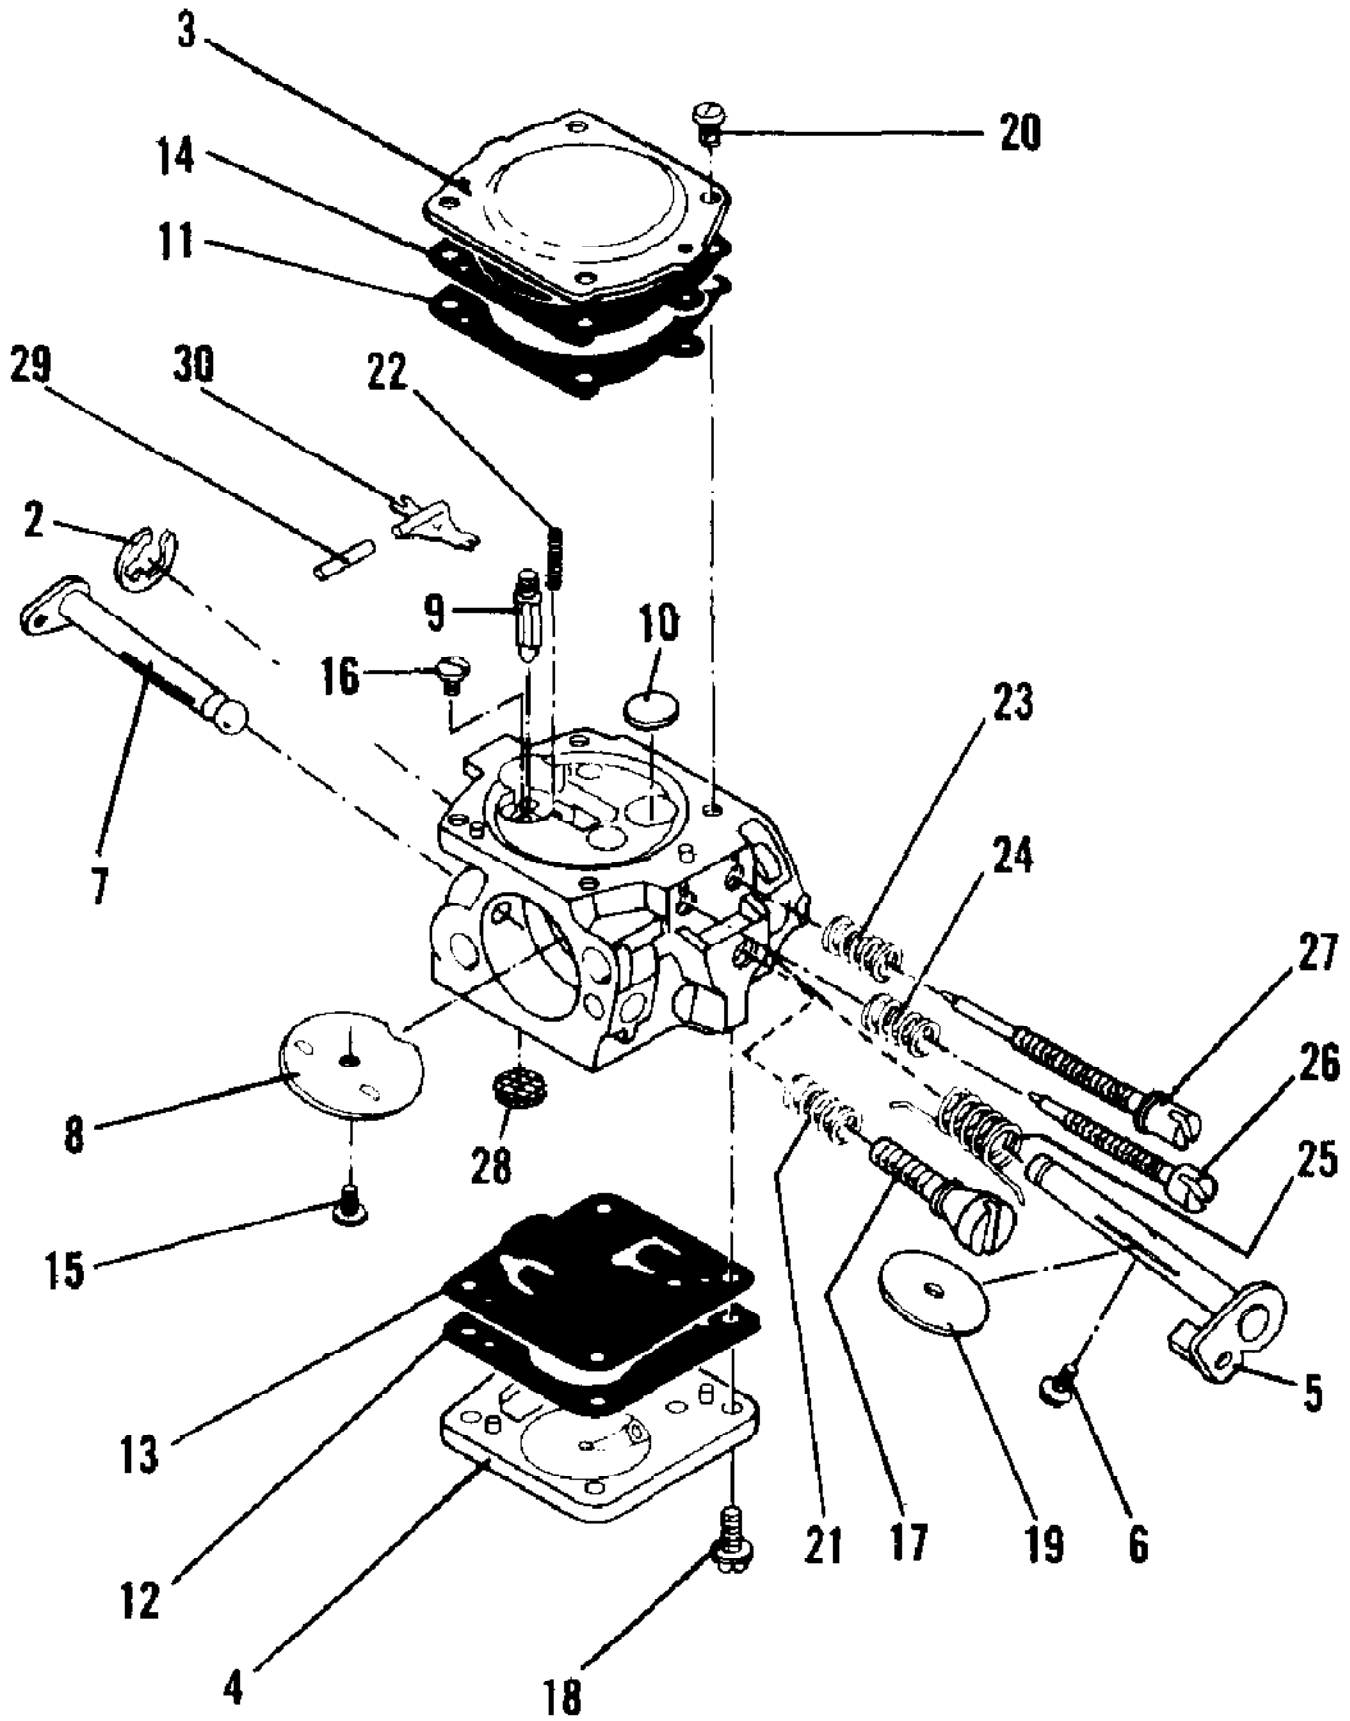

Ref #	Part Number	Qty	Description
1	229400	1	Carburetor - Walbro WJ-23
2		1	Ring - Shaft Retainer Not available separately
3		1	Cover - Metering Not available separately
4		1	Cover - Fuel Pump Not available separately
5		1	Shaft - Throttle Not available separately
6		1	Shutter - Throttle Not available separately
7		1	Shaft - Choke Not available separately
8		1	Shutter - Choke Not available separately
9		1	Valve - Needle Not available separately
10		1	Plug - Welch Not available separately
11		1	Gasket - Metering Not available separately
12		1	Gasket - pump Not available separately
13		1	Diaphragm - Pump Not available separately
14		1	Diaphragm Asy - Metering Not available separately
15		1	Screw - Choke Shutter Not available separately
16		1	Screw - Metering Pin Not available separately
17		1	Screw - Idle Adjust Not available separately
18		4	Screw - Pump Cover Not available separately
19		1	Screw - Throttle Shutter Not available separately
20		4	Screw - Metering Cover Not available separately
21		1	Spring Not available separately
22		1	Spring - Meter Lever Not available separately
23		1	Spring - Idle Needle Not available separately
24		1	Spring - High Needle Not available separately
25		1	Spring - Throttle Not available separately
26		1	Needle - High Speed Not available separately
27		1	Needle - Idle Not available separately
28		1	Screen - Fuel Inlet Not available separately
29		1	Pin - Metering Lever Not available separately
30		1	Lever - Metering Not available separately
	223697		Major Repair Kit
	223698		Gasket/Diaphragm Kit

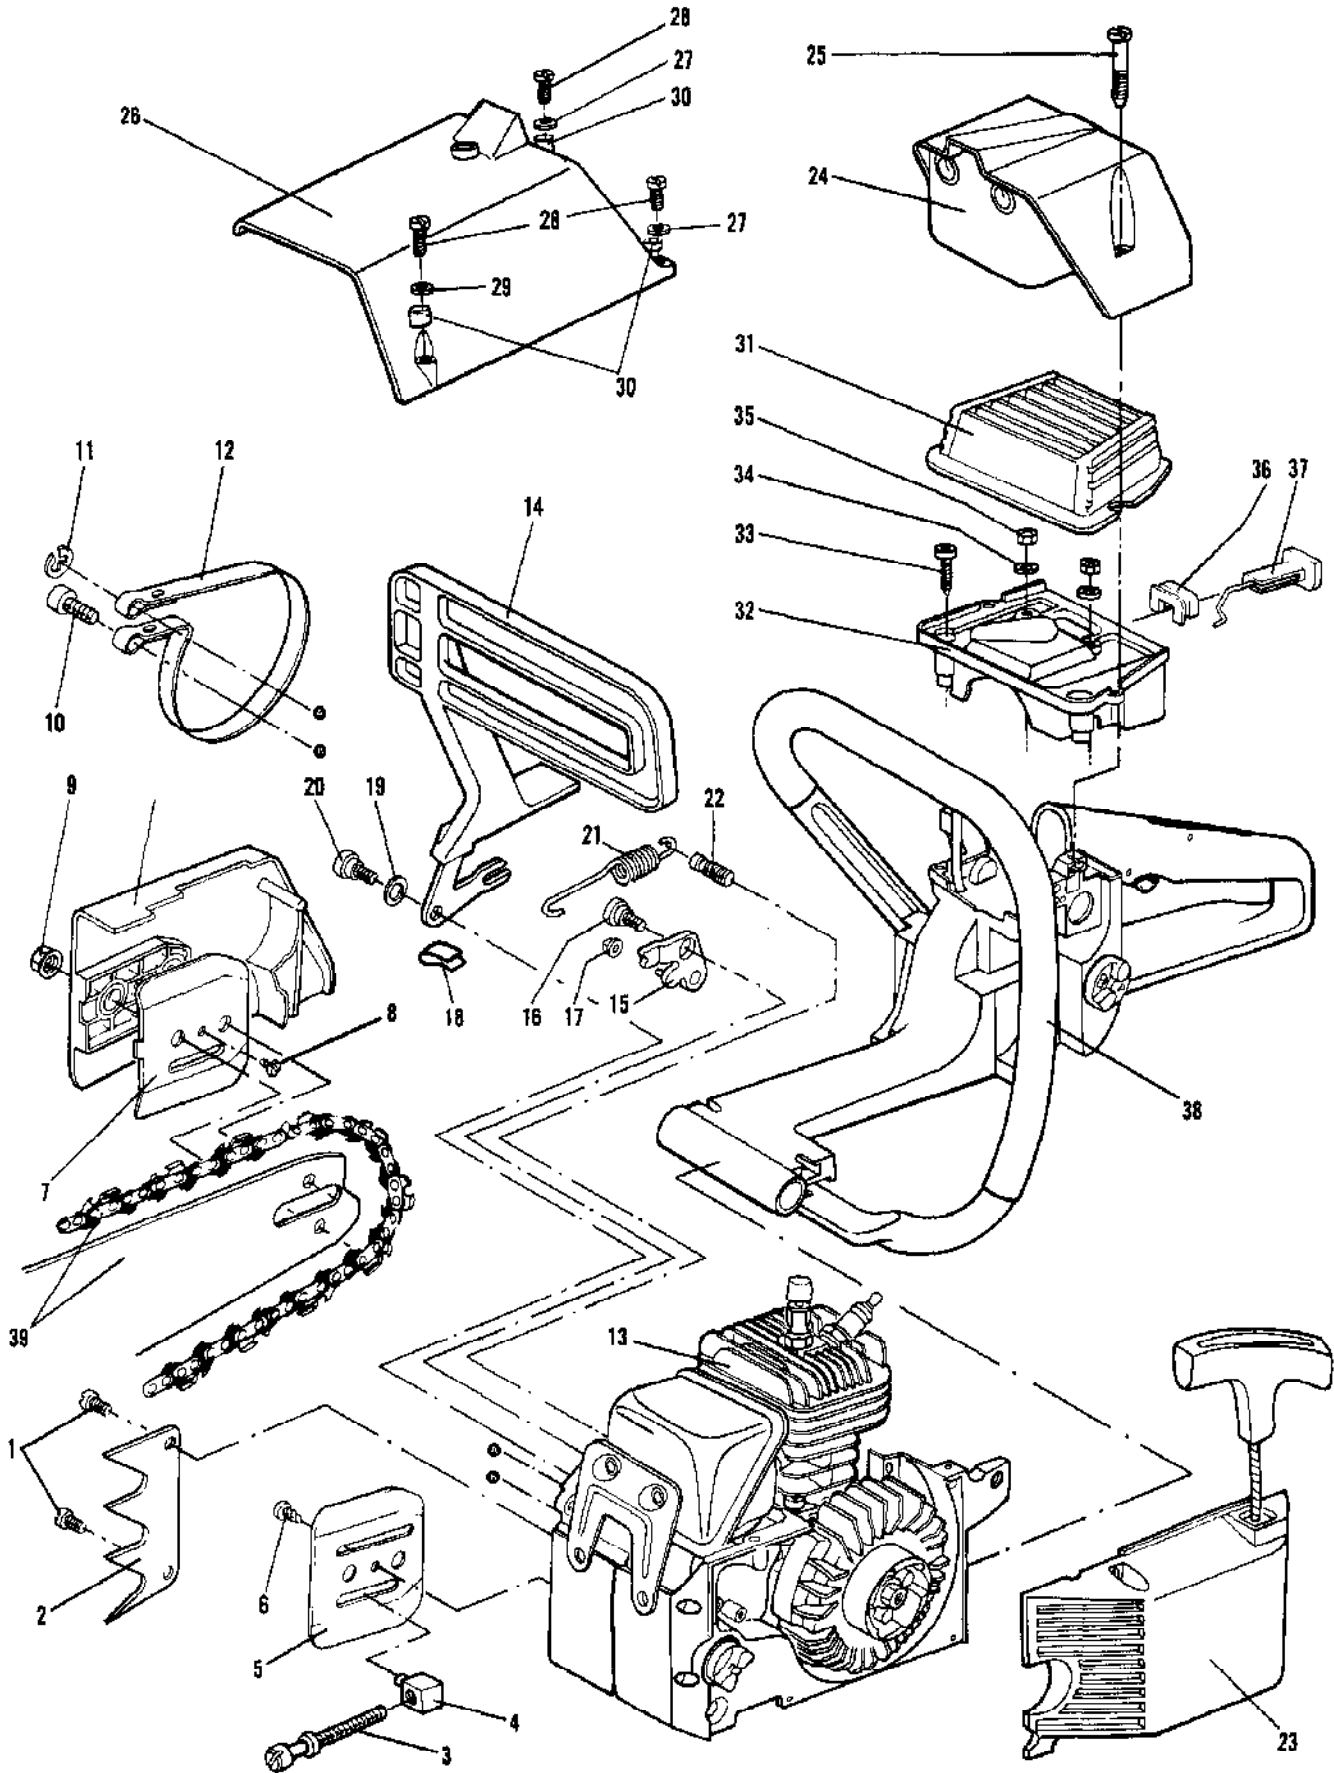


Ref #	Part Number	Qty	Description
1	229283	2	Screw M5 x 10 (15-20 in. lbs.)
2	229448	1	Spike - Bucking
3	229508	1	Screw - Bar Adjusting
4	229507	1	Nut - Bar Adjusting
5	229516	1	Plate - Bar
6	229406	1	Brake Housing
7	229517	1	Plate - Bar
8	229536	2	Screw
9	218042	2	Nut Flange M8
10	236527	1	Screw (80-90 in. lbs. Torque)
11	218079	1	Ring - Retaining
12	229511	1	Band - Brake
13			Powerhead See "Powerhead Assembly" illustration and parts list.
14	229410	1	Lever - Brake
15	229509	1	Latch Asy - Chain Brake
16	229510	1	Screw (80-90 in. lbs. Torque)
17	218956	1	Slider
18	229514	1	Spring
19	218679	1	Washer - Spring
20	229510	1	Screw (80-90 in. lbs. Torque)
21	217440	1	Spring - Chain Brake
22	229512	1	Holder - Spring
23			Starter Assembly See "Starter Assembly" illustration and parts list.
24	229537	1	Cover - Air Filter
25	229163	2	Screw - M5 x 30
26	229980	1	Cover - Engine
27	235248	2	Washer
28	229712	3	Screw M5 x 16 (15-20 in. lbs. Torque)
29	235248	1	Washer
30	229285	3	Spacer
31	229403	1	Filter - Air
32	229401	1	Air Filter Box
33	235205	2	Screw
34	235248	2	Washer
35	235216	2	Nut - M5
36	229380	1	Shield
37	229377	1	Choke Knob
38			Mainframe Assembly See "Mainframe Assembly" illustration and parts list.
39			Bar/Chain See "Bar And Chain Information" illustration and parts list.

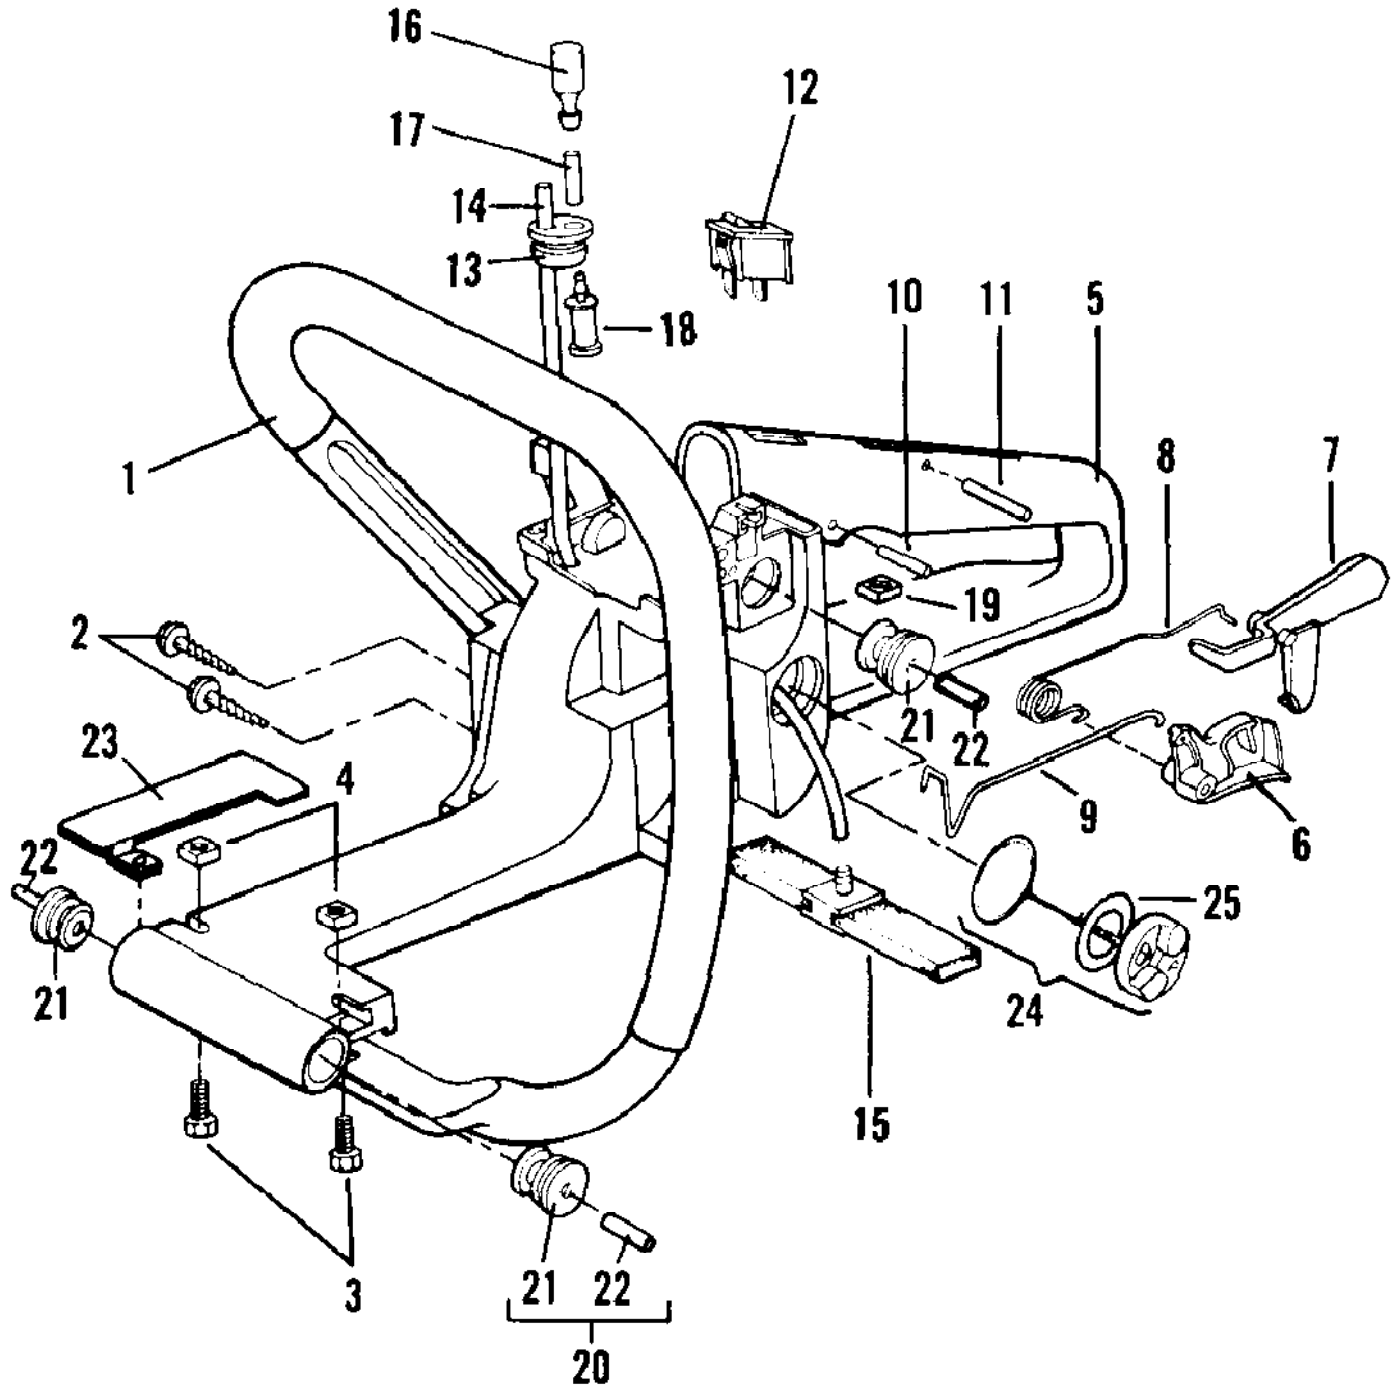


Ref #	Part Number	Qty	Description
1	229375	1	Front Handle
2	229562	2	Screw - Self Tapping
3	229561	2	Screw M5 x 16
4	229524	2	Nut M5
5	229722	1	Kit - Handle/Tank
6	228913	1	Trigger - Throttle
7	228922	1	Trigger - Safety
8	93771	1	Spring - Throttle
9	229520	1	Linkage - Throttle
10	229541	1	Pin
11	229542	1	Pin
12	228277	1	Switch - Ignition
13	235675	1	Fuel Tank Grommet
14	229719	1	Fuel Hose
15	218895	1	Filter - Fuel
16	218260	1	Vent Assembly
17	229716	1	Breather Pipe O/T
18	235673	1	Screw - Fuel Line Vent
19	229524	1	Nut
20	229981	4	Mount Assembly
21		4	A/V Mount Not available separately
22		4	A/V Bushing Not available separately
23	229741	1	Low Repair Plate
24	229663	1	Cap - Fuel Mix
25	235510	1	O-Ring



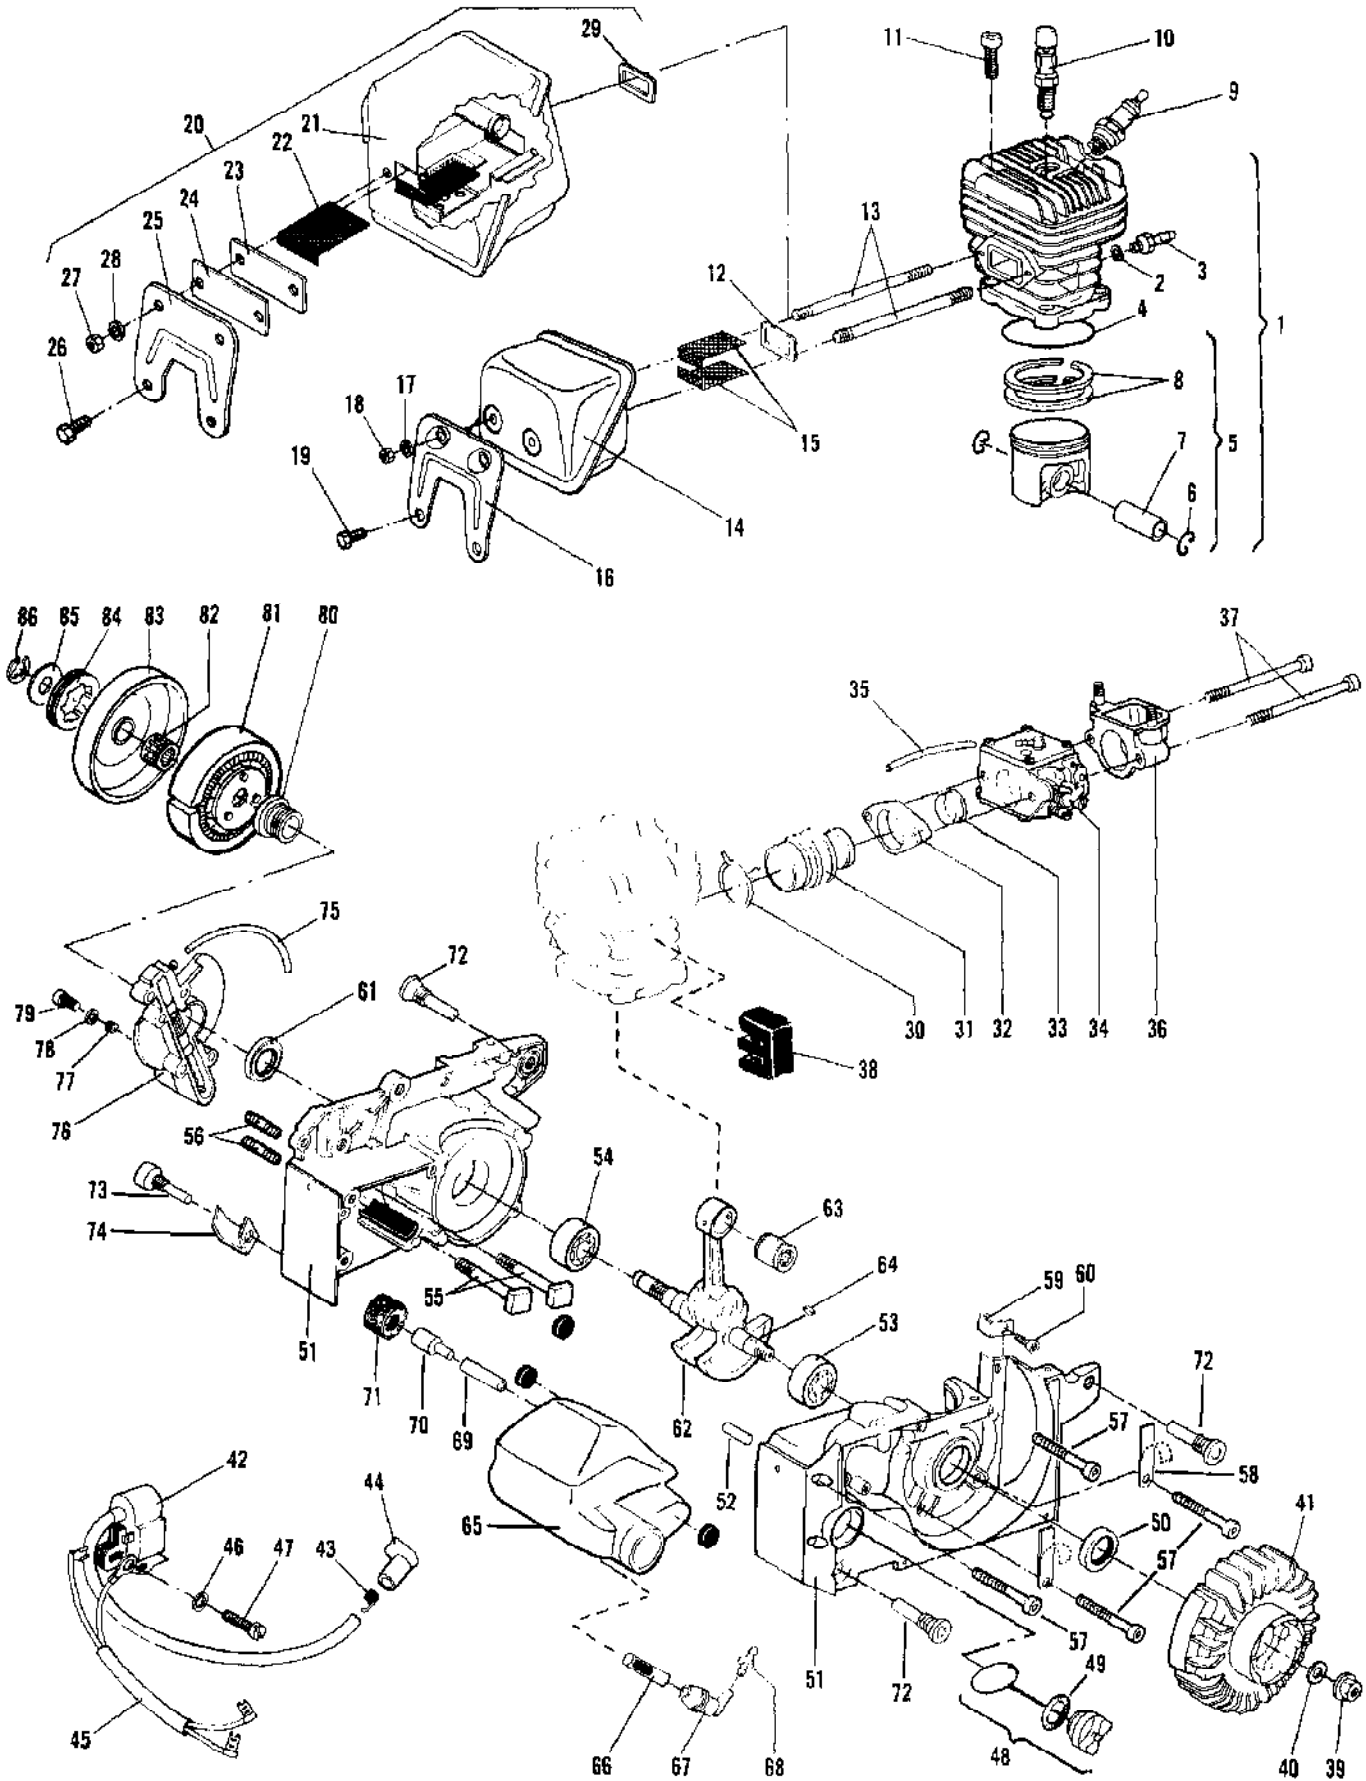

Ref #	Part Number	Qty	Description
1	229714	1	Kit - Cylinder/Piston
2	235586	1	Joint Washer
3	229515	1	Nipple - Pulse
4	229302	1	O-Ring
5	229543	1	Kit - Piston
6	229544	2	Ring - Piston Pin
7	229067	1	Pin
8	229070	2	Set - Piston Ring
9	93017	1	Spark Plug - RDJ-6J
10	94273	1	Valve (DSP)
11	228150	4	Screw M6 x 20 (90 in. lbs. Torque)
12	229502	1	Gasket - Muffler
13	229535	2	Bolt - Muffler (60-70 in. lbs. Torque)
14	229500	1	Muffler
15	223695	2	Kit - Spark Arrestor
16	229501	1	Muffler Holder
17	236529	2	Washer - 5.5 x 10 x 1
18	235216	2	Nut M5
19	229563	2	Screw M5 x 10 (60 in. lbs. Torque)
20	223643	1	Kit - Muffler
21	229858	1	Muffler Body Asy
22	229854	2	Screens - Spark Arrestor
23	227049	1	Gasket - Cover Plate
24	227050	1	Plate - Cover
25	227051	1	Brace - Muffler
26	229563	2	Screw M5 x 10 (25-35 in. lbs. Torque)
27	235216	2	Nut - M5
28	236529	2	Washer
29	229502	1	Gasket - Muffler
30	229395	1	Ring
31	229017	1	Carburetor Boot
32	229396	1	Flange - Intake
33	229397	1	Ring - Intake
34		1	Carburetor See "Carburetor" illustration and parts list.
35	229718	1	Pulse Hose
36	229521	1	Air Filter Duct
37	229399	2	Screw M5 x 70 (35 in. lbs. Torque)
38	229887	1	Baffle
39	236958	1	Nut - Flywheel (150 in. lbs. Torque)
40	236957	1	Washer
41	229189	1	Flywheel Asy
42	229678	1	Ignition Assembly
43	236601	1	Connector
44	226196	1	Boot
45	229657	2	Stop Cable Assembly
46	235248	2	Washer
47	235806	2	Screw M5 x 20 (40 in. lbs. Torque)
48	229734	1	Oil Cap Asy
49	235511	1	O-Ring
50	229452	1	Seal - Ring
51	229713	1	Crankcase Asy
52	235221	1	Pin
53	229449	1	Bearing - Ball
54	229450	1	Bearing - Ball
55	229409	2	Bar Bolt

Ref #	Part Number	Qty	Description
56	227030	2	Studs - Bar
57	235530	6	Screw M5 x 35 (70 in. lbs. Torque)
58	229559	2	Clamp
59	229560	1	Clamp
60	217669	1	Screw M4 x 25 (25 in. lbs. Torque)
61	229451	1	(Seal) Ring
62	229540	1	Kit - Crankshaft
63	229453	1	Bearing - Piston
64	102164	1	Key - Flywheel
65	229715	1	Oil Tank
66	228857	1	Filter - Oil Pump
67	229386	1	Holder - Oil Filter
68	229330	1	Oil Pipe
69	229716	1	Breather Pipe - O/T
70	213260	1	Vent Assembly
71	90869	1	Filter - Vent
72	229503	3	Screw - Anti-Vibration (50 in. lbs. Torque)
73	229504	1	Screw - Anti-Vibration (50 in. lbs. Torque)
74	229505	1	Chain Holder
75	229717	1	Oil Hose
76	229303	1	Oil Pump Assembly
77		4	Bushing Not available separately
78	235612	4	Washer
79	228908	4	Screw M4 x 14 (25 in. lbs. Torque)
80	229295	1	Wormgear
81	229721	1	Clutch Asy
82	229682	1	Bearing
83	229724	1	Drum Hub Assembly
84	229723	1	Rim - Sprocket (.375)
85	229519	1	Washer
86	229137	1	Retaining Ring/Benzing

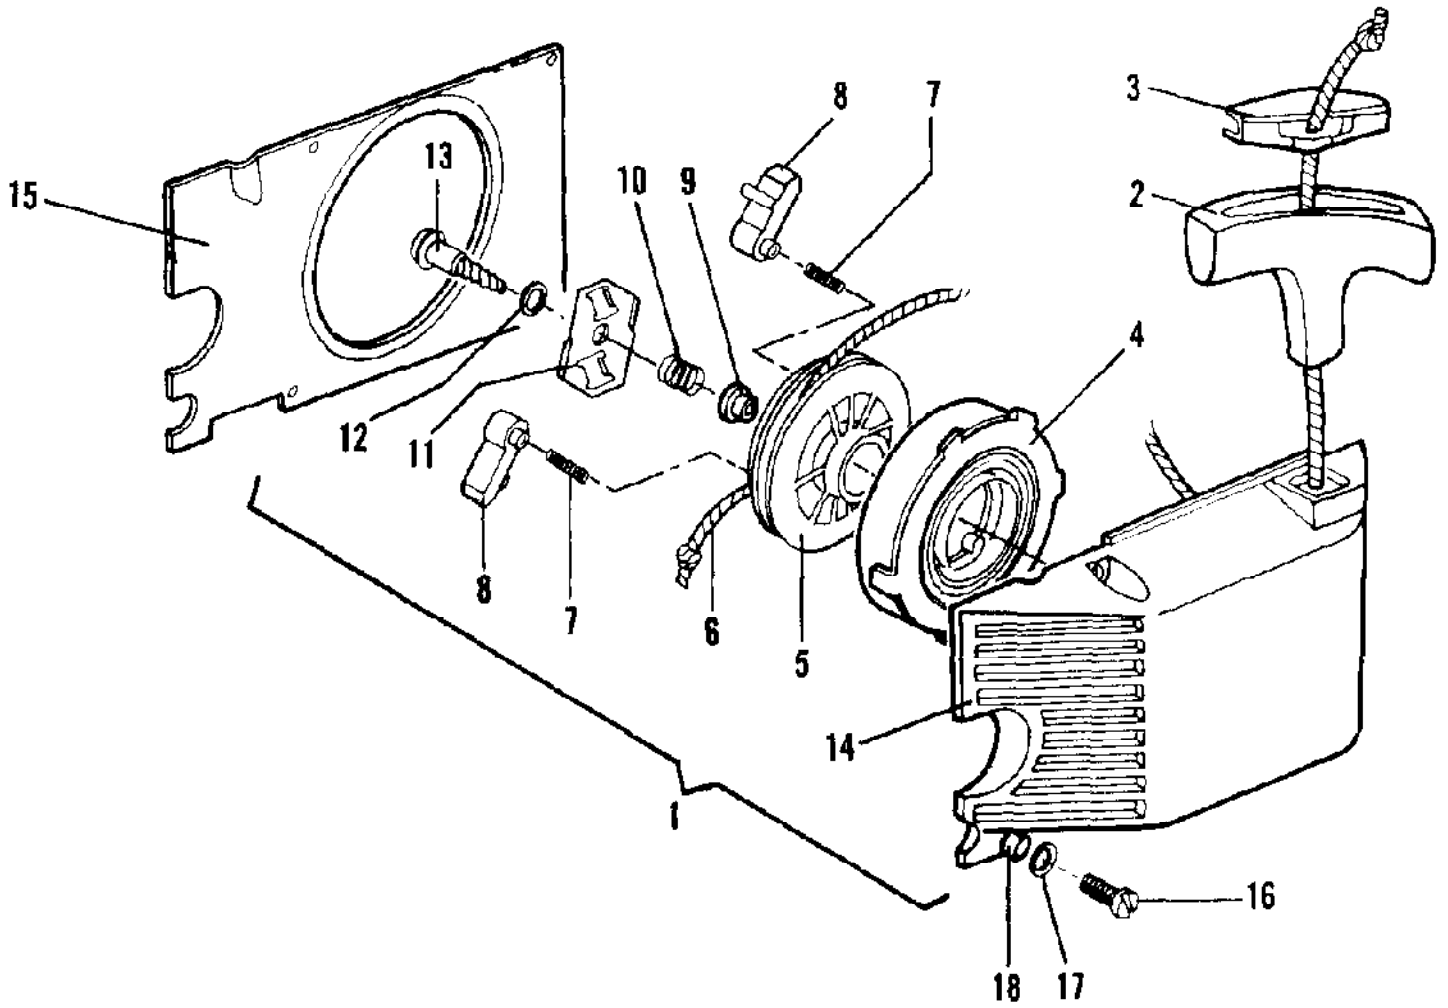

Ref #	Part Number	Qty	Description
1	229610	1	Kit - Starter
2	93137	1	Handle - Starter
3	214699	1	Insert - Starter Handle
4	217891	1	Spring Assembly
5	217889	1	Pulley - Starter
6	218051	1	Rope (46-48")
7	218052	1	Pin
8	217890	2	Pawl Starter
9	218053	1	Bushing
10	218054	1	Spring
11	217893	1	Plate - Pawl
12	218055	1	Washer
13	218056	1	Screw
14	229538	1	Housing - Starter
15	229389	1	Air Conveyor (Baffle)
16	229712	4	Screw M5 x 16 (35-45 in. lbs. Torque)
17	235248	4	Washer
18	229285	4	Spacer