


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL
NUMBERS HERE







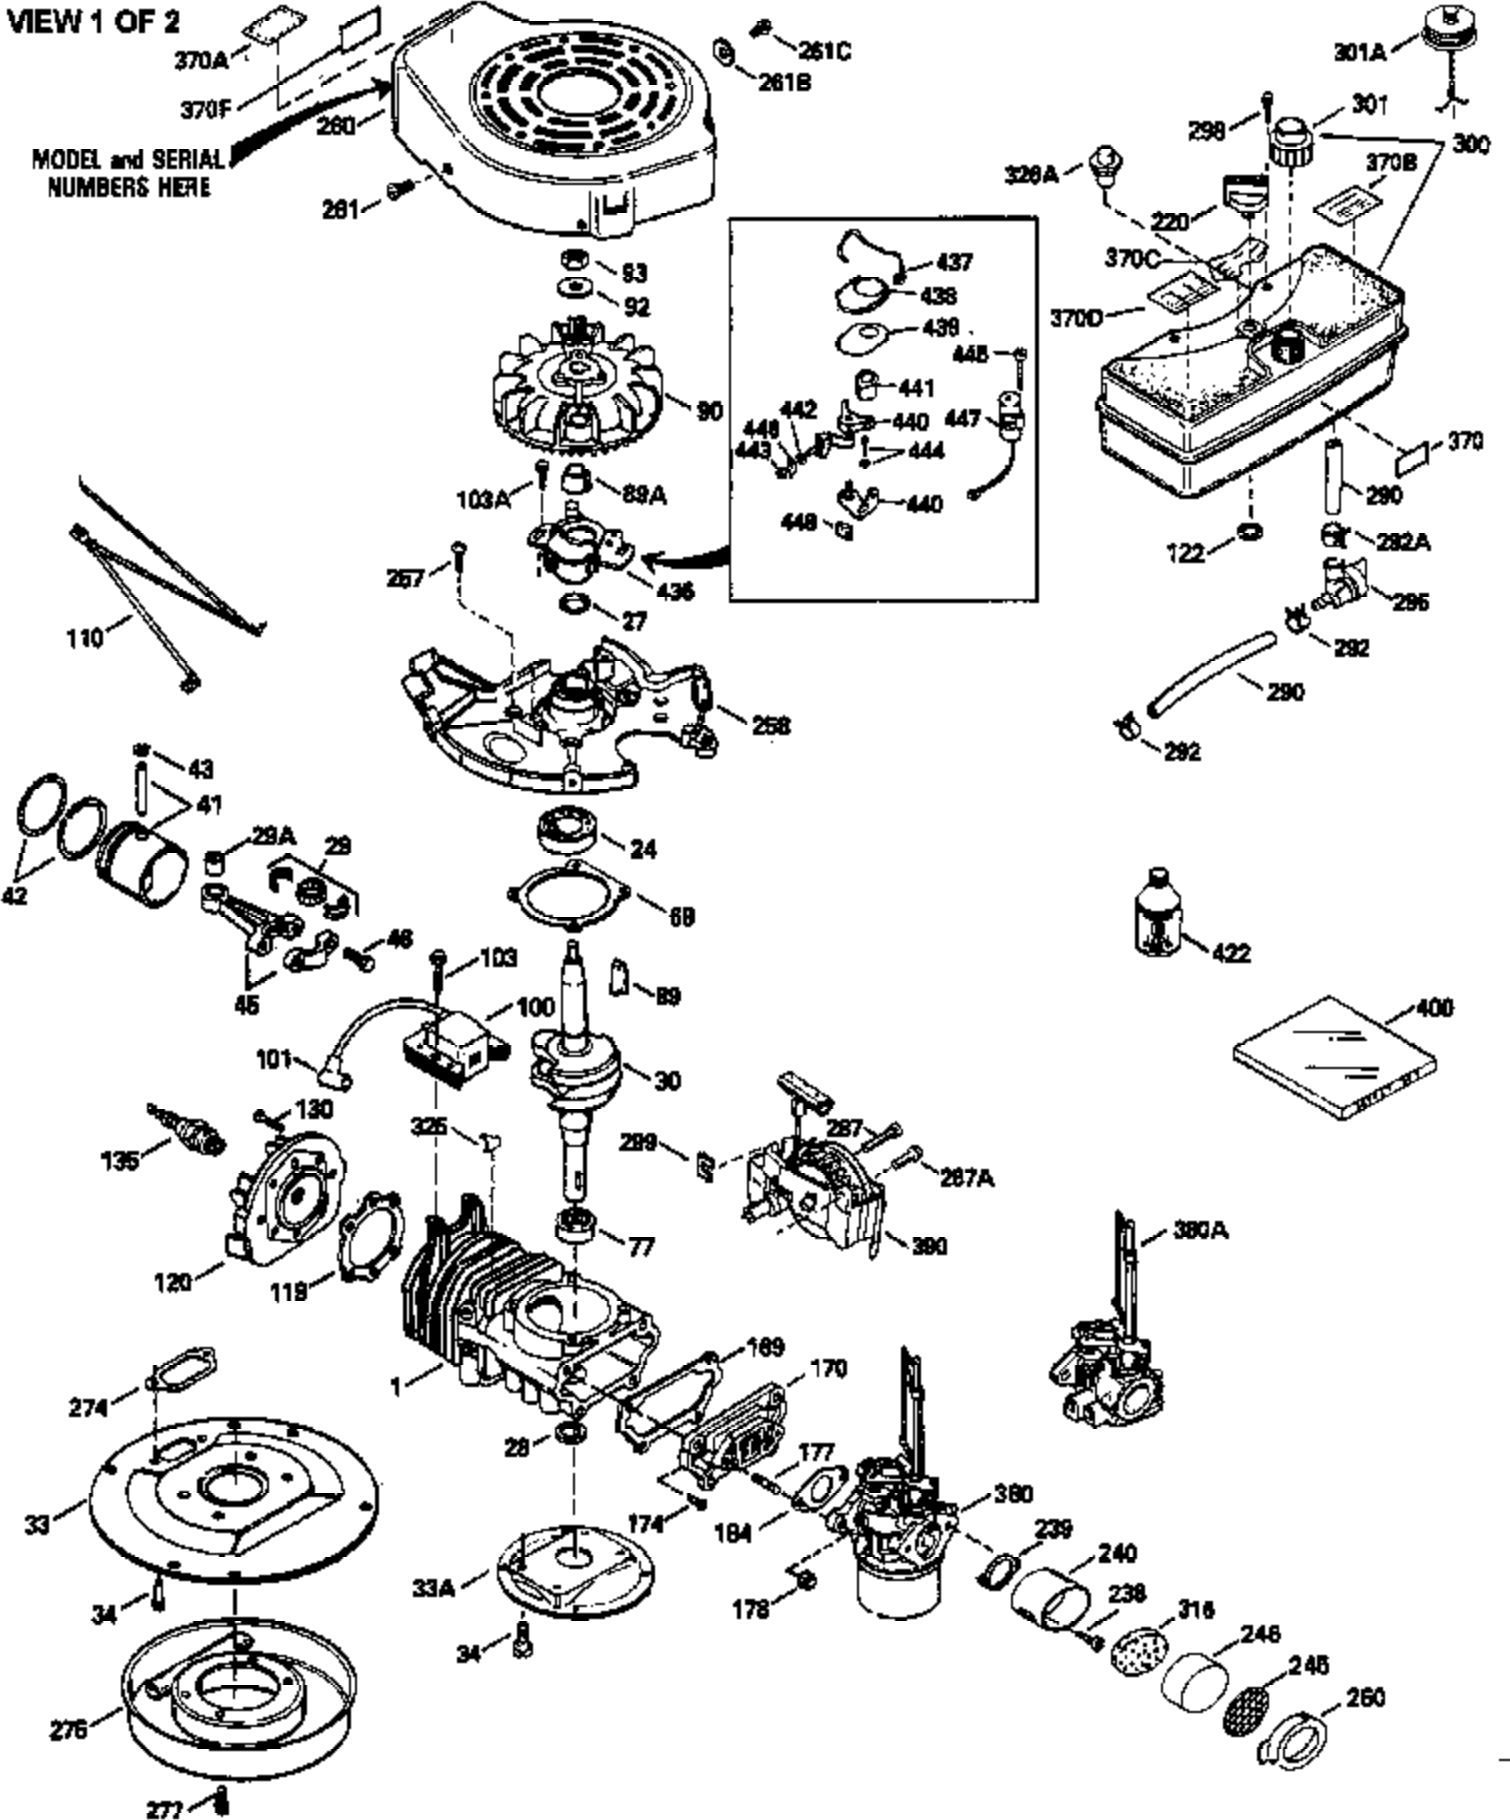


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
24	530110		Ball Bearing
27	510319		Oil Seal
28	28427		Oil Seal
29A	530104A		Cartridge Bearing
29	530151		Needle Bearing & Liner Set (30 Needle s)
30	290577		Crankshaft & Rod Ass'y. (Incl. 45)
33	330175		Adapter Plate (8" B.C.)
34	650797		Screw, 5/16-18 x 1/2"
41	310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
41	310272A		Piston & Pin Ass'y. (.010" OS)
42	310190		Ring Set (Std.)
42	310273		Ring Set (.010" OS)
43	310167		Piston Pin Retaining Ring
45	310263		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
46	650633		Connecting Rod Bolt
69	510292A		* Cylinder Cover Gasket
77	780097		Cartridge Bearing
89A	611032		Adapter Sleeve
90	611046A		Flywheel
92	650815		Belleville Washer
93	650390		Flywheel Nut
100	34443A		Solid State Ignition (Incl. 101)
100	730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
110	611045		Ground Wire
119	510274A		* Cylinder Head Gasket
120	250240B		Cylinder Head
130	650477		Screw, Torx T-30, 1/4-20 x 3/4"
135	33636		Resistor Spark Plug
169	510323A		* Cover Plate Gasket
170	470153		Reed Cover Plate (Incl. 178)
174	650579		Screw, Torx T-25, 10-24 x 1/2"
178	650456		Nut, 1/4-20
184	510110A		* Carburetor Gasket
239	27272A		Air Cleaner Gasket
257	650561		Screw, 1/4-20 x 5/8"
258	350413		Blower Housing Base (Incl. 27)
260	350403		Blower Housing
261	650958		Screw, 1/4-20 x 7/16"
261B	650854		Washer
274	510314		Exhaust Gasket
275	390297		Muffler
277	650911		Screw, Torx T-30, 1/4-20 x 5/8"
287A	650561		Screw, 1/4-20 x 5/8"
287	30646		Screw, 1/4-20 x 1-3/8"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
298	650803		Screw, 10-32 x 7/8"
300	410241		Fuel Tank (Incl. 301)
301	410238		Fuel Cap
370A	34686		Name Decal
370B	550213		Warning Decal
370D	550212		Fuel Mix Decal

Ref #	Part Number	Qty	Description
370D	550207		Operation Decal
380	632262		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-28 or Fiche 23B, Grid F-11 for breakdown)
390	590552		Side Mount Rewind Starter (Refer to Division 5, Section C, page 32 or Fiche 23B, Grid G-13 for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

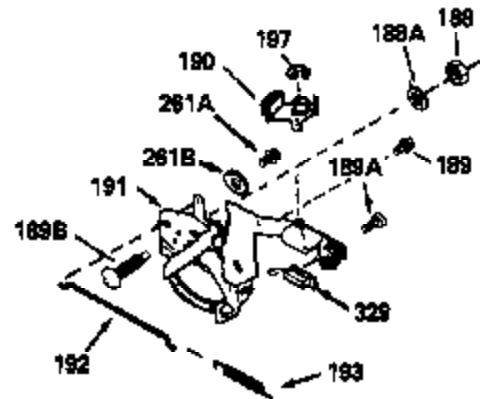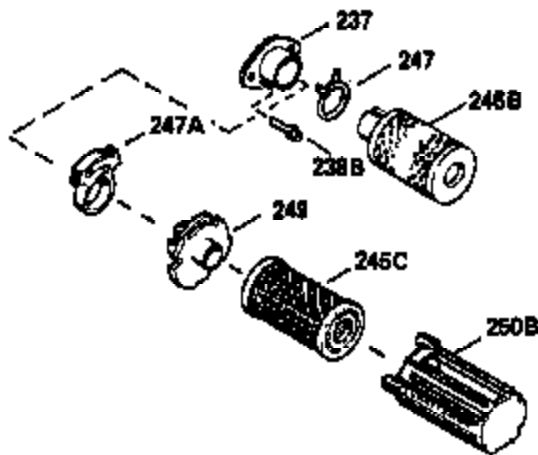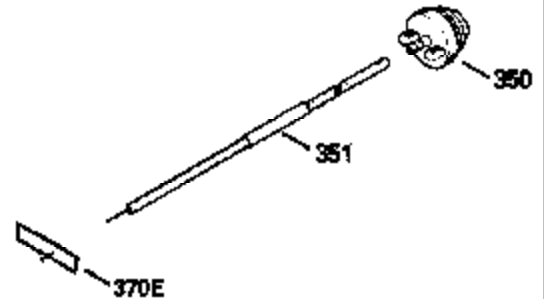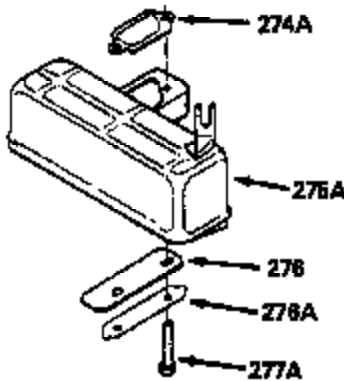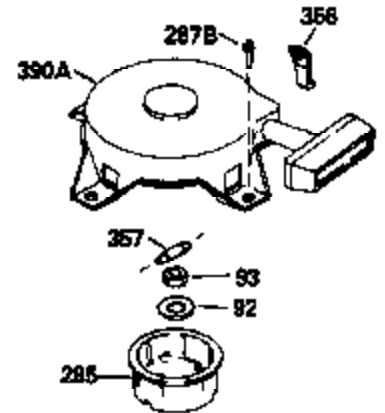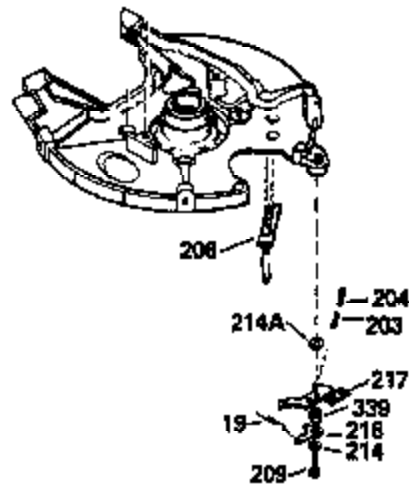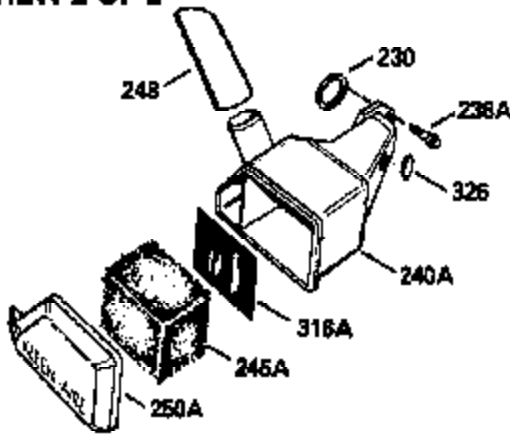

Ref #	Part Number	Qty	Description
	19 570643		Extension Spring
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	189A 650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
	200 570420		Boden Wire Bracket
	203 31342		Compression Spring
	204 650549		Screw, 5-40 x 7/16"
	206 610973		Terminal
	209 650544		Screw, Torx T-25, 10-24 x 7/8"
	210 27793		Conduit Clip
	211 28942		Screw, 10-32 x 3/8"
	214 650583		Washer
	214A 570422		Washer
	216 570415		R.P.M. Adjusting Lever
	217 570421		Control Lever
	230 34338		Air Cleaner Gasket
	238A 650806		Screw, 10-32 x 5/8"
	240A 450234		Air Cleaner Body
	245A 450236		Air Cleaner Element
	248 33008		Air Cleaner Tube
	250A 33007		Air Cleaner Cover
	261B 650854		Washer
	316A 450235		Mesh Screen
	326 450237		Button Plug
	339 570412		Spacer