


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

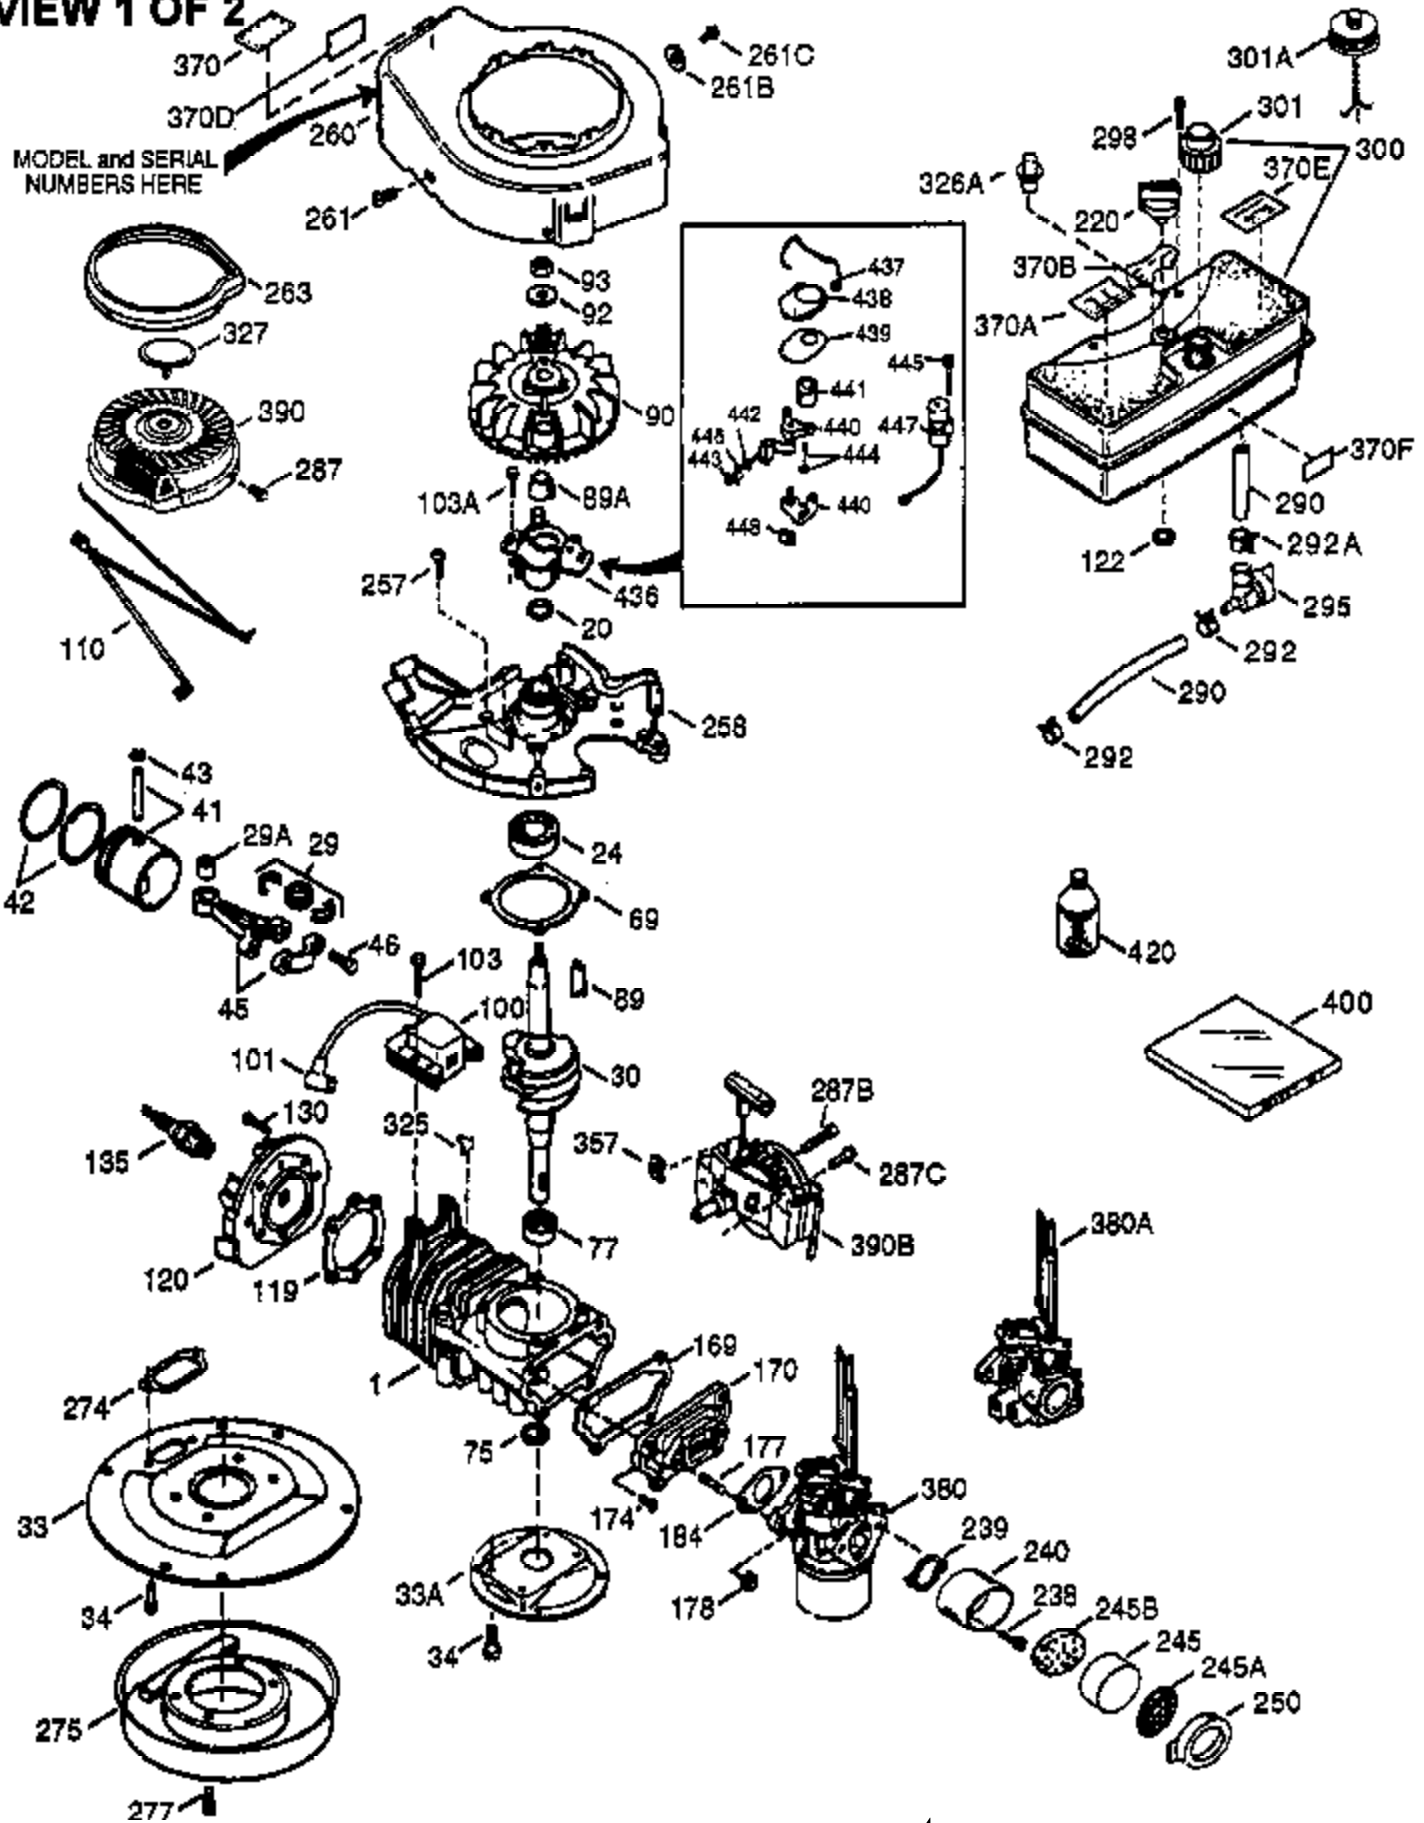








## Engine Parts List #1

Ref #	Part Number	Qty	Description
	1 0	1	Cylinder (Order S/B if replacement is needed)
	20 510319	1	Oil Seal
	24 530110	1	Ball Bearing
	29A 530104A	1	Cartridge Bearing
	29 530150	1	Needle Bearing & Liner Set (37 Needle s)
	30 290546	1	Crankshaft
	33 330177	1	Adapter Plate
	34 650797	4	Screw, 5/16-18 x 1/2"
	41 310283A	1	Piston & Pin Ass'y. (Incl. 43)
	42 310190	2	Ring Set
	43 310167	2	Piston Pin Retaining Ring
	45 310235B	1	Connecting Rod Ass'y. (Incl. 29, 29A & 46)
	46 650633	4	Connecting Rod Bolt
	69 510292A	1	* Cylinder Cover Gasket
	75 28427	1	Oil Seal
	77 780097	1	Cartridge Bearing
	89A 611032	1	Adapter Sleeve
	90 611112	1	Flywheel
	92 650815	1	Belleville Washer
	93 650390	1	Flywheel Nut
	100 34443B	1	Solid State Ignition
	101 610118	1	Spark Plug Cover
	103 651007	2	Screw, Torx T-15, 10-24 x 15/16"
	110 611059	1	Ground Wire
	119 510274A	1	* Cylinder Head Gasket
	120 250240B	1	Cylinder Head
	122 570641	1	Retaining Ring
	130 650477	6	Screw, Torx T-30, 1/4-20 x 3/4"
	135 33636	1	Resistor Spark Plug (RJ17LM)
	169 510323A	1	* Cover Plate Gasket
	170 470152A	1	Reed & Cover Plate (Incl. 178)
	174 650579	4	Screw, Torx T-25, 10-24 x 1/2"
	178 29752	2	Nut & Lock Washer, 1/4-28
	184 510110A	1	* Carburetor Gasket
	220 570657	1	Control Knob
	238 650806	2	Screw, 10-32 x 5/8"
	240 450234	1	Air Cleaner Body
	245 450236	1	Air Cleaner Filter
	245B 450235	1	Air Cleaner Filter
	250 33007	1	Air Cleaner Cover
	257 650911	4	Screw, Torx T-30, 1/4-20 x 5/8"
	258 350427	1	Blower Housing Base (Incl. 20)
	260 350458	1	Blower Housing
	261 650958	3	Screw, 1/4-20 x 7/16"
	261B 650854	1	Washer
	261C 650773	1	Screw, 1/4-20 x 1/2"
	274 510314A	1	Exhaust Gasket
	275 390300	1	Muffler
	277 650911	2	Screw, Torx T-30, 1/4-20 x 5/8"
	287 650926	4	Screw, 8-32 x 21/64"
	290 34357	1	Fuel Line
	292 26460	2	Fuel Line Clamp
	298 650803	2	Screw, 10-32 x 7/8"
	300 410241	1	Fuel Tank (Incl. 301)
	301 410238	1	Fuel Cap
	370B 550224	1	Control Decal
	370I 550213	1	Warning Decal
	370K 36695	1	Starter Decal

Ref #	Part Number	Qty	Description
370A	36261	1	Lubrication Decal
370	550212	1	Fuel Mix Decal
380	632326	1	Carburetor (Incl. 184)
390	590732	1	Rewind Starter (NOTE: This engine could have been built with 590738 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)
400	510295A	1	* Gasket Set (Incl. items marked PK in notes) (Incl. one each of part #'s: 510110A, 510217A, 510227A, 510268A, 510270A, 510274A, 510292A, 510323A)
420	730227A	1	2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

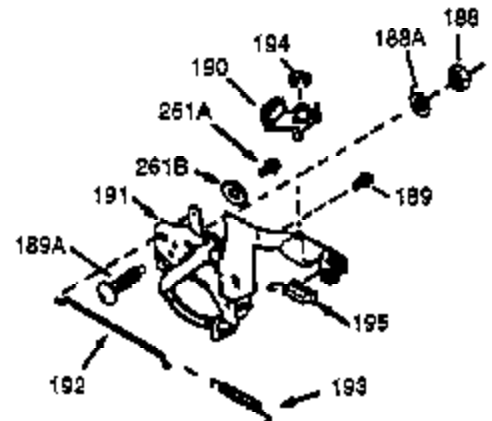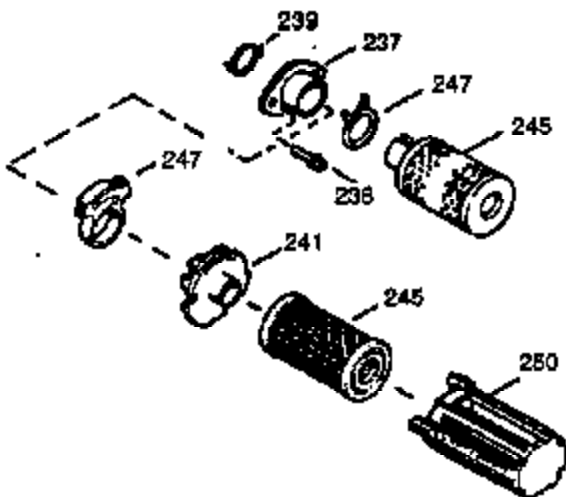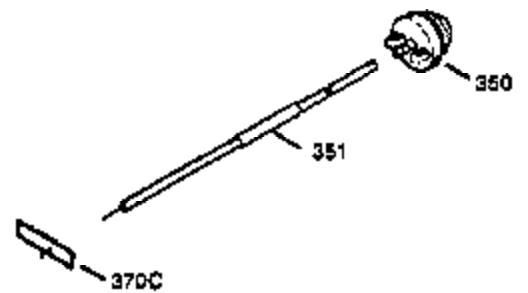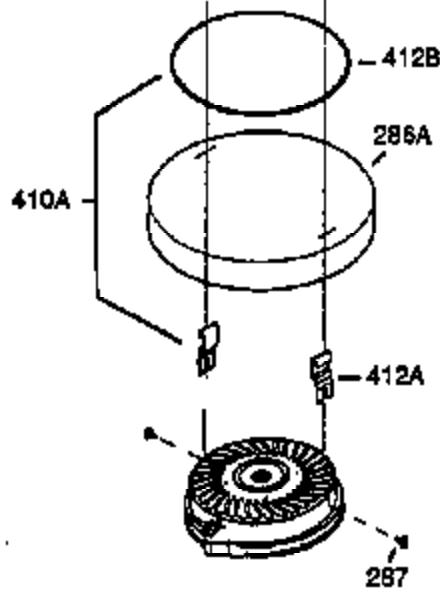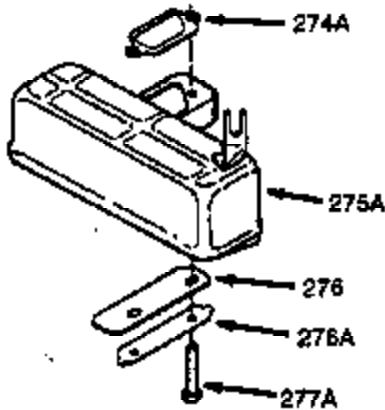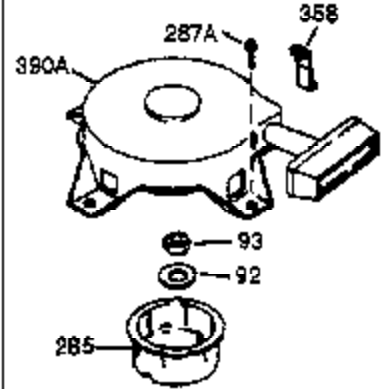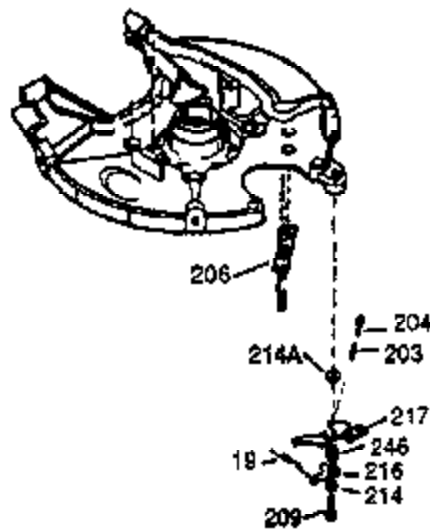

Ref #	Part Number	Qty	Description
92	650815	1	Belleville Washer
93	650390	1	Flywheel Nut
189	650773	1	Screw, 1/4-20 x 1/2"
190	35831	1	Brake Lever
191	570658A	1	S.E. Brake Bracket (Incl. 195)
192	34966	1	Brake Control Link
193	34965	1	Brake Spring
194	32309	1	Retaining Ring
195	610973	1	Terminal
230	34338	1	Air Cleaner Gasket
238	650806	2	Screw, 10-32 x 5/8"
240	450234	1	Air Cleaner Body
245B	450235	1	Air Cleaner Filter
245	450236	1	Air Cleaner Filter
248	33008	1	Air Cleaner Tube
250	33007	1	Air Cleaner Cover
261A	650853	1	Screw, 1/4-20 x 1/2"
261B	650854	1	Washer
285	590551A	1	Starter Cup
326	450237	1	Plug
350	570682	1	Primer Assembly
351	570656	1	Primer Line
370C	36260	1	Primer Decal
370I	550213	1	Warning Decal
370K	36695	1	Starter Decal