


TB590BC 41ADT59C711
Boom and Trimmer

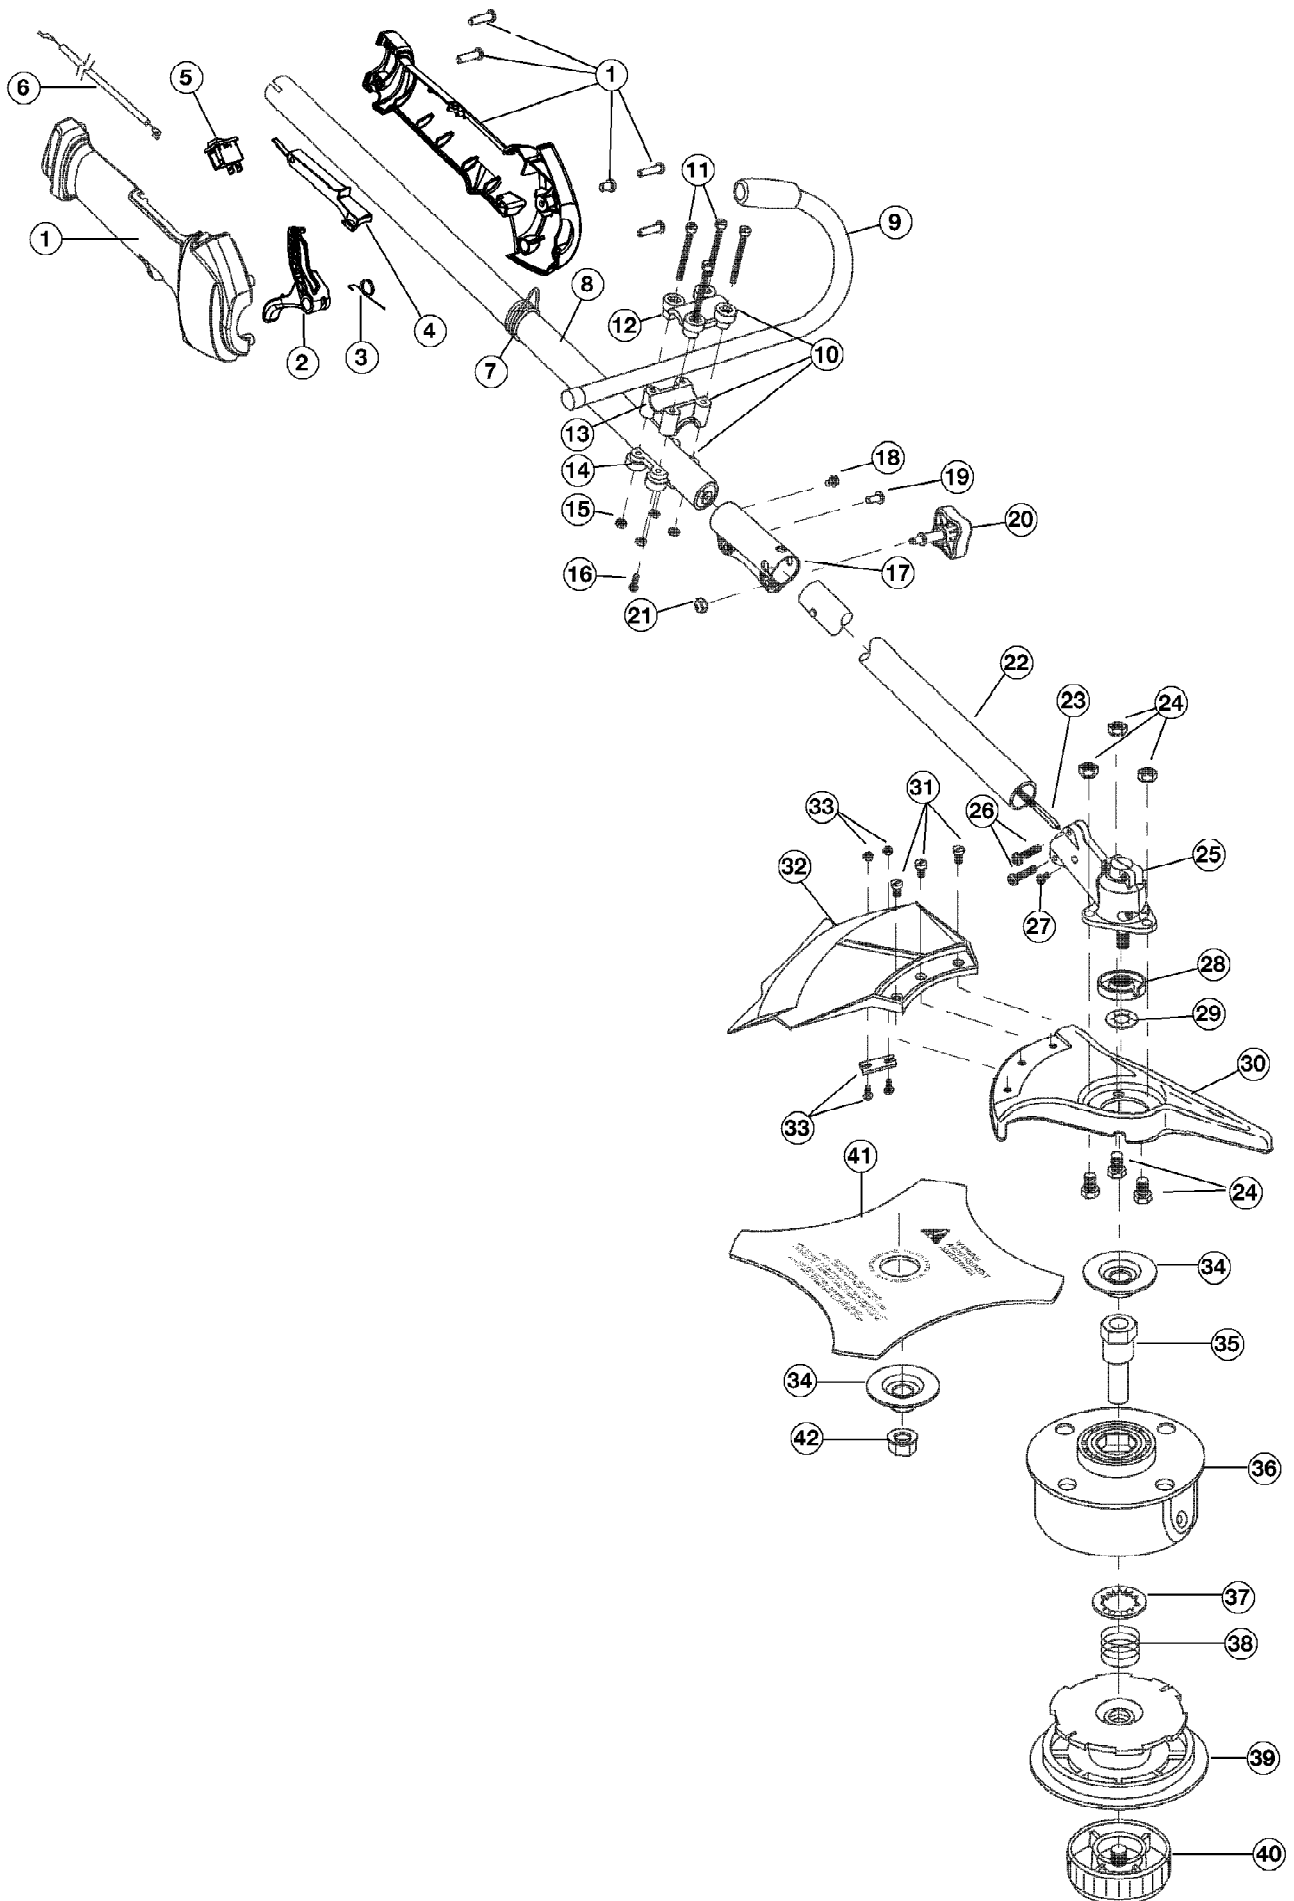


TB590BC 41ADT59C711
Boom and Trimmer

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-05192	1		Throttle Housing Assembly (includes 2-5)
2	753-04991	1	S	Throttle Trigger
3	753-05007	1	/P	Throttle Trigger Spring
4	753-05171	1	S	Throttle Trigger Lock-Out
5	791-182405	1	/P	Switch Assembly
6	753-05270	1		Throttle Cable Assembly
7	791-610327	1		Harness Clip
8	753-04236	1	/P	Upper Drive Shaft Housing Assembly
9	791-181099	1		J-Handle Assembly
10	791-683295	1		Handle Bracket Assembly (includes 11-16)
11	791-181811	1		Screw
12	791-181812	1		Upper Handle Clamp
13	791-181813	1		Middle Handle Clamp
14	791-181814	1		Lower Handle Clamp
15	791-181815	1		Nut
16	791-145569	1	/P	Anti-Rotation Screw
17	753-1190	1	/P	Split Boom Coupler (includes 18-21)
18	791-182057	1		Screw
19	791-181617	1		Bolt
20	791-181981	1		Adjustment Knob
21	753-04386	1	S	Knob Retaining Nut
22	753-04504	1	/P	Lower Drive Shaft Housing Assembly
23	791-181570	1	/P	Lower Flexible Drive Shaft
24	791-182200	1		Shield Mount Screw Assembly
25	791-182193	1	/P	2 piece Gearbox Assembly (includes 26-29)
26	791-182195	1		Gearbox Mounting Hardware
27	791-145569	1	/P	Anti-Rotation Screw
28	791-182196	1		Blade Driver
29	753-04348	1	/P	Palnut
30	791-147492	1		Blade Shield/Shield Mount
31	791-683304	1		Shield Mounting Screw
32	753-1191	1		Shield Assembly (includes 33)
33	791-682061	1		Blade Assembly
34	791-147490	1		Retaining Washer
35	791-612483	1		Spool Shaft
36	791-683301	1		Outer Spool Assembly
37	791-612026	1		Retainer
38	791-610636B	1	/P	Spring
39	791-147495	1		Inner Reel
40	791-180814B	1	/P	Bump Head Knob Assembly
41	791-145873B	1	/P	4-Tooth Blade
42	791-181699	1	S	Nut
	791-180014B	1		Blade Retaining Kit (includes 34 & 40) (not shown)
	791-613226	1		Locking Rod Tool (not shown)
	791-682075B	1	/P	Shoulder Harness (not shown)
	753-04216	1		Replacement Line, 0.105 Diameter (not shown)
	753-1224	1	/P	Reel and Line Assembly (not shown)
	753-1161	1	/P	Bump Head Assembly (includes 36-42) (not shown)

TB590BC 41ADT59C711
Engine

Page 3 of 5

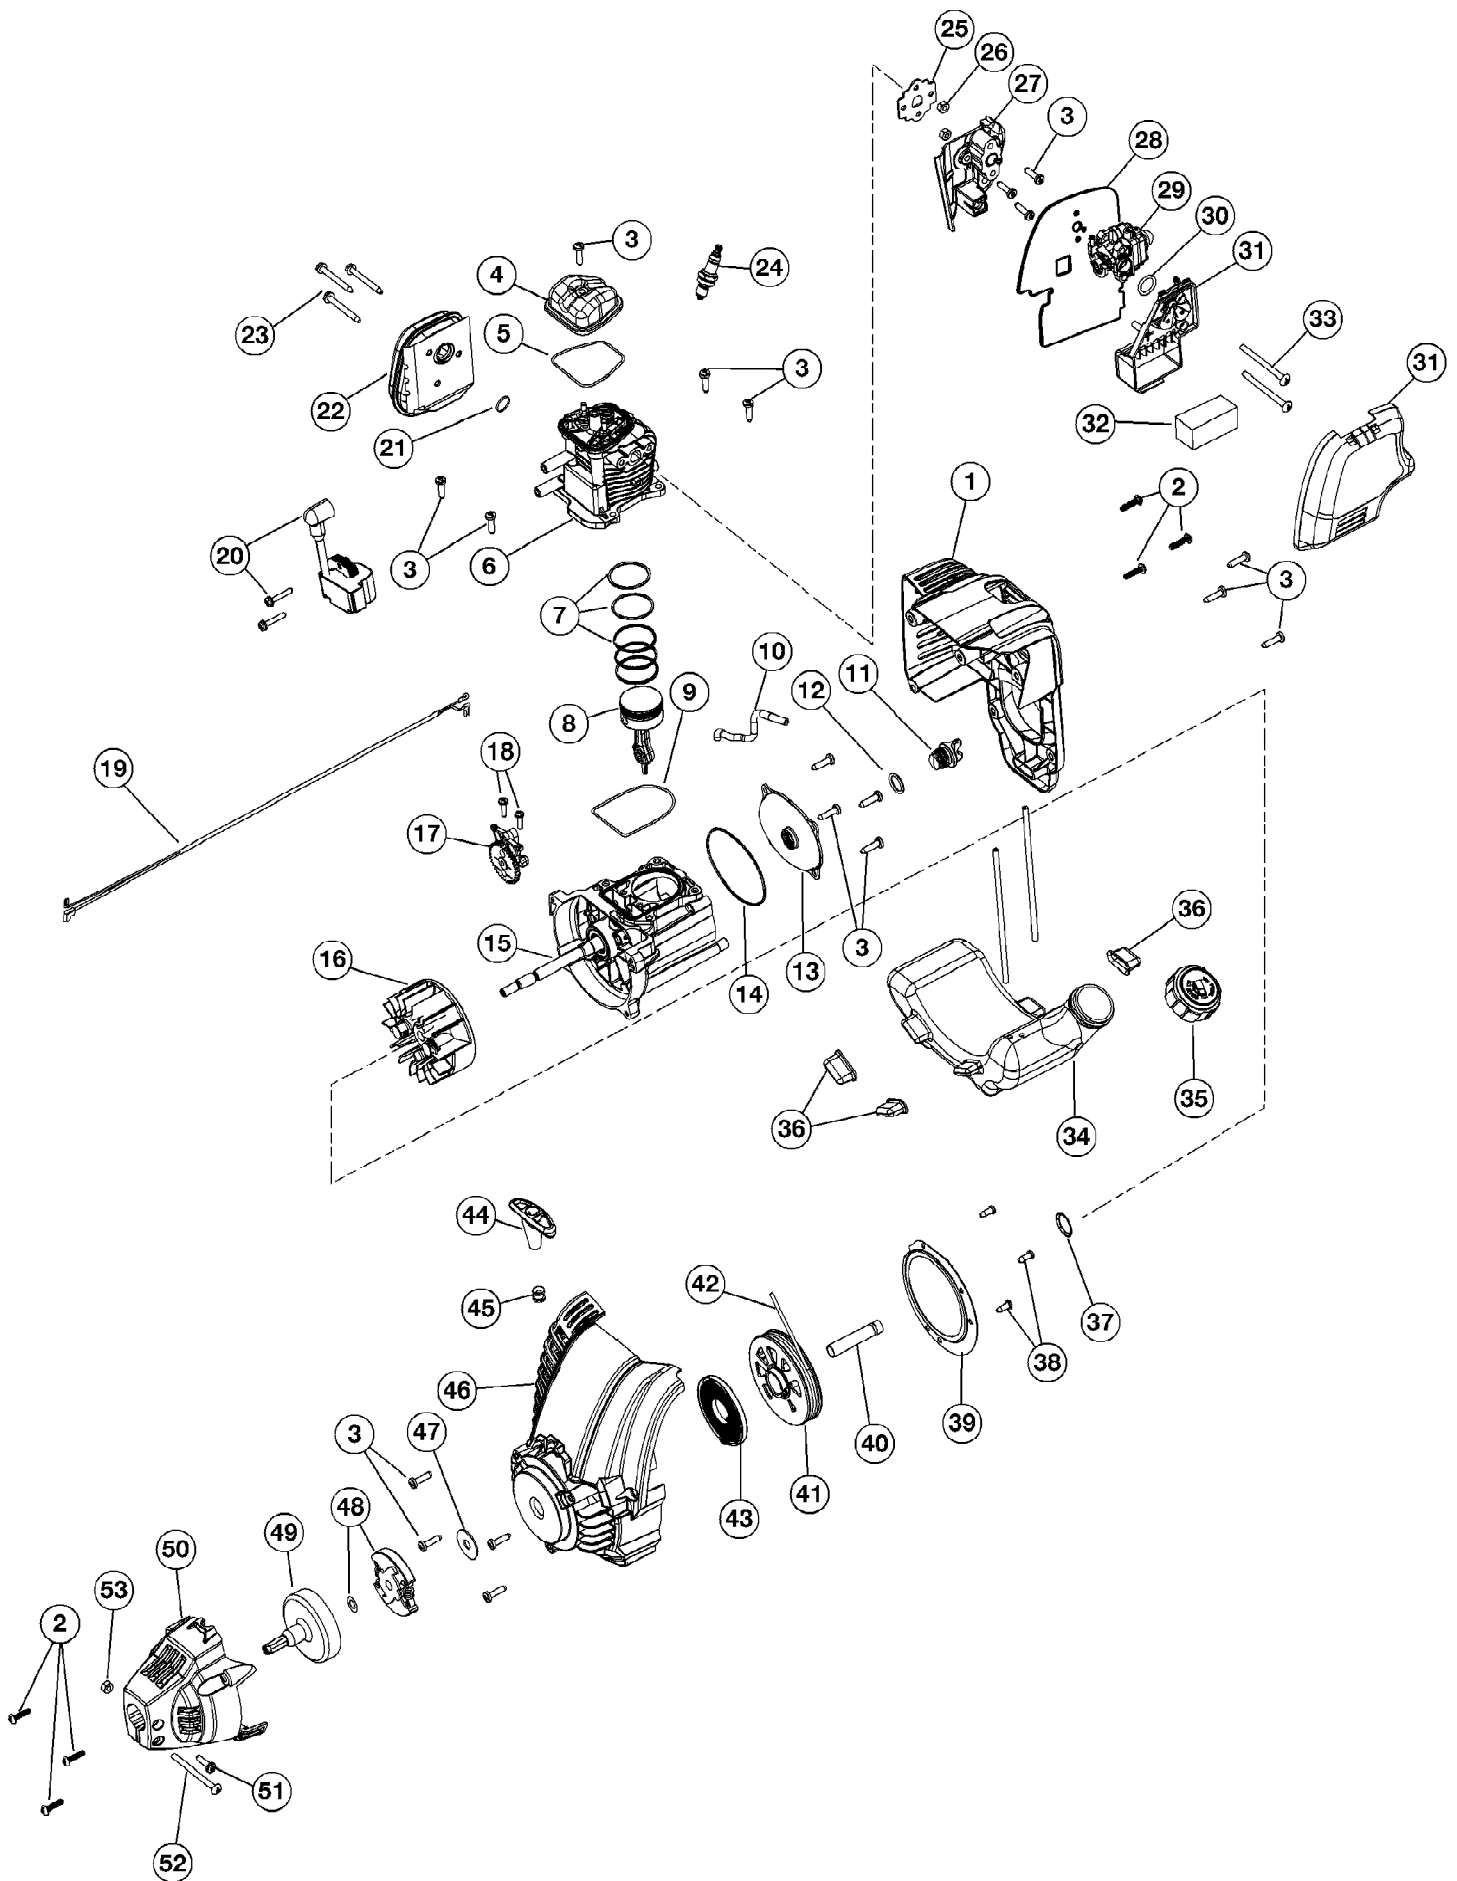

TB590BC 41ADT59C711
Engine

Page 4 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-05206	1		Engine Cover Assembly (includes 2 & 3)
2	753-04595	1	S	Cover Screw
3	753-05208	1	S	Screw
4	753-05209	1		Rocker Cover
5	753-05210	1	S	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (includes 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (includes 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05236	1	S	Oil Plug (includes 12)
12	791-182290	1		Oil Plug O-Ring
13	753-05237	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-05239	1		Crankcase Assembly (includes 9, 10 & 14)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
17	753-05241	1		Cam Bracket Assembly (includes 18)
18	753-05242	1	S	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (includes 21 & 23)
23	753-05246	1	S	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	753-05248	1	S	Nut
27	753-05249	1		Insulator
28	753-05250	1	S	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (includes 32)
32	753-05254	1		Air Filter
33	753-05253	1	S	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	753-05260	1	S	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (includes 38)
40	753-05078	1	S	Spacer
41	753-05261	1	S	Starter Assembly (includes 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	791-181079	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (includes 3 & 37-45)
47	791-182396	1	S	Washer
48	753-1238	1		Clutch & Clutch Washer
49	791-153592	1	/P	Clutch Drum

TB590BC 41ADT59C711
Engine

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
50	753-05263	1		Clutch Cover
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly (not shown)
	753-05265	1	/P	Shortblock Assembly (includes 3-12, 14, 15, 17 & 24) (not shown)