



Supplement Sheet

Date: 6/18/2008

Subject: Installation of Chipper-Shredder-Vac Chute Assembly 631-0083

Models N/A
Affected:

PURPOSE: This supplement sheet provides instruction for the correct setup of the switch activation bracket on the 631-0083 CSV Chute Assembly.

INSTRUCTIONS:

1. Inspect the Chute Assembly to ensure that the safety switch bracket is formed as shown in Figure 1.

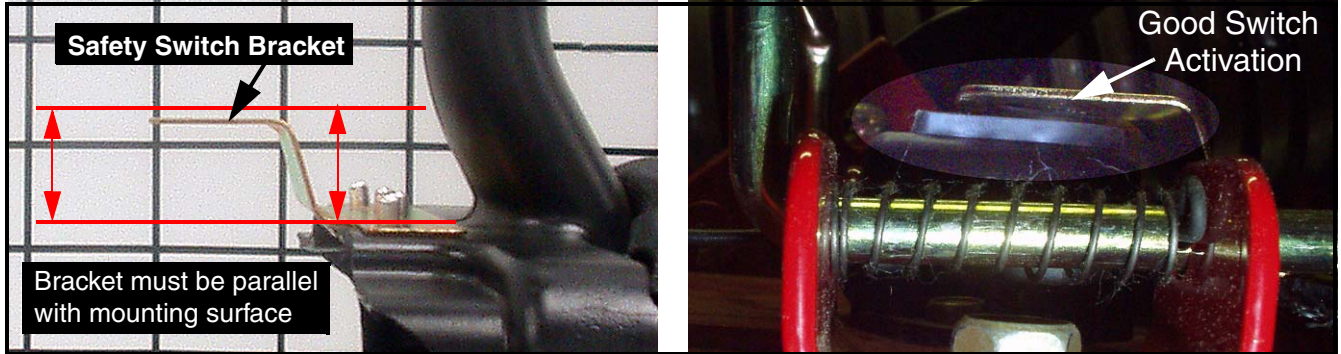


FIGURE 1

2. If the safety switch bracket is bent as shown in Figure 2A, the safety switch may not be sufficiently depressed (activated) resulting in the engine not starting (i.e. ignition grounded).

If the safety switch bracket is bent as shown in Figure 2B, the chute assembly may not install properly also resulting in the engine not starting.

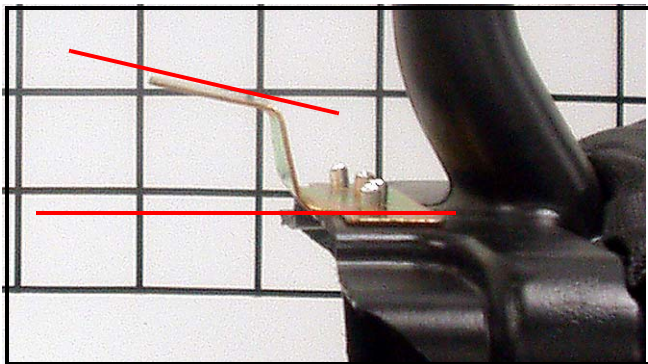


FIGURE 2A

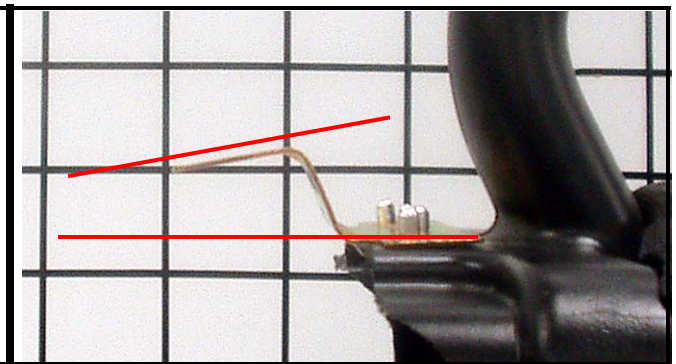


FIGURE 2B

3. To correct a bent safety switch bracket, use a pair of pliers and grip the safety switch bracket's tab as shown in Figure 3. While holding the chute assembly from moving, apply a bending moment in the direction necessary to bring the tab into the position shown in Figure 1.

FIGURE 3

